

## SenNet IoT Easy Meter Sigfox

### Energy Meter 3PH CT/Rogowski & Gateway for remote nodes

#### General description

SenNet IoT Easy Meter Sigfox is a device that monitors 3PH energy electrical circuits, with two options of current transformer, 0.33Vac or flexible Rogowski. This device has the possibility to create a local RF Network with remote nodes with different features: Pulse Counter / Temperature-Humidity / CO<sub>2</sub> / Particulate Matter etc., and send all this information in one Sigfox message.

The configuration of all these features is possible by three ways:


- Through APP *SenNet IoT* (IOS or Android).
- Downlink message on sigfox backend.
- Micro-usb connection and console/terminal.

The end-user can select what kind of energy data and remote device wants to upload to the cloud, must select the type of message (see in the next section).

#### Power supply

The device uses voltage reference as the power supply (100-265VAC @ 50HZ), it's important just to use Neutral Line Vn and V1. There is an internal fuse to protect the device against surge damages.

Voltage power supply	100-265VAC @ 50HZ
Power	<1W

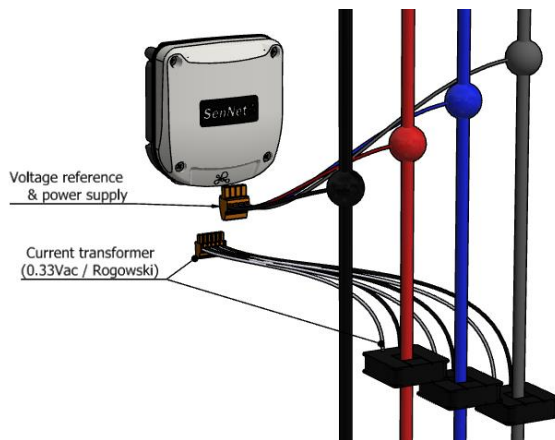

#### Basic steps to install:

1. Set the type Current Transformer:  
CT-0.33Vac: 50A, 100A, 150A, 400A, 800A  
Flexible-Rogowski: 3500A, 3700A, 5000A
2. Set the type of message to use and take note to parse this data on your preferred platform.
3. Take note ID / PAC to sign the device on Sigfox Cloud.
4. Connect voltage reference (feed internal power supply) and current reference.

#### Additional steps:

- Define and install remotes devices that will join to Local Network
- Set an univoque ID at each remote device throught SenNet IoT APP.

Easy to set with **SenNet IoT APP**  
iOS & Android (phones with NFC)




[SenNet IoT \( iOS version \) Link](#)

[SenNet IoT \( Android version \) Link](#)

# SenNet IoT



#### Sigfox Ready Certification / Class U0



**Power Meter**  
**3 Phase Class 1**  
(CT's 0.33v -Rogowski )




**Local RF Network**  
868.224MHz (EU)  
2FSK / 300bps / 6.25Khz  
(by default)

## Type Message

SenNet IoT Easy Meter is a powerful Energy Meter, the client must select what kind of data will be uploaded to the platform. For that reason, the devices have been defined by default several types of message what includes the main information from each electricity measurement.

The main interest always is the total Energy accumulated, if your interest is on another parameter you can contact with our technical department to ask for it.

Depending on the type of load to be monitored (triphasic or monofasic) you may choose these types of uplink messages:

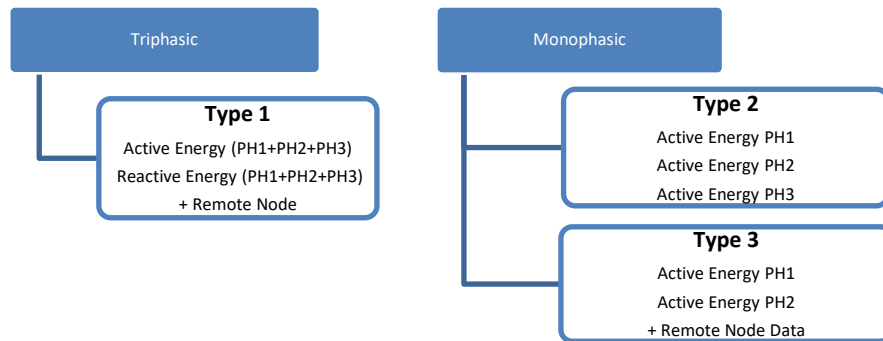

A common point in all types of messages is the head (defined with 2 bytes) that includes important information embedded in the message (type device/type message/errors.. etc). In the next table are defined the mean of these info-fields.

Field Info																
Byte	Byte 1							Byte 2								
	<u>Type Device</u>			<u>Type Message</u>				Some Phase in generation mode	Voltage sequence error	Overvoltage / SAG / Internal meter error	<u>Type Remote Nodes</u>			<u>ID Remote Nodes</u>		
	01 - Easy Meter			type 0 (info)							0x00 – No local Network			No Remote = 000		
	02 – Pulse Counter			type 1							0x01 - PC LongNet			Remote ID = 001 <sub>b</sub> = 01 <sub>d</sub>		
	03 – Not defined			type 2							0x02 - TH LongNet			= 010 <sub>b</sub> = 02 <sub>d</sub>		
	04 – Enviroment Sensor			type 3							0x03 - CO2-TH LongNet			= 011 <sub>b</sub> = 03 <sub>d</sub>		
	05 - PM			type 4							0x04 - PM LongNet			= 100 <sub>b</sub> = 04 <sub>d</sub>		
	06 – GW Modbus			type 5 (not defined)							0x05 – GW Modbus LN			= 101 <sub>b</sub> = 05 <sub>d</sub>		
	07 – Repeater Sigfox			type 6 (not defined)							0x06 – Analog Input			= 110 <sub>b</sub> = 06 <sub>d</sub>		
				..							0x07 – Not defined			(6 nodes maximum)		
				type 15 (not defined)				<u>Feedback Error</u>						Type Message 0 (Debug)		
														= 111 <sub>b</sub> = 07 <sub>d</sub>		
Bit	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0
	Byte1 Bit 7-6-5			Byte1 Bit 4-3-2-1				Byte1 Bit 0	Byte2 Bit 7-6		Byte2 Bit 5-4-3			Byte2 Bit 2-1-0		

Table 1

Type 1 : Active + Reactive Energy + Remote Node												
Field	Info		Active Energy PH1+PH2+PH3				Reactive Energy PH1+PH2+PH3				Data from Remote node	
Type data	See Table 1		float 32 bits unit kWh				float 32 bits unit kvArh				Depending on Remote node type	
Byte	1	2	3	4	5	6	7	8	9	10	11	12

Type 2: Active Energy PH1 + Active Energy PH2 + Active Energy PH3											
Field	Info		Active Energy PH1			Active Energy PH2			Active Energy PH3		
Type data	See Table 1		resolution=100wh unsigned integer 24 bits Max. 1.6Mwh			resolution=100wh unsigned integer 24 bits Max. 1.6Mwh			resolution=100wh unsigned integer 24 bits Max. 1.6Mwh		
Byte	1	2	3	4	5	6	7	8	9	10	11


Type 3: Active Energy PH1 + Active Energy PH2 + Remote Node Data												
Field	Info		Active Energy PH1				Active Energy PH2				Data from Remote Node	
Type data	See Table 1		float 32 bits / unit kWh				float 32 bits / unit kWh				Depending on Remote node type	
Byte	1	2	3	4	5	6	7	8	9	10	11	12

## Remote Node Data:

Type of Remote Node																
TH LongNet – 868	1 byte temperature Payload [-10°C...60°C] conversion function Temperature=Payload*0.2745-10	1 byte humidity Payload [0-100%] Humidity=Payload														
Pulse Counter LongNet – 868	2 bytes (integer type) - maximum value 65535 Only is enabled input 1 “C1”															
CO2 LongNet – 868	2 bytes (integer type)															
	byte 2 -High part-								byte 1 -Low part-							
	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0
	CO2 Payload (± 12ppm)						Temperature Payload (± 1°C)						Hum. Payload (± 6%)			
	CO2=Payload*12.6984+400						T=Payload*1.111-10						H= Payload*6.66			
Particulate Matter - 868	2 bytes (integer type) - under development															
Gateway Modbus – 868	2 bytes (custom) – under development															
Gateway Custom Protocol – 868	2 bytes (custom) - under development															

## Local RF Network & types of Remotes Nodes

SenNet IoT Easy Meter can works like sigfox gateway for up to 6 remotes nodes.

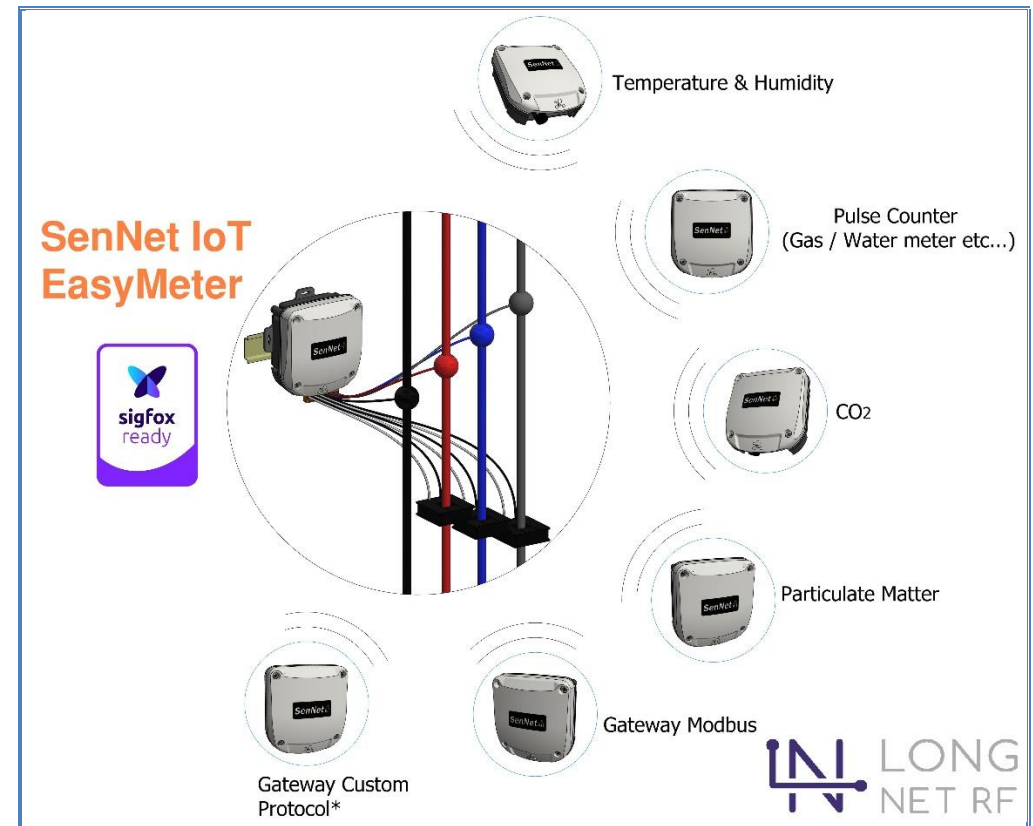

### Downlink Message

It's possible to set the device in the cloud without interacting with it locally, defining this type of downlink message and CT value on the sigfox backend or in your platform. That method is optional but it's not necessary.

Byte	1	2 - 5	6	7	8
Field	Setup byte (1byte)	Set time (4bytes)	Type uplink Message (1 byte)	CT value (2 byte) (hex. value)	
Value	Bit 7	{Time-Epox}	01 02 03 ..	High Part	Low Part
	1 (by default)				
	Bit 6				
	1/0 enable/disable set Time				
	Bit 5				
	1/0 enable/disable set Type uplink Message				
	Bit 4				
	1/0 enable/disable set value CT				
Value	Bit 3				
	1 (by default)				
	Bit 2				
	1/0 enable/disable Debug 1 (versión HW/FW)				
Value	Bit 1				
	1/0 enable/disable Debug 2 (internals errors)				
Value	Bit 0				
	1/0 enable/disable Debug 3 (instant power value)				


Example for downlink message:

**F8 {time} 01 00 32** → With this downlink message set the remote device on time, with type of message 01 and CT value 50 Amps, all debug messages disables.

### Debug option

It's possible to debug on remote this device, it's necessary enable with downlink message this feature. There are three types of debug message, Debug 1 (version HW/FW), Debug 2 (internals errors), Debug 3 (instant power meter values).

If this feature is enabled one time per day or in power up will be update these messages, with this sequence:



Type 0 : Debug 1 (9 bytes)					
Field	Info		HW device	Version FW	Revision FW
Type data	See Table 1				
Byte	1	2	3	4	5


Type 0 : Debug 2 (11 bytes)											
Field	Info	Reset event	Internal error	Wrong voltage frequency	Error PH1	Error PH2	Error PH3	Voltage event 1		Voltage event 2	
Type data	See Table 1	-	-	Freq !=50Hz	-	-	-	Bit0	SAG-PH1	Bit0	PH1<50v
								Bit1	SAG-PH2	Bit1	PH2<50v
								Bit2	SAG-PH3	Bit2	PH3<50v
								Bit3	OVER-PH1	Bit3	Voltage sequence
								Bit4	OVER-PH2	Bit4	-
								Bit5	OVER-PH3	Bit5	-
								Bit6	-	Bit6	-
								Bit7	-	Bit7	-
Byte	1	2	3	4	5	6	7	8	9	10	11

For normal function all fields must be 0.

Type 0 : Debug 3 (8 bytes)				
Field	Info		Active Power PH1	Active Power PH2
Type data	See Table 1		signed integer (value*100)Watt	signed integer (value*100)Watt
Byte	1	2	3 - 4	5 - 6

With this last one debug message is possible detect wrong installation issues, for example CT with wrong orientation. Use this extra feature to analisys or debug installation.

An example for sending a message type 1 with 3 remotes devices defined in the local network. The data of each remote device is sent alternatively in this loop. To parse the data from Remote node the client must use the **Info** field (see *table 1*).

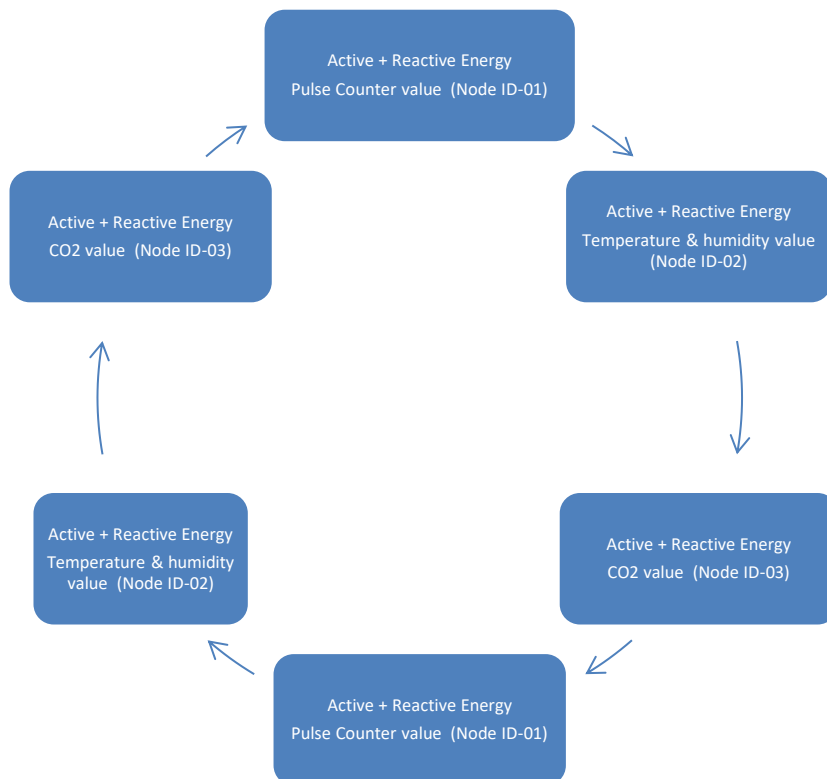

SenNet Easy Meter works as Local Network coordinator and gateway for Remotes Nodes



Easy Meter



Pulse Counter  
**Node ID-01**  
LongNet ID=5236



Temperature & Humidity  
**Node ID-02**  
LongNet ID=1529



CO2  
**Node ID-03**  
LongNet ID=8552

## SenNet IoT APP – Android and iOS (only phones with NFC feature)

Use APP of freely download to set and read measurement from Easy Meter.

Set ID of each remote device, taking note of LongNet ID on the label and assigning it through APP phone (Android or iOS version).

For previous example, it's defined Number of remotes=3, and assigned each position (ID-01 / ID-02 / ID-03 ) at LongNet ID from label of each device, in this particulate example:

Steps for install Easy Meter with remotes nodes, first must be installed Easy Meter and power supply. Later install one by one each remote device, to analyzed if link coverage is fine, set each remote device on 'RF\_prog' mode '1', sliding the switch to mini-usb connector side.

Remote device enter in beacon send mode each 5 seconds, if Easy Meter receive this beacon sound 5 beeps on Easy Meter side. After check that coverage is enough return switch of remote device to 'RF\_prog' mode 0, and reset it.

By this way you check that link between remote device and Easy Meter works fine.

### Main screen with data about Easy Meter & Sigfox connection



Fields	Parameters
Type Device	Easy Meter
ID Sigfox	02BC54C7
PAC Sigfox	E8500F27079F725D
Network LongNet	020202
SW ver-rev	7-56




### Read measurement


### Set: CT / type of message / remote devices

**Power Meter features**

These devices include advanced technology for metering power electricity loads, using a current reference and voltage reference. It's possible to use this device like a 3 single-phase meter or 1 three-phase meter, it depends on the client's goal to monitor.


Type of load to monitorized	
3 single-phase loads independent	
1 three-phase load	

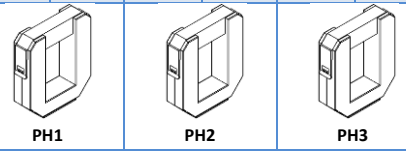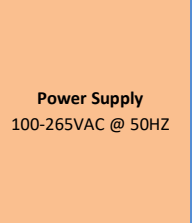Led output pulse	Current Reference						Voltage Reference & Power Supply			
	I1+ (1)	I1- (2)	I2+ (3)	I2- (4)	I3+ (5)	I3- (6)	Vn (19)	V1 (20)	V2 (21)	V3 (22)
Reactive Power Aparent Power Active Power 1 pulse/seg = 1kw	 Type CT current transformer (CT – 0.33vac)* 50A, 100A, 150A, 400A , 800A, (Rogowski type) 5000A						 Power Supply 100-265VAC @ 50HZ			
										

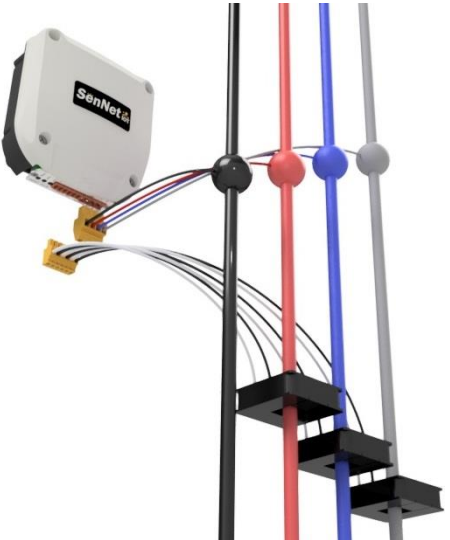

\*with CT-0.33Vac is possible wire several CT with same nominal value, on device must be set with add value of these CT's.  
This method allow measure several loads on one single input.

### Voltage reference

Range	110-220/240VAC (CAT III – 400V)
Frequency	50-60Hz
Electrical isolation	2.5Kv @ 60second
Power supply requirement	0.1 VA per phase
Accuracy	Class 0.2 (+/-0.2%)
	Recommend using electrical protection before connecting this reference.

### Current reference

This device can use current transformers (CT) of two types 0.33Vac and flexible type (Rogowski), depending on each type has a different type of accuracy.

Types	Range of measurement	Output type	Accuracy
CT 50 A	1....50 A	0.33VAC	+/-1% (5%....100% In)
CT 100 A	1....100 A	0.33VAC	+/-1% (5%....100% In)
CT 150 A	1....150 A	0.33VAC	+/-1% (5%....100% In)
CT 400 A	1....400 A	0.33VAC	+/-1% (5%....100% In)
CT 800 A	1....800 A	0.33VAC	+/-1% (5%....100% In)
Flexible 5000 A (7cm Ø) (*)	10....5000 A	Rogowski	+/-1% (centered)
Flexible 5000 A (12cm Ø) (*)	10....5000 A	Rogowski	+/-1% (centered)
Flexible 5000 A (20cm Ø) (*)	10....5000 A	Rogowski	+/-1% (centered)

(\*)Must use flexible SenNet Rogowski model to certificate Class 1. (Factory Calibrated)

#### Accuracy on current measurement

Easy Meter + SenNet CT 0.33Vac	Class 1	(Class 0.5 under requirement)
Easy Meter + Flexible SenNet Rogowski	Class 1	Factory Calibrated


#### Electrical isolation

SenNet CT 0.33Vac	2.5KV / 0.5mA / 3second
Flexible SenNet Rogowski	600V CAT IV



#### Holding case

<b>IP Grade</b>	IP-60
<b>Temperature details</b>	
Working temperature	-20°C...+70°C
Store temperature	-20°C...+75°C
<b>Holding</b>	
Dimensions	119 x 111 x 53 mm
Type mount	Wall or din rail
Plastic Material	ABS – V0

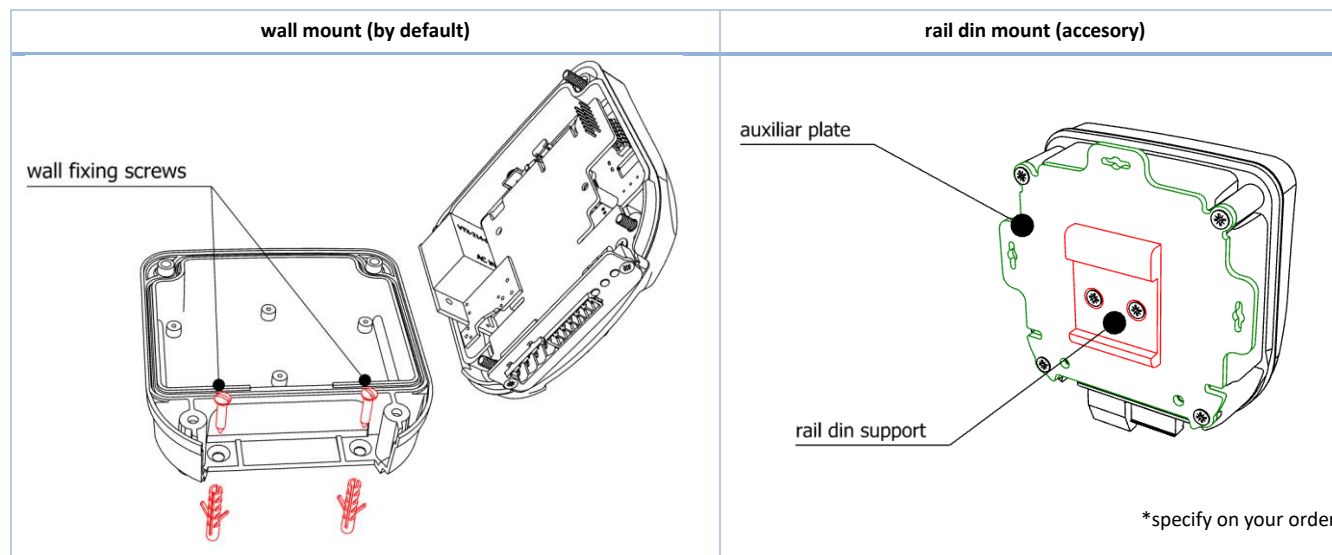

### Warranty

Satel Spain guarantees its products against all manufacturing defects for a period of 1 year.



No return of material will be accepted, nor will any equipment be repaired if it is not accompanied by a report (RMA) indicating the defect observed or the reasons for the return.

The warranty will be void if the equipment has suffered "misuse" or the storage, installation or maintenance instructions in this manual have not been followed. "Misuse" is defined as any use or storage situation contrary to the National Electrical Code or that exceeds the limits indicated in this manual.

Satel Spain declines all responsibility for possible damage to the equipment or to other parts of the installations and will not cover possible penalties derived from a possible breakdown, poor installation or "misuse" of the equipment. Consequently, the guarantee is not applicable to breakdowns produced in the following cases.

- Due to overvoltage and/or electrical disturbances in the supply.
- By water, if the product does not have the appropriate IP rating.
- For exposing the equipment to extreme temperatures, which exceed the operating or storage temperature limit.
- Due to a modification of the product by the client without prior notice to Satel Spain.

Faced with possible errors in this technical sheet, keep it updated in our website.