



# excelliSCAN Scan Heads – Functional Principle of SCANAhead Servo Control and Operation by RTC6 Boards

RTC6 Software Package V1.11



SCANLAB GmbH  
Siemensstr. 2a  
82178 Puchheim  
Germany

Tel. +49 (89) 800 746-0  
Fax: +49 (89) 800 746-199

[info@scanlab.de](mailto:info@scanlab.de)  
[www.scanlab.de](http://www.scanlab.de)

© SCANLAB GmbH 2021  
(Doc. Rev. 1.0.11 en-US - December 14, 2021)

SCANLAB GmbH reserves the right to change the information in this document without notice.  
No part of this document may be processed, reproduced or distributed in any form (photocopy, print, microfilm or by any other means), electronic or mechanical, for any purpose without the written permission of SCANLAB GmbH.

RTC is a registered trademark of SCANLAB GmbH.  
Other mentioned trademarks are hereby acknowledged as properties of their respective owners.

## Contents

<b>1</b>	<b>About this Manual</b>	<b>5</b>
1.1	Related Documents	5
1.2	Manufacturer	5
1.3	Glossary and Abbreviations	6
<b>2</b>	<b>Introduction</b>	<b>8</b>
<b>3</b>	<b>excelliSCAN Scan Heads with SCANahead Servo Control</b>	<b>9</b>
3.1	Comparing excelliSCAN Scan Heads to Scan Heads with Conventional Servo Control (for example, intelliSCAN)	10
3.1.1	What Remains Unchanged with excelliSCAN Scan Heads?	10
3.1.2	Comparison of Scan Heads with Conventional Control and SCANahead Control	11
3.1.3	Returned Data Signal Differences: Status Signal Behavior after Limit Value Exceedance	14
3.1.4	Differences with Transmitted Signals: New Status Value HEAD_BUSY	15
3.1.5	Differences with Transmitted Data Signals: Change of Meaning for 0502 <sub>H</sub> Signal	15
3.1.6	New Transmitted Data Signal: New Type for SetControlDefinitionMode	15
3.1.7	excelliSCAN Timing Diagram (Scan Head with SCANahead Control)	16
3.2	excelliSCAN-specific Changes and Novelties with control_command	18
3.3	Notes on Wobbling with excelliSCAN Scan Heads	22
3.3.1	Converting Queried Values	22
3.3.2	Estimating Maximum Wobbel Frequencies	23
3.4	Advanced Settings for “Spot Distance Control”	25
3.4.1	Setting the Temporal Offset	25
3.4.2	Reading Back the Temporal Offset	26
3.4.3	Identifying Suitable Temporal Offset Values	26
<b>4</b>	<b>RTC6 SCANahead Functions</b>	<b>27</b>
4.1	General	27
4.2	Quick Migration Guide	30
4.2.1	Example Source Code	31
4.2.2	Modifying Existing User Programs for excelliSCAN Scan Heads – Basic Steps	33
4.2.3	Modifying Existing User Programs for excelliSCAN Scan Heads – Observing Restrictions	34
	Non-Usable Functionalities of the RTC6 Board and RTC6 DLL	34
	Non-Usable iDRIVE Functionalities	34
4.3	Modifying Existing User Programs – Further Steps, Background Info on SCANahead and excelliSCAN Functionalities	35
	Notes on Using Commands for Scanner Delays and Laser Delays	35
	Notes on [*]arc[*] Commands	36
	Notes on Polygon Delays	36
	Notes on Sky Writing	36
	Notes on Coordinate Transformations	37
	Notes on Controlling Peripherals	37
	Notes on Unique Characteristics of Transmitted Data Signals	37



4.4	RTC6 Commands - Exclusively for SCANAhead Systems .....	38
	activate_scanahead_autodelays .....	39
	activate_scanahead_autodelays_list .....	39
	get_scanahead_params .....	40
	set_scanahead_laser_shifts .....	42
	set_scanahead_laser_shifts_list .....	42
	set_scanahead_line_params .....	43
	set_scanahead_line_params_list .....	44
	set_scanahead_params .....	45
	set_scanahead_speed_control .....	47
5	Change Index .....	48



## 1 About this Manual

This manual describes user-relevant differences between excelliSCAN scan heads with SCANahead servo control and scan heads with conventional control. And it describes all special RTC6 commands reserved exclusively for operating SCANahead-based excelliSCAN scan heads.

In this way, this manual complements the **RTC6-Manual**. To program complete RTC6 applications for SCANahead-based excelliSCAN scan heads, you have to observe both manuals. Also observe the notes in your scan system manual.

### 1.1 Related Documents

- RTC6-Manual

### 1.2 Manufacturer

SCANLAB GmbH  
Siemensstr. 2a  
82178 Puchheim  
Germany  
Tel. +49 (89) 800 746-0  
Fax: +49 (89) 800 746-199  
info@scanlab.de  
www.scanlab.de

### 1.3 Glossary and Abbreviations

DSP	Digital signal processor on the RTC6 board.
Dynamic focusing unit	This includes, for example, the following SCANLAB products: varioSCAN, varioSCAN <sub>de</sub> , varioSCAN FC and varioSCAN FLEX, excelliSHIFT.
iDRIVE scan systems	In this manual, the term subsumes, for example, the following SCANLAB products: intelliSCAN, intelliSCAN <sub>de</sub> , intelliSCAN <sub>se</sub> , intelliDRILL, intellicube, intelliWELD, varioSCAN <sub>de</sub> , powerSCAN II 50i, excelliSCAN.
Image field	Synonym: <b>Working field</b> .
intelliSCAN	In this manual, the term subsumes, for example, the following SCANLAB products: intelliSCAN, intelliSCAN <sub>de</sub> , intelliSCAN <sub>se</sub> , intelliDRILL, intellicube, intelliWELD, powerSCAN II 50i.
PosAck	"Position Acknowledge", see <b>PosAck signal</b> .
<b>PosAck signal</b>	<ul style="list-style-type: none"> <li>• As of scan system firmware <math>\geq 2001</math>.</li> <li>• <b>PosAck signal</b>-capable SCANLAB scan systems, for example, <b>intelliSCAN</b></li> <li>• Refers to the meaning of: <ul style="list-style-type: none"> <li>– Bit #12, Bit #4, Bit #11, Bit #3 of the XY2-100 status word transferred with 16-bit protocol</li> <li>– Bit #16, Bit #8, Bit #15, Bit #7 of the XY2-100 status word transferred with 20-bit protocol</li> </ul> </li> <li>• These bits are set, if the <b>Position errors</b> of x axis and y axis are in the allowed range: <ul style="list-style-type: none"> <li>– Siehe auch <b>Chapter 3.1.3 "Returned Data Signal Differences: Status Signal Behavior after Limit Value Exceedance"</b>, page 14.</li> <li>– For more information, refer to the corresponding scan head manuals.</li> </ul> </li> <li>• Compare to <b>TrAck signal</b>.</li> </ul>
SCANahead system	SCANLAB scan system with SCANahead servo control, for example, scan heads of the excelliSCAN series. For further information see this manual.

TrAck	"Trajectory Acknowledge", see <b>TrAck signal</b> .
TrAck signal	<ul style="list-style-type: none"> <li>As of scan system firmware <math>\geq 5102 + \geq 5112</math>.</li> <li><b>TrAck signal</b>-capable SCANLAB scan systems, for example, <b>SCANahead systems</b></li> <li>Refers to the meaning of: <ul style="list-style-type: none"> <li>Bit #12, Bit #4, Bit #11, Bit #3 of the XY2-100 status word transferred with 16-bit protocol</li> <li>Bit #16, Bit #8, Bit #15, Bit #7 of the XY2-100 status word transferred with 20-bit protocol</li> </ul> </li> <li>These bits are set, if the <b>Trajectory errors</b> of x axis and y axis are in the allowed range: <ul style="list-style-type: none"> <li>See also <b>Chapter 3.1.3 "Returned Data Signal Differences: Status Signal Behavior after Limit Value Exceedance"</b>, page 14.</li> <li>For more information, refer to the corresponding scan head manuals.</li> </ul> </li> <li>Compare to <b>PosAck signal</b>.</li> </ul>
Trajectory	In this manual: curve with 10 $\mu$ s parameterization.
<b>Trajectory error</b> (= " <b>Position error</b> " equivalent with excelliSCANs)	<p>In general: Deviation of the actual <b>Trajectory</b> from the set <b>Trajectory</b> (not: RTC control values).</p> <p>In particular, with excelliSCANs the following applies, see <b>Figure 4</b> in <b>Chapter 3.1.7 "excelliSCAN Timing Diagram (Scan Head with SCANahead Control)"</b>, page 16:</p> <ul style="list-style-type: none"> <li> <math>0503_H @ \text{clock cycle}_n =</math>  <math>0502_H @ \text{clock cycle}_{n-20} - 0501_H @ \text{clock cycle}_n</math> </li> </ul>
Tracking error	Time difference between the planned and actual reaching of a certain mirror position at constant speed.
Working field	Synonym: <b>Image field</b> .



## 2 Introduction

SCANLAB excelliSCAN scan heads are equipped with SCANahead servo control. Thus they exhibit different dynamics than scan heads with conventional control.

In particular, you need to consider timing differences when synchronously operating your scan head, laser and peripheral equipment.

For this purpose, the RTC6 command set contains dedicated SCANahead commands.

With these, existing RTC6 user programs (functional with conventional scan heads) can be adapted very easily for excelliSCAN scan heads with SCANahead control. To do this, you essentially only need to add two lines of code to the existing code:

```
set_scanahead_params( 1, 1, 1, 0, 0, 0 );  
activate_scanahead_autodelays( 1 );
```

However, the RTC6 board must be equipped with the "SCANa" option to execute this program code.

For details about these and other commands see:

- [Chapter 3 "excelliSCAN Scan Heads with SCANahead Servo Control", page 9](#)
- [Chapter 4 "RTC6 SCANahead Functions", page 27](#)


### 3 excelliSCAN Scan Heads with SCANahead Servo Control

excelliSCAN scan heads are equipped with SCANahead servo control. This innovative control concept<sup>(1)</sup>:

- Produces no **Tracking error** and
- Exploits the maximum acceleration capability of the galvanometer scanners.

The SCANahead servo control consists of 2 parts<sup>(2)</sup>, see **Figure 1**:

- Preprocessing<sup>(3)</sup>
- Control<sup>(4)</sup>

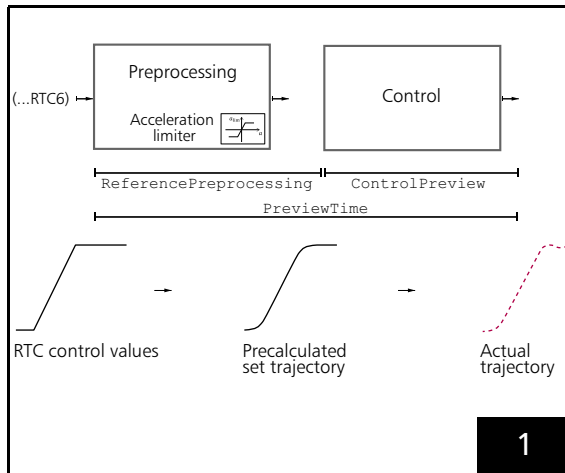

Structure of SCANahead servo control (timing depictions are not true-to-scale).

The RTC6 board puts out RTC control values. The “**Preprocessing**” analyzes the occurring accelerations therein. Accelerations which the scan system cannot execute are replaced by accelerations, which can actually be executed (“the accelerations are limited”).

The result is a precalculated set trajectory of acceleration-limited control values. The required time for this is depicted as **ReferencePreprocessing** in **Figure 1** and **Figure 4**.

The galvanometer scanner control successfully traverses the precalculated set trajectory (actual trajectory in **Figure 1**) – but only with a temporal offset (the control preview time **ControlPreview**, see **Figure 1** and **Figure 4**). This enables full usage of scan system dynamic capabilities.

The entire temporal offset between RTC control values and galvanometer scanner motions (that is, **ReferencePreprocessing** plus control precalculation time **ControlPreview**) is called **PreviewTime**.

The term **PreviewTime** highlights the excelliSCAN scan head’s need to know the RTC control values in advance by this amount of time to ensure punctual execution.

For synchronous laser control, the laser control signals likewise need to take **PreviewTime** into account. This also applies for any other control signals intended to be transmitted synchronously with scan system motion.

If the RTC6 board is used, synchronous execution of scan system movement, laser control and other peripherals is ensured.

The precalculated set trajectories with limited, constant set accelerations cause acceleration time to vary in accordance with speed changes. This means Scanner Delays and Laser Delays needed for taking acceleration time into account are also dependent on speed.

The RTC6 board can automatically calculate the required delays. Therefore, SCANLAB recommends the RTC6 board for operating excelliSCAN scan heads with SCANahead servo control, see **Chapter 4.1 “General”, page 27**.

- (1) Thus, excelliSCAN scan heads cannot be operated like conventional scan heads.
- (2) Each is a special firmware which runs on the servo board for the galvanometer scanners.
- (3) A preprocessing for “**Control**” occurs, that is, the RTC control values are postprocessed.
- (4) Controls the positions for the both galvanometer scanners.

### **3.1 Comparing excelliSCAN Scan Heads to Scan Heads with Conventional Servo Control (for example, intelliSCAN)**

#### **3.1.1 What Remains Unchanged with excelliSCAN Scan Heads?**


What is described in the [RTC6-Manual, Chapter 7.2 "Delay Settings – Coordinating Scan Head Control and Laser Control"](#), [page 144](#) also applies when controlling an excelliSCAN scan head by an RTC6 board:

- The galvanometer scanner motions are temporally offset from the RTC control values by the `PreviewTime` (not: **Tracking error!**). For details, see the table in [Chapter 3.1.2 "Comparison of Scan Heads with Conventional Control and SCANahead Control"](#), [page 11](#).
- The temporal stream of actual values (=actual trajectory) is smoothed (due to the limited acceleration potential of galvanometer scanners) in comparison to the stream of RTC control values<sup>(1)</sup>.
- To compensate the temporal offset between RTC control values and actual trajectories when synchronizing galvanometer scanner motions and laser signals, the RTC6 allows setting of scanner and Laser Delays.  
The meaning of delays for the excelliSCAN is the same as for scan systems without SCANahead control. The same applies to the commands `set_scanner_delays` and `set_laser_delays` to set the delays.
- The preferable alternative is to let the RTC6 board automatically calculate and set Scanner Delays and Laser Delays, see [Chapter 4.1 "General"](#), [page 27](#).

(1) That is, any curves within the control value trajectory get reduced.

### 3.1.2 Comparison of Scan Heads with Conventional Control and SCANahead Control

SCANahead control makes excelliSCAN scan heads behave differently in some respects than scan heads with conventional control. These differences are contrasted in Figure 2 and the following table.

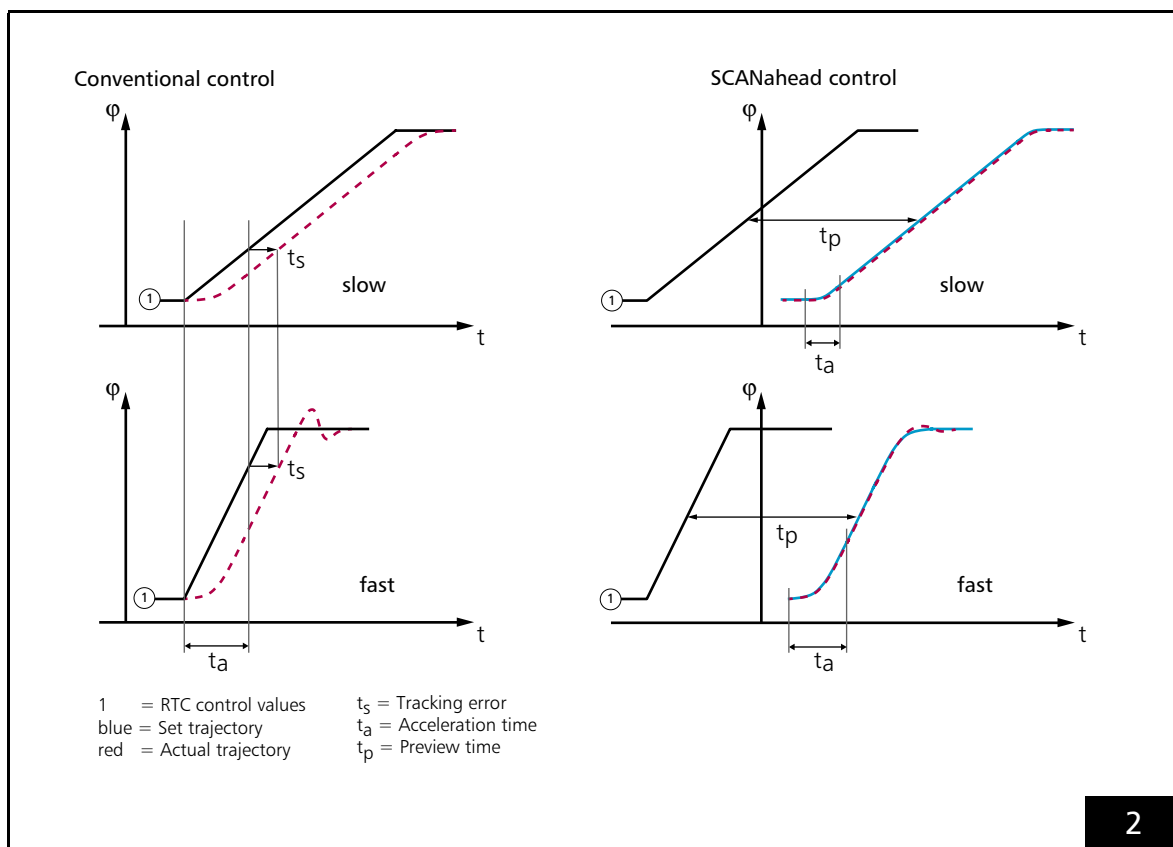

Comparison: Conventional control and SCANahead control.

Scan Head with conventional control	Scan Head with SCANahead control, for example, excelliSCAN
<ul style="list-style-type: none"> <li>Scan heads with conventional control exhibit a characteristic temporal offset called <b>Tracking error</b> <math>t_s</math>, see <a href="#">Figure 2</a>. The <b>Tracking error</b> <math>t_s</math> results from the implemented servo control structure. The <b>Tracking error</b> duration <math>t_s</math> is a metric for the dynamics of a scan head. The <b>Tracking error</b> <math>t_s</math> is (at "normal" speeds) practically independent of scan speed. It is also affected by the selected tuning.</li> </ul>	<ul style="list-style-type: none"> <li>For scan heads with SCANahead control, the temporal offset is not <b>Tracking error</b> <math>t_s</math>. Instead it is the fixed, predefined precalculation time <b>PreviewTime</b> <math>t_p</math>, see <a href="#">Figure 2</a>. The precalculation time <b>PreviewTime</b> <math>t_p</math> is qualitatively different from <b>Tracking error</b> <math>t_s</math>. And it is not a metric for scan head dynamics. Instead, a physically traversable trajectory gets precalculated within the <b>PreviewTime</b> <math>t_p</math>.</li> </ul>
<ul style="list-style-type: none"> <li><b>Tracking error</b> <math>t_s</math> can introduce undesirable artifacts during marking, for example, "necking" in circles and arcs. You can partially compensate such artifacts by specifying over-dimensioned set radii.</li> </ul>	<ul style="list-style-type: none"> <li>Vectors can be traversed even at very high speeds. Necking artifacts during circle/arc marking only start to occur at accelerations exceeding <math>A_{max}^{(a)}</math>. Therefore, these necking artifacts can <i>not</i> be compensated by specifying larger set radii!</li> </ul>
<ul style="list-style-type: none"> <li>For <b>Tracking error</b> <math>t_s</math>, a tolerance (maximum value) is specified (tested by SCANLAB). But the exact value can be serial-number-dependent (minor variation within the tolerances are possible). The exact value cannot be queried, and must instead be experimentally determined.</li> </ul>	<ul style="list-style-type: none"> <li>The <b>PreviewTime</b> <math>t_p</math> is a serial-number-independent value. It is permanently stored in the firmware and can be queried from the scan head.</li> </ul>
<ul style="list-style-type: none"> <li>The trajectory of RTC control values gets smoothed by servo control. The result of smoothing is not precisely known in advance. And it is dependent on the selected tuning. In negative acceleration phases, significant undesirable overshoot may occur.</li> </ul>	<ul style="list-style-type: none"> <li>From the trajectory of RTC control values, a traversable acceleration-limited set value trajectory gets calculated and transmitted to the servo control, see <a href="#">Figure 1</a>. Deviation of the final actual value trajectory from the RTC control value trajectory is therefore known in advance (because it was precalculated).</li> </ul>

Scan Head with conventional control (Continued)	Scan Head with SCANahead control, for example, excelliSCAN (Continued)
<ul style="list-style-type: none"> <li>• <i>The duration of acceleration phases is practically speed-independent.</i> Thus the same amount of time is always required to reach the desired target speed. This means that, particularly at low speeds, the acceleration potential is not fully exploited and the process times of applications are therefore not optimal.</li> </ul>	<ul style="list-style-type: none"> <li>• SCANahead control ensures constant acceleration (at the maximum capabilities of the scan head) in acceleration phases. <i>The duration of acceleration phases is thus minimized, although speed-dependent.</i> Resultingly, Scanner Delays and Laser Delays need adjusting in accordance with mark speed.</li> </ul>
<ul style="list-style-type: none"> <li>• You can set Scanner Delays and Laser Delays: These do <i>not</i> need adjusting for changes in speed. There are rules of thumb for sizing the delays, but truly optimal delays always require empirical determination for each case of application. Furthermore, delay values need determining for each tuning.</li> </ul>	<ul style="list-style-type: none"> <li>• You can set Scanner Delays and Laser Delays: They must be set <i>differently in accordance with speed</i>. Thanks to constant acceleration and precalculated set positions, the relationship between speed and optimum delays is likewise mathematically known in advance. The RTC6 board can automatically determine the optimal speed-dependent Scanner Delays and Laser Delays. It then also sets them dynamically in real time during list execution. For this, the user activates RTC6 autodelay functionality by <b>set_scanahead_params</b> and <b>activate_scanahead_autodelays</b> ( 1 ) as described in Chapter 4.1 "General", page 27 with Figure 7 and Figure 8. If the user does <i>not</i> want to use RTC6 autodelay functionality (<b>set_scanahead_params</b> and <b>activate_scanahead_autodelays</b> ( 0 )), then: <ul style="list-style-type: none"> <li>– Speed-dependent delays "must" be determined and</li> <li>– appropriately set before each change of speed</li> </ul> </li> </ul>

(a) Therefore, at very high speeds or for very small radii. See also empirical formula in [Notes on \[\\*\]arc\[\\*\] Commands, page 36](#).

### 3.1.3 Returned Data Signal Differences: Status Signal Behavior after Limit Value Exceedance

SCANahead systems transmit the **TrAck signal** (but no **PosAck signal**).

After exceeding the limit value, the **TrAck signal** bit – unlike the **PosAck signal** bits in **PosAck**-capable scan systems - is *not* automatically reset to 1 as soon as the **Trajectory error** is smaller than the limit value, see **Figure 3**.

That is, **TrAck signal** bits remain at 0.


*This lets you determine after the event whether a limit exceedance has been occurred.*

To reset the **TrAck signal** bits to 1, you must call **ResetTrAck**:

```
control_command( Data = 403AH )
```

#### Notes

- The limit value for **TrAck signal** or **PosAck signal** (depending on what the scan system supports) is set by **SetPosAcknowledgeLevel**:  
`control_command( Data = 15nnH )`  
(nn is the desired limit value [00...FF])
- The **TrAck signal** limit value cannot be saved for subsequent new starts or resets because excelliSCAN scan heads do not support **UpdatePermanentMemory**.
- For more information on **TrAck**, refer to the excelliSCAN manual.

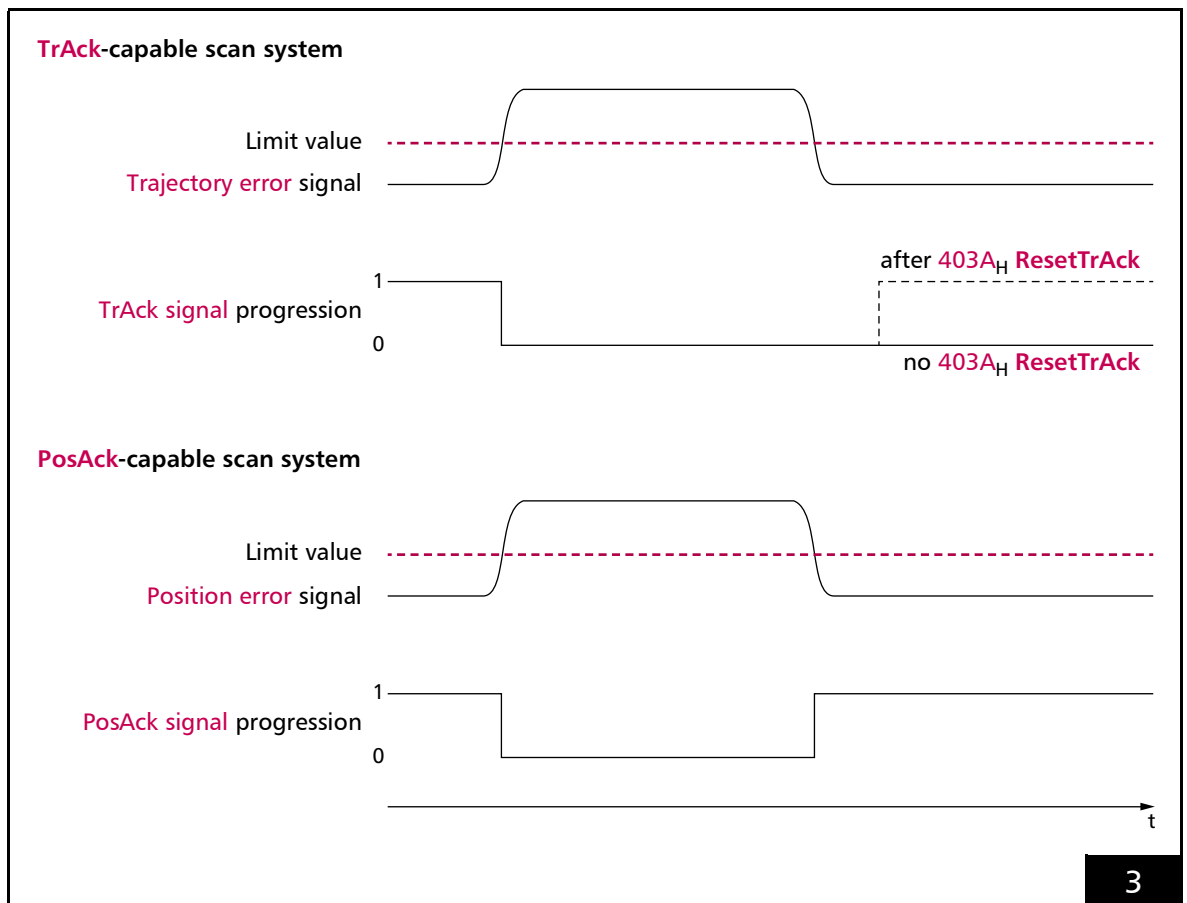

The **TrAck signal** must be explicitly reset to 1.

### 3.1.4 Differences with Transmitted Signals: New Status Value HEAD\_BUSY

New for RTC6 boards together with iDRIVE systems is the returnable status value HEAD\_BUSY (bit #23).

This status value only gets returned by excelliSCAN scan heads. It can be queried by the **get\_status** control command, see also the [RTC6-Manual Chapter 6.4.3 "List Execution Status"](#), page 107.

A prerequisite for this is that **set\_scanahead\_params** with valid parameters has been called. That is, the RTC6 board is configured to operate excelliSCAN scan heads.

The HEAD\_BUSY status value is returned when:

- A list is being processed
- A list has been finished, but scan head output is still in progress  
(temporal offset = PreviewTime)
- The marking's final still-in-progress LaserOffDelay has not yet expired, that is, so long as the laser is still on

This allows waiting until the actual end of marking before an equipment controller closes a shutter or power is cut to the scan head, etc.

In contrast, if the laser was manually switched on (**laser\_signal\_on**) after the list ended but before expiration of PreviewTime, then its LASEROFF is not be waited for.


### 3.1.5 Differences with Transmitted Data Signals: Change of Meaning for 0502<sub>H</sub> Signal

The value 0502<sub>H</sub> transmitted by excelliSCAN scan heads has a different meaning than for non-excelliSCAN scan heads, see [Chapter 3.2 "excelliSCAN-specific Changes and Novelties with control\\_command"](#) and [Chapter 3.1.7 "excelliSCAN Timing Diagram \(Scan Head with SCANahead Control\)"](#), page 16.

### 3.1.6 New Transmitted Data Signal: New Type for SetControlDefinitionMode

In response to **SetControlDefinitionMode**, excelliSCAN scan heads transmit the value 4 (SCANahead trajectory control), see [page 20](#) in [Chapter 3.2 "excelliSCAN-specific Changes and Novelties with control\\_command"](#).

### 3.1.7 excelliSCAN Timing Diagram (Scan Head with SCANahead Control)

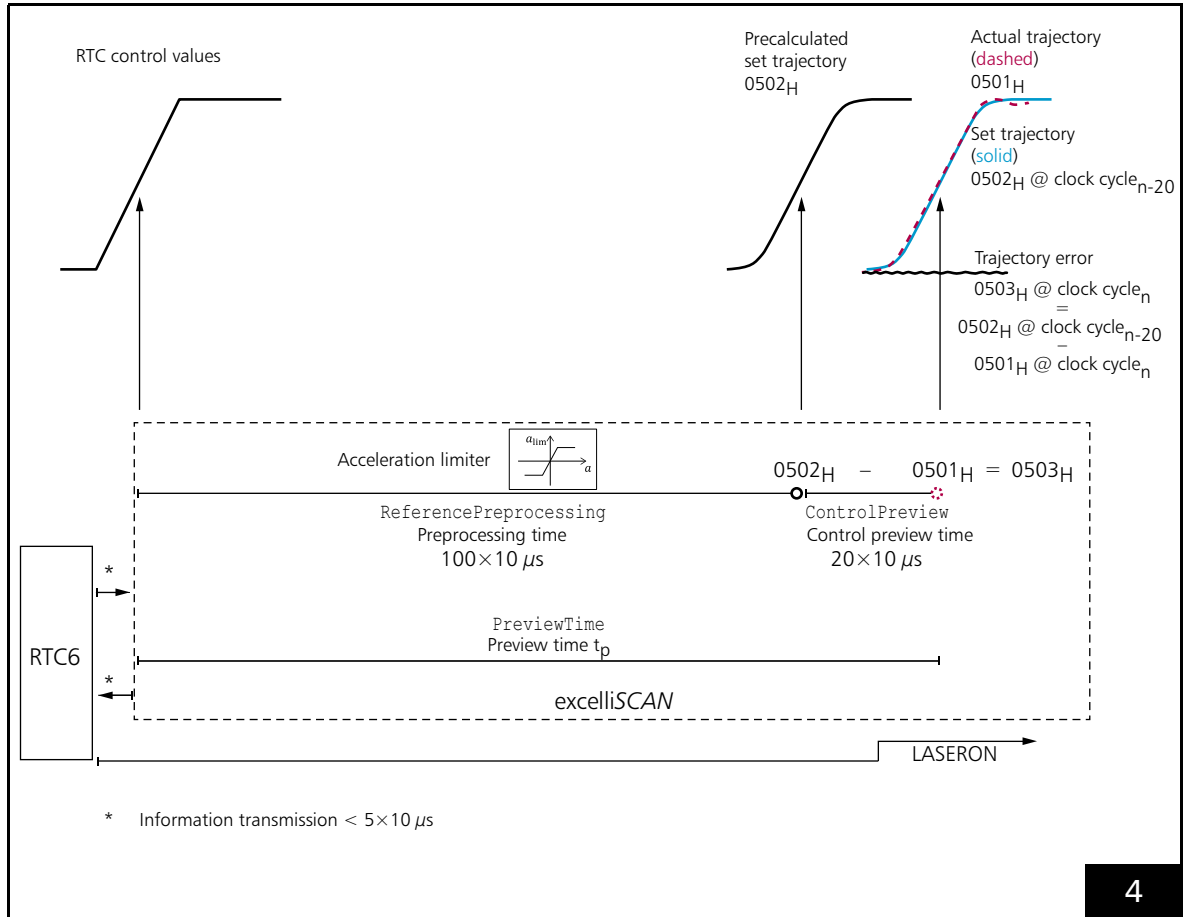

Timing diagram and absolute time values for excelliSCAN scan head.

After `control_command( Data = 0502H )`, excelliSCANs transmit signal 0502<sub>H</sub>, see Figure 4.

With excelliSCANs, signal 0502<sub>H</sub> is:

- The acceleration-limited precalculated set trajectory (angular position of galvanometer scanners)
- Delayed with respect to RTC control values by ReferencePreprocessing (100 × 10 µs clock cycles = 1.0 ms<sup>(1)</sup>).

The positions of the precalculated target trajectory (signal 0502<sub>H</sub>) are not reached instantaneously.

Instead, the actual trajectory (Signal 0501<sub>H</sub>) is delayed:

- In regards to the precalculated target trajectory by control preview time ControlPreview (20 × 10 µs clock cycles = 0.2 ms<sup>(1)</sup>)
- In regards to RTC control values by PreviewTime (120 × 10 µs clock cycles = 1.2 ms).

(1) Value applies to excelliSCAN.



After `control_command( Data = 0503H )`, excelliSCANs transmit signal 0503<sub>H</sub>, see Figure 4.

Signal 0503<sub>H</sub> is the Trajectory error which is calculated as follows:

- $0503_H @ \text{clock cycle}_n = 0502_H @ \text{clock cycle}_{n-20} - 0501_H @ \text{clock cycle}_n$   
Important: Observe this context, if you want to calculate the Trajectory error yourself from log files.

Even during acceleration phases, the Trajectory error is very small<sup>(1)</sup>. Therefore, you can choose a very small TrAck limit value (in comparison to conventional scan heads) without the limit value being exceeded and the TrAck signal bits getting set.

(1) As shown in Figure 4, this is why logging software displays signal 0503<sub>H</sub> as an x axis parallel (that is, almost horizontal line at 0), if Trajectory error is small.

### 3.2 excelliSCAN-specific Changes and Novelties with control\_command

Ctrl Command	control_command		
Function	Sends a control command. Whether and how the addressed scan system reacts depends on its properties (among other things, the scan system firmware). Here: relevant part for excelliSCAN scan heads only.		
Call	control_command( Head, Axis, Data )		
Parameters	Head	See <a href="#">RTC6-Manual</a> .	
	Axis	See <a href="#">RTC6-Manual</a> .	
	Data	See <a href="#">RTC6-Manual</a> .	
	Code <sub>HIGH</sub> (hex)	Code <sub>LOW</sub> (hex)	
	05	<b>SetMode</b> See <a href="#">RTC6-Manual</a> . As described there: – Each Code <sub>LOW</sub> parameter value corresponds to a specific data type. – The standard setting is Code <sub>LOW</sub> = 00 (XY2-100 status word). excelliSCAN-scan heads have an SL2-100 interface. Therefore, they return a signed 20-bit value.	
	Code <sub>HIGH</sub> (hex)	Code <sub>LOW</sub> (hex)	Data type to be returned by the scan system
	05	01	As of scan system firmware $\geq 2001$ . With NON-excelliSCAN scan heads: Actual position (angular position of galvanometer scanners). Unit with 20-bit protocol: In bits. Value range with 20-bit protocol: $[-524.288... +524.287]$ . With excelliSCAN scan heads: Like NON-excelliSCAN scan heads. See <a href="#">Chapter 3.1.7 "excelliSCAN Timing Diagram (Scan Head with SCANahead Control)"</a> , page 16 and <a href="#">Figure 4</a> .
	05	02	As of scan system firmware $\geq 2001$ . With NON-excelliSCAN scan heads: Set position (angular position of galvanometer scanners). Unit with 20-bit protocol: In bits. Value range with 20-bit protocol: $[-524.288... +524.287]$ . As of scan system firmware $\geq 5050$ . With excelliSCAN scan heads: Precalculated set position (angular position of galvanometer scanners). Bits $[-524.288... +524.287]$ . See <a href="#">Chapter 3.1.7 "excelliSCAN Timing Diagram (Scan Head with SCANahead Control)"</a> , page 16 and <a href="#">Figure 4</a> .

Notice! Generic information. May be incomplete or even incorrect for your scan system.  
Always consult the dedicated scan system manual!

Ctrl Command	control_command			
Parameters (cont'd)	Data (cont'd)	Code <sub>HIGH</sub> (hex)	Code <sub>LOW</sub> (hex)	Data type to be returned by the scan system
		05	03	<p>As of scan system firmware <math>\geq 2001</math>.</p> <p>With NON-excelliSCAN:</p> <ul style="list-style-type: none"> <li>Position error (= set position 0502<sub>H</sub> – actual position 0501<sub>H</sub>)</li> </ul> <p>Unit with 20-bit protocol: In bits. Value range with 20-bit protocol: <math>[-524.288...+524.287]</math>.</p> <p>As of scan system firmware <math>\geq 5050</math>.</p> <p>With excelliSCAN scan heads: Trajectory error. See Glosara entry.</p>
		05	15	<p>As of scan system firmware <math>\geq 5050</math>.</p> <p>Axis 1 (X-axis): Temperature of the servo board (ISB). Axis 2 (Y-axis): Temperature of the servo add-on board for evaluating the encoder signals.</p>
		05	64	<p>As of scan system firmware <math>\geq 5100</math>.</p> <p>See Chapter 3.4 "Advanced Settings for "Spot Distance Control"", page 25: TimeShift relative to the SCANLAB default offset.</p>
		05	65	<p>As of scan system firmware <math>\geq 5100</math>.</p> <p>See Chapter 3.4 "Advanced Settings for "Spot Distance Control"", page 25: total TimeShift.</p>

Notice! Generic information. May be incomplete or even incorrect for your scan system.  
Always consult the dedicated scan system manual!

Ctrl Command	control_command			
Parameters (cont'd)	Data (cont'd)	Code <sub>HIGH</sub> (hex)	Code <sub>LOW</sub> (hex)	Data type to be returned by the scan system
		0A		As of scan system firmware $\geq 5050$ . <b>UpdatePermanentMemory</b> Only SCANAhead systems: SCANAhead systems do not support <b>UpdatePermanentMemory</b> .
		0E		As of scan system firmware $\geq 5050$ . <b>SetControlDefinitionMode</b> As described in the <b>RTC6-Manual</b> . SCANAhead systems, the value 4 is added as tuning type ("SCANAhead servo control").
		11		As of scan system firmware $\geq 5050$ . <b>SelectControlDefinition</b> Only excelliSCAN: excelliSCAN scan heads do not support <b>SelectControlDefinition</b> . With excelliSCAN scan heads, there is only one tuning.
		12		As of scan system firmware $\geq 5050$ . <b>SetPositionScale</b> Only SCANAhead systems: SCANAhead systems do not support <b>SetPositionScale</b> . With SCANAhead systems, the effective calibration cannot be changed.

Notice! Generic information. May be incomplete or even incorrect for your scan system.  
Always consult the dedicated scan system manual!

Ctrl Command	control_command			
Parameters (cont'd)	Data (cont'd)	Code <sub>HIGH</sub> (hex)	Code <sub>LOW</sub> (hex)	Data type to be returned by the scan system
		40	As of scan system firmware ≥ 5102 + ≥ 5112. Only excelliSCAN: <b>ResetTrAck</b> <b>ResetTrAck</b> causes the scan system to reset the <b>TrAck</b> signal bits. See also <a href="#">Chapter 3.1.3 "Returned Data Signal Differences: Status Signal Behavior after Limit Value Exceedance"</a> , page 14. For more information, for example, about configuring the <b>TrAck</b> limit value, see the corresponding scan system manual. Note: The <b>TrAck</b> limit value cannot be saved for subsequent new starts or resets. excelliSCAN scan heads do not support <b>UpdatePermanentMemory</b> .	
		Code <sub>LOW</sub> (hex)		
		3A	Reset <b>TrAck</b> signal bits.	
		50	As of scan system firmware ≥ 5100. Only excelliSCAN: See <a href="#">Chapter 3.4 "Advanced Settings for "Spot Distance Control"'</a> , page 25: dT <sub>high</sub> .	
		51	As of scan system firmware ≥ 5100. Only excelliSCAN: See <a href="#">Chapter 3.4 "Advanced Settings for "Spot Distance Control"'</a> , page 25: dT <sub>low</sub> .	
Comments	• The scan system firmware a.bb.c is read as abbc, for example, 5100 corresponds to version 5.10.0, and 5054 to version 5.05.4.			
Version info	As of version DLL 601.			
References	get_value, get_values, get_head_status, set_trigger, set_trigger4, get_waveform, get_last_error			

Notice! Generic information. May be incomplete or even incorrect for your scan system.  
Always consult the dedicated scan system manual!

### 3.3 Notes on Wobbling with excelliSCAN Scan Heads

Wobbel mode combines the output position's regular linear motion (that is, the underlying marking) with an elliptical or figure-of-8 motion (= wobbel shape). This causes the laser beam to be guided spirally through the **Image field**. Here, both accelerations and both speeds are superimposed.

Very demanding wobbel markings with the excelliSCAN scan head are achievable, provided that neither its maximum acceleration  $A_{\max}$  nor its maximum speed  $V_{\max}$  are exceeded. The following applies:

$$A_{\text{Marking}} + A_{\text{Wobbel}} \leq A_{\max}$$

and

$$V_{\text{Marking}} + V_{\text{Wobbel}} \leq V_{\max}$$

Both the maximum acceleration  $A_{\max}$  and maximum speed  $V_{\max}$  are factory-set in the excelliSCAN scan head.

They are queried by the control command **get\_scanahead\_params**(**HeadNo** = 256 ).

The values are returned as programming bits<sup>(1)</sup> relative to RTC 10  $\mu$ s clock cycles:

- $A_{\max}$  as programming bits/clock cycle<sup>2</sup>
- $V_{\max}$  as programming bits/clock cycle.

(1) Not: galvanometer scanner control bits!  
Programming bits are coordinates in the **Image field**.  
Galvanometer scanner control bits correspond to a galvanometer scanner rotation angle.

#### 3.3.1 Converting Queried Values

*In practical application, such data should be in the form of values in m/s and m/s<sup>2</sup> for the image plane.*

To convert maximum acceleration  $A_{\max}$  from programming bits<sup>(1)</sup>/clock cycle<sup>2</sup> to m/s<sup>2</sup><sup>(2)</sup>:

$$\frac{A_{\max} [\text{Bit/clock cycle}^2]}{K [\text{Bit/mm}]} \times \frac{0.001 [\text{m/mm}]}{(0.00001)^2 [\text{s}^2/\text{clock cycle}^2]}$$

To convert maximum speed  $V_{\max}$  from programming bits<sup>(1)</sup>/clock cycle to m/s:

$$\frac{V_{\max} [\text{bits/clock cycle}]}{K [\text{bits/mm}]} \times \frac{0.001 [\text{m/mm}]}{0.00001 [\text{s/clock cycle}]}$$

#### Examples

- excelliSCAN 14: A maximum acceleration of 39 bits/clock cycle<sup>2</sup> and a calibration factor of  $K \approx 7700$  bits/mm<sup>(3)</sup> equate to a maximum acceleration in the image plane of 50600 m/s<sup>2</sup>.
- excelliSCAN 14: A maximum speed of 2465 bits/clock cycle and a calibration factor of  $K \approx 7700$  bits/mm<sup>(3)</sup> equate to a maximum speed in the image plane of 32 m/s.

(2) Query  $A_{\max}$  is by **get\_scanahead\_params**(**HeadNo** = 256 ).  
Observe the units specified in the command description for **get\_scanahead\_params**.


(3) Theoretically assumed example value that might occur for a calibration of 11.7° mechanical, an objective focal length of 160 mm and a 1-to-1 correction file. Actual values are listed in the \* **ReadMe.txt** file that SCANLAB supplies along with the correction file.

### 3.3.2 Estimating Maximum Wobble Frequencies

The following two scenarios illustrate how users can estimate a sensible value for the maximum wobble frequency  $f_{\max}$ .

Here, it is assumed that a desired wobble line thickness is to be achieved using the “circle” wobble shape, see [Figure 5](#).

- The wobble line thickness is twice the radius of the “circle” wobble shape (“ $2r$ ” in [Figure 5](#)).
- The “circle” wobble shape radius  $r$  is defined in a parameter of the appropriate RTCcommand. The following applies:  
 $r = \text{Transversal} = \text{Longitudinal}$ ,  
 that is,  
 – `set_wobble_mode` (Transversal =  $r$ ,  
 Longitudinal =  $r$ , Freq =  $f_{\max}$ , Mode = 0)  
 or,  
 – `set_wobble` (Transversal =  $r$ ,  
 Longitudinal =  $r$ , Freq =  $f_{\max}$ ).

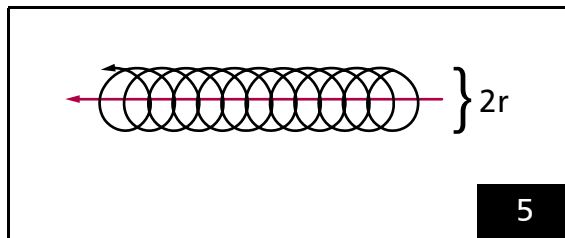

Marking vector (red) and “circle” wobble shape (black).  
 $2r$  indicates the resulting wobble line thickness.

#### Notes

- Nevertheless, users might define wobble command parameter values for Amplitude (Transversal, Longitudinal) and Frequency (Freq) so unfavorable that set acceleration exceeds  $A_{\max}$ . Then the desired wobble line thickness is not achieved, because marking executes at  $A_{\max}$ .

#### Scenario A) Marking Vector and “Circle” Wobble Shape

At a constant speed, acceleration is null.

If the marking vector has reached the specified mark speed – after an acceleration phase – then the following applies:

$$A_{\text{Marking}} = 0$$

together with (as previously mentioned)

$$A_{\text{Marking}} + A_{\text{Wobble}} \leq A_{\max}$$

Hence, the total  $A_{\max}$  of the excelliSCAN scan head can be used for the wobble shape<sup>(1)</sup>.

With *uniform circular motions*, the following applies to circular acceleration  $a$ :

$$a = r \times (2\pi \times f)^2$$

Here,  $r$  is the circle radius and frequency  $f$  is the number of circular iterations per unit of time (note:  $2\pi \times f$  is the circle frequency  $\omega$ ).

By setting  $a$  to the excelliSCAN scan head’s maximum acceleration  $A_{\max}$  and solving for frequency  $f$ , we obtain the maximum wobble frequency  $f_{\max}$  for the marking vector:

$$f_{\max} = \frac{1}{2\pi} \sqrt{\frac{A_{\max}}{r}}$$

#### Notes

- To apply the above equation for an ellipse, set Radius  $r$  to the longer of the two half axes.
- To check whether the maximum speed of the excelliSCAN scan head is exceeded, use the following equation:

$$V_{\text{Marking}} + V_{\text{Wobble}} \leq V_{\max}$$

Whereby the following applies to the trajectory speed  $V_{\text{Wobble}}$  of a circle during wobbling:

$$V_{\text{Wobble}} = 2\pi \times r \times f_{\text{Wobble}}$$

(1) Valid not only for “circle”, but also generally for any wobble shape (because  $A_{\text{Marking}} = 0$ ).

### Scenario B) Arc Element and “Circle” Wobbel Shape

For the circular acceleration  $A_{\text{Marking}}$  of an arc element the following applies:

$$A_{\text{Marking}} = \frac{V_{\text{Marking}}^2}{r_{\text{Arc}}}$$

The acceleration available for wobbel motion is correspondingly reduced by  $A_{\text{Marking}}$ .

For a “circle” wobbel shape – using the equation in Scenario A – the maximum wobbel frequency  $f_{\text{max}}$  is:

$$f_{\text{max}} = \frac{1}{2\pi} \sqrt{\frac{(A_{\text{max}} - A_{\text{Marking}})}{r_{\text{Wobbel}}}}$$

#### Notes

- To apply the above equation for an ellipse, set Radius  $r$  to the longer of the two half axes.
- The trajectory speeds of arc element and wobbel shape are superimposed in accordance with:

$$V = V_{\text{Marking}} + 2\pi \times f_{\text{Wobbel}} \times r_{\text{Wobbel}}$$

### 3.4 Advanced Settings for “Spot Distance Control”

For the “Spot Distance Control” functionality of “Automatic Laser Control”

(`set_auto_laser_control( Ctrl = 7 )`),  
SCANahead systems like the excelliSCAN provide temporally corrected position and speed signals.

SCANLAB automatically corrects temporal offsets known in advance. A typical value for an excelliSCAN 14 are  $6 \times 10 \mu\text{s}$  clock cycles.

Not known in advance are temporal offsets for example, caused by the laser reaction times. These appear in the marking result as varying spot distances in acceleration and deceleration phases.

To compensate for these offsets, the following functionalities are available with SCANahead systems as of Firmware 5.10.0 (see [Comments, page 21](#)):

- “Setting the Temporal Offset”
- “Reading Back the Temporal Offset”

#### 3.4.1 Setting the Temporal Offset

The position and speed signals used for the “Spot Distance Control” functionality can be temporally shifted by `TimeShift` (in seconds), see also [Chapter 3.4.3 “Identifying Suitable Temporal Offset Values”](#), page 26<sup>(1)</sup>:

- $\pm 8 \times 10 \mu\text{s}$  clock cycles max.
- $160 \mu\text{s}/2^{16}$  resolution
- Has an additive effect on the signal propagation time compensation preset by SCANLAB
- With positive values, the signals are shifted forward in time, with negative values, they are shifted backward

(1) Convert `TimeShift` to the values `dThigh` and `dTlow` as follows:

- $dT = 2^{15} + \text{TimeShift} \times 2^{16} / 160 \mu\text{s}$   
Allowed value range for `dT`: [0...65,535].
- `dThigh`  
= (`dT` >> 8) & 0xff
- `dTlow`  
= `dT` & 0xff

(2) Send the value for `dThigh` and `dTlow` to the SCANahead system by

`control_command( Data = [5000H + dThigh])`

(3) Send the value for `dThigh` and `dTlow` to the SCANahead system by

`control_command( Data = [5100H + dTlow])`

(1) “Signal propagation time compensation”.

### 3.4.2 Reading Back the Temporal Offset


The SCANahead system returns the temporal offset set in units of  $[2^{16}/160 \mu\text{s}]$  after:

- `control_command( Data = 0564H)`  
temporal offset set by the user
- `control_command( Data = 0565H)`  
total temporal offset

Result in s = `get_value(...)`  $\times 160 \mu\text{s}/2^{16}$ .

### 3.4.3 Identifying Suitable Temporal Offset Values

A suitable value for TimeShift can be found with marking experiments, see Figure 6. TimeShift is modified until the variation of the pulse distances in acceleration and deceleration phases is minimal.

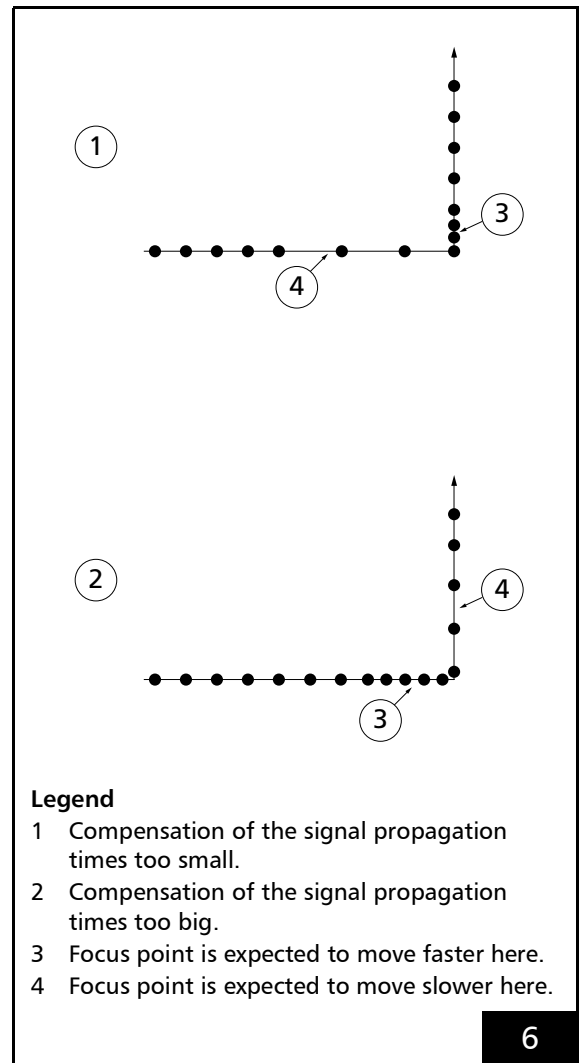

Spot Spacing deficiencies allow conclusions to be drawn as to whether the compensation of the signal propagation times is too big or too small.

## 4 RTC6 SCANahead Functions

### 4.1 General

The excelliSCAN scan head internally calculates a set trajectory with limited, constant accelerations, whereby the acceleration time depends on speed changes, see [Chapter 3 "excelliSCAN Scan Heads with SCANahead Servo Control", page 9](#). Resultingly, the scanner and Laser Delays needed for taking acceleration time into account depend on speed.

The RTC6 board can automatically calculate the required delays. For this and other reasons, SCANLAB recommends the RTC6 board for operating excelliSCAN scan heads.

Two commands "activate" RTC6 SCANahead functionality for suitable control of excelliSCAN scan heads:

(1) **set\_scanahead\_params** ( *Mode* =1 )

The RTC6 board queries relevant information from the scan head, processes it (correction file) and holds it for further usage. Additionally, the RTC6 board laser control section gets prepared for taking *PreviewTime* into account. This affects *LASER\_DIGITAL\_OUT1/2* etc., see [Notes on Controlling Peripherals, page 37](#).

(2) **activate\_scanahead\_autodelays** <sup>(1)</sup>

The RTC6 board is instructed:

- To use the results of (1).
- To ignore delays set in source code by **set\_scanner\_delays** and **set\_laser\_delays**.
- To automatically calculate (for high contour fidelity) optimal speed-dependent Scanner Delays and Laser Delays<sup>(1)</sup>.
- To also set these dynamically in real time during list execution.
- To likewise automatically calculate all required parameters when Sky Writing is used (for example, run-in and run-out motions), see also [Notes on Sky Writing, page 36](#).

(1) For all commands that require delays, that is, jump, mark, arc commands.

Thus, users can effortlessly and immediately create markings with high contour fidelity<sup>(2)</sup> (without the need to determine and optimize delays).

Of course, users are also free to tailor marking results using additional suitable RTC6 commands:

- *Scanner delays* are affected by the *CornerScale* and *EndScale* parameters<sup>(3)</sup> of the two commands **set\_scanahead\_line\_params** and **set\_scanahead\_line\_params\_list**.

The effects of these parameters are shown in [Figure 7](#).

You can choose between optimal contour fidelity and optimal process speed at the cost of contour fidelity (*process optimization*).

- *Laser Delays* are affected by the *AccScale*<sup>(4)</sup> parameter of the two commands **set\_scanahead\_line\_params** and **set\_scanahead\_line\_params\_list**.

The effect of this parameter is shown in [Figure 8](#) which demonstrates a line marked using three different parameter values: the energy deposition at line ends is influenced by partially or wholly show/hide acceleration phases.

- Also available for *fine-tuning* Laser Delays are the RTC6 commands **set\_scanahead\_laser\_shifts** and **set\_scanahead\_laser\_shifts\_list**. They let you set a temporal offset for the laser switching time points, for example, to compensate signal propagation times<sup>(5)</sup>.


(2) Provided that the specified mark speed makes sense. However, the jump speed is automatically reduced to suitable values.

(3) These parameters only affect the galvanometer scanner positioning. They *do not* affect points in time when the laser is to be switched on and off.

(4) This parameter only affects points in time when the laser is to be switched on and off. It *does not* affect the galvanometer scanner positioning!

(5) The following applies for  $\geq$  DLL 605: the transport delay from the RTC6 board to the scan head (20  $\mu$ s) is automatically taken into account.

Parameter `CornerScale` and `EndScale` affect the scanner delays

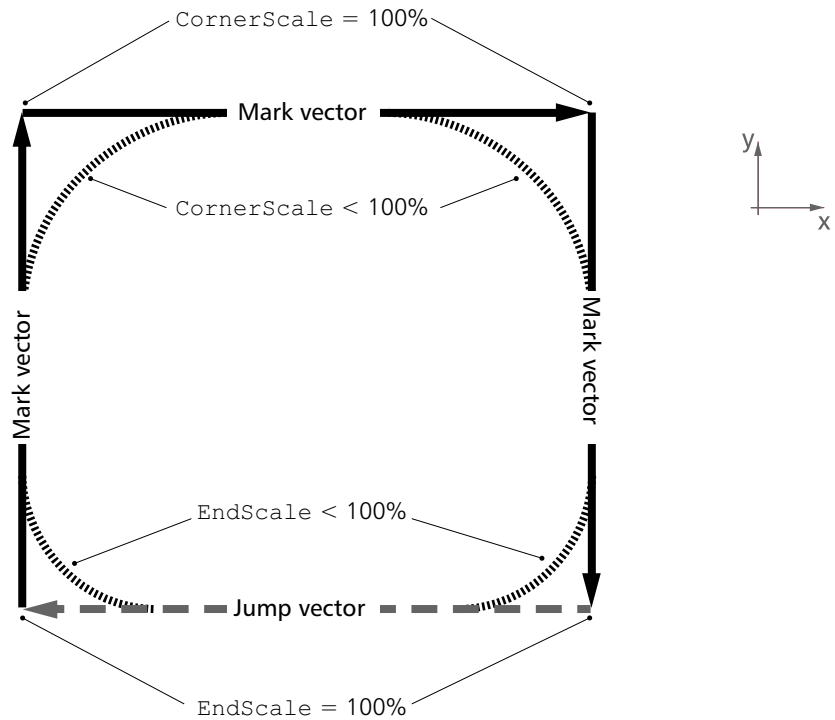

`CornerScale`


This parameter controls the marking accuracy at mark vector to mark vector alternations ("rounding of corners"). 100% = sharp corners.

`EndScale`

This parameter controls the marking accuracy at mark vector to jump vector alternations ("line end") and at jump vector to mark vector alternations ("line start"). 100% = straight line ends/line starts.

7

`set_scanahead_line_params` and `set_scanahead_line_params_list`: the parameters `CornerScale` and `EndScale` affect the Scanner Delays.

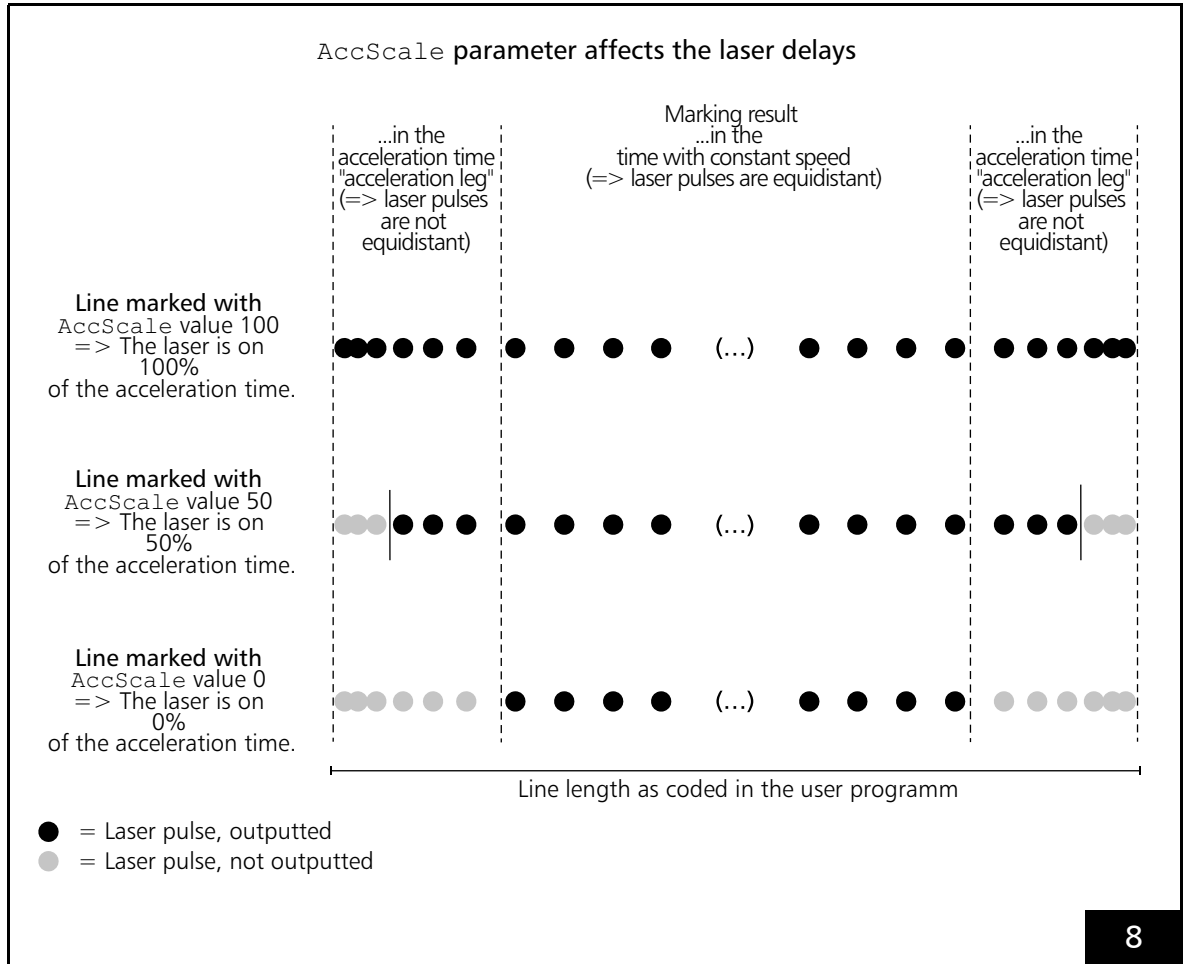

**set\_scanahead\_line\_params** and **set\_scanahead\_line\_params\_list**: the parameter **AccScale** affects Laser Delays.

With **AccScale** values < 100 the marked line lengths are shorter than they are actually coded in the user program.

With these values the laser is not always on during acceleration times. That is, portions of the acceleration legs are not marked. The acceleration leg lengths are proportional to the square of the acceleration time.

The portion of each acceleration leg which is *not marked* corresponds to  $(1 - \text{AccScale value} / 100)^2 \times 100\%$ .

For example, 25% of each acceleration leg is not marked with an **AccScale** value 50.

Note: To achieve the line lengths as coded in the user program *completely and with equidistant laser pulse spacing*, you must use Sky Writing.

## 4.2 Quick Migration Guide

This chapter gives advanced users the following practical information for quickly transitioning to an excelliSCAN scan head with an RTC6 board:

- Example source code for a user program, see [Chapter 4.2.1 "Example Source Code", page 31](#)
- Tips on adapting existing RTC user programs for the excelliSCAN, see [Chapter 4.2.2 "Modifying Existing User Programs for excelliSCAN Scan Heads – Basic Steps", page 33](#)
- In addition it is briefly mentioned, which restrictions exist due to not usable functionalities, see [Chapter 4.2.3 "Modifying Existing User Programs for excelliSCAN Scan Heads – Observing Restrictions", page 34](#)

Further details are provided starting with [Chapter 4.3 "Modifying Existing User Programs – Further Steps, Background Info on SCANahead and excelliSCAN Functionalities", page 35](#).



#### 4.2.1 Example Source Code

The following example code snippets illustrate basic elements of an RTC6 user program to initialize the RTC6DLL.dll and RTC6 board (that is, it is not a complete program code).

Because this example uses implicit linking, the files RTC6impl.h and RTC6DLL.lib are required.

Additionally, the program needs to be able to load RTC6DLL.dll. If the operating system can not find RTC6DLL.dll during program start, then it responds with an error message and terminates the program.

```
// SAMPLE SOURCE CODE SNIPPETS: TO MARK A SQUARE.
//
// RTC6 header file for implicit linking to RTC6DLL.dll.
// also link to Visual C++ import library RTC6DLL.lib, to compile an executable
#include "RTC6impl.h"

// scanahead line params
CornerScale = 100; // polyline: 100%: max precision, 0% min execution time
EndScale = 100; // mark, jump: 100%: max precision, 0% min execution time
AccScale = 100; // 100%: laser is on during acceleration and deceleration
// 0%: laser is off during acceleration and deceleration

// enable/disable variable Polygon Delay or sky writing
VariablePolygonDelay = 0;
SkyWriting = 0;
int main()
{

// initialize
init_rtc6_dll();
if( 0 != load_program_file( NULL ) ) { return -1; } // load RTC firmware
if( 0 != load_correction_file( NULL, 1, 2 ) ) { return -2; }
set_mark_speed_ctrl( 25000 );
set_jump_speed_ctrl( 50000 );

// laser control
set_laser_control( 0 ); // high active laser signals
set_laser_mode( 1 ); // mode 1 supports YAG
set_firstpulse_killer( 640 );
set_laserpulses_ctrl( 320, 128 );

// scanahead: calculate delays automatically. excelliSCAN scan head must be connected and powered.
set_scanahead_params( 1, 1, 1, 0, 0, 0 ); // place anywhere after load_correction_file
activate_scanahead_autodelays( 1 );
set_scanahead_line_params( CornerScale, EndScale, AccScale );
set_scanahead_laser_shifts( 1600, 1600 ); // fine tuning LaserON and LaserOFF. 1 bit = 1/64
µs
```



```
// sky writing and variable Polygon Delay
set_delay_mode( VariablePolygonDelay, 0, 2^30, 0, 0 );
set_sky_writing_para( SkyWriting, 0, 0, 0 );
set_sky_writing_mode( 3 );
set_sky_writing_limit( 0.5 );

// create and execute list
set_start_list( 1 );
jump_abs( 50000, -50000 );
mark_abs( 50000, 50000 );
mark_abs( -50000, 50000 );
mark_abs( -50000, -50000 );
mark_abs( 50000, -50000 );
jump_abs( 0, 0 );
set_end_of_list();
execute_list( 1 );
}
// END OF SAMPLE SOURCE CODE SNIPPETS.
```

#### 4.2.2 Modifying Existing User Programs for excelliSCAN Scan Heads

##### – Basic Steps

To operate an excelliSCAN with an RTC6 board, SCANLAB recommends modifying existing user programs as described below. For more details, see the following chapters, as well as the [RTC6-Manual](#). It is assumed that it is a complete RTC6 or RTC5 user program for operating a SCANLAB scan head with conventional control, for example, an intelliSCAN. user program

- (1) After the `load_correction_file` command at the beginning of your user program, be sure to insert the command `set_scanahead_params` (for parameters, see the command description).  
This activates the SCANahead functionality of the RTC6 board (incl. laser control!). Mode = 1 initiates direct querying of the scan head for scan-head-specific information on `PreviewTime`, `Vmax` and `Amax`. Therefore, an excelliSCAN scan head must be connected to the RTC6 board and already and switched-on during user program runtime.
- (2) Insert `activate_scanahead_autodelays`<sup>(1)</sup>.  
This switches on automatic calculation of Scanner Delays and Laser Delays.  
All `set_scanner_delays` and `set_laser_delays` commands in subsequent code lines have no effect, see also notes for `activate_scanahead_autodelays`.

- (3) If the original program is an RTC5 user program, then also make the following changes (for more detailed and comprehensive information, see the [RTC6-Manual](#)):

- change `init_rtc5_dll` to `init_rtc6_dll`
- change `rtc5_count_cards` to `rtc6_count_cards`
- change `free_rtc5_dll` to `free_rtc6_dll`
- do **NOT**<sup>(1)</sup> change `set_rtc5_mode` and `set_rtc4_mode` to `set_rtc6_mode`.

If neither `set_rtc4_mode` nor `set_rtc5_mode` is called, then the default state with RTC5 boards is `set_rtc5_mode`. Insert `set_rtc5_mode` into the RTC6 user program to automatically convert certain parameter values from RTC5 to RTC6 units.

These modifications should already suffice for successful execution of your user program.

Any source code sections for “Variable [Polygon Delays](#)” and Sky Writing should thereby also be runnable.

Check whether your code is affected by the restrictions mentioned next, in [Chapter 4.2.3 “Modifying Existing User Programs for excelliSCAN Scan Heads – Observing Restrictions”](#), page 34.

(1) This section is intended as a quick guide: for detailed information (for example, 3D applications etc.), see the [RTC6-Manual](#).

### 4.2.3 Modifying Existing User Programs for excelliSCAN Scan Heads

#### – Observing Restrictions

While continuing to modify your user program for the excelliSCAN scan head, keep in mind the following:

#### Non-Usable Functionalities of the RTC6 Board and RTC6 DLL

- After activation of SCANahead functionality by `set_scanahead_params`, the following RTC6 functionalities are *not* usable (status  $\leq$  DLL 615):
  - `load_varpolydelay`
  - `laser_on_pulses_list` cannot be used for excelliSCAN scan heads, if external signal pulses are required at DIGITAL IN1 (`laser_on_list` can be used with excelliSCAN)

#### Non-Usable iDRIVE Functionalities

- The following iDRIVE functions are not available for excelliSCAN scan heads:
  - Changing the effective calibration (`SetPositionScale`)  
`control_command( Data = 12xxH )`
- The following iDRIVE functions are not available for excelliSCAN scan heads with firmware version  $\leq$  5.05.4 (see [Comments, page 21](#)):
  - Switching between tunings (`SelectControlDefinition`)  
`control_command( Data = 11xxH )`

See [Chapter 3.2 "excelliSCAN-specific Changes and Novelties with control\\_command"](#), page 18.

### 4.3 Modifying Existing User Programs – Further Steps, Background Info on SCANahead and excelliSCAN Functionalities

While continuing to modify your user program for the excelliSCAN scan head, keep in mind the following:

- [Notes on Using Commands for Scanner Delays and Laser Delays](#), page 35
- [Notes on \[\\*\]arc\[\\*\] Commands](#), page 36
- [Notes on Polygon Delays](#), page 36
- [Notes on Sky Writing](#), page 36
- [Notes on Controlling Peripherals](#), page 37
- [Notes on Unique Characteristics of Transmitted Data Signals](#), page 37

#### Notes on Using Commands for Scanner Delays and Laser Delays

When using commands with the excelliSCAN to synchronize scan motions and laser control signals, observe the following:

- All relevant SCANahead parameters (article-number-specific) are stored in the excelliSCAN scan head during manufacturing. Although `set_scanahead_params( Mode = 2 )` allows other values, we recommend only using the values queried from the excelliSCAN scan head. Mode 2 is primarily intended for software development without an attached excelliSCAN scan head.

- For excelliSCAN scan heads, the actual position of the scan motion lags the control values by `PreviewTime`, see [Figure 1](#)<sup>(1)</sup>. For synchronous laser control, the laser control signals also need to take `PreviewTime` into account. This can be done manually by appropriately modifying parameters for the `set_scanner_delays` and `set_laser_delays` commands. But here, you must take the excelliSCAN's speed-dependent acceleration time into account. The preferable alternative is to simply use the `activate_scanahead_autodelays` command for automatic calculation of Scanner Delays and Laser Delays. Then, the following applies:
  - The existing command parameters for `set_scanner_delays` and `set_laser_delays` are invalidated by `activate_scanahead_autodelays( Mode = 1 )` and not modified. They become immediately effective again if automatic delay calculation gets deactivated by `activate_scanahead_autodelays( Mode = 0 )`.
  - `set_scanahead_params( Mode = 1 or 2, HeadNo, TableNo, PreviewTime, Vmax, Amax )` defines parameters for automatic calculation of Scanner Delays and Laser Delays together with `activate_scanahead_autodelays( Mode = 1 )`.
- If needed, throughput of laser-marked workpieces can be increased, if lower quality is acceptable ("process optimization"): see `set_scanahead_line_params( CornerScale, EndScale, AccScale )`. See also [Figure 7](#) and [Figure 8](#).
- For *fine-tuning* Laser Delays (for example, to compensate signal propagation times to the laser or to take laser system switching behavior into account), see `set_scanahead_laser_shifts( dLasOn, dLasOff )`.

(1) This temporal offset differs quantitatively and qualitatively from [Tracking error](#) in scan heads without SCANahead control.

## Notes on [\*]arc[\*] Commands

- excelliSCAN scan heads have a nominal **Tracking error** of 0<sup>(1)</sup>. Tracking-related artifacts (for example, necking during small, quick circular motions) do not occur so long as the maximum acceleration of the head is not exceeded (for example, when in the source code a too large speed in relation to the circular diameter has been specified).
- To estimate maximum acceleration within the **Image field**, the maximum acceleration in programming bits<sup>(2)</sup> (**Image field** coordinates) can be queried by `get_scanahead_params( HeadNo = 256 )`. For conversion to m/s<sup>2</sup>, see **Chapter 3.3.1 "Converting Queried Values"**, page 22.
- The allowed velocity range for a given circle radius can be estimated by:  

$$v^2/r < A_{max}^{(3)(4)(5)}$$
  - If you use `arc_abs`, `arc_abs_3d`, `arc_rel`, `arc_rel_3d`, note that these commands apply rounding upon Microstepping. Thus, the speed which the RTC6 commands to the excelliSCAN may differ from the programmed (in `set_mark_speed`) mark speed. In cases where the acceleration (resulting from the commanded speed) exceeds the maximum acceleration  $A_{max}$  of the excelliSCAN, then circles are smaller as programmed.
  - With `timed_arc_abs` and `timed_arc_rel`, you must specify the execution time in multiples of 10  $\mu$ s (to prevent rounding).

(1) The output delayed by `PreviewTime` is not **Tracking error** in the usual sense.

(2) See footnote (1) on page **page 22**.

(3) Query  $A_{max}$  by `get_scanahead_params( HeadNo = 256 )`. Observe the units specified in the command description for `get_scanahead_params`.

(4) Applies to frequencies  $\leq 6,25$  kHz (excelliSCAN 14) as well as  $\leq 4,00$  kHz (excelliSCAN 20, excelliSCAN 30);  
 $f = v / (2\pi \times r)$ .

(5) Valid for excelliSCAN with any objective. Insert either control bits or programming bits into the formula. See also second list bullet.

## Notes on Polygon Delays

- On the excelliSCAN, "Variable **Polygon Delays**" work similarly to scan heads without SCANahead control.  
 To activate variable polygon Scanner Delays, you still must call `set_delay_mode` with `VarPoly > 0`. If automatic delay calculation (`activate_scanahead_autodelays`) is switched on, its parameters `EdgeLevel`, `MinJumpDelay` and `JumpLengthLimit` have no effect. But they become immediately effective if automatic delay calculation gets switched off.  
 In contrast, the `DirectMove3D` parameter is always effective.
- For excelliSCAN, `load_varpolydelay` has no effect. No user-defined "Variable **Polygon Delay**" tables are available.

## Notes on Sky Writing

- For excelliSCAN, Sky Writing functionality has the same effect as on scan heads without SCANahead control. All three modes are selectable.  
 To activate Sky Writing functionality, you must still call the command `set_sky_writing` or `set_sky_writing_para` with `Timelag > 1/4  $\mu$ s`. If automatic delay calculation (`activate_scanahead_autodelays`) is switched on, then `Timelag` (except for the actual activation of Sky Writing) and the parameters `Nprev` and `Npost` have no effect. But they immediately become effective, if automatic delay calculation gets switched off.  
 In contrast, the `LaserOnShift` parameter is always effective.
- If Sky-Writing is activated, only the parameter `EndScale`<sup>(6)</sup> is effective.
- The other parameters<sup>(6)</sup> `CornerScale` and `AccScale` are not applied – except there is *no* genuine Sky Writing movement:
  - If Sky-Writing Mode 3 is activated and the angular limit is undercut, `CornerScale` is effective.

(6) See `set_scanahead_line_params`, `set_scanahead_line_params_list`.

## Notes on Coordinate Transformations

When using commands to transform coordinates, observe the following:

- A coordinate transformation should *not* change the shape and size<sup>(1)</sup> of the marking, that is, the (2 x 2) total matrix M (see [RTC6-Manual, Chapter 8.2 "Coordinate Transformations", page 223](#)) is ideally a pure rotation matrix.

## Notes on Controlling Peripherals

When using commands to control peripherals (LASER connector pins ANALOG OUT 1 and ANALOG OUT 2, EXTENSION 1 and EXTENSION 2 headers), observe the following.

If the SCANahead functionality of the RTC6 board has been activated by [set\\_scanahead\\_params](#) (PreviewTime > 0) the following applies:

- (1) The control commands `write_io_port`, `write_8bit_port`, `write_da_x`, `write_da_1` and `write_da_2` are immediately executed ("asynchronous").
- (2) The list commands `write_io_port_list`, `write_8bit_port_list`, `write_da_x_list`, `write_da_1_list` and `write_da_2_list` are executed delayed by the `Previewtime`, that is, simultaneous with the galvanometer scanners ("axissynchronous").
- (3) For a "laser synchronous" output of a laser power control, `set_laser_power` must be used instead of the list commands from (2).

If the SCANahead functionality of the RTC6 board has not been activated (`PreviewTime = 0`), then asynchronous and axissynchronous execution (1) and (2) are identical.

With the new laser control mode of the RTC6 (`set_dsp_mode( 3 )`), LaserOn Delays during a series of short vectors can extend across one or several subsequent vectors. The RTC5-compatible synthetic Scanner Delays in **DSP** mode 2 are omitted. Output is then synchronous with each vector's corresponding LaserOn Delay.

With the RTC5-compatible laser control (`set_dsp_mode( 2 )`) axissynchronous and lasersynchronous execution are identical.

## Notes on Unique Characteristics of Transmitted Data Signals

Some data signals transmitted by excelliSCANs differ from those of other iDRIVE scan heads, for example, intelliSCAN.

- **TrAck signal**  
(instead of **PosAck signal**)  
See [Chapter 3.1.3 "Returned Data Signal Differences: Status Signal Behavior after Limit Value Exceedance", page 14](#).
- **Trajectory error**  
(instead of **Position error**)  
See [Chapter 3.1.7 "excelliSCAN Timing Diagram \(Scan Head with SCANahead Control\)", page 16](#).

(1) Quality losses are likely, if size changes more than 5%.

## 4.4 RTC6 Commands - Exclusively for SCANAhead Systems

### Notes

- Universally usable RTC6 commands are described in the [RTC6-Manual](#).

This chapter describes RTC6 commands intended exclusively for scan systems with SCANAhead control, for example, the excelliSCAN.

This command type is identifiable by the name element “\_scanahead\_”.

All are also available as multi-board commands. Multi-board command names begin with the prefix n\_.

(n_) activate_scanahead_autodelays	con (1)	.....	39
(n_) activate_scanahead_autodelays_list	us (2)	.	39
(n_) get_scanahead_params	con	.....	40
(n_) set_scanahead_laser_shifts	con	.....	42
(n_) set_scanahead_laser_shifts_list	us	.....	42
(n_) set_scanahead_line_params	con	.....	43
(n_) set_scanahead_line_params_list	us	.....	44
(n_) set_scanahead_params	con	.....	45
(n_) set_scanahead_speed_control	con	.....	47

(1) con control command

(2) us undelayed short list command

Ctrl Command	<b>activate_scanhead_autodelays</b>
Function	Switches on or off the automatic (dynamic) calculation of the Scanner Delays and Laser Delays. Returns the current mode after the command has been executed.
Call	<code>CurrentMode = activate_scanhead_autodelays( Mode )</code>
Parameters	<p><b>Mode</b> As a signed 32-bit value.</p> <ul style="list-style-type: none"> <li>-1: Only returns the current mode. The current mode is not changed.</li> <li>0: Switches off automatic calculation.</li> <li>1: Switches on automatic calculation (<code>Mode = 1</code>) if <b>set_scanhead_params</b> has been called previously. Otherwise, <code>Mode</code> remains 0 after the command has been executed.</li> </ul>
Result	Current mode. As an unsigned 32-bit value.
Comments	<ul style="list-style-type: none"> <li>If <code>Mode = 0</code>, then normal Scanner Delays and Laser Delays are used (see <b>set_scanner_delays</b> and <b>set_laser_delays</b>). If <code>Mode = 1</code>, then Scanner Delays and Laser Delays are calculated and set automatically. Values for <code>Mode = 0</code> do not get overwritten. After switch-off, they remain available in <code>Mode = 0</code> for usage (as with non-excelliSCAN scan heads).</li> <li><b>activate_scanhead_autodelays</b> also affects Sky Writing: the Sky Writing command parameters <code>Timelag</code> (except for the actual activation of Sky Writing), <code>Nprev</code> and <code>Npost</code> have no effect. However, they are going to have immediate effect once the automatic delay calculation is switched off. In contrast, the parameter <code>LaserOnShift</code> is always effective.</li> </ul>
RTC4→RTC6	New command.
RTC5→RTC6	New command.
Version info	Available as of version DLL 600, OUT 600.
References	<b>activate_scanhead_autodelays_list</b> , <b>set_scanner_delays</b> , <b>set_laser_delays</b>

Undelayed Short List Command	<b>activate_scanhead_autodelays_list</b>
Function	As <b>activate_scanhead_autodelays</b> , but an undelayed short list command.
Call	<code>CurrentMode = activate_scanhead_autodelays_list( Mode )</code>
Parameters	<p><b>Mode</b> As an unsigned 32-bit value.</p> <p>For values, see <b>activate_scanhead_autodelays</b>.</p>
Comments	<ul style="list-style-type: none"> <li><b>activate_scanhead_autodelays_list</b> takes effect upon the next to-be-calculated delay.</li> <li><code>Mode = -1</code> is not available with <b>activate_scanhead_autodelays_list</b>.</li> </ul>
RTC4→RTC6	New command.
RTC5→RTC6	New command.
Version info	Available as of version DLL 600, OUT 600.
References	<b>activate_scanhead_autodelays</b>

Ctrl Command	<b>get_scanahead_params</b>	
Function	Queries certain parameters from the specified scan head. The attached scan head must be an excelliSCAN.	
Restriction	<b>get_scanahead_params</b> can be executed only, if no list is currently being processed. Otherwise, the <b>get_last_error</b> return code gets set to <b>RTC6_BUSY</b> and error code 5 is returned.	
Call	Error = get_scanahead_params( HeadNo, &PreviewTime, &Vmax, &Amax )	
Parameters	HeadNo	Scan head connector number. As an unsigned 32-bit value. Allowed values: = 1: Scan head connector 1. = 2: Scan head connector 2 (activation required). = 256: RTC6 board (no scan head connector). The parameters Vmax and Amax are returned converted to <b>Image field</b> coordinates.
Returned parameter values	PreviewTime	Precalculation time for galvanometer scanner control in [10 $\mu$ s]. As a pointer to an unsigned 32-bit value.
	Vmax	For HeadNo 1, 2: Velocity limit as control bits (galvanometer scanner rotation angle) [bits/10 $\mu$ s]. For HeadNo 256: Velocity limit as programming bits ( <b>Image field</b> coordinates) [bits/10 $\mu$ s]. As a pointer to an unsigned 32-bit value.
	Amax	For HeadNo 1, 2: Acceleration limit as control bits (galvanometer scanner rotation angle) [bits/(10 $\mu$ s) <sup>2</sup> ]. For HeadNo 256: Acceleration limit as programming bits ( <b>Image field</b> coordinates) [bits/(10 $\mu$ s) <sup>2</sup> ]. As a pointer to a 64-bit IEEE floating point value.
Result	Error code. As an unsigned 32-bit value.	
	Value	Description
	3	No excelliSCAN scan head is attached or its excelliSCAN tuning is not active ( <b>get_last_error</b> return code: <b>RTC6_PARAM_ERROR</b> ).
	5	A list is currently active ( <b>get_last_error</b> return code: <b>RTC6_BUSY</b> ).
	6	HeadNo = 0 or HeadNo >2 has been specified as parameter ( <b>get_last_error</b> return code: <b>RTC6_PARAM_ERROR</b> ).
	8	The RTC6 board is not responding. Probably a program has not been loaded yet ( <b>get_last_error</b> return code: <b>RTC6_TIMEOUT</b> ).
	11	A PCI error occurred ( <b>get_last_error</b> return code: <b>RTC6_SEND_ERROR</b> ).

Ctrl Command	get_scanahead_params
Comments	<ul style="list-style-type: none"> <li>The returned parameter values are also used by <b>set_scanahead_params</b>.</li> <li><math>V_{max}</math> is the maximum angular velocity of the galvanometers. <math>V_{max}</math> is <i>not</i> the mark speed in the image plane. The returned parameter value unit type is therefore [bits/10 <math>\mu</math>s] and <i>not</i> [bits/ms]. Distortion by the correction file is not yet taken into account in the returned parameter value (see <b>set_scanahead_params</b>).</li> <li>HeadNo = 256 only returns meaningful values if <b>set_scanahead_params</b> was previously called.</li> <li>The values returned by HeadNo = 256 are scaled. Do not use them with <b>set_scanahead_params</b>( Mode = 2 ) because then they would be scaled again.</li> <li>For dual SCANahead systems (for example, 2 excelliSCAN scan heads; requires Option "Second Scan Head Control") it is recommended that the single SCANahead systems used have as similar properties as possible (aperture, lens, correction file): For automatic calculation of the Scanner Delays and Laser Delays, among other things, the parameter <math>A_{max}</math> of scan-system HeadNo is required. The delays are only calculated for this scan system, but are also used unchanged for the second one. If the two scan systems differ too much for example, in parameter <math>A_{max}</math>, unwanted deviations may occur between the markings.</li> </ul>
RTC4→RTC6	New command.
RTC5→RTC6	New command.
Version info	Available as of version DLL 600, OUT 600. Last change with version DLL 605: data type of $A_{max}$ .
References	<b>set_scanahead_params</b> , <b>get_last_error</b>

Ctrl Command	<b>set_scanahead_laser_shifts</b>
Function	Shifts the LaserOn signals and LaserOff signals temporally forward or back.
Call	<code>set_scanahead_laser_shifts( dLasOn, dLasOff )</code>
Parameters	<div>dLasOn      Time shift of LaserOn signals in [1/64 <math>\mu</math>s]. As a signed 32-bit value.</div> <div>dLasOff      Time shift of LaserOff signals in [1/64 <math>\mu</math>s]. As a signed 32-bit value.</div>
Comments	<ul style="list-style-type: none"> <li>• <b>set_scanahead_laser_shifts</b> lets you <i>fine-tune</i> the Laser Delays, for example, to compensate laser signal propagation times or to take the laser system switching behavior into account.</li> <li>• If <b>set_scanahead_params</b> has not been already called and automatic calculation has not been activated (<b>activate_scanahead_autodelays</b> Mode = 0), then the values only get stored, but not applied. But they are applied as soon as required conditions are fulfilled.</li> <li>• There is a transport delay from the RTC6 board to the scan head of 20 <math>\mu</math>s. As of DLL 605 this is automatically taken into account. dLasOn and dLasOff parameter values optimized for &lt; DLL 605 must be decreased by 20 <math>\mu</math>s to be suitable for <math>\geq</math> DLL 605.</li> </ul>
RTC4→RTC6	New command.
RTC5→RTC6	New command.
Version info	Available as of version DLL 600, OUT 600.  Change as of version DLL 603, OUT 603, RBF 607: increased parameter resolution is now 1/64 $\mu$ s instead of 1/2 $\mu$ s.
References	<b>set_scanahead_laser_shifts_list</b> , <b>set_scanahead_params</b> , <b>activate_scanahead_autodelays</b>

Undelayed Short List Command	<b>set_scanahead_laser_shifts_list</b>
Function	Like <b>set_scanahead_laser_shifts</b> , but an undelayed short list command.
Call	<code>set_scanahead_laser_shifts_list( dLasOn, dLasOff )</code>
Parameters	<div>dLasOn      See <b>set_scanahead_laser_shifts</b>.</div> <div>dLasOff      See <b>set_scanahead_laser_shifts</b>.</div>
Comment	<ul style="list-style-type: none"> <li>• <b>set_scanahead_laser_shifts_list</b> takes effect upon the next to-be-calculated delay.</li> </ul>
RTC4→RTC6	New command.
RTC5→RTC6	New command.
Version info	Available as of version DLL 600, OUT 600.
References	<b>set_scanahead_laser_shifts</b>

Ctrl Command	set_scanahead_line_params
Function	Influences the quality of marking results at runtime. Smaller percent values increase throughput at the expense of quality.
Call	set_scanahead_line_params( CornerScale, EndScale, AccScale )
Parameters	<div>CornerScale</div> <p>Corner sharpness with mark/mark sequences in percent. 100% = sharp corners. As an unsigned 32-bit value.</p> <div>EndScale</div> <p>Marking accuracy at mark/jump and jump/mark transitions. 100% = straight line ends. As an unsigned 32-bit value.</p> <div>AccScale</div> <p>Determines the portion of the acceleration <i>time</i> (not: distance traversed) in which the laser is active, in percent. 100% = entire acceleration time. As an unsigned 32-bit value.</p>
Comments	<ul style="list-style-type: none"> <li>Only values from 0% to 100% are useful. Higher values do not improve quality (that is, corners cannot be even sharper than sharp), but instead only extend marking times.</li> <li>If <b>set_scanahead_params</b> has not been already called, then the values only get stored, but not applied.</li> <li>The parameters <b>CornerScale</b> and <b>EndScale</b> only affect the galvanometer scanner positioning. They <i>do not</i> affect points in time when the laser is to be switched on and off.</li> <li>The parameter <b>AccScale</b> only affects points in time when the laser is to be switched on and off. It <i>does not</i> affect the galvanometer scanner positioning!</li> <li>If Sky-Writing is activated, only the parameter <b>EndScale</b> is effective.</li> <li>The other parameters <b>CornerScale</b> and <b>AccScale</b> are not applied – except there is <i>no</i> genuine Sky Writing movement: <ul style="list-style-type: none"> <li>If Sky-Writing Mode 3 is activated and the angular limit is undercut, <b>CornerScale</b> is effective.</li> </ul> </li> <li>The parameter <b>EndScale</b> is effective, if Sky Writing is activated (here, the following applies as well: smaller percent values increase throughput at the expense of quality).</li> </ul>
RTC4→RTC6	New command.
RTC5→RTC6	New command.
Version info	Available as of version DLL 600, OUT 600.
References	<b>set_scanahead_line_params_list</b>

Undelayed Short List Command	<b>set_scanahead_line_params_list</b>
Function	Like <b>set_scanahead_line_params</b> , but an undelayed short list command.
Call	<code>set_scanahead_line_params_list( CornerScale, EndScale, AccScale )</code>
Parameters	CornerScale      See <b>set_scanahead_line_params</b> . EndScale        See <b>set_scanahead_line_params</b> . AccScale        See <b>set_scanahead_line_params</b> .
Comment	<ul style="list-style-type: none"> <li>• <b>set_scanahead_line_params_list</b> takes effect upon the next to-be-calculated delay.</li> </ul>
RTC4→RTC6	New command.
RTC5→ RTC6	New command.
Version info	Available as of version DLL 600, OUT 600.
References	<b>set_scanahead_line_params</b>

Ctrl Command	<b>set_scanahead_params</b>
Function	<p>Activates the RTC6-SCANahead functionality suitable to control an excelliSCAN scan head. The laser control and digital inputs/outputs for the peripherals are prepared for an excelliSCAN scan head, that is, delayed by <code>PreviewTime</code>.</p> <p>To have also the Scanner Delays and Laser Delays calculated automatically, <b>activate_scanahead_autodelays</b> must be called.</p>
Restriction	<p><b>set_scanahead_params</b> can only be executed, if no list is currently active. Otherwise, the <b>get_last_error</b> return code gets set to <code>RTC6_BUSY</code> and error code 5 is returned.</p> <p><b>set_scanahead_params</b> can only be executed, if the "SCANa" option is enabled. Otherwise, the <b>get_last_error</b> return code gets set to <code>RTC6_REJECTED</code> and error code 1 is returned.</p>
Call	<code>Error = set_scanahead_params( Mode, HeadNo, TableNo, PreviewTime, Vmax, Amax )</code>
Parameters	<p><b>Mode</b> = 0: Deactivates the RTC6-SCANahead functionality. The additional parameters <code>TableNo</code>, <code>PreviewTime</code>, <code>Vmax</code>, <code>Amax</code> are not taken into account. Default after <b>load_program_file</b>. Mode, for example, for operating intelliSCAN scan heads.</p> <p>= 1: Queries parameters of the scan head with the specified <code>HeadNo</code> and applies them. The parameters <code>PreviewTime</code>, <code>Vmax</code>, <code>Amax</code> are not taken into account. See also comments that follow. Mode for operating attached excelliSCAN scan heads.</p> <p>= 2: Apply the parameters of this command. Mode, for example, for software development. An excelliSCAN scan head does not need to be connected.</p> <p>As an unsigned 32-bit value.</p> <p><b>HeadNo</b> Number of the scan head connector. Allowed values: = 1: Scan head connector 1. = 2: Scan head connector 2 (activation required). As an unsigned 32-bit value.</p> <p><b>TableNo</b> Allowed value range 1...8. A correction file should have been loaded by <b>load_correction_file(..., TableNo, ...)</b>. This is used for converting the parameters <code>Amax</code> and <code>Vmax</code> from control bits (galvanometer scanner rotation angle) into programing bits (<b>Image field</b> coordinates). See <b>get_scanahead_params</b>. As an unsigned 32-bit value.</p> <p><b>PreviewTime</b> Precalculation time for galvanometer scanner control in [10 <math>\mu</math>s]. This parameter is ignored in <code>Mode = 0</code> and <code>Mode = 1</code>. As an unsigned 32-bit value.</p> <p><b>Vmax</b> Velocity limit as control bits (galvanometer scanner rotation angle) [bits/10 <math>\mu</math>s]. This parameter is ignored in <code>Mode = 0</code> and <code>Mode = 1</code>. As an unsigned 32-bit value.</p> <p><b>Amax</b> Acceleration limit as control bits (galvanometer scanner rotation angle) [bits/(10 <math>\mu</math>s)<sup>2</sup>]. This parameter is ignored in <code>Mode = 0</code> and <code>Mode = 1</code>. As a 64-bit IEEE floating point value.</p>

Ctrl Command	set_scanahead_params																
Result	<p>Error code. As an unsigned 32-bit value.</p> <table> <thead> <tr> <th>Value</th><th>Description</th></tr> </thead> <tbody> <tr> <td>1</td><td>"SCANa" option is not present. (get_last_error return code: RTC6_REJECTED).</td></tr> <tr> <td>3</td><td>No excelliSCAN scan head attached or excelliSCAN tuning is not active (get_last_error return code: RTC6_PARAM_ERROR).</td></tr> <tr> <td>5</td><td>A list is currently active (get_last_error return code: RTC6_BUSY).</td></tr> <tr> <td>6</td><td>HeadNo = 0 and HeadNo &gt;2 (get_last_error return code: RTC6_PARAM_ERROR).</td></tr> <tr> <td>7</td><td>The determined scaling factor exceeds 16 or is below 1/16 (possibly no correction file was loaded). The scaling factor is set to 1.</td></tr> <tr> <td>8</td><td>The RTC6 board is not responding. Probably a program has not been loaded yet (get_last_error return code: RTC6_TIMEOUT).</td></tr> <tr> <td>11</td><td>A PCI error occurred (get_last_error return code: RTC6_SEND_ERROR)</td></tr> </tbody> </table>	Value	Description	1	"SCANa" option is not present. (get_last_error return code: RTC6_REJECTED).	3	No excelliSCAN scan head attached or excelliSCAN tuning is not active (get_last_error return code: RTC6_PARAM_ERROR).	5	A list is currently active (get_last_error return code: RTC6_BUSY).	6	HeadNo = 0 and HeadNo >2 (get_last_error return code: RTC6_PARAM_ERROR).	7	The determined scaling factor exceeds 16 or is below 1/16 (possibly no correction file was loaded). The scaling factor is set to 1.	8	The RTC6 board is not responding. Probably a program has not been loaded yet (get_last_error return code: RTC6_TIMEOUT).	11	A PCI error occurred (get_last_error return code: RTC6_SEND_ERROR)
Value	Description																
1	"SCANa" option is not present. (get_last_error return code: RTC6_REJECTED).																
3	No excelliSCAN scan head attached or excelliSCAN tuning is not active (get_last_error return code: RTC6_PARAM_ERROR).																
5	A list is currently active (get_last_error return code: RTC6_BUSY).																
6	HeadNo = 0 and HeadNo >2 (get_last_error return code: RTC6_PARAM_ERROR).																
7	The determined scaling factor exceeds 16 or is below 1/16 (possibly no correction file was loaded). The scaling factor is set to 1.																
8	The RTC6 board is not responding. Probably a program has not been loaded yet (get_last_error return code: RTC6_TIMEOUT).																
11	A PCI error occurred (get_last_error return code: RTC6_SEND_ERROR)																
Comments	<ul style="list-style-type: none"> <li>The Vmax and Amax parameters are used for automatic calculation of Scanner Delays and Laser Delays, see <a href="#">activate_scanahead_autodelays</a>.</li> <li>The values for Vmax and Amax are specified as control bits (galvanometer scanner rotation angles). Information is read-out from the correction file and used for an internal conversion into programing bits (sample values). Therefore, the correction file needs to be specified in the TableNo parameter. At conversion time, the correction file must have been already loaded onto the RTC6 board, but does not yet need to be assigned. The system cannot reliably detect correction files that have not been loaded. The Vmax and Amax values which have been converted into programing bits can be queried by <a href="#">get_scanahead_params</a>( HeadNo= 256 ).</li> <li>For error return information, see <a href="#">get_scanahead_params</a>.</li> <li>Mode = 1 results in aborted command execution (Error = 3) if no excelliSCAN is attached and active. All SCANahead functionality is deactivated. Parameters specified for Mode = 2 are not applied!</li> <li>set_scanahead_params( Mode = 1) cannot be executed when an automatic laser control is active that uses read-out data from an iDRIVE scan system, see <a href="#">set_auto_laser_control</a>. Please deactivate temporarily.</li> </ul>																

Ctrl Command	<b>set_scanahead_params</b>
Comments (cont'd)	<ul style="list-style-type: none"> <li><b>set_scanahead_params</b> waits until the last session has finished traversing, that is, the HEAD_BUSY signal (Bit #23) from <b>get_status</b> is no longer set. In any case, <b>set_scanahead_params</b> waits no longer than <math>255 \times [10 \mu s]</math>.</li> </ul>
RTC4→RTC6	New command.
RTC5→RTC6	New command.
Version info	Available as of version DLL 600, OUT 600. Last change with version DLL 605: data type of $\Delta_{max}$ .
References	<b>get_scanahead_params</b> , <b>activate_scanahead_autodelays</b> , <b>get_last_error</b> , <b>get_status</b> , <b>load_correction_file</b>

Ctrl Command	<b>set_scanahead_speed_control</b>
Function	Controls the Scanner Delays either depending on the target speed or actual achievable speed.
Call	<code>set_scanahead_speed_control( Mode )</code>
Parameters	Mode                      Modus. As an unsigned 32-bit value.
Comments	<ul style="list-style-type: none"> <li>Mode with:               <ul style="list-style-type: none"> <li>– Bit #0                      controls mark commands</li> <li>– Bit #1                      controls jump commands</li> <li>– Bit #n = 0                controls the Scanner Delays depending on the target speed</li> <li>– Bit #n = 1                controls the Scanner Delays depending on the actual achievable speed</li> </ul> </li> <li>Default after <b>load_program_file</b>: Mode = 2.</li> </ul>
RTC4→RTC6	New command.
RTC5→RTC6	New command.
Version info	Available as of version DLL 610, OUT 610. Last change with version OUT 611: adjustment of Laser Delays.
References	–

## 5 Change Index

The following are changes in this manual due to the technical evolution of the product as well as significant editorial changes.

### Changes to document revision **1.0.8 en-US** from document revision 1.0.7 en-US

Where	What
Global	Document Revision <ul style="list-style-type: none"> <li>• 1.0.8 en-US</li> </ul> applies to RTC6 Software Package <ul style="list-style-type: none"> <li>• V1.6.1</li> </ul>
<b>set_scanahead_laser_shifts</b>	Editorial change. Command name corrected.
<b>set_scanahead_laser_shifts_list</b>	Editorial change. Command name corrected.

### Changes to document revision **1.0.9 en-US** from document revision **1.0.8 en-US**

Where	What
Global	Document Revision <ul style="list-style-type: none"> <li>• 1.0.9 en-US</li> </ul> applies to RTC6 Software Package <ul style="list-style-type: none"> <li>• V1.9</li> </ul>
<b>Chapter 3.1.3 "Returned Data Signal Differences: Status Signal Behavior after Limit Value Exceedance", page 14</b>	Due to technical advancements, SCANLAB renames " <b>PosAck</b> " to " <b>TrAck</b> " for excelliSCAN.
<b>ResetTrAck, page 21</b>	As a result of the renaming (see above) <b>ResetPOSACK</b> is now called <b>ResetTrAck</b> accordingly.

### Changes to document revision **1.0.10 en-US** from document revision **1.0.9 en-US**

Where	What
Global	Document Revision <ul style="list-style-type: none"> <li>• 1.0.10 en-US</li> </ul> applies to RTC6 Software Package <ul style="list-style-type: none"> <li>• V1.9</li> </ul>
<b>Chapter 3.4.3 "Identifying Suitable Temporal Offset Values", page 26</b>	Editorial enhancement. <b>Figure 6.</b>

Changes to document revision **1.0.11 en-US** from document revision **1.0.10 en-US**

Where	What
Global	Document Revision <ul style="list-style-type: none"> <li>• 1.0.11 en-US</li> </ul> applies to RTC6 Software Package <ul style="list-style-type: none"> <li>• V1.11</li> </ul>
Chapter 3.1.3 "Returned Data Signal Differences: Status Signal Behavior after Limit Value Exceedance", page 14	Editorial change. More details.
Chapter 3.1.7 "excelliSCAN Timing Diagram (Scan Head with SCANahead Control)", page 16	Editorial change. More details.
<b>control_command</b> , page 19	Editorial change. More details for <b>0503<sub>H</sub></b> .
Section "Notes on [*]arc[*] Commands", page 36	Editorial change. More details.



## Notes