



Installation and Operation

Single Axis Module dynAXIS[®] L, 30 mm
analog with SSV30, 1064 nm

SCANLAB GmbH

Siemensstr. 2a
82178 Puchheim
Germany

Tel. +49 (89) 800 746-0
Fax: +49 (89) 800 746-199

info@scanlab.de
www.scanlab.de

© SCANLAB GmbH 2017

(Doc. Rev. 2.2 e - June 29, 2006)

SCANLAB reserves the right to change the information in this document without notice.

No part of this manual may be processed, reproduced or distributed in any form (photocopy, print, microfilm or by any other means), electronic or mechanical, for any purpose without the written permission of SCANLAB.

dynAXIS[®] is a registered trademark of SCANLAB GmbH.

Other mentioned trademarks are hereby acknowledged as properties of their respective owners.

Table of Contents

1	Delivered Product	4
1.1	Product Overview	4
1.2	Unpacking Instructions and Package Contents	4
1.3	Article Number and Labeling	4
1.4	About This Operating Manual	4
2	Single Axis Module – Principle of Operation	5
2.1	Galvanometer Scanner Behavior and Dynamic Positioning of Laser Beams	5
2.2	Controlling the Scan Module	6
	Data Transmission	6
	Range of Controllable Deflection Angles	7
2.3	Adjustment and Usable Angle Range	8
3	Safety During Installation and Operation	9
3.1	Operational Guidelines and Standards	9
3.2	Electromagnetic Compatibility (EMC)	9
3.3	Laser Safety	10
3.4	Electrical Safety	12
4	Installation	13
4.1	Checking the Specifications	13
4.2	Dimensions	14
4.3	Mounting the Galvanometer Scanner	15
4.4	Mounting the Electronics Boards	16
	SSV30 Amplifier Board	17
	Softstart Board (Optional)	18
4.5	Electrical Connection	19
	Scanner Connection	19
	Internal Cabling	19
	Power Supply	20
	Data Transfer	22
4.6	Operating and Storage Conditions	22
5	Start-up and Operation	23
5.1	Checking the Installation	23
5.2	Checking the Laser Parameters	23
5.3	Adjusting the Laser Beam	24
5.4	Checking the Parameters of Application Software	24
5.5	Safe Start-up and Shutdown Sequences	25
5.6	Assuring Safe Operating Temperatures	25
6	Routine Maintenance and Customer Service	26
6.1	Routine Maintenance of the Mirror	26
6.2	Customer Service	27
7	Troubleshooting	28
8	Technical Specifications Single Axis Module	29

1 Delivered Product

1.1 Product Overview

The Single Axis Module is designed for a laser with a wavelength of 1064 nm and a maximum beam diameter (aperture) of 30 mm. The Single Axis Module is designed for analog data transfer via the SSV30 amplifier board.

1.2 Unpacking Instructions and Package Contents

- ▶ Carefully remove the scan module from the package.
- ▶ Protect the scan module from dust and other contaminants.
- ▶ Keep the packaging, so that in case of repair the scan module can be properly repackaged and returned to SCANLAB.
- ▶ Check that all parts have been delivered and all parts are in good order and condition. If there are any questions, please contact SCANLAB (see page 27).

The package includes:

- a dynAXIS[®] L galvanometer scanner with mirror and mounting assembly
- an SSV30 amplifier board
- optionally a Softstart board
- this operating manual

1.3 Article Number and Labeling

The scan module has the following article number:

126130 (Scanner dynAXIS[®] L with mirror 30/1)

126131 (Scanner dynAXIS[®] L with mirror 30/2)

The serial number label is found on the scanner.

Please make sure to connect each scanner to its appropriate amplifier board (see page 19).

1.4 About This Operating Manual

This operating manual is a part of the product. Please read these instructions carefully before you proceed with installing and operating the scan module. If there are any questions regarding the contents of this manual, please contact SCANLAB (see page 27).

Keep the manual available for servicing, repairs and product disposal. This manual should accompany the product if ownership changes hands.

SCANLAB reserves the right to update this operating manual at any time and without notification.

2 Single Axis Module – Principle of Operation

The scan module is designed for diverse areas of application in which, generally, a laser beam is deflected via a deflection mirror. The scan module is an OEM version which is intended for integration into a system with a proper housing.

For proper operation, the scan module must be correctly adjusted and controlled.

The remainder of this chapter provides answers to the following basic questions concerning operation of the scan module:

- Which galvanometer scanner characteristics need to be taken into account when creating or using applications that dynamically position laser beams?
- What kinds of signals are used to control the positions of the galvanometer scanner and how large is the range of controllable deflection angles?
- How should the scan module be adjusted with respect to the laser beam and how large is the range of usable deflection angles?

2.1 Galvanometer Scanner Behavior and Dynamic Positioning of Laser Beams

SCANLAB's galvanometer scanners and amplifier boards allow precise dynamic control of the two deflection mirrors. This enables exact positioning of the laser beam with high speed – a characteristic required by a wide range of modern applications. For ensuring optimum operation, the following properties of galvanometer scanners must be considered:

- Most laser applications require the laser focus to trace contours within the working plane at a constant processing speed. To achieve this, the control (PC) subdivides the contours into microsteps. Microstep length is determined by the output period and desired speed. Galvanometer dynamics are usually optimized for such microvector control. It is therefore advisable to also use vectors when positioning with the laser switched off. Compared to hard jumps, a defined positioning speed will prevent excessive oscillation and usually produce shorter positioning times. Positioning speeds can generally be significantly higher than processing speeds. In chapter

"Technical Specifications Single Axis Module", on page 29 a typical positioning speed is specified for this particular scan module. The processing speed must be adjusted according to the particular application.

- Galvanometer scanner movements do not occur instantaneously with respect to vector control, but rather after a certain time lag. Time lag characterizes the reaction properties of the galvanometer scanner. The vector control output period must be significantly shorter than the time lag. Otherwise, instead of moving the galvanometer scanner with constant speed, the servo would attempt to follow the individual microsteps. This, in turn, would increase power consumption and thermally stress the scanner. SCANLAB therefore recommends as short an output period as possible, no more than 20% of the time lag (see page 29). Oscillation behavior and time lag must be taken into account by the application software, which synchronizes the scan module and the laser control. If the scan module is controlled via a SCANLAB RTC® PC interface board or via an RTC® SCANalone standalone board, then synchronization is easily realized by appropriately setting the scanner and laser delay parameters (refer to the RTC® manual for details).
- Environmental fluctuations, especially temperature changes, can cause scanner drift, i.e. a shift (offset drift) and an increase or decrease in size (gain drift) of the working image field. Therefore, high-precision applications should only be started up when the scanners have reached their operating temperature. In addition, the magnitudes of environmental fluctuations, e.g. operating temperature changes, to which the scan module is exposed should be kept as small as possible.

2.2 Controlling the Scan Module

Data Transmission

The positions of the galvanometer scanner are controlled via the transmission of analog input signals. The SSV30 amplifier board provides a differential analog signal input as well as three TTL outputs for digital status signals.

Input signals

The input signals are differential ($SIG \pm IN$).

The voltage difference between the $SIG + IN$ and $SIG - IN$ signal inputs is interpreted as the set value for the scanner position. The scan module is designed for a maximum set value of ± 10 V. The internal resistance is at least 10 k Ω . The maximum voltage applied to the $SIG \pm IN$ inputs must not exceed 20 V referenced to GND. For ground-referenced control voltages, the controller's ground should be connected to $SIG - IN$.



Caution!

- Make sure the permissible range of ± 10 V for the input signals is not exceeded. Otherwise severe equipment damage can result.

Status Signals

The scan module provides three TTL-level status signals..

- PWROK (i.e. "Power OK")
A LOW level signifies a problem in the power supply or a protective action by the electronics. Upon power-up, the PWROK signal is initially LOW. After a few seconds (when the electronic components have reached a stable operating state) the PWROK signal then switches to HIGH. If, upon powering up, the PWROK signal doesn't switch to HIGH within several seconds or if the signal switches from HIGH to LOW during operation, then **the laser must be turned off immediately**. Under some circumstances the system could deflect the laser beam in an unintended direction, which may cause health hazards and severe equipment damage. The system should be checked immediately to determine the cause. Switching of the PWROK status signal from HIGH to LOW during operation can be caused, for example, by a defective power supply (also see section "Power Supply" on page 20).

The PWROK status signal also switches from HIGH to LOW, if the galvanometer scanner's temperature exceeds a critical value due to excessive load or excessive environmental temperature (see page 25).

The PWROK status signal is also directly signaled on the SSV30 via its PWROK LED. A switched-on LED signifies a problem in the power supply.

- TempOK (i.e. "Temperature OK")
The TEMPOK signal always switches from LOW to HIGH when the operating temperature has been reached (which might take a few minutes). If, during operation, the galvo temperature drops below its minimum operating temperature or exceeds a maximum allowable temperature, the TEMPOK signal will switch to LOW. In this case, system operation does not need to be stopped immediately, but large drift or other side-effects may occur.

If system operation is not stopped and the scanner temperature then reaches a still higher critical value, then the built-in temperature control mechanism will switch off the galvanometer scanner drive stage to avoid heat-induced damage to the scanner or the scan system (see page 25).

If the scanner temperature drops again below the power-down threshold, the scanner drive stages are automatically restarted.


The TempOK status signal is also directly signaled on the SSV30 via its TempOK LED. A switched-on LED signifies that the allowed temperature range is exceeded.

- PosAck (i.e. "Position Acknowledge")
A HIGH level signifies that the difference between the set value and the real position is less than 0.5% of the image field size. The PosAck signal normally switches to HIGH within a few seconds after power-up.

The scan module's power supply ground (GND) serves as the reference point for all TTL signals.

Range of Controllable Deflection Angles

The mirror can be dynamically positioned within a particular angle range (see "range of mechanical deflection angles" in figure 1) based on the calibration and maximum control values of the scan module specified in chapter "Technical Specifications Single Axis Module", on page 29. The neutral position (0° angle) represents the angle position while powered, but without a control signal. Mirror stoppers prevent the allowable angle range from being exceeded. The range of allowable angles [° mech.] provided by the mirror stoppers is specified in chapter "Technical Specifications Single Axis Module", on page 29. Here it must be noted that mirror stoppers are only "emergency brakes". The controller and the user's application software should ensure that "emergency braking" never occurs – i.e. the mirrors should never be deflected so far as to contact the mirror stoppers. If, for any reason, such an event does occur, the scanner and mirror should be inspected for possible damage.

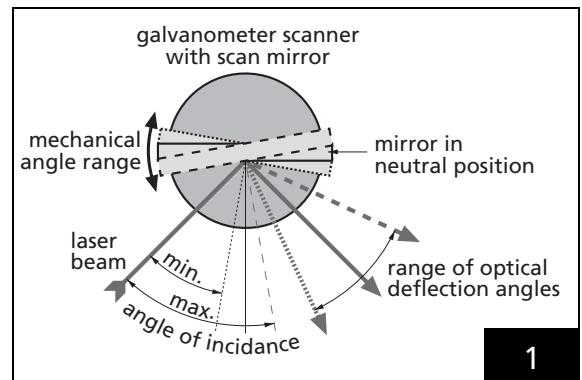

Beam deflection and range of angles

The optical range of deflection angles is twice the mechanical angle range (see figure 1). The specified calibration and dynamic and optical angle parameters are in [rad optical]. The actual usable angle range is dependent on a number of factors (see following section).

2.3 Adjustment and Usable Angle Range

The laser beam should arrive at the mirror's reflective surface perpendicular to the scanner's rotation axis. It should be thereby considered that the rotation axis is typically located not on the plane of the mirror's surface, but rather in the middle of the mirror. The offset of the mirror's reflective front surface to the rotation axis is depicted in the technical diagram figure 2 on page 14. The laser beam should be centered at the midpoint of the usable mirror surface rather than at the rotation axis.



Caution!

- To avoid damage to the deflection mirror, don't allow the laser beam to arrive perpendicular to the mirror's surface. Observe the allowable angle of incidence range.
- Excessive deflection angles or beam diameters can produce vignetting at the mirror, resulting in possible health risks and damage to the mirror and equipment. If your application requires larger scan angles, then please contact SCANLAB.

The laser beam must never arrive perpendicular to the mirror surface. The deflection mirror's material and coating are designed for oblique incidence of the laser beam – with angles of incidence of typically 45° (see figure 1 on page 7). A perpendicular angle of incidence can result in destruction of the mirror. The usable angle of incidence range is dependent on the mirror's coating and dimensions as well as the arriving laser beam's diameter and the scan system's overall geometry:

(1) Mirror coating:

The mirror coating is optimized for a specified wavelength and a defined angle of incidence range. The corresponding data are listed in chapter "Technical Specifications Single Axis Module", on page 29. During adjusting the scan module, bear in mind that for technical reasons there is an uncoated border at the mirror edges with a width of typically 0.5 mm.

(2) Beam diameter and mirror dimensions:

The recommended diameter of the arriving laser beam is specified in chapter "Technical Specifications Single Axis Module", on page 29. Excessive beam diameters or deflection mirror positions can produce vignetting at the mirror's edges, with resulting health-endangering laser reflections or scan system damage. The relevant deflection mirror dimensions are provided in figure 2 on page 14. The used angle range and the beam diameter should be selected in such a way as to avoid unacceptable vignetting. Also note that the mirror's usable surface is somewhat reduced by its uncoated border edges and its mirror mount.

(3) Scan system geometry:

The scan module will be typically integrated in a housing. The housing's apertures and the scan system's overall geometry can further reduce the usable angle of incidence range.

Bearing in mind the above-listed points, the laser beam should be adjusted so that the scan module is operated in the middle of its usable angle range.

3 Safety During Installation and Operation

To reduce the risk of injury, please observe the following guidelines.

The safety and warning notices in this manual are indicated by a symbol set against a gray background:



Instructions that may affect a person's health are marked with a warning triangle next to the word "Danger".



Instructions that recommend appropriate use of this device or warn of damage that may occur to it are identified by a circle with an "X" in it, next to the word "Caution".

3.1 Operational Guidelines and Standards

When operating the scan module, the following guidelines and standards should be followed:

- EC Guideline 73/23/EEC
Low Voltage Directive
(including amendment 93/68/EEC)
- EC Guideline 89/336/EEC
Electromagnetic Compatibility
(including amendments 91/263/EEC, 92/31/EEC, 93/68/EEC and 2004/108/EU)
- EC Guideline 98/37/EU
Machinery Directive
- EN 60204-1 (November 1998)
Safety of Machinery – Electrical Equipments of Machines, Part1: General Requirements
(also see similar general machinery safety standards such as VDE 0113-1, IEC60204-1 or ANSI B11.19 Machine Tools – Safeguarding When Referenced by Other B11 Machine Tool Safety Standards-Performance Criteria for the Design, Construction, Care and Operation)
- EN 60825-1 (October 2003)
Safety of Laser Products, Part 1: Equipment Classification, Requirements and User's Guide
(also see similar general laser safety standards such as VDE 0837-1, IEC 60825-1, Safety of Laser

Products - Part 1: Equipment Classification, Requirements, and User's Guide, 21 CFR 1040, Laser Product Performance Standard or ANSI Z136.1 Standard for the Safe Use of Lasers)

- EN 12626
Safety of Machinery - Laser Processing Machines - Safety Requirements
(also see similar laser materials processing system safety standards such as ISO 11553, Safety of Machinery - Laser Processing Machines - Safety Requirements, IEC 60825-4, Safety of Laser Products - Part 4: Safety of Laser Products or ANSI B11.21-1997, Machine Tools Using Lasers for Processing Materials - Safety Requirements for Design, Construction, Care, and Use)

Additional application-dependent guidelines and standards may apply.

Complying with the Relevant Standards for the CE Label

The scan module is delivered as an OEM component conceived of for integration into a laser scan system.

The system manufacturer bears the responsibility for complying with the standards and guidelines required for equipment usage and for the CE label.

3.2 Electromagnetic Compatibility (EMC)

The scan module is not shielded against electromagnetic fields. The customer is responsible for the observance of the electromagnetic compatibility, for example by assembling the scan module in an appropriate housing.

3.3 Laser Safety

The scan module is designed to be operated in conjunction with a laser. Therefore, all applicable rules and regulations for safe operation of lasers must be known and applied when installing the scan module and operating the system in which it is used. Since SCANLAB has no influence over the employed laser or the overall system, the customer is solely responsible for the laser safety of the entire system.



Danger!

- Safety regulations may differ from country to country. The customer bears sole responsibility for compliance with all applicable safety regulations of their respective regulatory jurisdiction.

Shutter

The scan module has no shutter and there is no device to decrease the laser output power. It is the responsibility of the customer to include such a device in the system in a way as to comply with all regulations. The observance of laser safety must be ensured for the entire system.

Maintenance

During maintenance of the laser equipment, the class of the laser can increase. Therefore, the customer must take suitable protective measures.

Warning Symbols







The area where the emerging beam is harmful must be marked with a warning symbol indicating the class of the employed laser – in accordance with IEC 60825-1 laser safety requirements. In addition, a warning symbol must be placed at the emitting aperture of the laser system. The table on page 11 shows the appropriate warning symbols for the various laser classes specified by IEC 60825-1 (or EN 60825-1 / VDE 0837 T1).







Danger!

- During assembly or operation of the scan module, never stare directly into the laser beam or its deflected radiation. Keep all parts of the body away from the laser beam and its path. Routine maintenance should be performed as described in "Routine Maintenance of the Mirror" on page 26 and all safety instructions should be observed!
- Adjust the output beam path of the scan module by means of a Class 2 laser. If this is not possible, the laser should be operated at the lowest power. Avoid dangerous deflected radiation!
- The risk of hazardous deflected radiation can increase when optical instruments are used in combination with the scan module.
- Before checking the scan module, make absolutely certain that the laser and scan module are turned off!
- Cover the path of the laser beam via an appropriate protecting case to block laser radiation!
- Do not obstruct the movement of the scanner's mirror in any way. When the scan module is turned on, the mirrors must not be touched at all!
- Closely follow all IEC 60825-1 laser safety requirements and other applicable accident prevention regulations of your respective regulatory jurisdiction.
- Wear appropriate eye protection at all times.
- Always turn on the PC controller and the scan module's power supply first before turning on the laser. Otherwise the laser beam might be reflected in an arbitrary direction.

Laser Classes Specified by IEC 60825-1 (or EN 60825-1 / VDE 0837 T1)

Visible Laser Radiation	Invisible Laser Radiation	Potential Hazards
LASER CLASS 1	LASER CLASS 1	Class 1: This laser radiation is not harmful; is eye-safe.
 <p>LASER RADIATION DO NOT STARE DIRECTLY INTO THE BEAM WITH OR WITHOUT OPTICAL INSTRUMENTS LASER CLASS 1 M</p>	 <p>INVISIBLE LASER RADIATION DO NOT STARE DIRECTLY INTO THE BEAM WITH OR WITHOUT OPTICAL INSTRUMENTS LASER CLASS 1 M</p>	Class 1 M: Exposure to this radiation is harmful to the eyes if optical instruments are used to reduce the cross section of the laser beam. If this is not the case, this laser radiation is not harmful; is eye-safe.
 <p>LASER RADIATION DO NOT STARE DIRECTLY INTO THE BEAM LASER CLASS 2</p>		Class 2: This laser radiation is in the visible spectrum of 400 to 700 nm. Exposure to this radiation for less than 0.25 s is not harmful to the eyes. It is eye-safe due to the eye's natural aversion response and blink reflex.
 <p>LASER RADIATION DO NOT STARE DIRECTLY INTO THE BEAM WITH OR WITHOUT OPTICAL INSTRUMENTS LASER CLASS 2 M</p>		Class 2 M: This laser radiation is in the visible spectrum of 400 to 700 nm. Exposure to this radiation is harmful to the eyes if optical instruments are used to reduce the cross section of the laser beam. If this is not the case, exposure to this radiation for less than 0.25 s is not harmful to the eyes and is eye-safe due to the eye's natural aversion response and blink reflex.
 <p>LASER RADIATION AVOID EXPOSURE OF THE EYES LASER CLASS 3 R</p>	 <p>INVISIBLE LASER RADIATION AVOID EXPOSURE TO THE LASER BEAM LASER CLASS 3 R</p>	Class 3 R: This laser radiation is harmful to the eyes. Eye exposure exceeds the maximum allowable value.

Visible Laser Radiation	Invisible Laser Radiation	Potential Hazards
 <p>LASER RADIATION AVOID EXPOSURE TO THE LASER BEAM LASER CLASS 3 B</p>	 <p>INVISIBLE LASER RADIATION AVOID EXPOSURE TO THE LASER BEAM LASER CLASS 3 B</p>	<p>Class 3 B:</p> <p>This laser radiation is harmful to the eyes and in some cases to the skin.</p>
 <p>LASER RADIATION AVOID ANY EXPOSURE OF THE EYES OR THE SKIN TO DIRECT OR SCATTERED RADIATION LASER CLASS 4</p>	 <p>INVISIBLE LASER RADIATION AVOID ANY EXPOSURE OF THE EYES OR THE SKIN TO DIRECT OR SCATTERED RADIATION LASER CLASS 4</p>	<p>Class 4:</p> <p>This laser radiation is very harmful to the eyes and skin. Stray radiation can also be dangerous. This radiation can cause fire or explosion and the generation of toxic gases or vapors.</p>

3.4 Electrical Safety

Additional application-dependent guidelines and standards may apply.



Caution!

- The electronics boards must be securely fastened and protected from moisture, dust, corrosive vapors and external influences.

Power is furnished to the scan module by a user-supplied low voltage power supply. The power supply must meet the following mains insulation requirements:

- If the connectors are covered and cannot be reached without tools from the outside, single insulation between the mains and the low voltage circuit is sufficient. The mains insulation must be able to withstand a test voltage of 2 kV AC applied between the mains and the low voltage circuit.
- If the connectors can be reached from the outside, double or reinforced insulation between the mains and the low voltage circuit is necessary. The mains insulation must be able to withstand a test voltage of 4 kV AC applied between the mains and the low voltage circuit.

4 Installation

Installation consists of mounting the galvanometer scanner, installing the electronics boards and connecting the power supply and control lines.

Execute the individual mounting and cabling steps in the specified order.



Danger!

- Make sure all components of the system (laser, controller, power supply, computer) are switched off before installation.
- During installation of the scan module, never stare directly into the laser beam or at any of its deflected radiation.
- Never place parts of the body into the direct path of the laser or its deflected radiation.
- After the scan module has been mounted, there is a cone-shaped hazardous laser output area. Do not stare into the laser or its deflected radiation. Keep all parts of the body away from the laser beam.
- Always turn on the PC controller and the scan module's power supply first before turning on the laser. Otherwise the laser beam might be reflected in an arbitrary direction.



Caution!

- Never touch the optical surface of the deflection mirror without appropriate cleaning material. Follow the procedures in chapter 6.1 for periodically checking and cleaning the mirror.
- Make sure all operating and storage conditions are met (see chapter 4.6, page 22).

4.1 Checking the Specifications

Make sure the specifications of the scan module meet the requirements of your application (see "Technical Specifications" on page 29). If your application requires other specifications, then please contact SCANLAB.




Caution!

- Carefully take the scan module out of the packaging.
- Protect the scan module from humidity, dust and corrosive vapors to prevent damage to the electronics boards and mirror.
- To avoid damage to the electronics boards by electrostatic charges, observe all applicable ESD guidelines.
- Avoid electromagnetic fields and static charges, which can damage the electronics boards. To do so, shield the scan module from external electromagnetic fields via an appropriate housing.

4.2 Dimensions

Figure 2 shows the dimensions of the galvanometer scanner (left side) and the dimensions with mirror mount and mirror (right side).

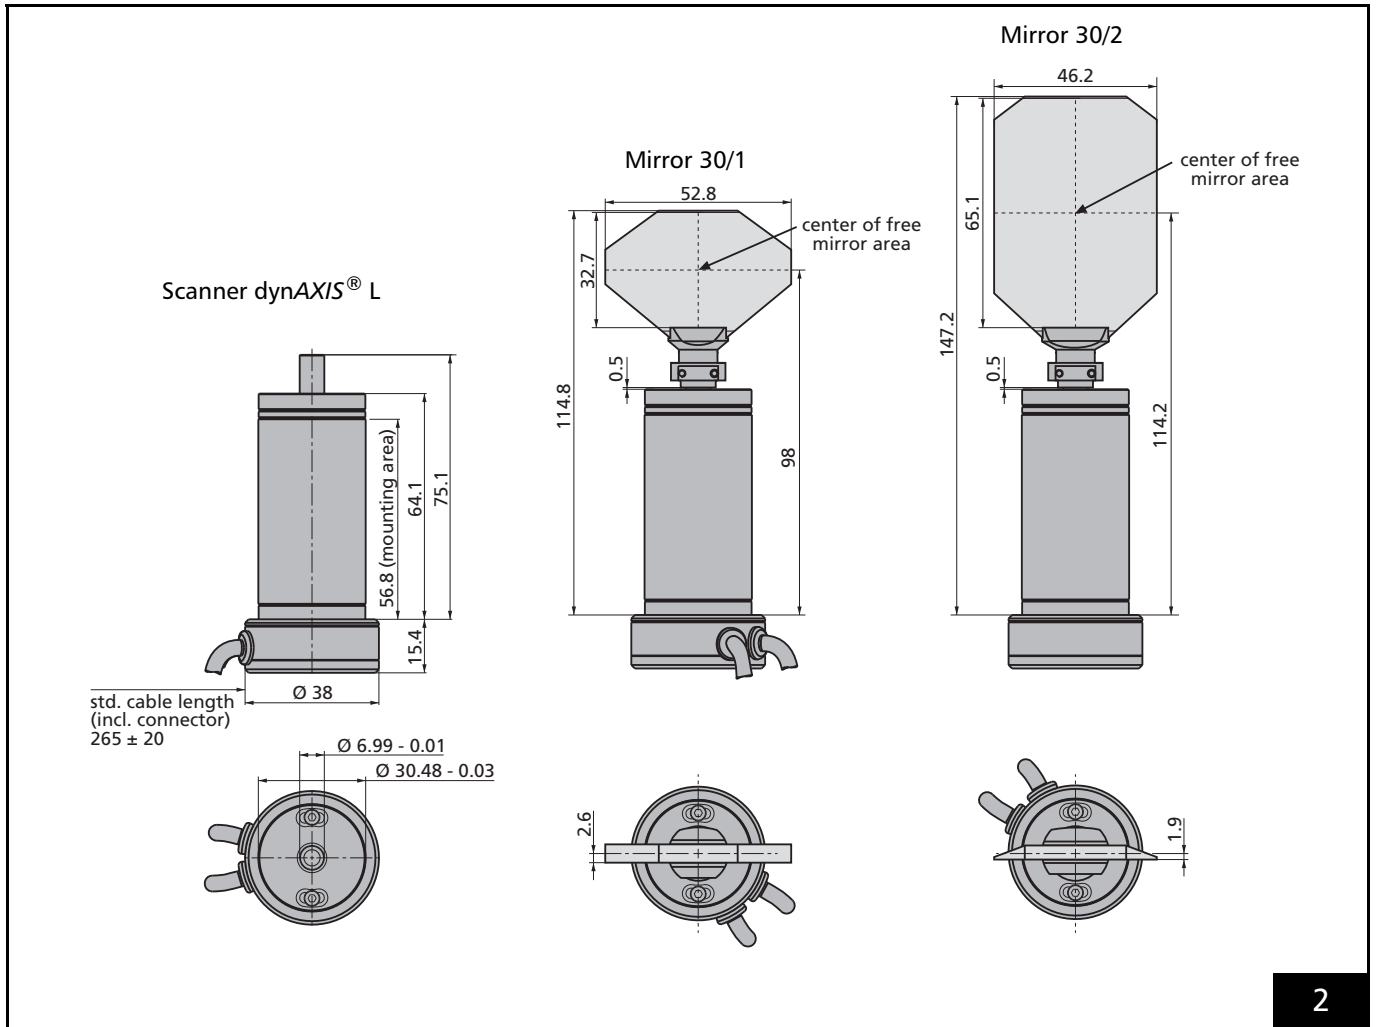

Dimensions (all dimensions in mm)

4.3 Mounting the Galvanometer Scanner



Caution!

- The galvanometer scanner must be securely fastened and protected from moisture, dust, corrosive vapors and external influences.
- Never open the galvanometer scanner.
- Avoid any conductive path between the scanner housing and the mounting plate.
- The galvanometer must never be operated without its specified mirror.

Scanner

The scanner housing must be electrically insulated from the machine structure. For this purpose, an insulating foil is generally provided.

Apply the insulating foil around the scanner's mounting area. Then put the scanner together with the foil in the corresponding bore hole of the mounting plate.

Fasten the scanner via a screw. Accordingly, the mounting plate must provide an appropriate threaded bore hole.

The layout and dimensions relevant to mounting are shown in figure 2 on page 14. Mount the galvanometer scanner in the following manner.

Mirror

The mirror is usually bonded to a mirror mount and the mirror mount attached to the scanner's rotor. Mirror stops are already integrated in the scanner.

If the mirror is not mounted on the scanner yet, attach the mirror mount with the mirror to the scanner's rotor. The distance between scanner and mirror mount must be adjusted to 0.5 mm (e.g. via temporarily inserting a 0.5 mm thin metal plate between scanner and mirror mount). Tighten the screws at the mirror mount carefully but firmly. Tighten the screws alternately. SCANLAB recommends a tightening torque of 50 N·cm.

Mount the mirror and galvanometer scanner such that the mirror will not touch any other parts of the scan system during operation and that the mirror is adjusted with respect to the laser beam such that the scan module is operated in the middle of its usable angle range.

4.4 Mounting the Electronics Boards

Dimensions and mounting of the electronics boards are described on the following pages.

Install the boards so that they are securely fastened and sufficiently protected during operation from moisture, dust, corrosive vapors, electromagnetic fields and other external influences.

Observe the following instructions.



Caution!

- To avoid damage or destruction caused by excessive heating of the electronics boards, it is important to attach the board's angle plate to a heat sink or an appropriate-sized part of a housing.



Caution!

- The electronics boards must be securely fastened and protected from moisture, dust, corrosive vapors and external influences.
- Avoid electromagnetic fields and static charges, which can damage the electronics boards. To do so, shield the scan module from external electromagnetic fields via an appropriate housing.
- To avoid damage to the electronics boards by static charges, observe all applicable ESD guidelines.
- Handle the electronics boards carefully (particularly when inserting or removing cables) so that no electronic components incur mechanical damage.
- Do not change the tuning of the electronic boards.
- Avoid subjecting the electronics boards to any form of mechanical stress.
- When installing the electronics boards, ensure that the connection cables are not strained.
- Use only the original cables.
- When mounting the electronics boards, use only the bore holes indicated in this chapter. Other holes can not be used for fastening the boards or for any other purposes.
- When mounting the electronics boards with screws, ensure that a conductive path between the screws and the boards' electronic components is not created.


SSV30 Amplifier Board

Figure 3 shows the dimensions of the SSV30 amplifier board with its connectors. The board is mounted on an angle plate.

For fastening the amplifier board, the angle plate's side surface provides two M3-threaded bore holes and the angle plate's bottom side an additional three M3-threaded bore holes. All holes require M3-

threaded screws. To avoid conductive paths between the screws and the electronic components of the amplifier board, the maximum thread reach of the screws should not exceed 3 mm.

To prevent damage or destruction of the board from excessive heat, it is important to attach the board's angle plate to a heat sink or an appropriate-sized part of a housing. The material and dimension of the heat sink must be chosen such that the temperature of the angle plate does not exceed 50 °C. The maximum dissipated power of the board is 30 W.

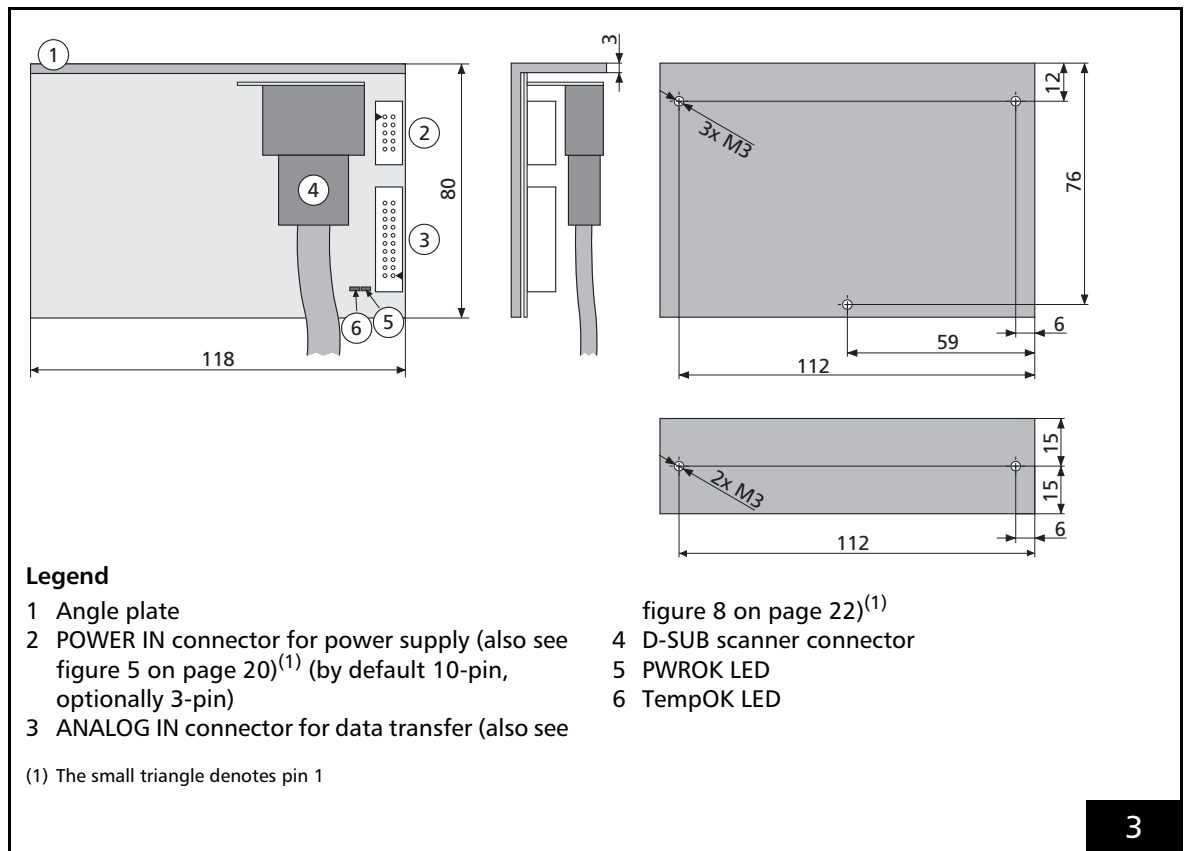


Dimensions of the SSV30 amplifier board (all dimensions in mm)

Softstart Board (Optional)

Figure 4 shows the dimensions of the optional Softstart board with its connectors.

The board provides four bore holes for mounting (see figure 4). All holes require M3-threaded screws. Ensure that no electrical contact exists between the screws and the board's electronic components.

The Softstart board must be mounted so that the soldered cable can be connected to the SSV30 – see section "Internal Cabling" on page 19.

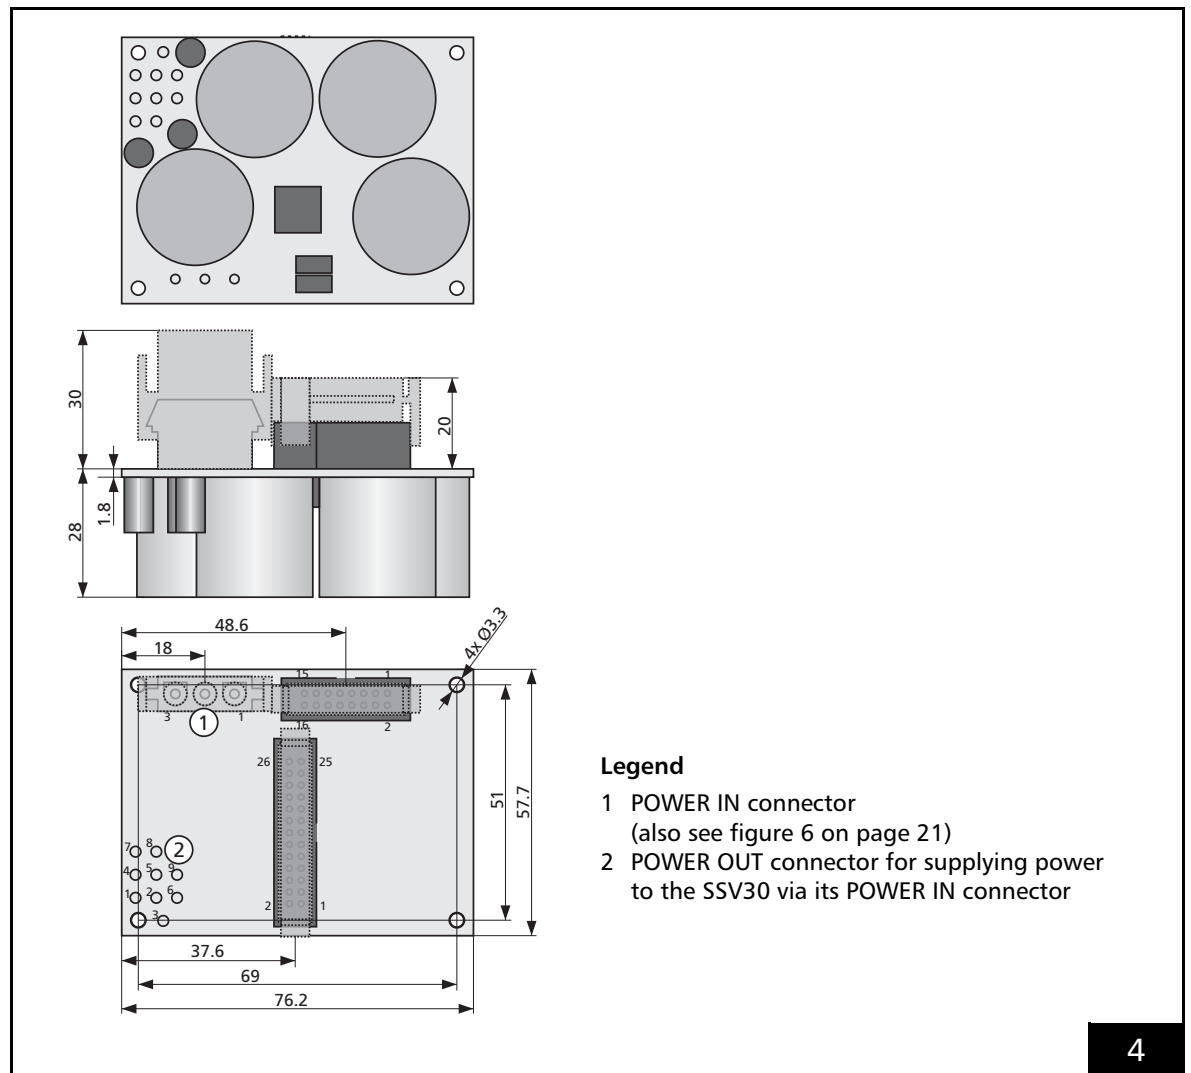

Dimensions of the optional Softstart board (all dimensions in mm)

4.5 Electrical Connection



Caution!

- Before starting to establish connections, ensure that the power supply and controller are switched off and that none of the connecting cables is powered. Electrically active cables can destroy the board's electronics upon connection.
- Always switch off the power source prior to removing a connected cable.
- Follow all power supply electrical specifications exactly.
- Before operating the unit, verify the polarities of the power supply connections.

Internal Cabling

- ▶ If the scan module is equipped with the optional Softstart board, connect the Softstart board's POWER OUT connector via the soldered cable (ca. 0.17 m long) to the corresponding pins of the SSV30 (see figure 4 on page 18 and figure 3 on page 17). POWER OUT connector pinouts: +15 V at pins 1...3, GND at pins 4...6, -15 V at pins 7...9.
- ▶ If an adapter cable is included, connect it to the servo amplifier board's POWER IN connector or the Softstart board's POWER IN input.

Scanner Connection

The servo amplifier board forms a closed servo loop in conjunction with the galvanometer scanner. Each servo amplifier board is individually tuned by SCANLAB for its assigned scanner-mirror configuration. Do not interchange the amplifier boards. Optimum scan quality cannot be guaranteed if amplifier boards are interchanged. Therefore, if you received more than one amplifier board, make sure the various electronic components are properly combined. To help achieve this, the angle plate of each amplifier board is marked with the serial number of its assigned galvanometer scanner.

The scanner is equipped with a connection cable 265 mm (± 20 mm) in length, including the connector.

- ▶ Attach the scanner's connector to the corresponding connector of the amplifier board (see figure 3 on page 17).

Power Supply


Requirements

For power, the scan module requires a balanced source of $\pm(15+1.5)$ V with a maximum current of 3 A per pole. The residual ripple of the power source should not exceed 10 mV_{pp} (power sources with larger residual ripple may be applicable – after reconsulting SCANLAB – for applications which only require reduced quality).

Only use a power supply with soft start.

Connection

Power input to the scan module is via the 10-pin or alternatively 3-pin POWER IN connector on the SSV30 amplifier board (also see figure 3 on page 17). Figure 5 shows the pinout of this connector.

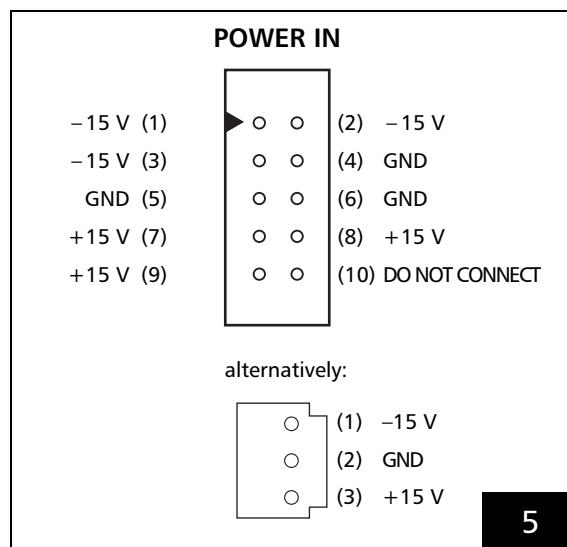

Pinout of the SSV30 board's POWER IN connector


The scan module can be optionally equipped with a Softstart board.

The Softstart board provides functions such as reverse-polarity protection, start-up current limiting and power supply symmetry during start-up.

The softstart circuit also monitors the supply voltages. If, during operation, a supply voltage falls below a minimum of approx. 13.5 V (e.g. due to excessively long or thin cables, a weak power supply or high loads) or a supply voltage rises above a maximum of approx. 17 V, then the softstart circuit disconnects the scan module from the power supply. Shortly thereafter, the softstart circuit makes three attempts to restart the scan module. This occurs within a few seconds if the supply voltages have returned, within this time, to permissible levels. Otherwise, the scan module will remain disconnected from the power supply. The supply voltage problem must then be resolved and the scan module switched off and restarted.

After each successful start-up, the softstart circuit's internal counter (number of attempted new starts) is reset to zero.


The Softstart board should be connected to the SSV30 servo amplifier board as described in section "Internal Cabling" on page 19. The scan module receives its power from the Softstart board's 3-pin POWER IN connector (also see figure 4 on page 18). Figure 6 shows the pinout of this connector.

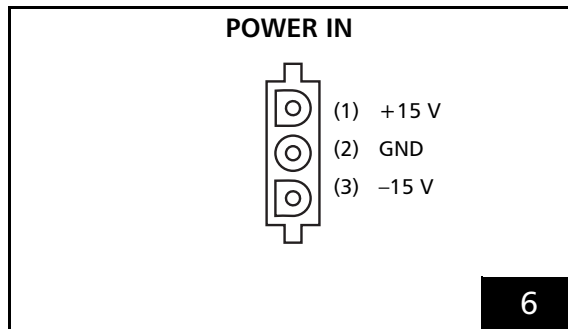

Pinout of the optional Softstart board's POWER IN connector

An adapter cable with a 9-pin D-SUB power supply connector is optionally available.

The adapter cable should be connected as described in section "Internal Cabling" on page 19. Then the scan module receives its power from the 9-pin D-SUB connector. Figure 7 shows the pinout of this connector.

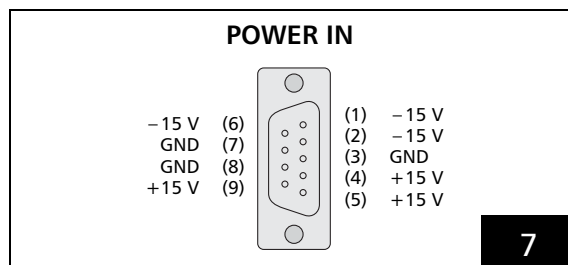

Pinout of the optional POWER IN D-SUB connector

Appropriate matching connectors for attaching the power supply are generally included. When connecting, observe the following tips:

- ▶ Make sure each power connection has the correct polarity.
- ▶ To avoid overloading the individual cables, all identically designated connections should be attached to the power source's corresponding polarity output.
- ▶ The cable connecting the power supply and the scan module must be shielded and should have a cross-sectional area of at least 1.5 mm² per pole and a length not exceeding 5 meters. RFI must be minimized by connecting the cable's shielding at one end (utilizing a large surface area) to the power supply's metal shielding and at the scan-module-end to the housing of the corresponding connector.

Data Transfer

Specifications

Analog transfer of control signals is via a differential input signal. Status signals are furnished at TTL level. A detailed data transfer description is provided in the section "Controlling the Scan Module" on page 6.



Caution!

- The scan module is designed for a maximum control signal range (difference between the SIG+IN- and SIG-IN signals) of ± 10 V. Make sure the permissible range for the input signals is not exceeded. Otherwise severe equipment damage can result.


4.6 Operating and Storage Conditions

For storage, operation and servicing, make sure the following environmental conditions are met:

- The storage temperature for the scan module should be between -35°C and $+60^{\circ}\text{C}$.
- The operating temperature is $25^{\circ}\text{C} \pm 10^{\circ}\text{C}$.
- Protect the scan module from humidity, dust and corrosive vapors to avoid damage to the mirrors, optics and electronics.
- Avoid strong electromagnetic fields and static electricity. These can damage the electronics boards.

Connection

The signal lines should be attached to the analog signal inputs (SIG \pm IN) and status signal pins of the SSV30's 20-pin ANALOG IN connector (see figure 3 on page 17). Figure 8 shows the pinout of this connector.

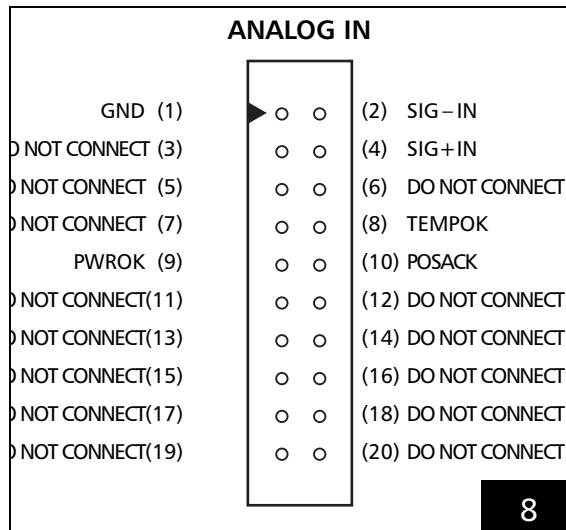

Pinout of the SSV30 board's ANALOG IN connector

- Attach the control lines and power supply lines to the corresponding pins.

5 Start-up and Operation

5.1 Checking the Installation

Before operating the scan module, carefully check the following:

- ▶ Were the mechanical installation and electrical wiring fully and correctly carried out as described in chapter 4, "Installation"?
- ▶ Is the scan module equipped with an appropriate mirror? Compare the technical specifications in chapter 8 with the requirements of your application.
- ▶ Is the mirror clean and free of dust? If necessary, clean the mirror as described in "Routine Maintenance of the Mirror" on page 26.

5.2 Checking the Laser Parameters

The scan module's deflection mirror is designed for a laser beam with defined parameters.

- ▶ Compare the technical specifications on page 29 with the requirements of your application. For information on tolerances and deviations, please contact SCANLAB.
- ▶ The coatings of the deflection mirror is designed for a defined wavelength or wavelength range. If the wavelength of the employed laser deviates from the specified value, the mirror will not work properly and can be destroyed.
- ▶ A maximum laser power density is defined for the mirror coating. If the power density applied to the mirrors exceeds its specified maximum power density, destruction of the coating might result.
- ▶ The coating is only intended for a specific angle of incidence range. The laser beam will be more weakly or not at all reflected outside the specified angle range.
- ▶ The deflection mirror is designed for a specific beam diameter and scan angle range. Excessive beam diameters or deflection angles can result in vignetting of the beam. The beam is then no longer fully deflected by the mirror. The consequence is a loss of laser power. Moreover, there is a risk of damage to the scan mirror or equipment (also see "Adjustment and Usable Angle Range" on page 8). The amount of possible power loss depends, among other things, on the beam profile of the employed laser.

The user has to ensure that the parameters of the entering laser beam (wavelength, power density, diameter and angle of incidence) match the specifications of the scan module.



Caution!

- Make sure the aperture and the coating of the deflection mirror meet the requirements of your application (see chapter "Technical Specifications Single Axis Module", on page 29). For information on tolerances and deviations, please contact SCANLAB.
- Check if the wavelength of the input beam and the maximum ratings for beam diameter and laser power match the specifications of the scan module (see page 29).
- Excessive deflection angles or beam diameters can produce vignetting at the mirror. This can result in health risks and damage to the mirror and equipment. If your application requires larger scan angles, then please contact SCANLAB.

5.3 Adjusting the Laser Beam



Danger!

- Do not stare directly into the laser beam or at any of its deflected radiation. Keep all parts of the body away from direct contact with the laser beam or any of its deflected radiation.
- Adjust the output beam path of the scan module by means of a laser with a laser class not higher than 2. If this is not possible, the laser should be operated at the lowest power. Avoid dangerous deflected radiation!

Follow the adjustment guidance given in chapter "Adjustment and Usable Angle Range", on page 8.

5.4 Checking the Parameters of Application Software

Before you start a laser application, you must carefully check your application software with regard to the maximum allowed scan angle range (see section "Range of Controllable Deflection Angles" on page 7 and chapter "Adjustment and Usable Angle Range", on page 8).

If the maximum allowable range of angles is exceeded, some vignetting at the scan mirror can occur and damage to the scan module might result.

If your application requires larger scan angles, then contact SCANLAB for guidance.

5.5 Safe Start-up and Shutdown Sequences

To assure safety during start-up, proceed exactly as follows:

- (1) Turn on the controlling PC and start up the control software.
- (2) Turn on the power supply for the scan module.
- (3) Turn on the laser.

When shutting down the system, turn off the components exactly in reverse order.



Caution!

- Before first-time operation, check the polarities of the power supply connections for the scan module.



Danger!

- Always turn on the control (PC) and the power supply for the scan module prior to turning on the laser. Otherwise the laser beam might be deflected in an arbitrary direction.
- Power for the scan module must be applied only when the control (PC) is active.

5.6 Assuring Safe Operating Temperatures

If the scanner is driven for long periods of time at high positioning speeds or if the application includes a high rate of vector changes, the correspondingly high current consumption of the galvanometer scanner can lead to excessive temperatures – especially in the case of insufficient cooling, for instance due to a weak thermal link to the machine.

To prevent damage to the scanner, the scan module provides a two-stage temperature control mechanism.



Caution!

- ▶ The user must ensure that the application program evaluates the temperature control signals correctly, as described below.

Stage 1: Temperature Status Warning

The temperature status signal TempOK indicates that the scanner is operating at a safe temperature level. During normal operation, the signal is HIGH. If the scanner temperature rises above a certain value or drops below a minimum value, then the TempOK signal switches to LOW. SCANLAB recommends to only operate the scan system while the TempOK signal is HIGH. If the TempOK signal switches to LOW during operation, system operation should be stopped and the system should be checked to determine the cause. If system operation is not stopped, large drift or other side-effects may occur.

- ▶ The application program must repeatedly check the TempOK signal during operation.

Stage 2: Critical Temperature Shutdown

In addition to the temperature status warning, the following scanner protective function is implemented:

If the scanner's temperature rises above the critical value for temperature status warning and reaches a second, still higher critical value, then

- the PowerOK status signal switches from HIGH to LOW,
- the scanner's output stage is turned off to prevent damage to the scanner. In this situation, the scanner's position is stationary and no longer under programmatic control.

If the scanner's temperature drops again below the power-down threshold, the scanner's drive stage is automatically restarted and the scan module will resume normal operation.



Caution!

- ▶ If the PowerOK signal switches to LOW, laser power must be switched off immediately. Otherwise, health hazards and severe equipment damage can occur due to uncontrolled laser radiation.

6 Routine Maintenance and Customer Service

6.1 Routine Maintenance of the Mirror

A dirty mirror increases the absorption of laser power by its optical surface. Dirt, dust and other contaminants can distort the laser beam, burn into the surface and damage the mirror. The warranty does not cover any damage due to improper use, cleaning or handling. Regularly inspect the scan module's mirror for dirt, dust and other contaminants in accordance with the procedures described below.

Deflection mirrors are especially sensitive components and should not be touched or removed from the galvanometer scanner. The mirror must be inspected and cleaned in-place. Make sure the mirror is at room temperature before manually rotating or cleaning them.

With the laser and power supply switched off, you can manually rotate each mirror to a position convenient for inspection and cleaning. To manually rotate a mirror, carefully hold the mirror by its edges with clean disposable gloves or finger cots and turn it to the desired position.



Danger!

- Switch off the laser and switch off the power supply prior to performing routine optics maintenance.

If dust or dirt particles are found on the mirror's surface, remove the particles by blowing with a rubber squeeze bulb or a source of clean compressed air.

If the mirror is still not clean, then use solvent and lens cleaning tissues and employ one of the two following cleaning methods:

Cleaning Notes

- Avoid skin contact with the optical surface.
- Use only clean lint-free tissues specially manufactured for cleaning optics (e.g. "Kodak lens cleaning paper"). Always use lens tissues with a solvent, because dry tissue can scratch optical surfaces.
- Use a solvent such as acetone or isopropanol of high purity (evaporation residue < 0.001%). Read and follow the safety advice and warnings for the solvents you will be using.
- Use clean powder-free gloves or finger cots that are impermeable to the organic cleaning solvents you will be using.
- Always wipe slowly but steadily and with slight pressure! Do not rub back and forth.

Method A

- (1) Place a clean piece of unfolded lens cleaning tissue over the mirror. Do not touch any part of the tissue that will touch the mirror.
- (2) Drop some solvent onto part of the tissue from above. Don't use too much solvent, because otherwise drying marks might appear.
- (3) Slowly and gently drag the dampened part of the tissue across the mirror's optical surface. Do not rub back and forth!

Method B

- (1) Create a lens-tissue brush by folding a clean lens tissue so that the fold is about as wide as the mirror.
- (2) Dampen the lens-tissue brush with solvent. Don't use too much solvent, because otherwise drying marks might appear.
- (3) Carefully grip one end of the dampened lens-tissue brush without touching any part of the tissue that will touch the mirror. Place the lens-tissue brush at one edge of the mirror, then wipe gently across the optical surface. Do not press hard or rub back and forth!

Repeat method A or method B until the mirror's optical surface is completely clean. For every cleaning swipe, use a new lens cleaning tissue.

If the dirt cannot be removed in this manner, then contact SCANLAB for guidance. In extreme cases, the complete scan module must be returned to SCANLAB for inspection and cleaning of the mirrors. However, in some situations SCANLAB might be able to recommend a user-performed special cleaning procedure.

6.2 Customer Service

Servicing and Repairs

Except for routine maintenance of the mirror surface, the scan module does not contain user-serviceable parts. All servicing and repairs should be performed only at SCANLAB. Only SCANLAB has the proper test facilities and procedures to service, repair and calibrate the system optimally.

If repairs are needed, always ship the complete scan module (galvanometer scanner, mirror and electronics boards), so that SCANLAB can recalibrate the components.

Product Warranty

SCANLAB guarantees this product to be free of defects in manufacturing and material. The warranty is valid for 12 months after delivery. Repairs covered under the warranty will be performed at SCANLAB.

The scope of the warranty is limited to repair or replacement of the SCANLAB product.

SCANLAB is responsible for the return delivery of products repaired under warranty; the customer is responsible for delivery to SCANLAB.

SCANLAB will not be held responsible:

- when the product has been damaged through misuse or improper operation
- for damage due to improper laser power (e.g. focused beam on optical surfaces) or improper adjustment
- for damage to the mirror caused by improper handling or cleaning
- for consequential damages
- if the galvanometer scanner, the mirror or the electronics boards have been altered

If a returned scan module must first be brought into a serviceable state by SCANLAB (e.g. by cleaning the scan module) before servicing can begin, then the customer must bear the additional cost.

Contacting SCANLAB

For service, repairs, advice or information, simply contact SCANLAB using one of the contact possibilities listed below:

SCANLAB GmbH
Siemensstr. 2a
82178 Puchheim
Germany

Tel. +49 (89) 800 746-0
Fax: +49 (89) 800 746-199

info@scanlab.de
www.scanlab.de

Product Disposal

The scan module can be returned to SCANLAB for a fee to be properly disposed of in compliance with environmental regulations.

7 Troubleshooting

If problems occur while operating this device, verify that all operating instructions have been adhered to and then carry out the following troubleshooting procedures:

Problem	Possible Cause	Remedy
Low laser power	Altered controller software parameters	Check input parameters
	Dirty or damaged mirror	Check mirrors. If necessary, clean as described in section 6.1. If the mirror is damaged return scan module for repair.
Changed laser spot	Dirty or damaged mirror	Check mirrors. If necessary, clean as described in section 6.1. If the mirror is damaged return scan module for repair.
	Laser out of adjustment	Adjust laser
No laser beam	Problem with the laser	Check laser and electrical connections
	Problem with the laser controller	If the RTC [®] board is used, check all electrical connections and the power supply
	Laser beam path blocked or shutter closed	Check laser beam path
The scan module does not steer the laser beam	Problem with the controller	Check power and data cables. Check software commands.
The scan module stopped responding	The scan module's softstart circuit of the optional softstart board has disconnected the scan module from the power supply due to impermissible supply voltages (see page 20)	Ensure correct supply voltages, switch off scan module, and then restart

If the problems persist, please send the scan module to customer service.

8 Technical Specifications Single Axis Module

(all angle specifications optical if not explicitly specified else)

Aperture		Mirror	
Recommended beam diameter	30 mm	mechanical mirror stop	at $\pm 20(\pm 1)^\circ$ mech.
Control		Coating	dielectrical high performance coating
Maximum range for control values (input signals)	$-10\text{ V to }+10\text{ V}^{(1)}$	Working wavelength	1 064 nm
Calibration	$\pm 0.408\text{ rad}$ with $\pm 9,6\text{ V}$ (Tolerance: $\pm 5\text{ mrad}$)	Reflectivity	
Output signals	3 digital status signals, TTL-level	– Angle of incidence range	
Power supply		– Mirror 1	$30^\circ - 55^\circ$ mech.
Requirements	$\pm (15+1.5)\text{ V DC}$, max. 3 A each pole	– Mirror 2	$25^\circ - 52^\circ$ mech.
Optical Performance		– at 1 064 nm	more than 99.5%
Nonlinearity	$< 0.60\text{ mrad}$	– at 630 nm to 670 nm	more than 70%
Repeatability	$< 22\text{ }\mu\text{rad}$	Maximum laser power	1000 W
Long-term drift over 8 hours (after warm-up)	$< 0.6\text{ mrad}$	Maximum laser power density continuous wave	500 W/cm^2
Dynamic Performance		Damage threshold for pulsed operation (with specified working wavelength, pulse length 10 ns, 200 on 1)	5 J/cm^2
Typical positioning speed	20 rad/s	Weight	
Tracking error	$< 0.55\text{ ms}$	Galvanometer scanner	approx. 430 g
1% Step response time (7.5 mrad step, settling to 0.75 mrad)	$< 1.2\text{ ms}$	SSV30 amplifier board	approx. 190 g
		Softstart board (optional)	approx. 80 g
		Operating and Storage Conditions	
		Operating temperature	$25\text{ }^\circ\text{C} \pm 10\text{ }^\circ\text{C}$
		Storage temperature	$-35\text{ }^\circ\text{C to }+60\text{ }^\circ\text{C}$
		Environmental conditions	non-condensing, non-corrosive

⁽¹⁾ The usable control value range may be restricted, see section "Adjustment and Usable Angle Range" on page 8.

Index

A

adjustment	8
of laser beam	24
analog input signals	6, 22
angle of incidence range	8
angle range	7, 8
aperture	23, 29
application software	
checking parameters of	24
article number	4

B

beam diameter	8, 23
recommended	29
beam vignetting	23

C

cabeling	19
calibration	29
CE label	9
checking	
application software parameters	24
installation	23
laser parameters	23
specifications of scan module and application .	
13	
cleaning notes	26
contacting SCANLAB	27
contents of package	4
control signals	6
maximum values	29
controller	6
critical temperature shutdown	25
customer service	27

D

data transfer	6, 22
deflection angles	
mechanical	7
optical	7
deflection mirror	5, 10, 22, 26, 28, 29
delivered product	4
dimensions	
electronic boards	17
galvanometer scanner	14
mirror	14
disposal of scan module	27
drift	
gain	5
long-term	29
offset	5
dynamic performance	29

E

electrical connections	19, 29
electrical safety	12
electromagnetic compatibility	9
electronic boards	16
dimensions	17
mounting	16
environmental conditions	13, 22, 29
environmental fluctuations	5

G

gain drift	5
galvanometer scanner	
behavior of	5
connection	19
dimensions	14
environmental fluctuations	5
lag time	5
mounting	15
guarantee	27

I

input signals	6, 22, 29
installation	13–22
checking	23
interface	6
interference immunity	9

L

label	4
lag time of scanner	5
laser	
maximum power density	23
laser beam	
vignetting	23
laser parameters, checking	23
laser radiation	
classes of	11
warning symbols	10–12
laser safety	10–12
long-term drift	29

M

maintaining optical surfaces	26
manual, about this	4

mirror	5, 10, 22, 28
coating	8
dimensions	8, 14
inspecting and cleaning	26
inspection of	26
mounting	15
specifications	29
wavelength	23
mirror stop	
angle range	29
mounting	16
galvanometer scanner	15
mirror	15

N

neutral position	7
nonlinearity	29

O

offset drift	5
operating and storage conditions	13, 22
operating manual, about this	4
operating safety	9
operating temperature	29
operation and start-up	23
operation, basic questions about	5
optical performance	29
output signals	29
overview of product	4

P

package contents	4
performance specifications	
dynamic	29
optical	29
PosAck signal	7
positioning speeds	25, 29
power density, max	23
power supply	
connection	20
requirements	20, 29
POWEROK status signal	25
principle of operation	5
product disposal	27
product overview	4
PWROK signal	6

R

range of controllable deflection angles	7
repairs	27
repeatability	29
rotation axis	8
routine maintenance	26

S

safe operating temperatures	25
safety	
during installation and operation	9–12
EC guidelines	9
electrical safety	12
electromagnetic compatibility	9
laser radiation warning symbols	10–12
laser safety	10–12
operating safety	9
safety and warning symbols in manual	9
standards and guidelines	9
scan module	
control	6
control values	29
disposal of	27
mirror, checking and cleaning	26
repairs	27
servicing	27
technical specifications	29
SCANLAB, contacting	27
scanner	
characteristic behavior	5
connection	19
dimensions	14
environmental fluctuations	5
lag time	5
mounting	15
serial number	4
servicing	27
shutdown sequence	25
shutter	10
signal inputs and outputs	22
signals	29
input	6
PosAck	7
PWROK	6
status	6
TempOK	6
specifications, scan module and application	13
specifications, technical	29
start-up	
and operation	23
and shutdown sequences	25
status signals	6, 22, 29
step response time	29
storage and operating conditions	13, 22
storage temperature	29
suppression of radio interference	9

T

technical specifications	29
--------------------------------	----

temperature	25
critical shutdown	25
safe operating	25
status warning	25
status warning TempOK	25
temperature fluctuations	5
TempOK signal	6, 25
time lag of scanner	5
tracking error	29
troubleshooting	28
typical positioning speed	29

U

unpacking instructions	4
usable angle range	8

V

vector rate	25
vignetting, beam	23

W

warranty	27
wavelength	23
weight	29



Notes