

## Introduction

This guide describes the setup of the Atmel® ATBTLC1000 to be used in conjunction with supported platforms (see [Table 2-1](#)) bringing up an example profile supplied as part of BluSDK release. The Simple Broadcaster application is an example application that is embedded as part of the software release package.

The Simple Broadcaster application continuously broadcasts the advertisement data over the air.

This document explains the details about:

1. Getting started with the setup of supported platforms (see [Table 2-1](#)).
2. Using the ATBTLC1000 Wing board as a simple broadcaster to broadcast the data.

The Simple Broadcaster example application supports 10 advertisement data types. They are listed as follows:

- Incomplete List of 16-bit Service Class UUID
- Complete List of 16-bit Service Class UUIDs
- Incomplete List of 32-bit Service Class UUIDs
- Complete List of 32-bit Service Class UUIDs
- Incomplete List of 128-bit Service Class UUIDs
- Complete List of 128-bit Service Class UUIDs
- Shortened Local Name
- Complete Local Name
- Appearance
- Manufacturer Specific Data

## Table of Contents

---

<b>1</b>	<b>Demo Setup.....</b>	<b>3</b>
<b>2</b>	<b>Supported Hardware Platforms and IDEs .....</b>	<b>3</b>
<b>3</b>	<b>Hardware Setup .....</b>	<b>4</b>
3.1	SAM L21 Xplained Pro Simple Broadcaster Setup .....	4
3.2	SAM D21 Xplained Pro Simple Broadcaster Setup .....	4
3.3	SAM G55 Xplained Pro Simple Broadcaster Setup .....	5
3.4	SAM 4S Xplained Pro Simple Broadcaster Setup .....	5
<b>4</b>	<b>Software Setup.....</b>	<b>6</b>
4.1	Installation Steps .....	6
4.2	Build Procedure.....	6
<b>5</b>	<b>Running Demo .....</b>	<b>10</b>
<b>6</b>	<b>Console Display .....</b>	<b>10</b>
<b>7</b>	<b>BluSDK Software Architecture.....</b>	<b>11</b>
<b>8</b>	<b>Configuration Options.....</b>	<b>12</b>
<b>9</b>	<b>ATMEL EVALUATION BOARD/KIT IMPORTANT NOTICE AND DISCLAIMER .....</b>	<b>13</b>
<b>10</b>	<b>Revision History .....</b>	<b>14</b>

## 1 Demo Setup



## 2 Supported Hardware Platforms and IDEs

Table 2-1. BluSDK – Supported Hardware and IDEs

Platform	MCU	Supported BLE device	Supported evaluation kits	Supported IDEs
SAM L21 (MCU)	ATSAML21J18B	ATBTLC1000	ATBTLC1000-XSTK (ATSAML21-XPRO-B + ATBTLC1000 XPRO)	Atmel Studio v7.0
SAM L21 (MCU)	ATSAML21J18A	ATBTLC1000	ATSAML21 XPRO + ATBTLC1000 XPRO	Atmel Studio v7.0
SAM D21 (MCU)	ATSAMD21J18A	ATBTLC1000	ATSAMD21-XPRO + ATBTLC1000 XPRO	Atmel Studio v7.0
SAM G55 (MCU)	ATSAMG55J19	ATBTLC1000	ATSAMG55-XPRO + ATBTLC1000 XPRO	Atmel Studio v7.0
SAM 4S (MCU)	ATSAM4SD32C	ATBTLC1000	ATSAM4S-XPRO + ATBTLC1000 XPRO	Atmel Studio v7.0

## 3 Hardware Setup


### 3.1 SAM L21 Xplained Pro Simple Broadcaster Setup

Figure 3-1. ATBTLC1000 Xplained Pro Extension connected to a SAM L21 Xplained Pro




### 3.2 SAM D21 Xplained Pro Simple Broadcaster Setup

Figure 3-2. ATBTLC1000 Xplained Pro Extension connected to a SAM D21 Xplained Pro

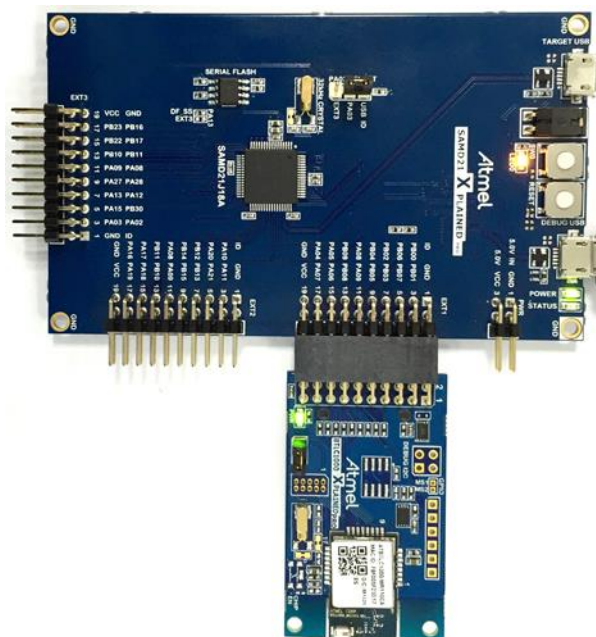


### 3.3 SAM G55 Xplained Pro Simple Broadcaster Setup

Figure 3-3. ATBTLC1000 Xplained Pro Extension connected to a SAM G55 Xplained Pro

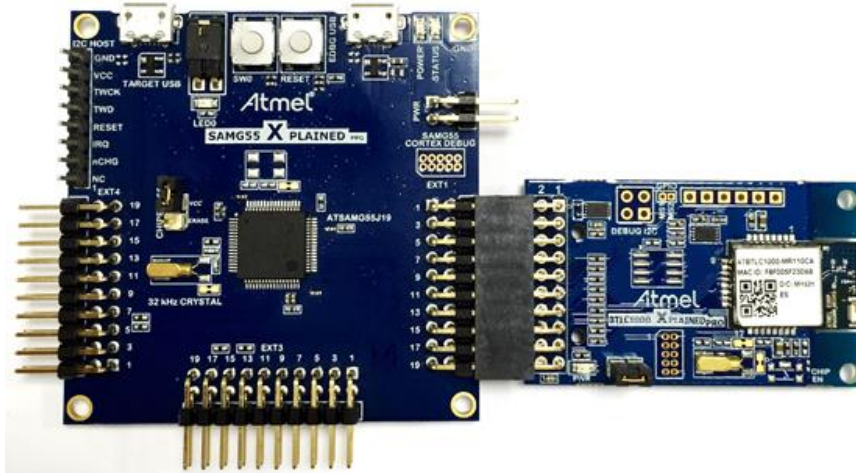

### 3.4 SAM 4S Xplained Pro Simple Broadcaster Setup

Figure 3-4. ATBTLC1000 Xplained Pro Extension connected to a SAM 4S Xplained Pro

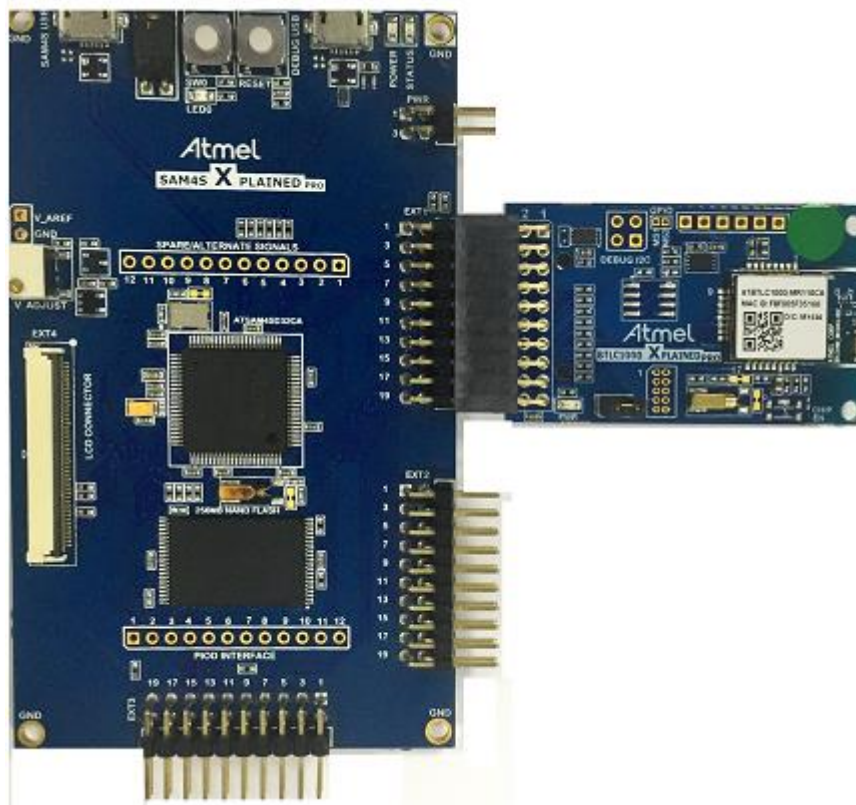

## 4 Software Setup

### 4.1 Installation Steps

1. Atmel Studio installation [**Atmel Studio 7.0 (build 594) Installer – with .NET**]  
<http://www.atmel.com/tools/atmelstudio.aspx>.  
(Note: SAM L21 Rev B/SAM D21/SAM G55/SAM 4S part pack is built-in as part of Atmel Studio 7.0)
2. Atmel USB Driver Installer from <http://www.atmel.com/tools/atmelstudio.aspx>.
3. Install the standalone ASF package from  
<http://www.atmel.com/tools/AVRSOFTWAREFRAMEWORK.aspx> .

Note: Refer to the BluSDK release notes for updates to version numbers of the components mentioned above.

This package will install the following examples within the Atmel Studio environment.

1. Simple Broadcaster Application for SAM L21.
2. Simple Broadcaster Application for SAM D21.
3. Simple Broadcaster Application for SAM G55.
4. Simple Broadcaster Application for SAM 4S.


### 4.2 Build Procedure

The following procedure is explained for SAML21 application example. The same procedure is valid for the case of all other supported platforms (see [Table 2-1](#)).

1. Select New Example Project.




**Figure 4-1. Creation of Project**

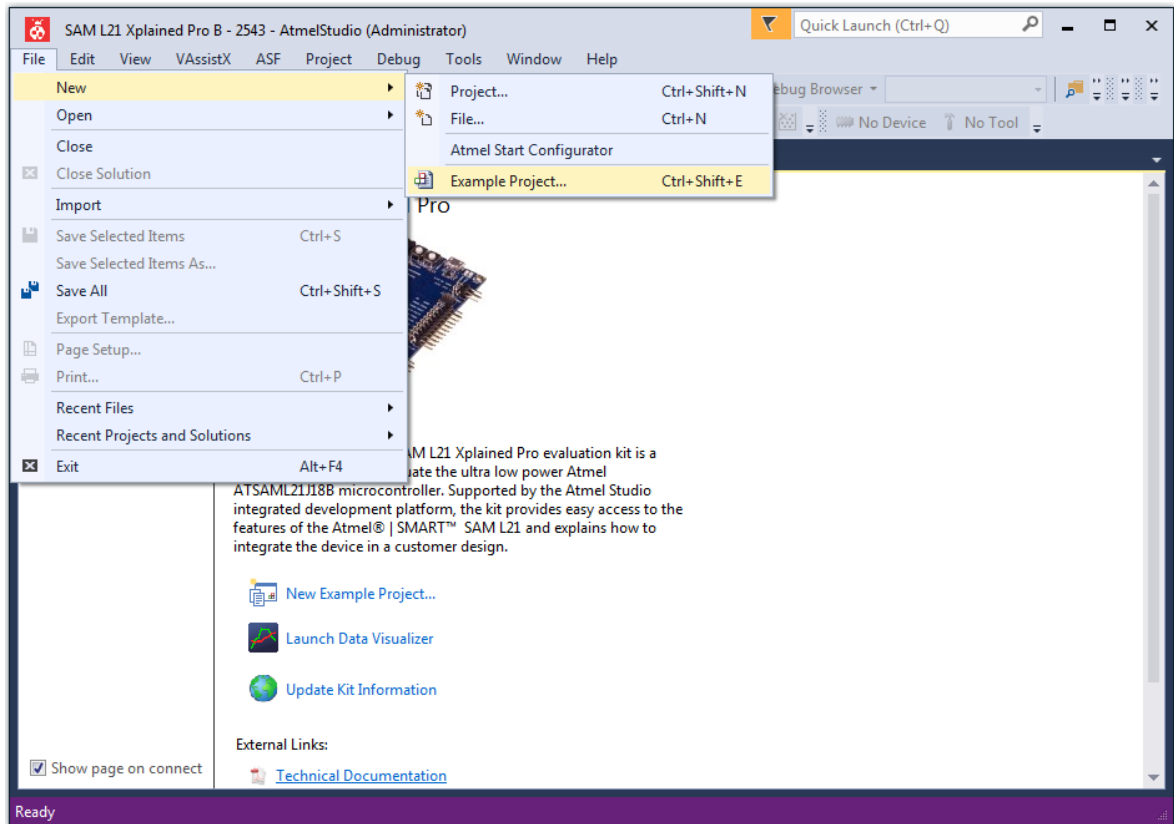


2. Enter “Simple Broadcaster” in the search window and expand Atmel Corp Projects. The location and the name of the project can be selected in the respective fields. Click **OK**.

**Figure 4-2. Selection of Simple Broadcaster Application from Example Projects**

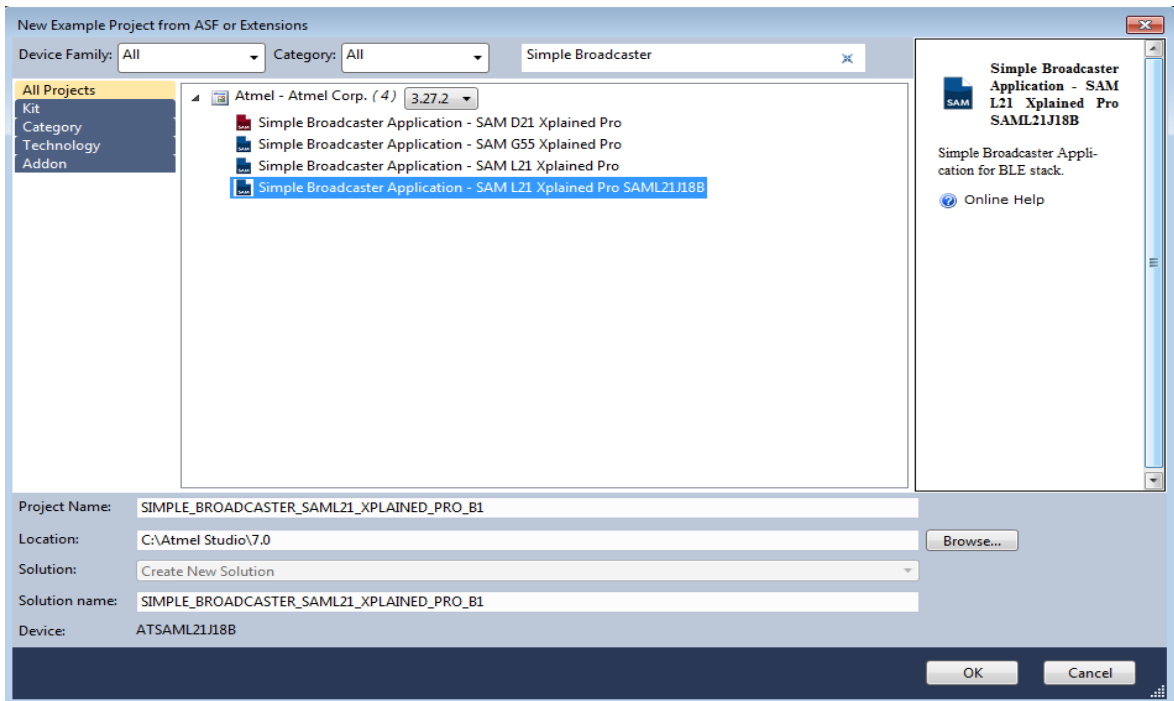


3. Build the solution.

**Figure 4-3. Building of the Broadcaster Application**

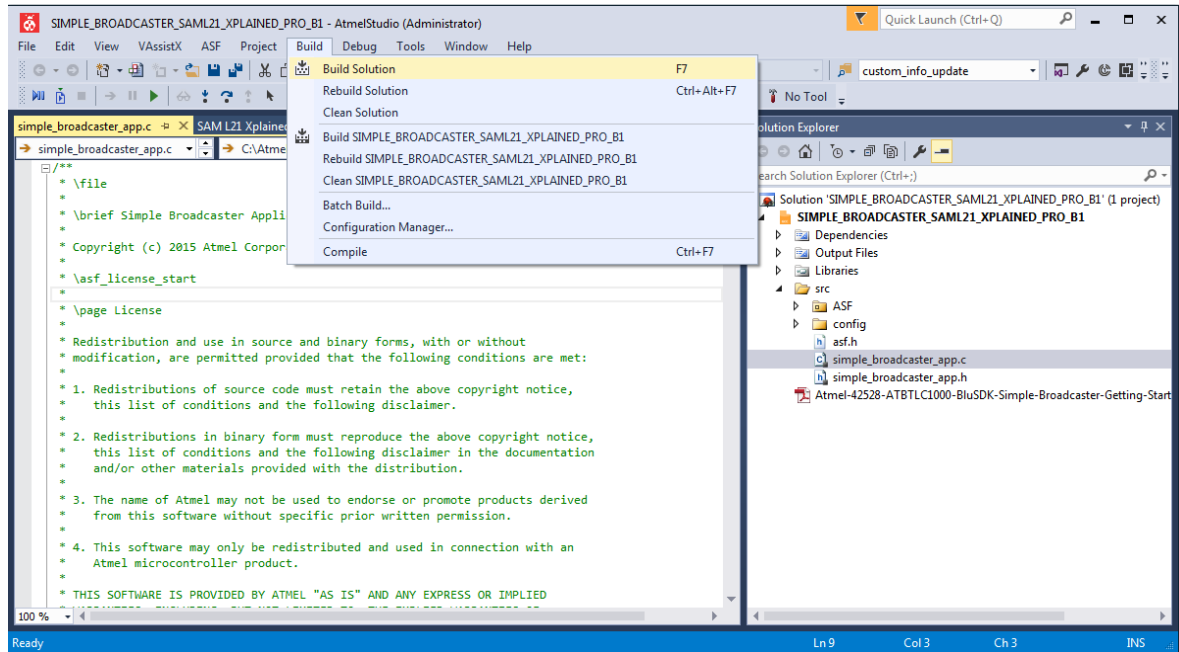

4. Download the application via the USB to the SAM L21 board using Device Programming option available in Tools as shown in Figure 4-4.


**Figure 4-4. Selecting Device Programming Option**

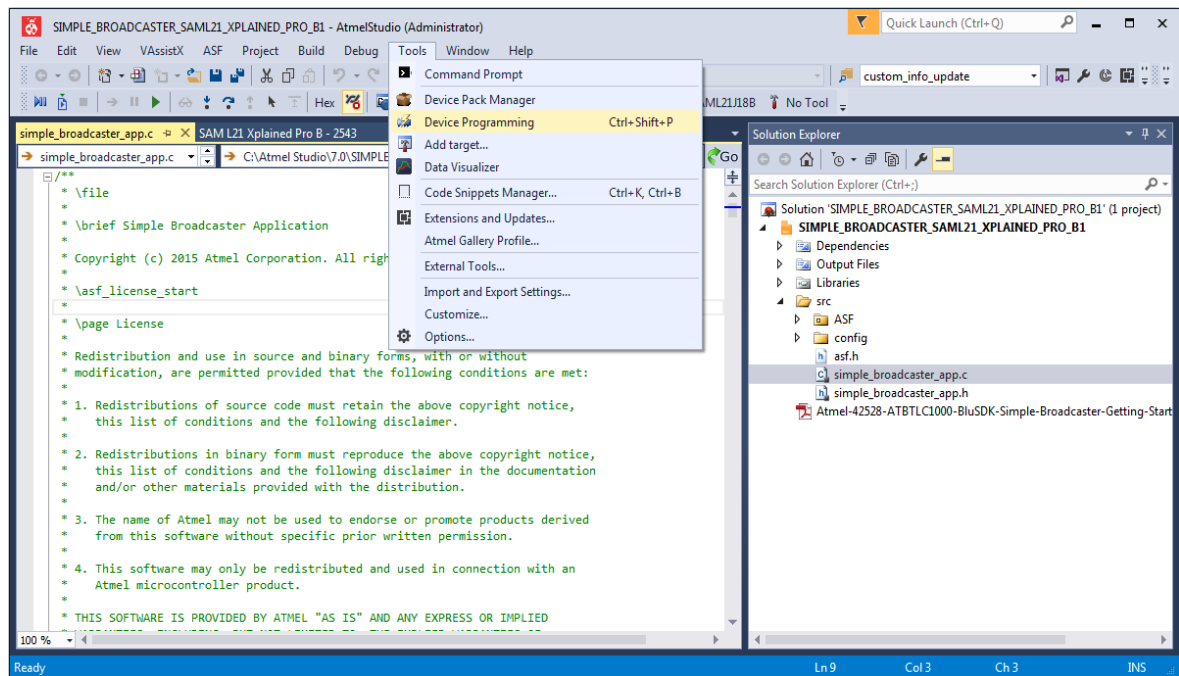



5. Programming the device to download the Simple Broadcaster application as shown in [Figure 4-5](#).

**Figure 4-5. Flashing the Application to SAM L21**

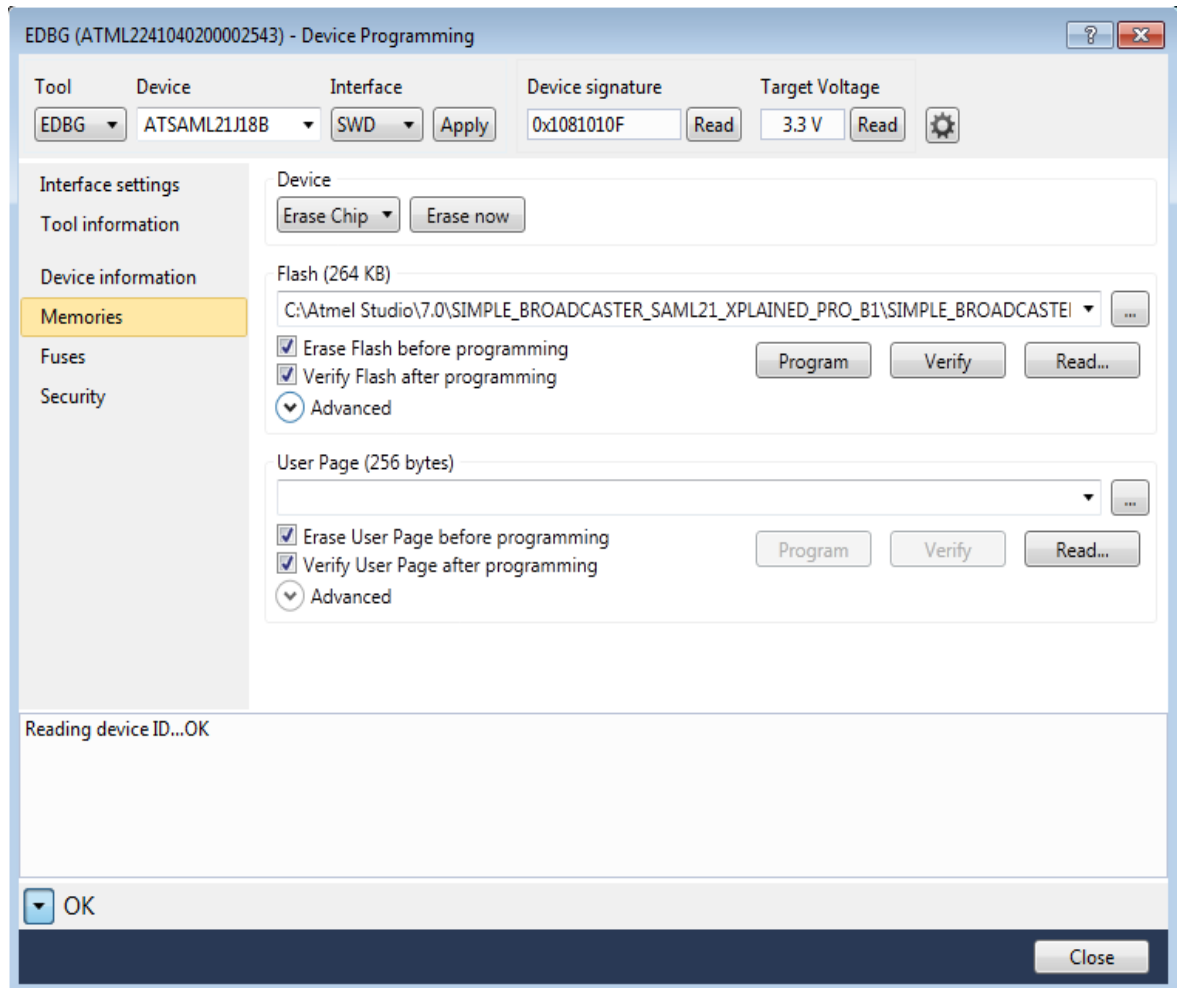

6. After flashing the device is now ready to be used as a Simple Broadcaster.

## 5 Running Demo


- Connect the ATBTLC1000 Xplained Pro Board to SAM L21 Xplained Pro EXT1 as indicated in [Figure 3-2](#)
- Power on the SAM L21 by connecting the USB Cable
- Open any Terminal Application (e.g. TeraTerm), select the COM Port and use following Settings: Baudrate 115200, Parity None, 1 Stop bit, 1 Start bit, No Hardware Handshake
- Press the Reset button on the SAM L21 board or supported platforms (see [Table 2-1](#)) board
- The device is now in advertising mode

## 6 Console Display

For the purpose of debugging, a logging interface has been implemented in the Simple Broadcaster application. The logging interface utilizes the same EDBG port that connects to supported platforms (see [Table 2-1](#)). A serial port monitor application (e.g. TeraTerm) shall be opened and attached to the corresponding COM port enumerated on the PC.

[Figure 6-1](#) shows example logs from the Simple Broadcaster application.

**Figure 6-1. Simple Broadcaster Console Display**

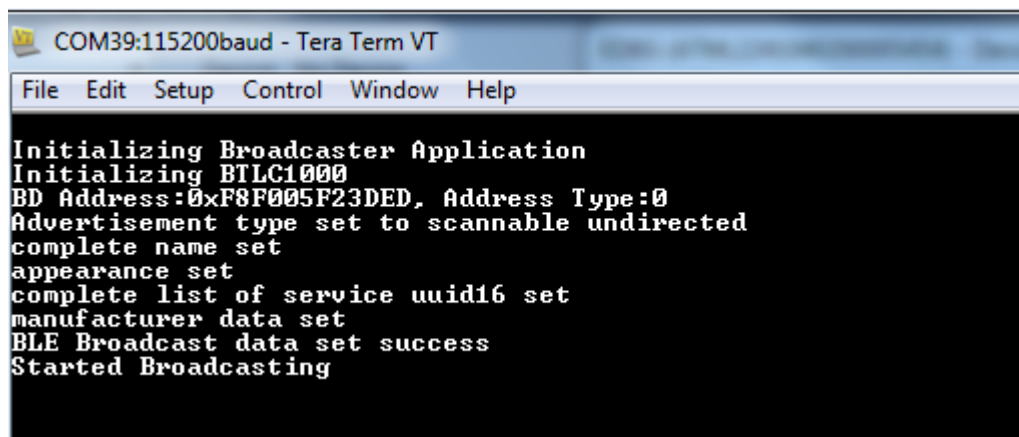


```
COM39:115200baud - Tera Term VT
File Edit Setup Control Window Help
Initializing Broadcaster Application
Initializing BTLC1000
BD Address:0xF8F005F23DED. Address Type:0
Advertisement type set to scannable undirected
complete name set
appearance set
complete list of service uuid16 set
manufacturer data set
BLE Broadcast data set success
Started Broadcasting
```

## 7 BluSDK Software Architecture

Figure 7-1 illustrates the various layers in the BLE subsystem for the ATBTLC1000 configuration. The External host can be supported platforms (see Table 2-1). This application is an example of simple Broadcaster.


Figure 7-1. BluSDK Software Architecture

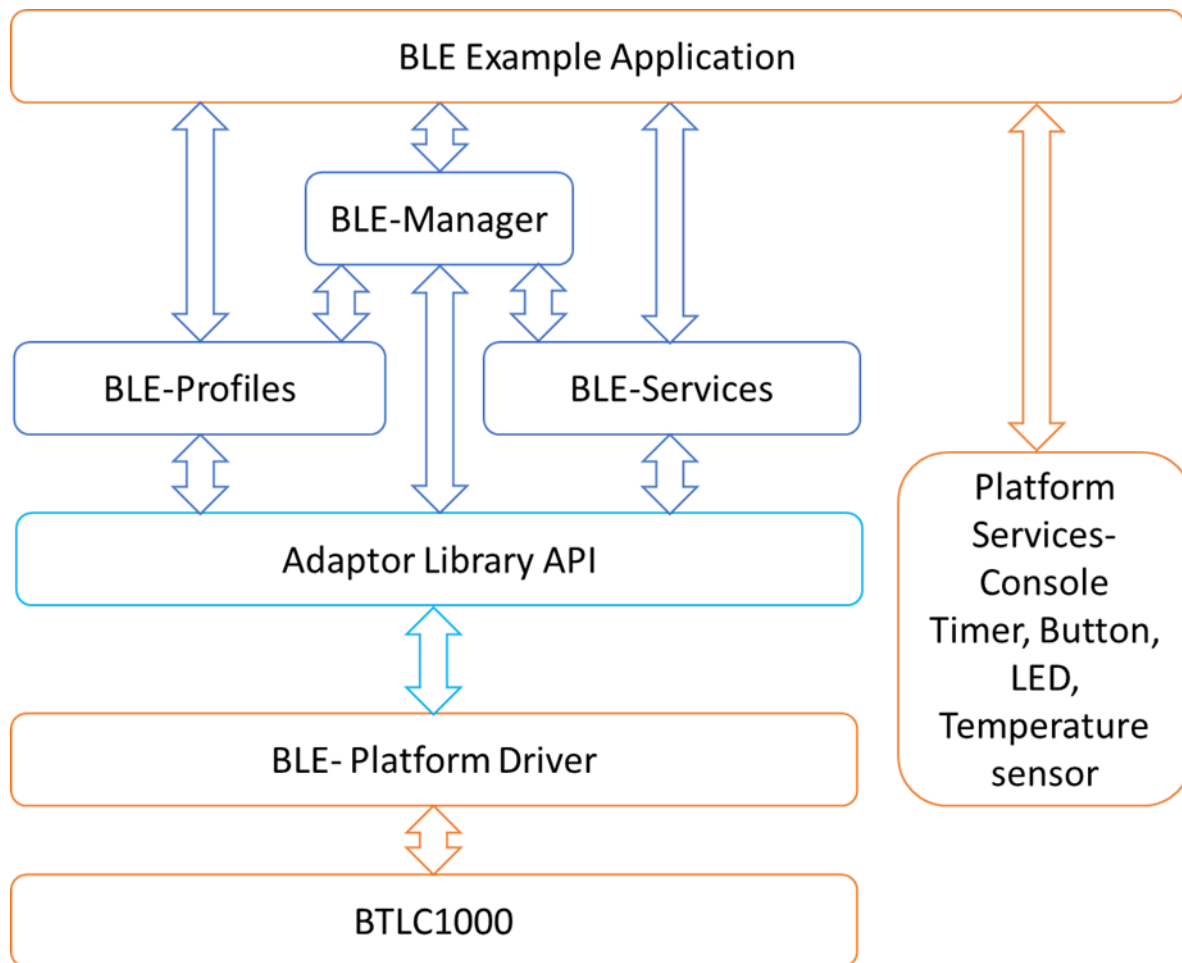

## 8 Configuration Options

- Simple Broadcaster application will advertise with the default configuration provided below:
  - Non-connectable undirected advertisement event
  - Broadcasts data in advertisement data packets only
  - Broadcasts the below advertisement data types:
    - Complete List of 16-bit Service Class UUIDs
    - Complete Local Name
    - Appearance
- The configuration and advertisement data types listed above can be changed by using the Macros provided in the ***simple\_broadcaster\_app.h*** file as shown in [Figure 8-1](#)

**Figure 8-1. Simple\_broadcaster\_app.h Header File for Configurations**

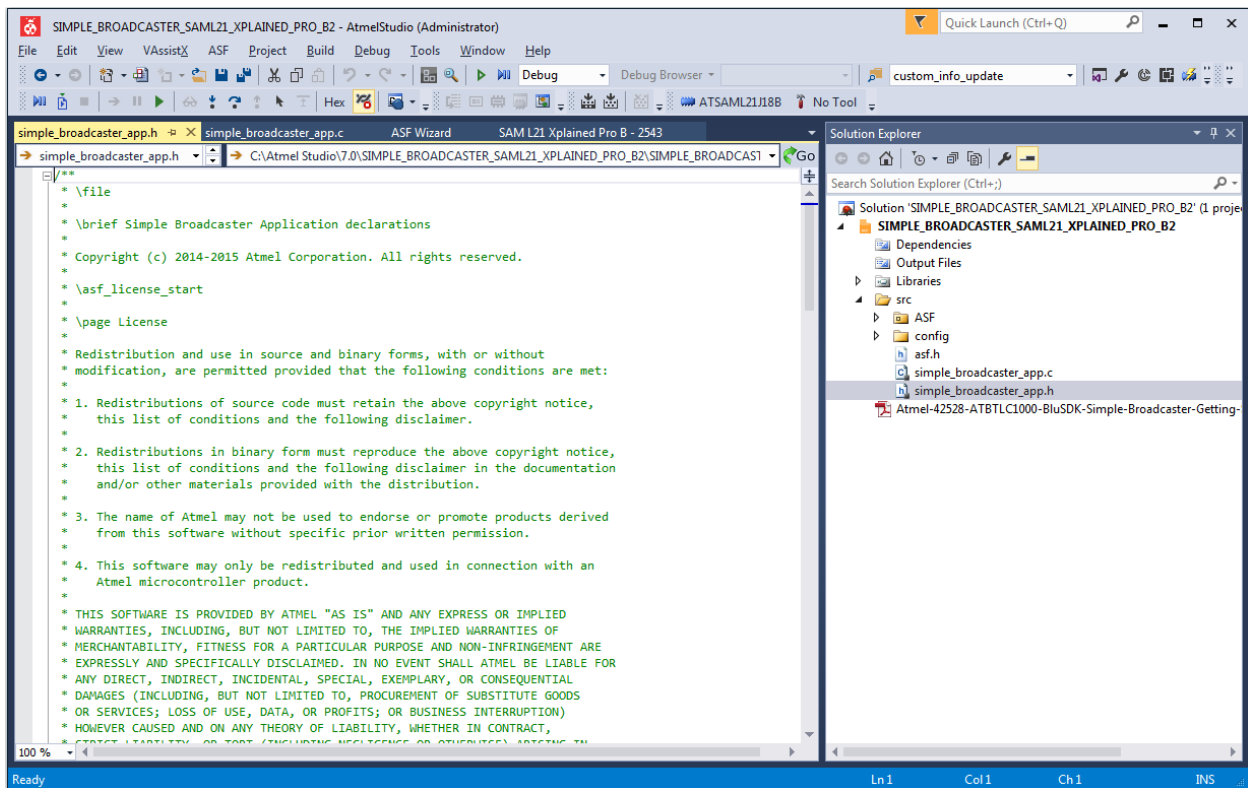

## 9 ATMEL EVALUATION BOARD/KIT IMPORTANT NOTICE AND DISCLAIMER

This evaluation board/kit is intended for user's internal development and evaluation purposes only. It is not a finished product and may not comply with technical or legal requirements that are applicable to finished products, including, without limitation, directives or regulations relating to electromagnetic compatibility, recycling (WEEE), FCC, CE or UL. Atmel is providing this evaluation board/kit "AS IS" without any warranties or indemnities. The user assumes all responsibility and liability for handling and use of the evaluation board/kit including, without limitation, the responsibility to take any and all appropriate precautions with regard to electrostatic discharge and other technical issues. User indemnifies Atmel from any claim arising from user's handling or use of this evaluation board/kit. Except for the limited purpose of internal development and evaluation as specified above, no license, express or implied, by estoppel or otherwise, to any Atmel intellectual property right is granted hereunder. ATMEL SHALL NOT BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RELATING TO USE OF THIS EVALUATION BOARD/KIT.

ATMEL CORPORATION  
1600 Technology Drive  
San Jose, CA 95110  
USA

## 10 Revision History

Doc Rev.	Date	Comments
42528C	02/2016	Table 2.1 is updated with SAM4S support Figure 3.4 is updated with SAM4S Xplained Pro Image Section 4.1 Installation Steps are updated.
42528B	11/2015	Figure 3-1 is updated. The screenshots in Chapter 4 and Chapter 8 are updated.
42528A	09/2015	Initial document release.





**Atmel Corporation** 1600 Technology Drive, San Jose, CA 95110 USA T: (+1)(408) 441.0311 F: (+1)(408) 436.4200 | [www.atmel.com](http://www.atmel.com)

© 2016 Atmel Corporation. / Rev.: Atmel-42528C-ATBTLC1000-BluSDK-Simple-Broadcaster-Getting-Started-Guide\_UserGuide\_022016.

Atmel®, Atmel logo and combinations thereof, Enabling Unlimited Possibilities®, and others are registered trademarks or trademarks of Atmel Corporation in U.S. and other countries. ARM®, ARM Connected® logo, and others are the registered trademarks or trademarks of ARM Ltd. Other terms and product names may be trademarks of others.

**DISCLAIMER:** The information in this document is provided in connection with Atmel products. No license, express or implied, by estoppel or otherwise, to any intellectual property right is granted by this document or in connection with the sale of Atmel products. EXCEPT AS SET FORTH IN THE ATMEL TERMS AND CONDITIONS OF SALES LOCATED ON THE ATMEL WEBSITE, ATMEL ASSUMES NO LIABILITY WHATSOEVER AND DISCLAIMS ANY EXPRESS, IMPLIED OR STATUTORY WARRANTY RELATING TO ITS PRODUCTS INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT. IN NO EVENT SHALL ATMEL BE LIABLE FOR ANY DIRECT, INDIRECT, CONSEQUENTIAL, PUNITIVE, SPECIAL OR INCIDENTAL DAMAGES (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS AND PROFITS, BUSINESS INTERRUPTION, OR LOSS OF INFORMATION) ARISING OUT OF THE USE OR INABILITY TO USE THIS DOCUMENT, EVEN IF ATMEL HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Atmel makes no representations or warranties with respect to the accuracy or completeness of the contents of this document and reserves the right to make changes to specifications and products descriptions at any time without notice. Atmel does not make any commitment to update the information contained herein. Unless specifically provided otherwise, Atmel products are not suitable for, and shall not be used in, automotive applications. Atmel products are not intended, authorized, or warranted for use as components in applications intended to support or sustain life.

**SAFETY-CRITICAL, MILITARY, AND AUTOMOTIVE APPLICATIONS DISCLAIMER:** Atmel products are not designed for and will not be used in connection with any applications where the failure of such products would reasonably be expected to result in significant personal injury or death ("Safety-Critical Applications") without an Atmel officer's specific written consent. Safety-Critical Applications include, without limitation, life support devices and systems, equipment or systems for the operation of nuclear facilities and weapons systems. Atmel products are not designed nor intended for use in military or aerospace applications or environments unless specifically designated by Atmel as military-grade. Atmel products are not designed nor intended for use in automotive applications unless specifically designated by Atmel as automotive-grade.