

Ariel of Hamble

Navigation

Version 0.4

Table of Contents

Contents:

Navigation Overview	3
• TackTicks	
• EmTrak AIS	
• Standard Horizon VHF	
• RaspberryPi	
• OpenPlotter	
• Custom Software	
• Future Projects	
Starting the Navigation System	19
Basic Use of OpenCPN Plotter	20
• Interface Overview	
• Zooming and Panning	
• Getting Information on Chart Item	
Advanced Use of OpenCPN	22
• Updating Charts	
Data Dashboard	26
Other OpenPlotter Software	27
• XyGrib	
• VLC	
• Screenshot	
Shutting Down the Navigation System	28
Troubleshooting	29
Reporting a Fault	30
Update List	31

Ariel of Hamble Navigation Documentation

Please note - IP addresses and passwords are not present in this document as it is available on the public Internet.

Navigation Overview


This is an overview of the software and hardware used for Ariel of Hamble's Navigation. The term navigation network is used to describe the network that is used to pass data between nodes around the boat, but in reality it is a number of networks. Further data will be provided in a deep-dive section at a future date.

NOTE: Please be aware that some information is measured and some is derived from those measurements. For example, Apparent Wind Speed (AWS) is measured and True Wind Speed (TWS) is calculated from AWS and Speed Through the Water (STW). A problem with a measured value will cause knock-on issues with values derived from it.

TackTicks

The TackTick instruments are used to generate depth, speed through the water, water temperature, apparent wind speed and direction. The TackTick units use a proprietary radio network called [Raymarine Micronet](#) to pass information between the units installed in the navigation cupboard, the wind sensor and the display units.

Display Units

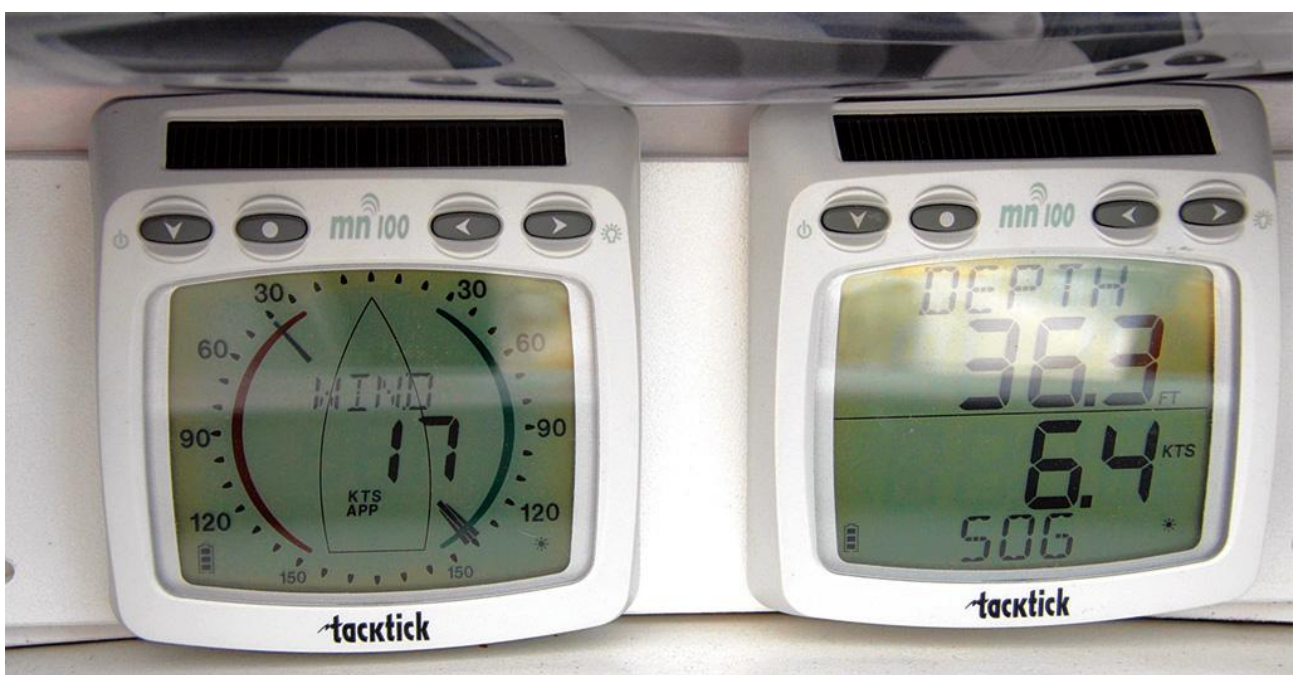

Ariel has 3 display units:

- 1 wind display which can show either apparent wind direction and speed or true wind direction and speed.
- 2 double number displays which can be configured to show information such as depth, speed through the water, COG and SOG, time, location.

NOTE - please be very careful with the TackTick display units. They are extraordinarily expensive to replace - over £2000 per set.

Depth



The depth sounder uses ultrasonic waves to measure the depth beneath the transducer. The offset between the transducer and the bottom of the keel is applied in the Raspberry Pi. The depth sounder also provides the sea water temperature to the network. It connects to the unit in the navigation cupboard using a proprietary wired direct connection.

Speed



The speed transducer uses a paddle wheel to measure the speed of the boat through the water. It connects to the unit in the navigation cupboard using a proprietary wired direct connection.

Wind Speed and Direction



The Wind Speed and Direction unit at the top of the mast is solar powered. It transmits the information to the unit in the Navigation locker using a proprietary format called .

EmTrak AIS



The EmTrak AIS is a multipurpose device. It is the vessel's source of location data, it is an AIS class B+ transceiver, sending the boat's location to other vessels and, when in range, shore stations, it receives the locations of other vessels and it has an inbuilt switch connecting both the internal AIS and the VHF to the mast-head antenna.

To prevent the VHF being powered on and transmitting in to a switched off AIS unit, both the EmTrak and VHF are on the same power switch "VHF".

The EmTrak AIS uses the GPS antenna on the stern railing.

GNSS Information

The EmTrak sends the following GNSS information to the Navigation system:

- Location
- COG and SOG

- Rate of Turn
- Time
- Number of Satellites
- Precision

NOTE: The EmTrak unit uses the US GPS, EU Galileo, Russian Glonass and Chinese Beidou GNSS satellites.

AIS Targets

The EmTrak also sends:

- Class A Vessel Location
- Class B Vessel Location
- Class A Vessel Type, Cargo, Destinations etc.
- Search and Rescue Aircraft
- Aids to Navigation (“Virtual Buoys”)
- Safety Messages (MOB devices, SARTs etc.)

Standard Horizon VHF



The Standard Horizon VHF uses the GPS signal from the EmTrack AIS unit. The location and time are shown on the front panel LCD of the VHF unit - these are required to make the DSC emergency calling system work.

(The VHF has an in-built VHF too, this is switched off as having multiple GPS locations being added to the network was one of the causes of issues seen in the first season)

The Standard Horizon also sends the location of emergency alerts received to the network so they can be viewed on the OpenCPN chart plotting software.

RaspberryPi

Insert Image

The RaspberryPi is the heart of the Navigation System. It is a small, but fully functional, computer system that runs a free specialist operating system called OpenPlotter. Originally designed for school students to be able to own a small, cheap computer - they're now used in many industrial settings.

In addition to the main computer board, we have added two other specialist boards to the system (known as HATs).

- MacArthur HAT - a specialist board produced by the company that creates OpenPlotter - it has inputs and outputs for NMEA 0183, NMEA 2000, NMEA OneNet, SeaTalk etc. plus the ability to interface to industrial sensors. The HAT also allows a safe shutdown of the computer board and has 2 sensors - environmental conditions in the cabin and a 9 degrees of freedom orientation sensor.
- SSD Hard Disk board - to allow us to run the software from a proper hard disk, not an SD card.

OpenPlotter

OpenPlotter is a Linux-based operating system designed to use a cheap RaspberryPi computer and convert it in to a fully functional plotter system. It uses almost exclusively free, open source, community projects - which means it's fully tested by a large community, there's a number of projects around the world which maintain it and increase functionality and there's a method to request changes.

OpenPlotter provides an interface to all of the standard data formats used by yacht hardware and a number of those used for industrial sensors.

The measured and computed data is collated in a central database by a software package called SignalK, which then makes the values available to other software packages (such as the chart plotter) and over the network for crew to use on their tablets.

OpenPlotter also provides a software chartplotter, weather prediction software, interfaces for autohelms, internet browsing, video viewing and an interface for a range of radio communications (at present we haven't implemented the radio communications module on Ariel)

Further details on OpenPlotter can be found at the [OpenPlotter Website](#).

SignalK

SignalK is software designed to import data from a variety of sources around the boat and stores it in a central database which can be accessed by other software. On Ariel, the SignalK server takes data from a range of inputs such as the NMEA 0143 bus used by the TackTicks and EmTrak, from the barometer and thermometer in the navigation locker and software modules running on the Raspberry Pi and imports them in to the database. SignalK also stores a range of static data in this database which can be used in calculations, e.g. vessel draught.

SignalK stores data addresses and values, for example:


```
/vessels/<mmsi>/environment/windSpeedTrue 4.23
```

```
/vessels/<mmsi>/navigation/position 51.23453,-0.12248,2.34
```

This database is available to other software to read from - the plotter software, OpenCPN, receives all of its locations details, AIS vessels to overlay, DSC alerts directly from the SignalK database. SignalK also has a number of output plugins so the data is converted back to NMEA 0143 so derived values can be displayed on the TackTicks, to a data stream that can be used by Navionics or similar on member's phones and tablets and in some cases to files so that trends can be observed (e.g. we're actively monitoring battery state to see if we can understand better what is causing mysterious battery drainage).

Further details on SignalK can be found at [SignalK Website](#).

OpenCPN

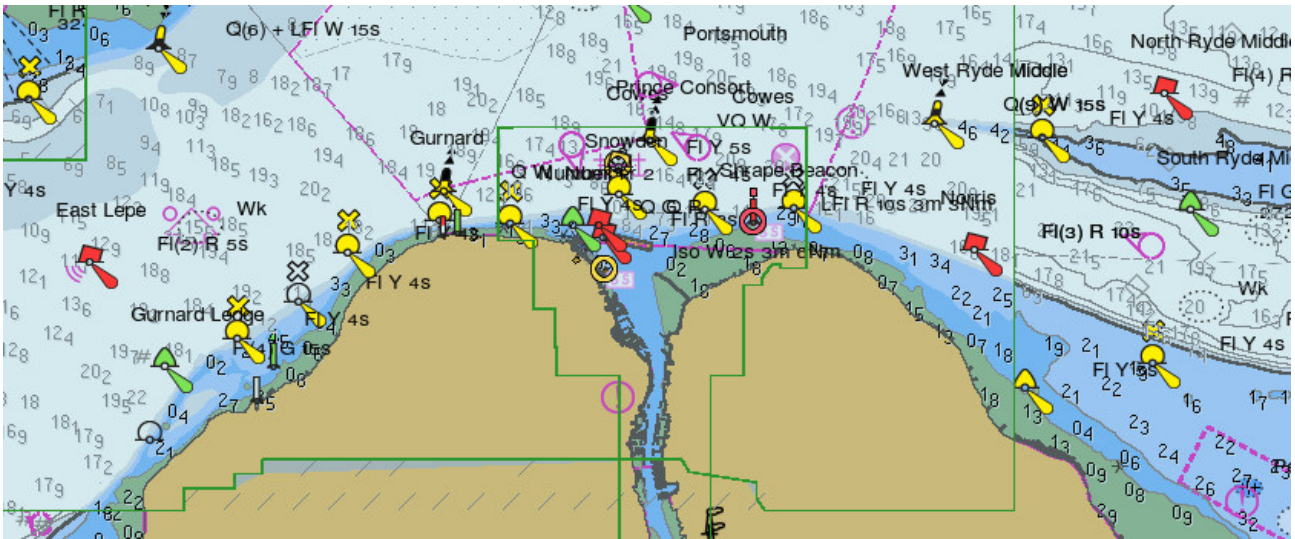


OpenCPN is a fully functional chartplotter which can:

- Display a wide range of chart formats including those made available for Europe via O-charts
- Be used for all electronic chartplotter tasks such as adding routes, waypoints etc
- Can display the location of emergency alarm signals such as MOB alarms, DSC safety messages etc.
- Can display AIS targets including closest point of approach lines.
- Can overlay GRIB weather prediction files
- Can display tidal heights and currents, magnetic offsets etc.
- Can display Radar overlays.
- Can be extended by plugins to do tasks such as Vessel Data Recording.

Further details on OpenCPN can be found at [OpenCPN Website](#)

NOTE: OpenCPN is freely available on Windows, Mac, Linux and Android - please download and familiarise yourself - the charts for the entirety of the UK are also available for about £20.

O-Charts

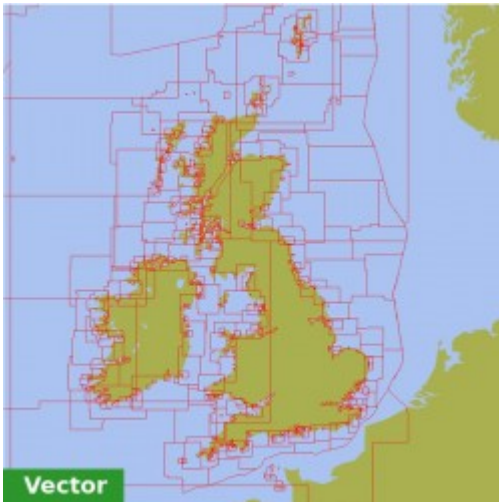

O-charts use the latest information from a number of European hydrographic offices to create chart packages specifically designed for OpenCPN. Each purchase is licensed to a USB key that is plugged in to the Raspberry Pi.

The visual design of the charts is fully customisable - we have made it look like an Admiralty chart on Ariel - please note that you may need to zoom in on the chart to see all of the information present.

NOTE: without the USB key, the charts will not be displayed.

Each year we purchase the entire UK chart set plus any required for the summer cruise, e.g. Atlantic France. If you are planning on sailing anywhere that could require new charts, please contact the Commodore. Charts can be installed remotely. Charts receive updates every four weeks - again updates can be run remotely.

MOB and Safety Notifications

MOB alarms work in a number of different ways. If members wish to use a DSC based MOB alarm *the wearer must register the vessel MMSI number with the device*. This is usually done via a smart phone app.

The location of MOB and Safety alerts are shown on the chart surrounded by a flashing ragged 'circle' and an alarm is sounded.




Dashboard

OpenPlotter provides a web-based Dashboard for displaying information stored within the Signalk database. This uses software called KIP. This is accessed using a web browser.

The dashboard has a number of pages:

- Sailing data overview - windrose, wind speed, speed, heading, COG, SOG etc.
- Location data - location, local time, sunrise and sunset times at this location
- Boat data - engine hours, battery status etc.

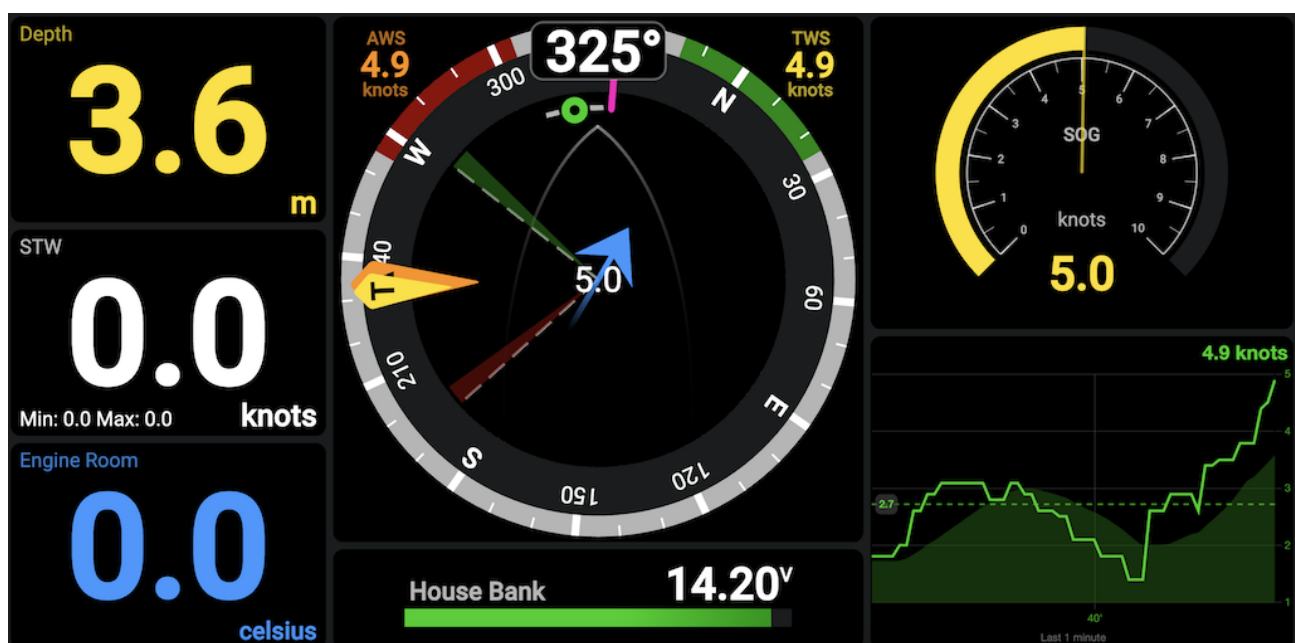

Custom Software

Our custom software uses a number of tools that are built in to the Raspberry Pi's operating system. The majority use a service called `cron` which runs a specific programme at a specific time.

Engine Hours

The engine hours meter works by sampling the voltage output from the alternator. If a voltage is present, the alternator and engine are running. The total hours value is stored in a text file. Every 3 mins the software checks for the presence of voltage and if present, increments the time stored in the file and sends to new value to the SignalK database.

Offsite Notifier

The offsite notifier uses a service called (`ntfy.sh`) - sending short notifications from the Raspberry Pi which can be read by the Boatswain's team and committee. To ensure that Skippers and Mates are aware that a notification is running, a short jingle is played. For information on the NTFY channel that you need to subscribe to, please contact the commodore.

Location

The location notification checks if the boat is approaching a fixed location and sends a `ntfy.sh` notification. This is mainly used on the approach to Elephant Boatyard to know when the boatswain's team can visit the yard to do work.

Sunset

The sunset notification lets us know that the navigation system is running at sunset, so we know that a night sail is taking place.

Future Projects

Better Data Dashboard Access

At present the dashboard is only available on the Raspberry Pi at the chart table via a web browser which competes for screen real-estate with the chartplotter. The boatswain's team has ideas for two projects in the run up to the new season:

- Make the KIP dashboard viewable on the local Ariel of Hamble network so that the dashboard can be viewed on a tablet or phone in the cockpit.
- Make a small, basic repeater that can be installed near the Raspberry Pi monitor showing only the most important data.

Shutdown Information

We are planning to use the offsite notifier to send a set of data when the navigation system is shutdown. This would be used for information important to planning maintenance and spotting early indications of issues. In the initial rollout we're hoping to send engine hours, battery status and cabin humidity with a hope to add further information such as fridge minimum temperature, engine maximum temperature, bilge water level etc.

Better Engine Information

There is an open source project based on OpenPlotter to interface to a Volvo Penta engine and send data such as RPM, temperature, etc. to the navigation network.

Better Battery Information

There have been some reports of batteries misbehaving, so we're planning on adding battery monitors to both the Engine and House battery banks that will allow us to measure the battery voltage, provide this to the navigation network and graphically interpret the data so we can see if what correlation there is between voltage drop and equipment usage onboard.

To quote the Commodore's near namesake, William Thomson, Baron Kelvin: *"When you can measure what you are speaking about, and express it in numbers, you know something about it; but when you cannot measure it, when you cannot express it in numbers, your knowledge is of a meagre and unsatisfactory kind."*

Simplify system WiFi for crew

At present, both the EmTrak AIS and the boat's internet router have wireless access points - so there are 2 Ariel networks.

The optimal is to use only the boat router - this gives crew handheld device software such as Navionics access to data such as depth, wind speed and to safety alarms such as local MOB transmissions.


Starting the Navigation System

The navigation system needs to be turned on in a particular order.


1. As described in the overview, the boat's GNSS source is the EmTrak AIS unit. As this is connected to the VHF to share the antenna, it is powered by the VHF switch. Switch on the VHF first.
2. Wait for the Location and Time to appear on the VHF screen.
3. Power on the Navigation switch. The Raspberry Pi will boot and the OpenCPN chartplotter software will load. The satellite position indicator on OpenCPN should show 3-4 bars.
4. The navigation instruments need to be switched on near the navigation cupboard. Switching on one will send a signal to the other units and they will switch on too. Once a connection to the RayNet network occurs, information will start to be displayed. The units can now be moved outside.

Basic Use of OpenCPN Plotter

Interface Overview

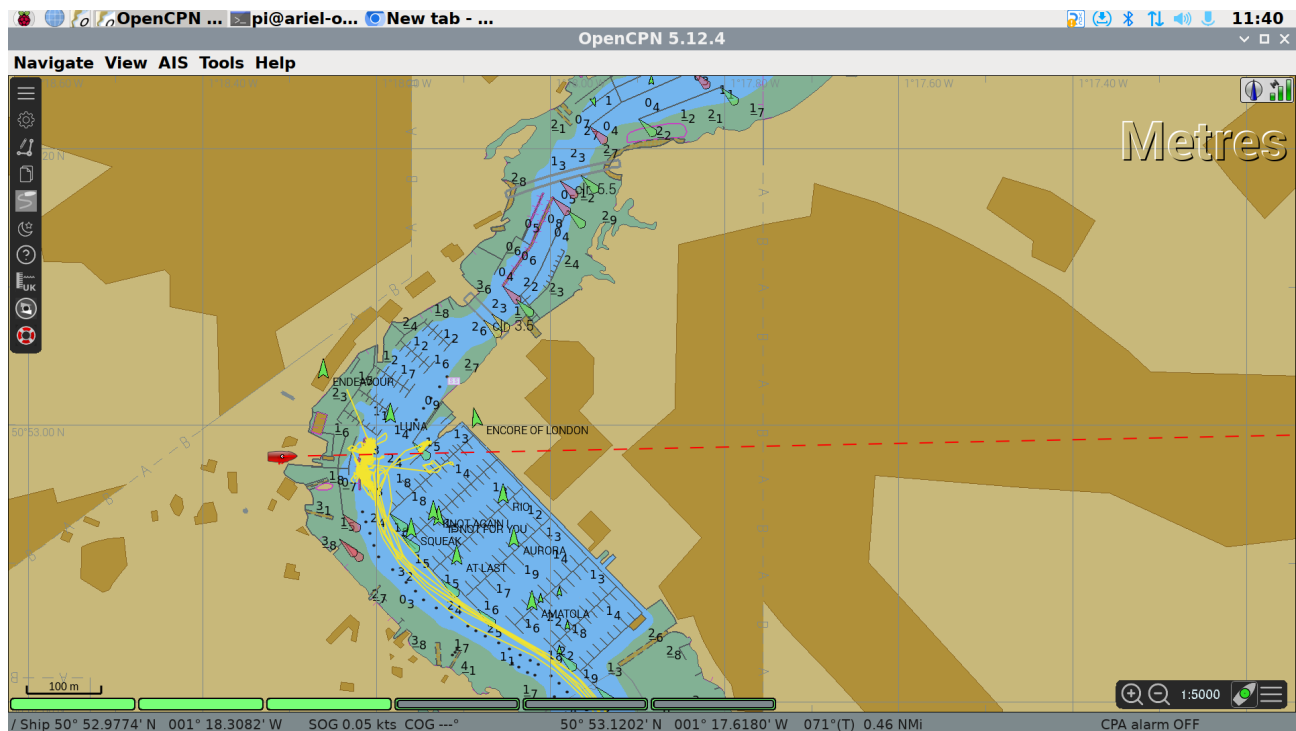

The large text “Metres” identifies the units used in the soundings depths shown on the chart.

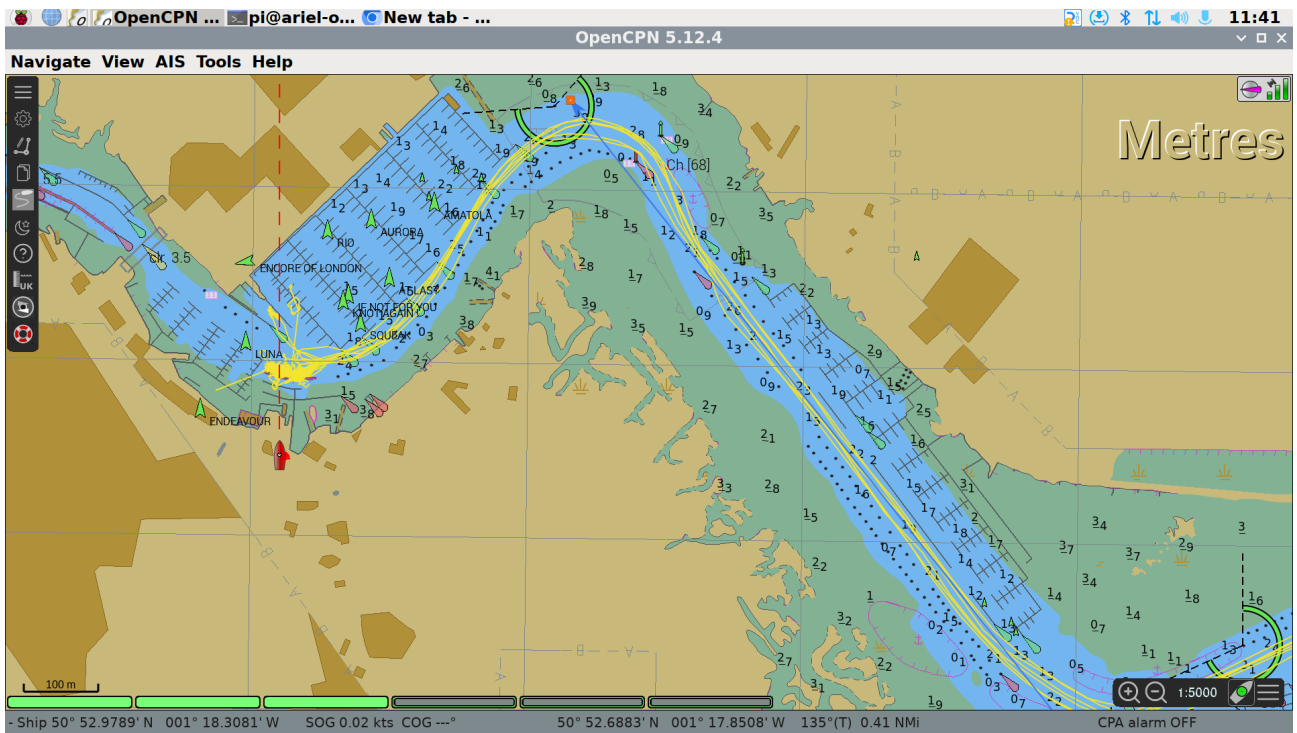

Zooming and Panning

Getting Information on Chart Item


Advanced Use of OpenCPN

Updating Charts


This should only be done with permission of the commodore or boatswain This action can be undertaken remotely by them, which is preferable.

To update charts in the Open CPN plotter, click on the settings icon (a cog) in the left hand side dropdown. This will open the following menu system.


1. Within the Options box, click the charts icon in the top row, then on the second row of options that appears, click “o-charts”.
2. This will open up the “o-charts” options. Click “Refresh Charts List” and wait for the plotter to check the Internet server for any updates.

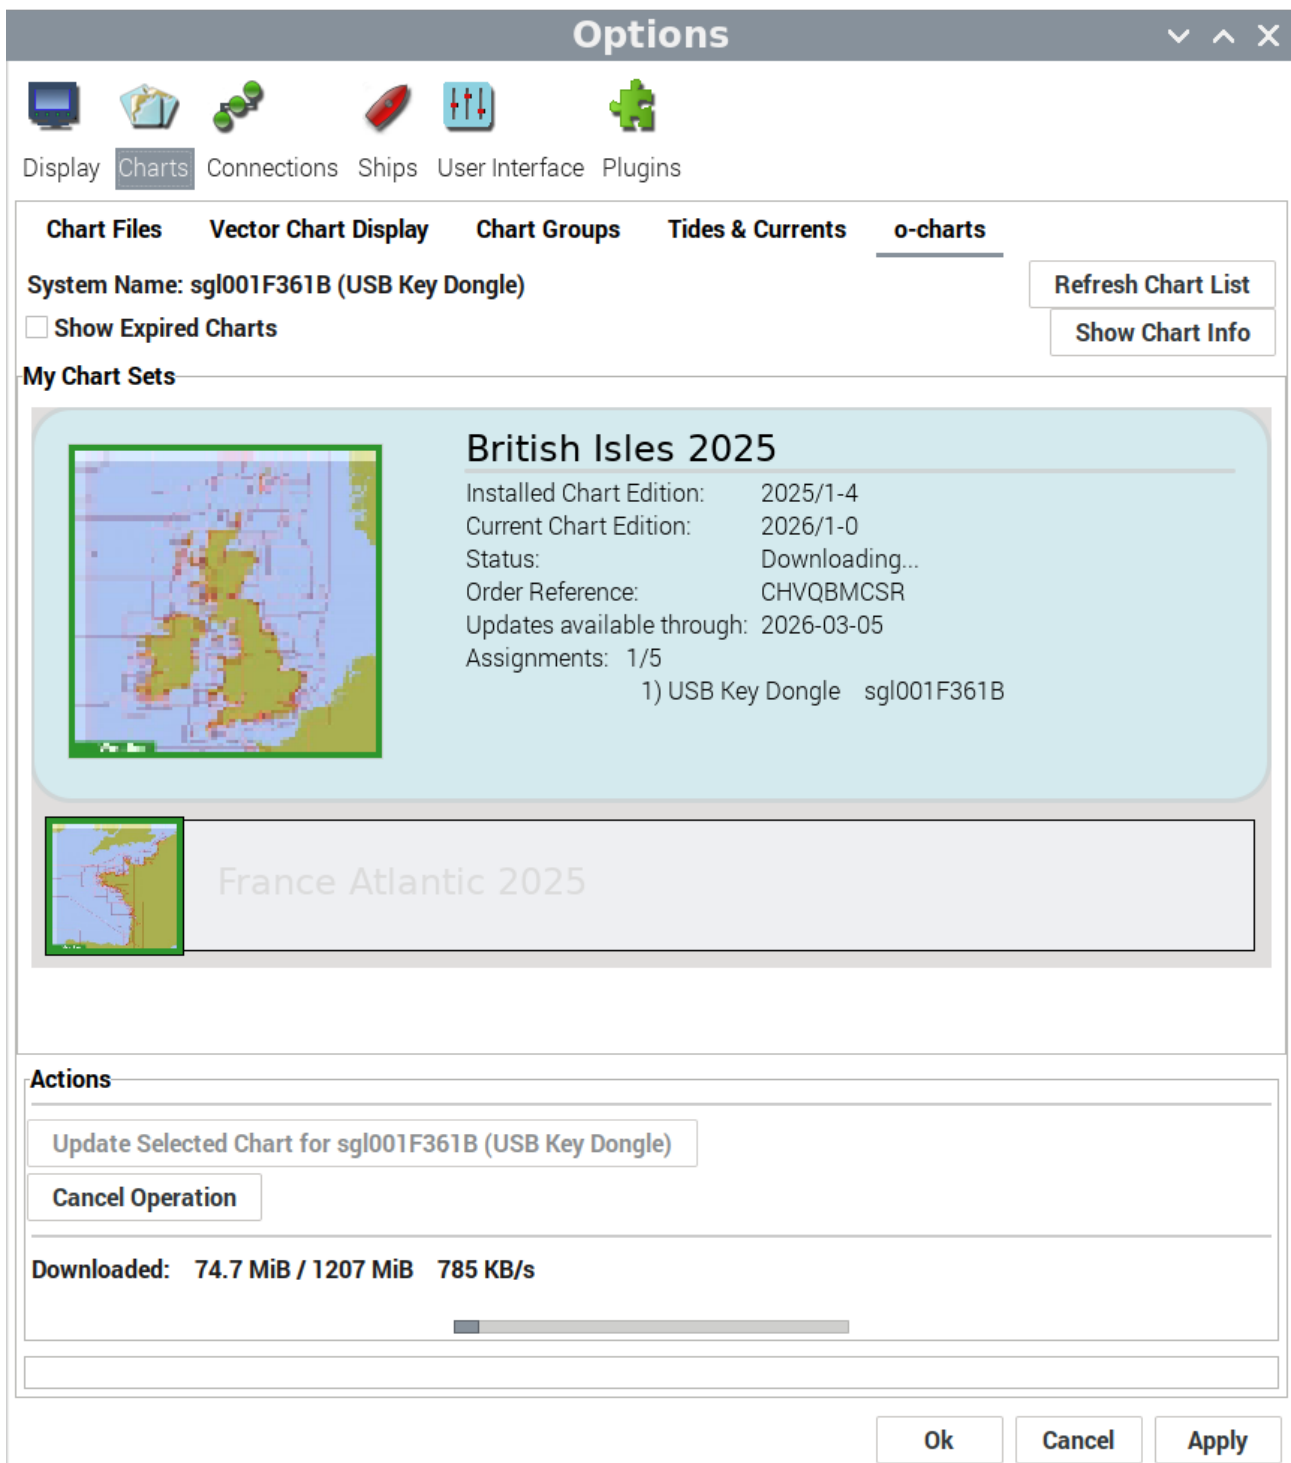

1. Click on the first chart set (in this image “British Isles 2025”). If there is a chart update available, under the available actions you will be able to click “Update Selected Chart for sgl001F361B (USB Key Dongle)”
2. The software will then update a chart pack update from the internet. This will take some time.

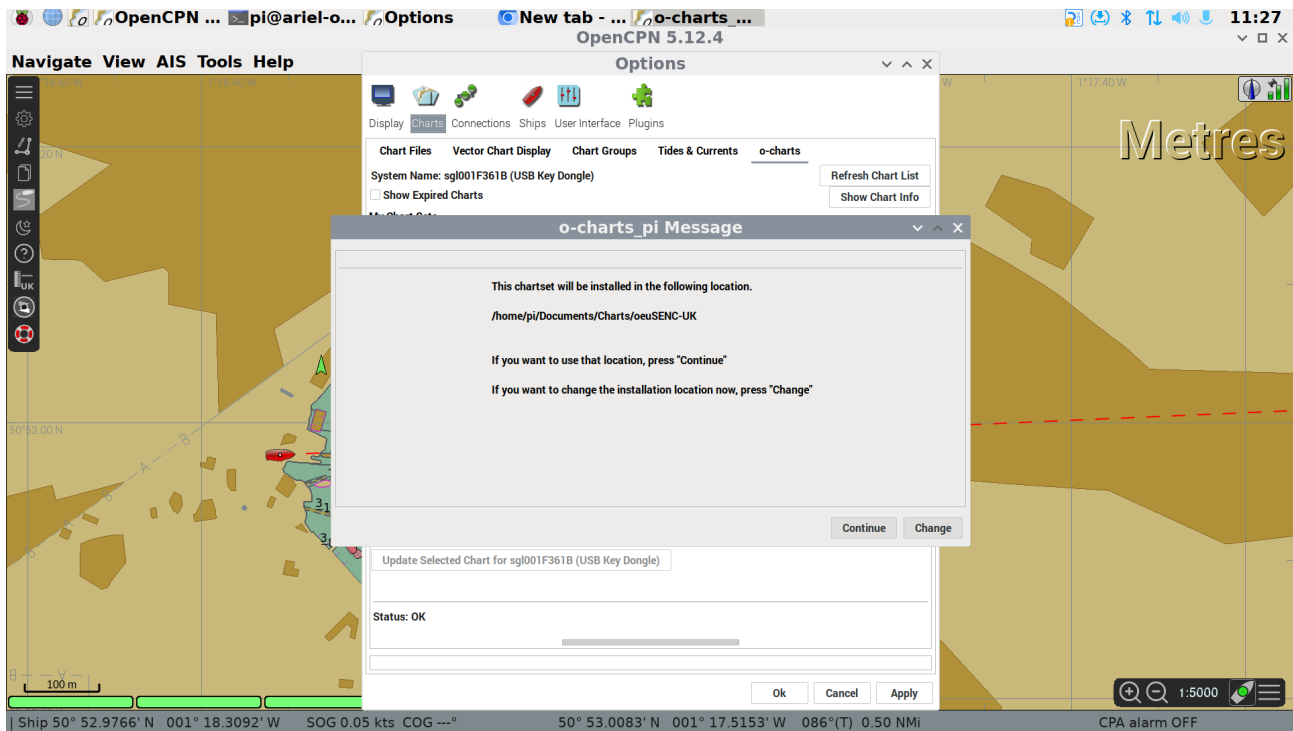

1. When the download finishes, you will be asked if you want to use the normal storage location for chart files. Click "Continue"
2. Repeat steps 3 - 5 for the other chart packs installed in the system (in the image we also have "France Atlantic 2025")

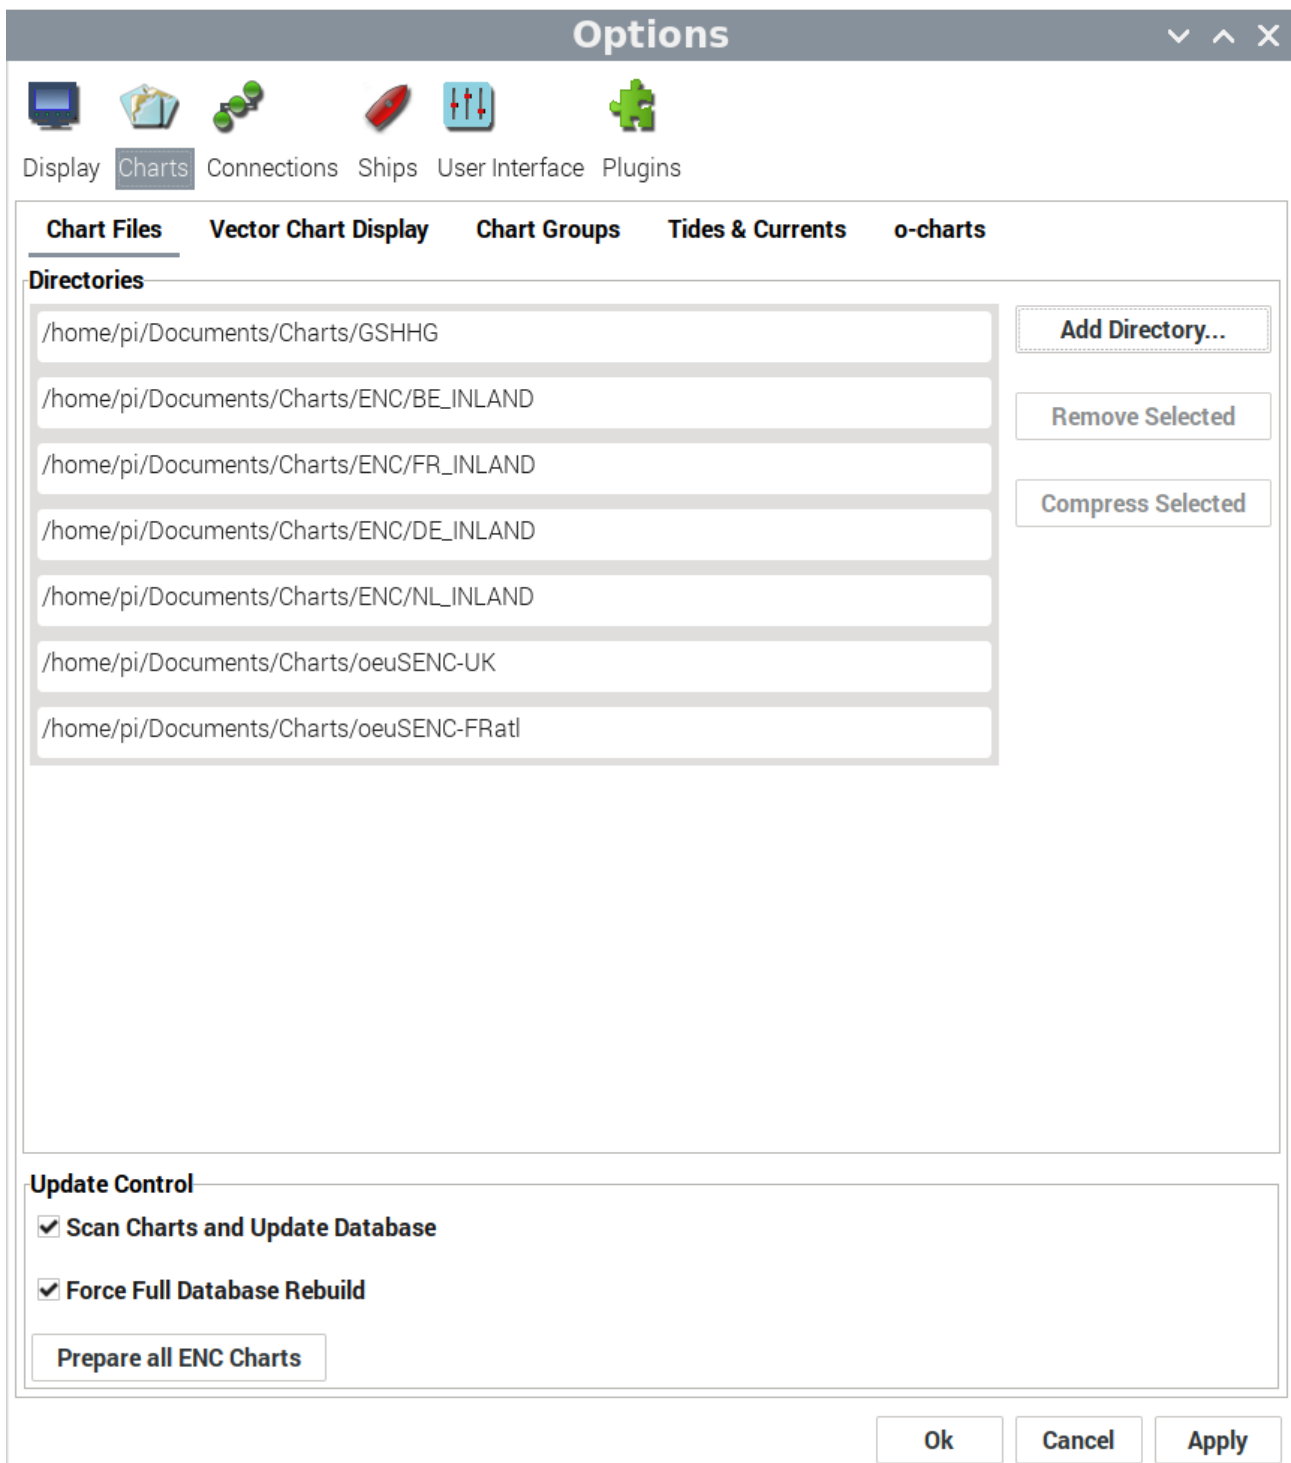

1. Once all chart packs have had their downloads stored on the plotter, click on the “Chart Files” option on the second row of options, then click “Prepare all ENC Charts”
2. Finally, Click “Apply” at the bottom of the Options dialogue box, wait for the charts to be applied and then click “Ok”.

Data Dashboard

Other OpenPlotter Software

XyGrib

VLC

Screenshot

Shutting Down the Navigation System

1. The TackTick Instruments are shut off by switching off one unit, the others receive a command to shut down.
2. Turn off the VHF Switch on the Switch Panel.
3. The preferred way of switching off the navigation is to request the Raspberry Pi mini computer to shut down. To do this, first click on the Raspberry logo in the top left of the screen.
4. Then click "Shut Down".

NOTE: If the navigation switch is turned off before a shut down is requested, the additional MacArthur HAT board attached to the Raspberry Pi will immediately request a shutdown of the system. This can take up to a minute. Please wait at least 2 mins before switching off the Battery Isolator.

NOTE: DO NOT just switch off the Battery Isolator - this could corrupt the data on the Raspberry Pi mini computer.

Troubleshooting

Reporting a Fault

Please send fault reports with the system to the Commodore and the Boatswain.

In the fault report please include:

- A description of the error including, if possible, what data values are faulty.
 - For example, Depth is showing “—” on the TackTick display, but is present on the plotter display. Reports such as speed is wrong, without
- a description of what is happening are difficult to remotely diagnose.
 - Screenshots, photos, videos etc. are always helpful!
- The date and time that the error occurred.

The Commodore and Boatswain have remote access to the system, so they may ask you to leave it switched on when you're doing something else.

test

Update List

version	description	date
0.4	<i>Booting and Shutting Down</i> Added data on how to safely boot and shutdown the system	22/01/26
0.3	<i>Technical Overview</i> Added an overview of the navigation hardware, sensors and software used on Ariel of Hamble	22/01/26
0.2	<i>Automated PDF creation</i> Set up creation of PDF using Sphinx SimplePDF	21/01/26
0.1	<i>Automated webpage creation</i> Set up publishing to GitHub pages using Sphinx to convert from Markdown to HTML	21/01/26

