



OWNER'S MANUAL

TABLE OF CONTENTS

Keyboard	4
Memory.....	10
Stack Mechanics	11
Comparing and Addressing Real Numbers	12
Comparing and Addressing Complex Numbers.....	13
Addressing Labels	14
Addressing Catalog Items.....	15
Display.....	16
Fonts.....	22
Index of Operations	23
Detailed Catalog Contents.....	49
Constants	52
Unit Conversions	55
Messages	58
Appendix A: Internal Support Commands.....	60
Appendix B: Candidates for Further Functions	62

WELCOME

Dear user, you hold in your hands the result of careful customizing. Mechanics and hardware of your WP 34S are of the new *HP-30b Business Professional* as is: so you get its unexcelled processor speed as well as the famous rotate-and-click keys with the tactile feedback known and appreciated in vintage Hewlett-Packard calculators for decades. On the other hand, the firmware and user interface of the WP 34S are newly designed and written from scratch to give you a **fast and compact scientific calculator like you have never had before**.

The function set of the WP 34S is based on the one of the renowned *HP-42S RPN Scientific*, the most powerful programmable RPN calculator built so far¹. We expanded this set, completely incorporating the functionality of the famous programmer's calculator *HP-16C*, fraction mode of the *HP-32SII*, probability distributions as featured by the *HP-21S*, and **many more useful functions for mathematics, statistics, physics, engineering, programming etc.** like

- + Euler's Beta function, Fibonacci number calculation, Lambert's W (all of these in the real and complex domains), incomplete regularized Beta and Gamma, testing for primality,
- + the error function as well as many statistical distributions and their inverses like Poisson, Binomial, Geometric as well as Exponential, Weibull for reliability analysis, and Gaussian with arbitrary mean and standard deviation,
- + programmable sums and products,
- + extended date and time calculations based on a real time clock,
- + integer computing in arbitrary bases from binary to hexadecimal,
- + financial operations like mean rate of return and margin calculations,
- + over 70 conversions, mainly between universal SI and old Imperial units,
- + nearly 50 fundamental physical constants as precise as known today by national standards institutes like NIST or PTB,
- + complete Greek and extended Latin letter fonts covering many languages (upper and lower case in two font sizes each).

The WP 34S is the first RPN calculator overcoming the limits of a 4-level stack – forget worries about stack overflow in calculations. It features a choice of two stack sizes expanded by a complex LASTx register: traditional 4 stack levels for HP compatibility, 8 levels for convenient calculations in complex domain, for more advanced real formulas, or for whatever application you have in your mind. You get a full command set for navigation in either size.

Furthermore, the WP 34S features over 100 general purpose registers, 100 user flags, 476 program steps, 3 programmable hotkeys for your favorite programs, and a 31 byte alpha register for message generation.

¹ Though the *HP-42S* was sold in 1988 already, this statement holds still. – Due to display restrictions, matrix math cannot be supported by the WP 34S. Sorry for this.

If you know how to deal with a good old HP RPN calculator, you can start with your WP 34S right away. To show you its features completely, however, we wrote this little manual. It starts with a survey of the active keyboard in various modes, so you know where to find what you are looking for. It continues with tables about addressing, browsing the catalogs, and a paragraph about the display and indicators used to tell you what's going on. Then the major part of this booklet is taken by the index of operations, the catalog contents, constants and conversions featured. It closes with a list of messages the WP 34S will display if special input conditions prevent it from executing your command as expected.

Your WP 34S is the result of an intercontinental collaboration of two individuals, an Australian and a German. We did this in our free time, so you may call it our hobby to some extent. The project was discussed in the online Museum of HP Calculators (www.hpmuseum.org) from its beginning, so we want to express our gratitude to all contributors there who taught us a lot and supported us in several stages of our project. Special thanks go to Marcus von Cube supporting us in bringing to life v1.14 in an emulator and the current version on your screen so you can use it. We baptized it 34S in honor of one of the most powerful LED pocket calculators, the *HP-34C*, and since it is our humble approach – with the hardware given – to a future 43S we can only dream of becoming the successor of the *HP-42S*. Maybe it will help convince those having access to more resources than us that it is worthwhile covering the market of serious scientific instruments.

We have checked everything we could think of carefully to our best knowledge, so our hope may be justified the WP 34S is bug-free. We cannot guarantee this, however, nor can we bear any liability for errors in calculations nor their possible consequences. Nevertheless, we promise we will improve the WP 34S whenever it turns out being necessary – so if you ever discover any strange result, please report it to us, and if it is revealed to be an internal error we will provide you with an update as soon as we have one.

Enjoy!

Paul Dale and Walter Bonin

PRINT CONVENTIONS

Throughout this manual, commands are generally called by their names, usually written in CAPITALS.

This **CPX** font is taken for explicit references to keys.

Register addresses are printed using Times New Roman. Lower case italic letters of this font are reserved for register contents (e.g. *y* or *r45* or *alpha* for contents of stack level *Y* or general purpose register **R45** or the alpha register, respectively). Lower case bold italic Arial letters like ***n*** are used for variables.

All this holds unless stated otherwise explicitly.

KEYBOARD



Generally, white labels execute the *default primary function* of the respective key. To access a golden, blue, or green label, use *prefix* **f**, **g**, or **h**, respectively. Any label underlined opens a *catalog*. For example, \rightarrow preceded by

- **f** executes **R◀** converting 2D polar coordinates r in X and θ in Y into Cartesian ones, allowing also for switching representations of complex numbers,
- **g** does the reverse, i.e. converts x and y into r and θ via **▶P**,
- **h** opens the catalog of conversions via **CONV**.
- The dark red letter **E** will become relevant in *alpha mode* as well as in integer modes of bases 15 and 16. Find out more about these and other modes below.

Further remarks:

- The *hotkeys* **B**, **C**, and **D** immediately call the user programs carrying these labels if defined, else they act as \sqrt{x} , y^x , or $\sqrt[x]{x}$, respectively.
- The key **→** trailed by **H-MS**, **H-d**, **DEG**, **RAD**, **GRAD**, **2**, **8**, **10**, or **16**, converts x .
- If **.** is used twice in numeric input, the WP 34S enters fraction mode.
- Prefix **CPX** is employed for calling functions in complex domain. Their name will be headed by the complex symbol, e.g. **CPX f COS** will be displayed and listed as ^cCOS . All complex functions in WP 34S operate on Cartesian coordinates exclusively. Generally, if an arbitrary real function f operates on ...
 - x only, then its complex sibling $^c f$ will operate on $x_c = x + i y$.
 - one register, e.g. **R12**, then $^c f$ will operate on **R12** and **R13**.
 - x and y , then $^c f$ will operate on x , y , z and t .
- Most one-number real functions replace x by the result $f(x)$ stored in X again. By analogy, one-argument complex functions replace x by the real part and y by the imaginary part of the complex result $^c f(x_c)$. Higher stack levels remain unchanged. Such functions are $^c 1/x$, $^c \text{ABS}$, $^c \text{FIB}$, $^c \text{FP}$, $^c \text{IP}$, $^c \text{ROUND}$, $^c \text{SIGN}$, $^c W$, $^c W^{-1}$, $^c x!$, $^c x^2$, $^c \sqrt{}$, $^c +/ -$, $^c \Gamma(x)$, logarithmic and exponential with bases 10, 2 and e , as well as hyperbolic, trigonometric, and their inverses.
Some real functions (e.g. **DECOMP**) operate on one number but return two. Other operations (like **RCL** or **SUM**) do not consume any stack input at all but just return one or two numbers. Then these extra number(s) will be pushed on the stack, taking one level per real or two per complex number.
- Two-number real functions replace x by the result $f(x, y)$. Level Y is then filled with the content of the next higher level, i.e. z . This goes on for higher levels, only the number on top of the stack is repeated as shown [below](#).
Analogously, two-argument complex functions replace x by the real part and y by the imaginary part of the complex result $^c f(x_c, y_c)$. The next stack levels are filled with the complex contents of higher levels, and the complex number in the top two stack levels is repeated as shown [below](#). Such complex functions are $^c \text{LOG}_x$, $^c y^x$, $^c \beta(x, y)$, $^c //$, and the basic arithmetic operations in complex domain.
- There are two three-number real functions included – **lβ** and **%MRR** – replacing x by the result $f(x, y, z)$. Then Y is filled with t and so on, and the content of the top level is repeated twice. No such complex functions are featured.

Please see the [index of operations](#) for a complete list of all the operations featured.


Virtual active keyboard in hexadecimal mode:



Primary functions of the top six keys will be numeric input, so their default primary functions are accessed using **f**. The key **→** is exclusively for addressing and temporary display in other bases (see [addressing tables](#) and [index of operations](#) below).

For smaller integer bases, the active keyboard will look similar, but those top keys not needed for numeric input will keep their default primary functions, except **Σ+** and **CPX**. Attempts to enter an illegal digit will be blocked or throw an [error](#).

Virtual active keyboard in **alpha** mode:

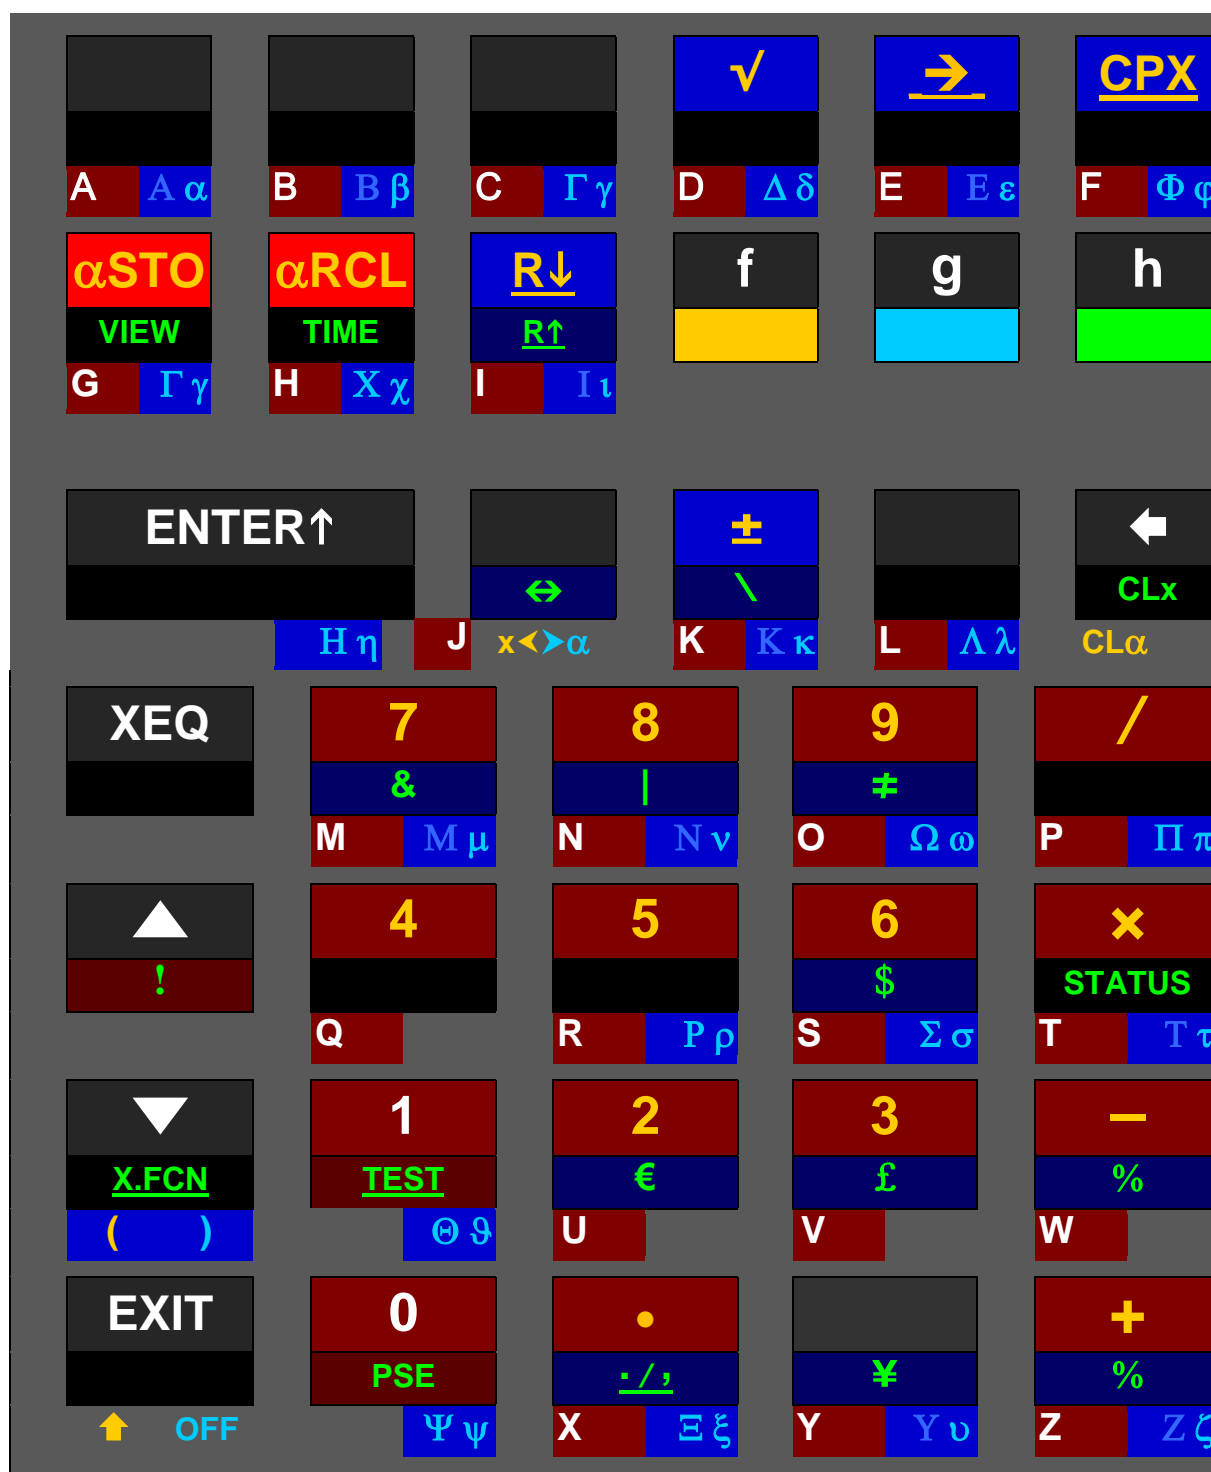

In this mode, the alpha register is displayed in the dot matrix, and the numeric line is accessible by commands only. All labels printed on dark red or blue background in this picture append characters to *alpha* immediately or via alpha catalogs; those on blue deviate from the labels on the WP 34S keyboard at these locations.

Alpha mode starts in upper case, and toggles upper and lower case. appends a space. The primary function of most keys is appending the letter printed bottom left of this key – dark red on the key plate. Prefix is used for accessing the

default primary functions there², and **g** leads to homonymic Greek letters where applicable³. Prefix **h** gives access to some logic symbols via the Boolean operations. Four currency symbols are located next to the %-sign as follows: \$ at the letter S, € at U for Euro, £ at π , and ¥ at Y for Yen or Yuan. The catalogs **f** **→**, **f** **CPX**, **f** **R↓**, **h** **R↑**, **h** **TEST**, and **h** **./.** feature even more characters (see [below](#)).

When *alpha* exceeds 31 characters, the leftmost character(s) are discarded.

See the [index of operations](#) for α STO, α RCL, α TIME, and more alpha commands.

A subset of these characters is sufficient for **browsing an open catalog**:


Please note **f** **→** will just call the character **→** while browsing a catalog.

▲ and ▼ step through the catalog, **XEQ** or **ENTER↑** select the item shown, and **EXIT** will leave the catalog without picking anything. See [below](#) for some examples.


² The digits 0 and 1 may also be called using **f** **0** or **f** **1**, respectively.

³ “Homonymic” according to ancient Greek pronunciation. And we assigned **Gamma** also to **C** due to the alphabet, and **Chi** to **H** since this letter comes next in pronunciation. Three Greek letters require special handling: **Psi** is accessed via **g** **0** (below **PSE**), **Theta** via **g** **1** (below **TEST** and following **T**), and **Eta** via **g** **ENTER↑**. **Omicron** is not featured since looking exactly like **O** in either case. – Where we printed Greek capitals with lower contrast on page 7, they look like the respective Latin letters in our fonts. Greek professors, we count on your understanding.


A **temporary alpha mode** is entered during input processing in comparisons and addressing, e.g. during storing and recalling. See the respective virtual active keyboard here:

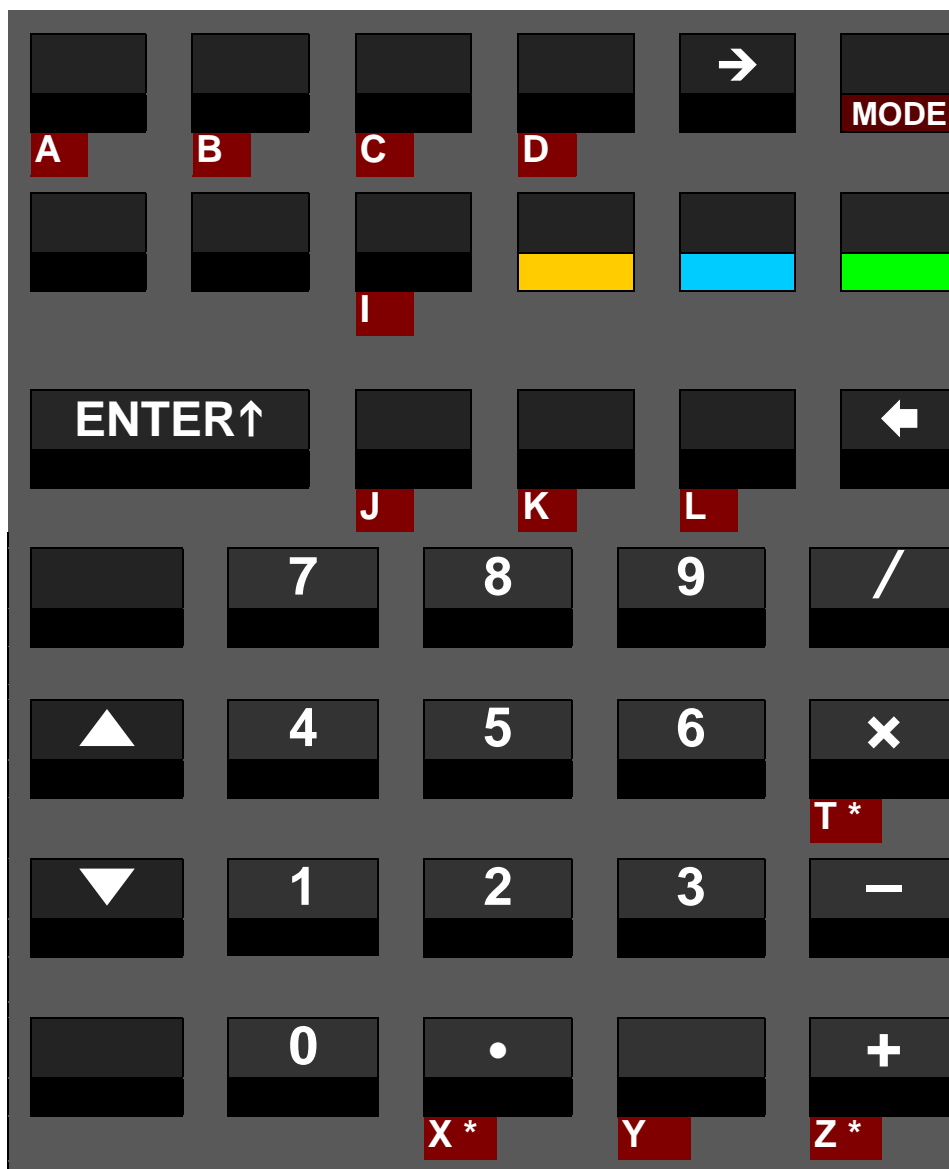

This mode is left automatically when sufficient characters are put in for the respective command. Find more about it [below](#).

In this mode,  is employed for FIX only (see [below](#)).

MEMORY

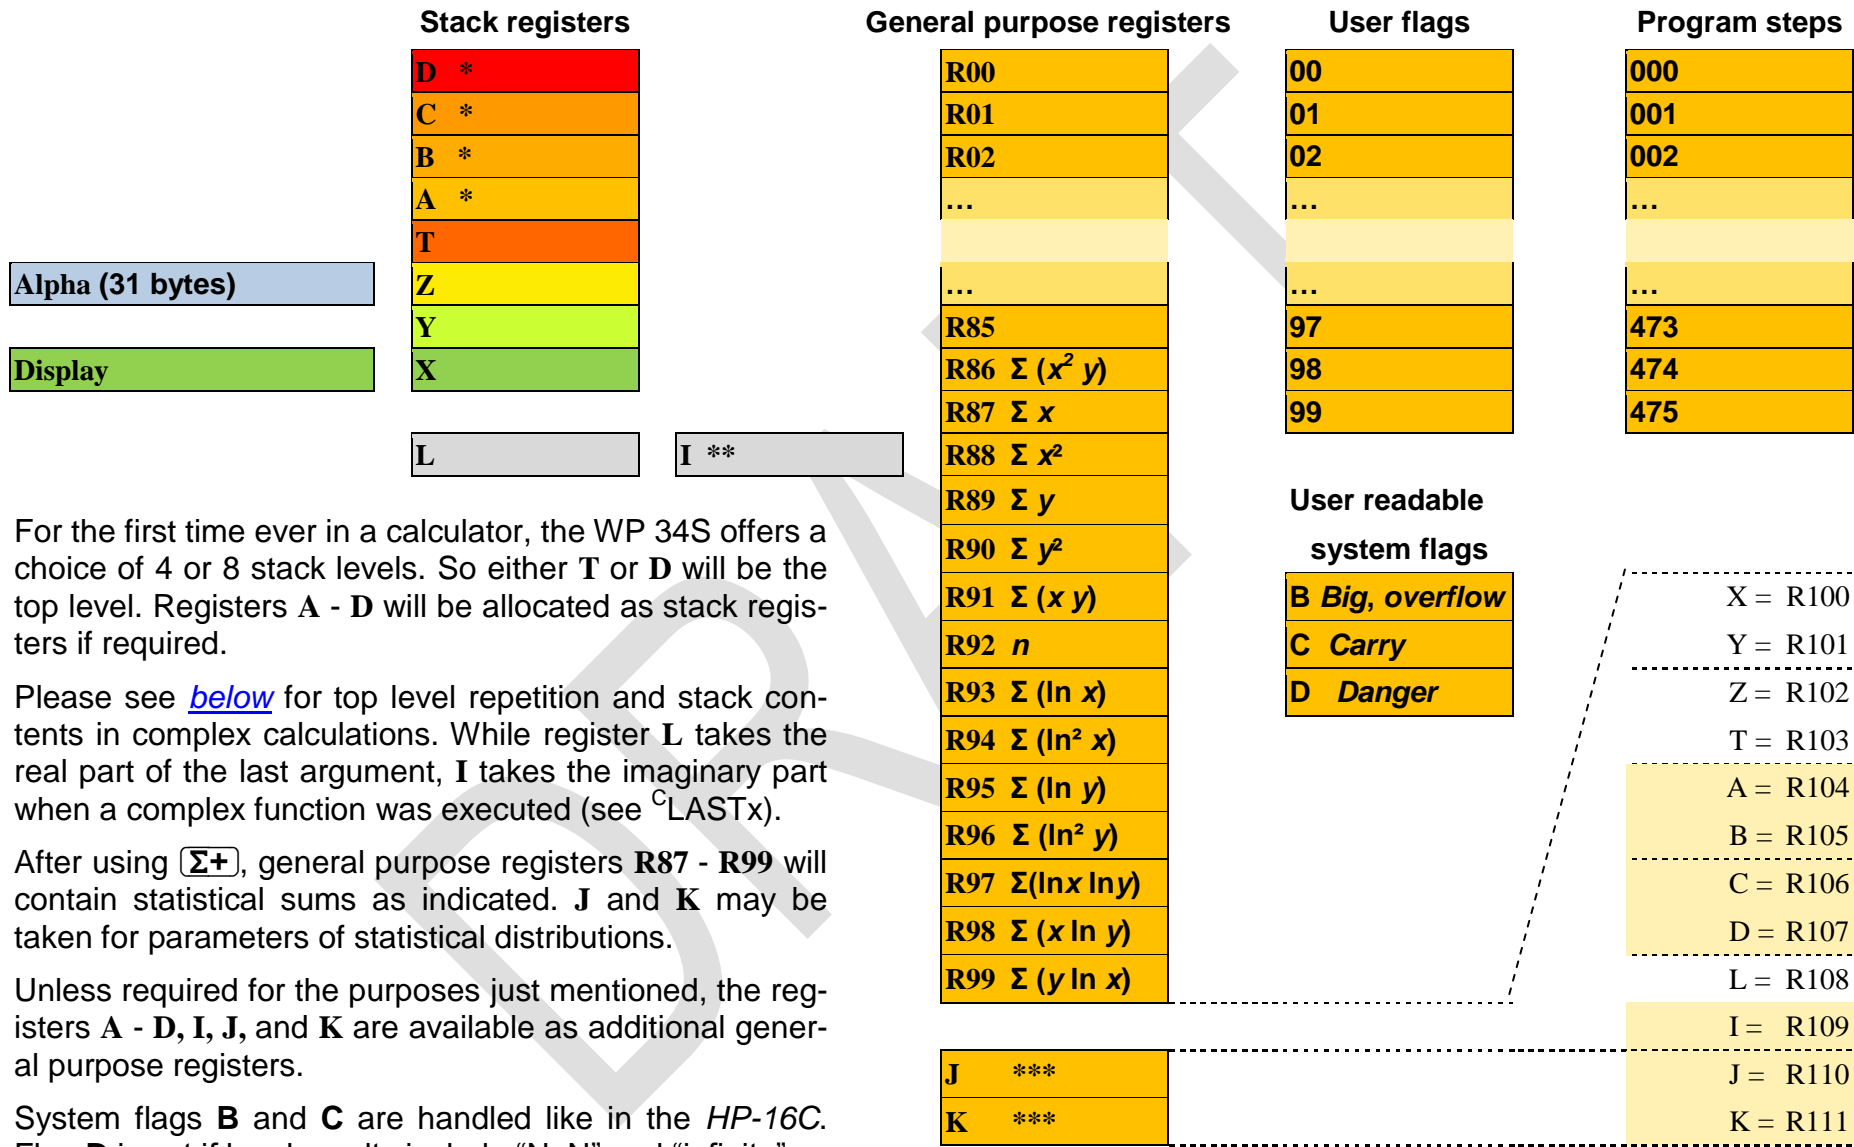

STACK MECHANICS

What happens with the contents of particular stack levels depends on the function executed, its domain (integer, real or complex) and the stack size chosen.

Real functions in a 4-level stack work as known for decades. In a larger stack, everything works alike on the WP 34S – just with more levels for intermediate results. Calculating formulas from inside out stays a wise strategy in either stack. With more levels, however, stack overflow will hardly ever happen, even with the most advanced formulas you compute in your life as a scientist or engineer.

Calculating with complex numbers uses two registers or levels for each such number as explained above and shown here:

	Level	Assumed stack contents at the begin- ning:	Stack contents after executing the complex stack register operations					... <u>complex</u> functions of		... <u>integer</u> or <u>rea</u> functions of 2 numbers like /				
			^c ENTER, ^c FILL	^c DROP	^c x↔y, ^c R↓, ^c R↑	^c LASTx	... 1 number like ^c x ²	... 2 numbers like ^c /		Before	After			
With SSIZE4:	T	Im(y _c) = Im(t _c)	Im(x _c)	y _c = t _c	x _c	x _c	y _c = t _c	y _c = t _c		t	t			
	Z	Re(y _c) = Re(t _c)	Re(x _c)							z	t			
	Y	Im(x _c)	Im(x _c)	y _c	y _c	lastx _c	Im((x _c) ²)	Im(y _c / x _c)		y	z			
	X	Re(x _c)	Re(x _c)				Re((x _c) ²)	Re(y _c / x _c)	x	y / x				
With SSIZE8:	D	Im(t _c)	z _c	x _c	t _c	t _c	x _c	z _c	z _c	t _c	t _c		d	d
	C	Re(t _c)												
	B	Im(z _c)	y _c	x _c	t _c	z _c	t _c	y _c	y _c	z _c	t _c		b	c
	A	Re(z _c)												
	T	Im(y _c)	x _c	x _c	z _c	x _c	z _c	x _c	y _c	z _c		t	a	
	Z	Re(y _c)												
	Y	Im(x _c)	x _c	x _c	y _c	y _c	y _c	t _c	lastx _c	(x _c) ²	y _c / x _c		y	z
	X	Re(x _c)												

So, an 8-level stack gives you the same flexibility in complex domain you are used to with a 4-level stack in real domain.

COMPARING AND ADDRESSING REAL NUMBERS

1	User input	<div>$x = ?$, $x \neq ?$, $x < ?$, $x \leq ?$, $x \approx ?$, $x \geq ?$, or $x > ?$</div>				<div>RCL, STO, $RCLS$, $STOS$, αRCL, αSTO, $VIEW$, $x \geq$, DSE, ISG, DSZ, ISZ, FIX, SCI, ENG, $DISP$, $BASE$, CB and many more bit commands, or CF and the other flag commands</div>			
	Dot matrix display	<div>$OP _$ (with temporary alpha mode set) e.g. $x > _$</div>				<div>$OP _$ (with temporary alpha mode set) e.g. $RCL _ ^4$</div>			
2	User input	<div>0 or 1</div>	<div>Stack level or named reg. X, Y, ...</div>	<div>$ENTER \uparrow ^5$ leaves temp. alpha mode.</div>	<div>\rightarrow opens indirect addressing.</div>	<div>Stack level or named register X, Y, Z, ... , $K ^6$</div>	<div>Number of register or flag or bit(s) or decimals ⁷</div>	<div>\rightarrow opens indirect addressing.</div>	
	Dot matrix display	<div>$OP n$ e.g. $x \leq 0 ?$</div>	<div>$OP x$ e.g. $x \geq y ?$</div>	<div>$OP r _$</div>	<div>$OP \rightarrow _$</div>	<div>$OP x$ e.g. $SCI Z$</div>	<div>$OP nn$ e.g. $SF 15$</div>	<div>$OP \rightarrow _$</div>	
3	User input	<div>Compares x with the number 0.</div>	<div>Compares x with the num- ber on stack level Y.</div>	<div>Register no. $00 \dots 99$</div>	<div>Look right for more about indirect ad- dressing.</div>	<div>Sets scientific display with the number of decimals specified in stack level Z.</div>	<div>Stack level etc. X, Y, Z, ... , K</div>	<div>Register number $00 \dots 99$</div>	
	Dot matrix display			<div>$OP r nn$ e.g. $x \neq r23?$</div>			<div>$OP \rightarrow x$ e.g. $VIEW \rightarrow L$</div>	<div>$OP \rightarrow nn$ e.g. $STO \rightarrow 45$</div>	
		<div>Compares x with the number stored in $R23$.</div>					<div>Shows the content of the register where L is pointing to.</div>	<div>Stores x into the loca- tion where $R45$ is pointing to.</div>	

⁴ For **RCL** and **STO**, any of **+**, **-**, **x**, **/**, **▲**, or **▼** may precede step 2, except in RCLM and STOM. **FIX** **.** calls ALL. See the index of operations.

⁵ You may skip this for register numbers >19.

⁶ Exceptions: **RCL** **T**, **RCLx** **T**, **RCL** **Z**, **RCL** **+** **Z** require an **ENTER** **↑** previous to **T** or **Z**, e.g. **RCL** **+** **ENTER** **↑** **Z** for the latter. This holds for **STO** as well.

⁷ Register and flag numbers may be 00 ... 99, number of decimals 0 ... 11, integer bases 2 ... 16, bit numbers 0 to 63, and integer word size up to 64 bits. For numbers <10, you may key in e.g. **5** **ENTER** **↑** instead of **0** **5**. There are three additional flags addressed via **B**, **C**, and **D**. – Take into account some registers may be allocated to special applications.

COMPARING AND ADDRESSING COMPLEX NUMBERS

1	User input	<div>CPX</div> <div>x=?</div> or <div>x≠?</div>				<div>CPX</div> <div>RCL</div> , <div>STO</div> , or <div>x></div>			
	Dot matrix display	OP _ (with temporary alpha mode set) e.g. <div>▯x= ▯</div>				OP _ (with temporary alpha mode set) e.g. <div>▯RCL ▯⁸</div>			
2	User input	<div>0</div> or <div>1</div>	Stack level or named register <div>X</div> , <div>Z</div> , <div>A</div> , <div>C</div> , <div>L</div> , or <div>J</div>	<div>ENTER↑</div> ⁹ leaves temp. alpha mode	<div>→</div> opens indirect addressing.	Stack level or named register <div>Z</div> ¹⁰ , <div>A</div> , <div>C</div> , <div>L</div> , or <div>J</div>	Register number <div>00</div> .. <div>98</div> ¹¹	<div>→</div> opens indirect addressing.	
	Dot matrix display	OP n e.g. <div>▯x= 0 ?</div>	OP x e.g. <div>▯x≠ z ?</div>	OP r_ 	OP →_ 	OP x e.g. <div>▯RCL L</div>	OP nn e.g. <div>▯STO 18</div>	OP →_ 	
3	User input	Compares x+iy with the real number 0 .	Compares x+iy with z+it .	Register number <div>00</div> ... <div>98</div>	Look right for more about indi- rect addressing.	This is ^c LASTx.	Stack level or named register <div>X</div> , <div>Y</div> , ... , <div>K</div>	Register number <div>00</div> ... <div>99</div>	
	Dot matrix display			OP r nn e.g. <div>▯x≠ r26?</div>			OP → x e.g. <div>▯x<> +Z</div>	OP → nn e.g. <div>▯STO +45</div>	
		Compares x+iy with r26+ir27 .				Swaps x with the contents of the register where Z is pointing to, and y with the contents of the next one.	Stores x+iy into 2 consecutive reg- isters, starting with the one where R45 is pointing to.		

⁸ For $\boxed{\text{RCL}}$ and $\boxed{\text{STO}}$, any of $\boxed{+}$, $\boxed{-}$, $\boxed{\times}$, or $\boxed{/}$ may precede step 2. See the index of operations.

⁹ You may skip this keystroke for register numbers >19.

¹⁰ Exceptions: ^cRCL Z, ^cRCL + Z, ^cSTO Z, and ^cSTO + Z require an $\boxed{\text{ENTER}\uparrow}$ previous to \boxed{Z} , e.g. $\boxed{\text{CPX}}$ $\boxed{\text{STO}}$ $\boxed{+}$ $\boxed{\text{ENTER}\uparrow}$ \boxed{Z} for the latter.

¹¹ You may key in e.g. $\boxed{8}$ $\boxed{\text{ENTER}\uparrow}$ instead of $\boxed{0}$ $\boxed{8}$. Take care of pairs, since a complex operation will always affect two registers: the one specified and the one following this. We strongly recommend storing complex numbers with their real parts at even register numbers. – Take into account some registers may be allocated to special applications.

ADDRESSING LABELS

1	User input	B , C , or D	XEQ , GTO , LBL , LBL? , SLV , ↵ , π or Σ			
	Dot matrix display	XEQ 'label' e.g. XEQ 'C'	OP _ e.g. GTO _			
2	User input	Calls the function labeled C .	B , C , or D	ENTER↑ sets alpha mode.	→ ¹² opens indirect addressing and sets temporary alpha mode.	2-digit numeric label 00 ... 99
	Dot matrix display		OP 'label' e.g. Σ 'B'	OP _	OP → _	OP nn e.g. LBL 07
3	User input	Sums up the function labeled B .	Alphanumeric label (≤ 3 characters ¹³)		Stack level or named register X , Y , Z , ... , K	Register number 00 ... 99 ¹⁴
	Dot matrix display		OP 'label' e.g. SLV'F1μ'		OP → x e.g. ↵ →T	OP → nn e.g. XEQ →44

Solves the function **F1μ** (with **F1μ** keyed in as explained in footer).

Integrates the function whose label is on stack level **T**.

Executes the routine whose label is in **R44**.

¹² Works with all these operations except **LBL** .

¹³ The 3rd character terminates entry and closes alpha mode – shorter labels need a closing **ENTER↑** . For the example given here you just key in **f 2 ENTER↑ CPX 1 f EXIT g 7** and you are done.

¹⁴ Some registers may be allocated to special applications. Please check the memory table above.


ADDRESSING CATALOG ITEMS

1	User input	CONST , CONV , MODE , PROB , P.FCN , STAT , TEST , or X.FCN	CPX , R↓ , or R↑ in alpha mode	→ , TEST , or ./. in alpha mode			
	Dot matrix display	Shows 1st item in selected catalog. (e.g. BC? in P.FCN) Alpha mode is set.					
2	User input	XEQ , ▼ , ▲ , EXIT , or 1 st character (e.g. F)	XEQ , ▼ , ▲ , EXIT , or character (e.g. O)				
	Dot matrix display	Shows 1st item starting with this character *) (e.g. FB)	Shows 1st item starting with this letter *) (e.g. Ó)				
3	User input	XEQ , ▼ , ▲ , EXIT , or 2 nd character (e.g. S)					
	Dot matrix display	Shows 1st item starting with this sequence *) (e.g. FS?)					
4	User input	XEQ , ▼ , ▲ , or EXIT (e.g. ▼)					
	Dot matrix display	Shows next item in this catalog (e.g. FS?C) (e.g. Ö) (e.g. ?)					
... Continue browsing this way until reaching the item desired							
		(e.g. FS?F).	(e.g. Ü).	(e.g. !).			
n	User input	XEQ Calculator leaves the catalog returning to the mode set before ... and executes or inserts the command chosen, or recalls the constant selected.					
	Dot matrix display	Result	... and appends the selected character to alpha . Contents of alpha register (e.g. Östl. Seite:)				

*) If a character or sequence specified is not found in this catalog then the first item following alphabetically will be shown. You may key in more characters – within 3 seconds. Thereafter or after **▼** or **▲**, the search string will be reset and you may start with a first character again.

DISPLAY

The display features three sections: numeric, dot matrix and fixed symbols. The numeric section features a minus sign and 12 digits for the mantissa, as well as a minus sign and 3 digits for the exponent. The dot matrix is 6 dots high and 43 dots wide, allowing for some 7 to 12 characters, depending on their widths. The fixed symbols (except the big “=”) are called *annunciators*, and are for indicating modes.

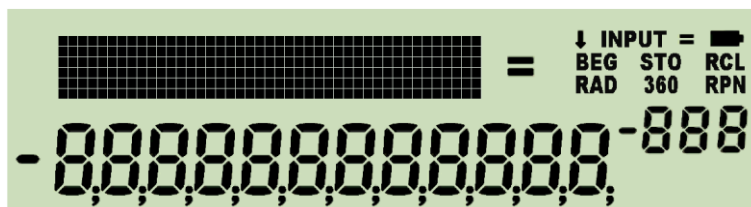

The dot matrix section above is used for

1. indicating some more modes than the annunciators allow,
2. passing additional information to the user.

The numeric section in the lower part of the LCD is used for displaying numbers in different formats, status, or messages.

If two or more requests concur for display space, the items will be shown according to their priorities as follows:

1. error messages as described in a [paragraph further below](#),
2. special information as explained below,
3. information about the modes the calculator is running in.

The *annunciators* or specific characters in the display signal the modes:

Signal	<i>INPUT</i>	<i>b</i>	<i>d</i>	<i>h</i>	<i>o</i>	
Mode name if different	α	2			8	DECM
Set by ...	α ON	BASE2	BASE10	BASE16	BASE8	BASE0
Cleared by ...	α OFF	any other BASE setting, FRACT, IMPFRC, PROFRC. H.MS, TIME, \rightarrow H.MS will set DECM				

Signal	<i>STO</i>	<i>360</i>	<i>RAD</i>	<i>G</i>	
Mode name if different	PRG				FRC
Set by ...	PRGON	DEG	RAD	GRAD	BASE1, FRACT IMPFRC, PROFRC 2 nd \square in input
Cleared by ...	PRGOFF	GRAD RAD	DEG GRAD	DEG RAD	BASE \neq 1 H.MS, TIME \rightarrow H.MS

BEG indicates the program pointer standing at step 000 of program memory. A running program is signaled by a flashing **RCL** annunciator. The small equal sign = is lit while you are browsing a catalog. **RPN** may be lit permanently. Time modes (12h / 24h) are seen in the time string directly. The numeric format of fraction mode is unambiguous as well. Further settings are signaled in the dot matrix section, like the different date modes being indicated there by **D.MY** or **M.DY**. Defaults Y.MD and DECM are not indicated. Please check the examples below.

Some mode and display settings may be stored and recalled collectively by STOM and RCLM. The command RCLM recalls a 18-bit word containing mode data packed as follows, starting with the least significant bit:

Bits	Meaning	Values and corresponding settings		
0, 1	Display format for real numbers	0 = ALL 2 = SCI	1 = FIX 3 = ENG	
2 ... 5	Number of decimals	0 ... 12		
6, 7	Angular mode	0 = DEG	1 = RAD	2 = GRAD
8, 9	Date display format	0 = Y.MD	1 = D.MY	2 = M.DY
10	Time display format	0 = 24h	1 = 12h	
11	Radix mark	0 = point	1 = comma	
12 ... 14	Curve fit model	0 = LinF 2 = PowerF	1 = ExpF 3 = LogF	4 = BestF
15, 16	Integer sign mode	0 = 2COMPL 2 = UNSIGN	1 = 1COMPL 3 = SIGNMT	
17	Stack depth	0 = 4 levels	1 = 8 levels	

So the start-up default with 4 stack levels, ALL, DEG, Y.MD, 24h, decimal point, LinF, and 2COMPL is zero. On the other hand, settings for e.g. 8 stack levels, SCI 2, RAD, D.MY, 12h, decimal comma, BestF, UNSIGN correspond to

$$1101001110101001010_2 = 445770_{10}.$$

STOM takes such a number and sets the calculator modes accordingly. Please see the [index of operations](#) for more information about changing modes.

Some commands and modes use the display in a special way. They are listed below in order of falling priority:

1. **VERS** generates a display as shown on the title page of this manual. Pressing any key will delete this message and return to previous state.

2. **STATUS** displays the status of 30 flags very concisely, allowing an immediate status overview after some training. If e.g. flags 2, 3, 5, 7, 11, 13, 14, 17, 19, and 23 are set, and labels B, C, and D are defined in program memory, STATUS will display this:



Within the numeric section, each row of horizontal bars in the mantissa shows the status of 10 flags. When a flag is set, the respective bar turns black. So here the top row of bars indicates flags 0 and 1 are clear, 2 and 3 set, and flag 4 clear. Then, the divider II separates the first group of five flags from the next. Top row bars on its right side indicate flags 5 and 7 are set. Next row of bars shows flags 11, 13, 14, 17, 19 are set, and in the lowest row only flag 23 is set. All other flags in the range from 10 to 29 are clear.

Scrolling down by will display flags 10 - 39, then 20 - 49 etc. until 80 - D. Scrolling up by reverts this. Alternatively, pressing a digit, e.g. 5, will show 30 flags starting with 10 times this digit, e.g. flags 50 - 79. The numeric exponent always indicates the status of the 3 hotkeys top left on the keyboard.

The status will be displayed until any key is pressed but , , or a digit < 9.

3. During **command input**, the dot matrix displays the command chosen until input is completed, i.e. until all required trailing parameters are entered. The prefixes , , and are shown until they are resolved. If you pressed any of , , or erroneously, recovery is as easy as follows:

- = NOP = = = =
- = =
 = =
 = =

In addressing, progress is recorded as explained in the [addressing tables above](#) in detail.

4. In **programming mode**, the numeric display indicates the program step (000 – 475) in the mantissa and the number of free steps in the exponent, while the dot matrix shows the command contained in the respective step, e.g.:




5. For **floating point decimal numbers**, the mantissa will be displayed adjusted to the right, the exponent to the left. Within the mantissa, either points or commas may be selected as radix marks¹⁵, and additional marks may be chosen to separate thousands. Assume the display set to FIX 4, then 12.345678901 millions may look like:


¹⁵ Starting here, decimal input is written using a point as radix mark throughout this manual, although significantly less visible, unless specified otherwise explicitly. By experience, the „comma people“ are more capable to read radix points and interpret them correctly than vice versa.



with thousands separators on, and without them like:

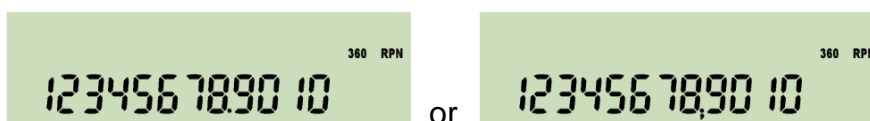

These separators may also be beneficial in integer or fraction modes described below. – With ENG 3 and after changing the sign, the same number will look like this:




If the last operation executed was a complex one, a capital C is displayed top left in the dot matrix pointing to the fact that you find the result of this function in X and Y.

Floating point decimal numbers within $10^{-383} < x < 10^{+385}$ may be entered easily. Using a decimal mantissa, even numbers down to 10^{-394} can be keyed in. The calculator works with numbers down to 10^{-398} correctly. Smaller nonzero values are shown as 0^{-398} . For results $x \geq 10^{+385}$, error 4 or 5 will appear (see [below](#)).

6. In **integer modes**, numbers are displayed adjusted to the right as well. Word size and complement setting are indicated in the dot matrix using a format **xx.ww**, with **xx** being **1c** or **2c** for 1's or 2's complement, respectively, **un** for unsigned, or **sm** for sign-and-mantissa mode. Sign and first digit of the exponent show the base, a "c" in the second digit signals a carry bit set, an "o" in the third an overflow. Integer bases are indicated as follows:


Base	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Sign and 1 st digit of exponent displayed	b	3	4	5	6	7	o	9	d	-1	-2	-3	-4	-5	h

The example shows the WP 34S in unsigned hexadecimal mode with word size 64 and carry set:



After changing to binary mode, this number will need 28 digits, being 1001001110100001010010110110. Initially, the 12 least significant digits will be displayed together with an indication that there are three display windows in total with the rightmost shown:



Now press  and you will get the next 12 digits in the middle window:

Press again to show the most significant digits:

If leading zeros were turned on, there will be six display windows in this case, with the three “most significant” containing only zeros.

Please note the window will also change in numeric entry when more than 12 digits are keyed in. Leftmost digits will leave the display window then.

- Fraction mode** works similar to HP-35S. In particular, DENMAX sets the maximum allowable denominator (see the [index of operations](#)). Display will look like in the examples below. If the fraction is exactly equal, slightly less, or greater than the floating point number converted, “=”, “Lt”, or “Gt” is indicated in the exponent, respectively.

Assume $DENMAX \geq 32$. Then e.g. -47.40625 will be displayed as follows:

depending on the output setting for proper or improper fractions. Please note integers like 123 will be displayed as “123 0/1” or “123/1” in fraction mode, respectively.

Fraction mode can handle numbers with absolute values $< 10,000$ and > 0.0001 . Maximum denominator is 9999.

Using $DENMAX = 9999$, squaring the improper fraction shown above results in


Now, enter for converting this result into a proper fraction. Your 34S will display

with a little hook left of the first digit shown. This indicates the first number being displayed incompletely – there are at least two digits preceding 47 but no more display space. Press to unveil the integer part of this proper fraction is 2247.

- In **H.MS display mode**, format is $hhhh^{\circ}mm'ss.dd''$ with the number of hours or degrees limited to 9000. Output may look like this:

depending on the radix setting. For decimal times less than 5ms or 0.005 angular seconds but greater than zero, an “u” for underflow will be lit in the exponent section. For times or angles exceeding the upper limit, an “o” will be shown there signaling an overflow.

9. Output of the function **DAY** will look as follows for an input of 1.13201 in M.DY mode (equivalent to inputs of 13.01201 in D.MY or 2010.0113 in Y.MD):

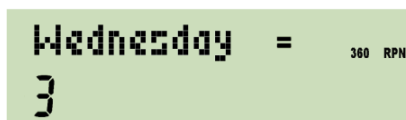

The display may look similar for a result of DAYS+.

10. In **alpha mode**, the alpha register is displayed in the dot matrix, starting with the first character it is containing, while the numeric section keeps the result of the last numeric operation, e.g.:




Different information may be appended to **alpha**. See the commands starting with “α” in the index of operations below. E.g. αTIME allows creating texts like




depending on time mode setting (12h / 24h). And αDATE will append – depending on date format setting – either 2011-03-14 or 14.03.2011 or 03/14/2011 to **alpha**.

Please note **alpha** may be considerably longer than the display window. And the WP 34S features a rich set of special letters. So you may store a message like



easily but you will see its right end only, i.e.

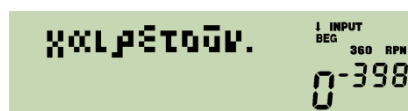

in this very special case.

All keyboard input will be interpreted according to the mode set at input time.

FONTS

The WP 34S features a large and a small font. Both are based on Luiz Viera's fonts as distributed in 2004. Some letters were added and some modified for better legibility, since the dot matrix is only 6 pixels high here. The following tables show the characters directly accessible through the keyboard. More are in the alpha catalogs (see [below](#)).

A B C D E F G H I J K L M N O P Q R S T U V W X Y Z																									
A B C D E F G H I J K L M N O P Q R S T U V W X Y Z																									
A B C D E F G H I J K L M N O P Q R S T U V W X Y Z																									
a b c d e f g h i j k l m n o p q r s t u v w x y z																									
a b c d e f g h i j k l m n o p q r s t u v w x y z																									
a b c d e f g h i j k l m n o p q r s t u v w x y z																									
A B Γ Δ E Z H Θ I K Λ M N Ξ O Π Ρ Σ Τ Υ Φ Χ Ψ Ω																									
A B Γ Δ E Z H Θ I K Λ M N Ξ O Π Ρ Σ Τ Υ Φ Χ Ψ Ω																									
A B Γ Δ E Z H Θ I K Λ M N Ξ O Π Ρ Σ Τ Υ Φ Χ Ψ Ω																									
α β γ δ ε ζ η θ ι κ λ μ ν ξ ο π ρ σ τ υ φ χ ψ ω																									
α β γ δ ε ζ η θ ι κ λ μ ν ξ ο π ρ σ τ υ φ χ ψ ω																									
α β γ δ ε ζ η θ ι κ λ μ ν ξ ο π ρ σ τ υ φ χ ψ ω																									
0 1 2 3 4 5 6 7 8 9										() + - × / ± . !								⇔ % √ \ & ≠ \$ € £ ¥							
0123456789										()+-×/±.!								⌘%√\& ≠\$€£¥							
0123456789										()+-×/±.!								⌘%√\& ≠\$€£¥							

INDEX OF OPERATIONS

All functions available are found below with their names and keystrokes necessary. Names printed in **bold** face therein belong to commands directly accessible on the keyboard, the others are accessible via catalogs. These names will show up in program listings as well. Sorting in index and catalogs is case insensitive and works in the following order:

_, 0...9, A...Z, !, α...ω, () + − × / ± , . ? : ; ‘ “ # * @ _ ~
 → ← ↑ ↓ ↔ < ≤ = ≠ ≥ > % \$ € £ ¥ √ ∫ ∞ & \ ^ | G [] { }

Super- and subscripts are handled like normal characters in sorting.

Generally, functions and keystroke programming will work as on *HP-42S*, **bit and integer functions** as on *HP-16C*, unless stated otherwise under remarks. Especially, all **tests** will return “Yes” or “No” in the dot matrix if called from the keyboard; if called in a program, they will skip the next program line if the test is false. Please refer to the manuals of the vintage calculators mentioned, e.g. on the DVDs distributed by www.hpmuseum.org.

Functions available on the WP 34S for the first time on an RPN calculator are highlighted **yellow** under remarks, while operations carrying a familiar name but deviating in their functionality here are marked **light red**.

Parameters will be taken from the lowest stack levels unless being mentioned explicitly in the 2nd column. Then they must follow the command. If **underlined**, they may also be specified using indirect addressing, as shown in the [tables](#) above. Some parameters of statistical distributions must be given in registers **J** and **K** if specified.

Each function is listed stating the mode(s) it will work in, abbreviated by their [indicators](#). In this column an “&” stands for a Boolean AND, a comma for an OR, and a backslash for “not”. So e.g. 2^x works in all modes but alpha. All operations will also work in mode PRG unless stated otherwise explicitly.

Name	Keys to press	in modes	Remarks
c...	[CPX] ...	DECM	Indicates an operation in complex domain (see above). [CPX] may be combined with all functions whose names are printed in italics here .
10^x	[f] 10^x	DECM	
12h	[h] MODE 12h	α	Sets 12h time display mode meaning 1:23 becomes 1:23 a.m. and 13:45 becomes 1:45 p.m.
1COMPL	[h] MODE 1COMPL	α	Sets 1’s complement mode like in <i>HP-16C</i> .
1/x	[f] 1/x	DECM	
	[B]	DECM	Shortcut as long as label B is not defined yet.
24h	[h] MODE 24h	α	Sets 24h time display mode meaning 1:23 a.m. becomes 1:23, and 1:45 p.m. becomes 13:45.
2COMPL	[h] MODE 2COMPL	α	Sets 2’s complement mode like in <i>HP-16C</i> .

Name	Keys to press	in modes	Remarks
2^x	f 2^x	$\backslash\alpha$	
ABS	f x 	$\backslash\alpha$	^c ABS returns $r = \sqrt{x^2 + y^2}$ in X and clears Y .
ACOS	g COS⁻¹	DECM	
ACOSH	g HYP⁻¹ COS		
ALL	h FIX .	$\backslash\alpha$	Selects the format displaying “all” digits.
AND	h AND	Integer	Works bitwise as in <i>HP-16C</i> .
		DECM	Works like AND in <i>HP-28S</i> , i.e. x and y are interpreted before executing this operation. 0 is “false”, any other real number is “true”.
ANGLE	h X.FCN ANGLE	DECM	Calculates the angle between positive x-axis and the straight line from the origin to the point (x, y) , returns this angle in X and clears Y .
ASIN	g SIN⁻¹	DECM	
ASINH	g HYP⁻¹ SIN		
ASR	h X.FCN ASR <u>n</u>	Integer	Works like <u>n</u> (up to 63) consecutive ASRs in <i>HP-16C</i> . ASR 0 executes as NOP.
ATAN	g TAN⁻¹	DECM	
ATANH	g HYP⁻¹ TAN		
BASE	h MODE BASE <u>n</u>	$\backslash\alpha$	Sets the base for integer calculations, with $2 \leq n \leq 16$. Popular bases are directly accessible on the keyboard. Current integer base setting is indicated in the exponent as explained above . Furthermore, BASE0 equals DECM, and BASE1 calls FRACT.
BASE10	f 10		
BASE16	g 16		
BASE2	f 2		
BASE8	g 8		
BC?	h TEST BC? <u>n</u>	Integer	Tests the specified bit in x .
BestF	h STAT BestF	DECM	Selects the best curve fit model, maximizing the correlation like BEST does in <i>HP-42S</i> .
Binom	h PROB Binom	DECM	= BINOMDIST($x; j; k; 1$) in MS Excel, with the sample size j and the gross error probability k .

Name	Keys to press	in modes	Remarks
Binom ⁻¹	h PROB Binom ⁻¹	DECM	The inverse cdf ¹⁶ Binom ⁻¹ returns the number of successes g for a given probability p in X .
BS?	h TEST BS? n	Integer	Tests the specified bit in x .
Cauch	h PROB Cauch	DECM	Cauchy-Lorentz distribution, also known as Lorentz or Breit-Wigner distribution: pdf: $f_{Ca}(x) = \frac{1}{\pi\gamma} \cdot \frac{1}{1 + \left(\frac{x-x_0}{\gamma}\right)^2}$ cdf: $F_{Ca}(x) = \frac{1}{2} + \frac{1}{\pi} \arctan\left(\frac{x-x_0}{\gamma}\right)$ with the location x₀ specified in J and the shape γ in K .
Cauch _p	h PROB Cauch _p		
Cauch ⁻¹	h PROB Cauch ⁻¹		
CB	h X.FCN CB n	Integer	Clears the specified bit in x .
CEIL	h X.FCN CEIL	DECM	Returns the smallest integer $\geq x$.
CF	h P.FCN CF n	$\backslash\alpha$	Clears the flag specified.
CLFLAG	h P.FCN CLFLAG	$\backslash\alpha$	Clears all user flags.
CLREG	h X.FCN CLREG	All	Clears all general purpose registers.
CLSTK	0 g FILL	$\backslash\alpha$	Clears all stack registers.
	h P.FCN CLSTK		
CLx	h CLx	All	Clears both X and Y .
	CPX h CLx	DECM	
CLα	f CLα	All	Clears the alpha register like CLA in HP-42S.
CLΣ	g CLΣ	DECM	Clears all statistical sums.
COMB	f Cy,x	DECM	Returns the number of possible <u>sets</u> of y items taken x at a time. No item occurs more than once in a set, and different orders of the same x items are <u>not</u> counted separately. Formula: $C_{y,x} = \binom{y}{x} = \frac{y!}{x!(y-x)!}$

¹⁶ cdf = cumulative distribution function (German: „Verteilungsfunktion“),
pdf = probability density function (German: „Wahrscheinlichkeitsdichte“).
In the WP 34S, for a cdf named Xyz, the pdf is named Xyz_p.

Name	Keys to press	in modes	Remarks
CONJ	CPX X.FCN CONJ	DECM	Changes the sign of y .
CORR	g r	DECM	Returns the correlation coefficient for the current statistical data and curve fitting model.
COS	f COS	DECM	
COSH	f HYP COS		
DATE	h X.FCN DATE	DECM	Recalls the date from the real time clock and displays it in the numeric section in the format selected. See D.MY, M.DY, and Y.MD. The function DATE in <i>HP-12C</i> corresponds to DAYS+ in the WP 34S (see below).
DAY	h X.FCN DAY	DECM	Takes x as a date in the format selected and returns the name of the day in the dot matrix and a corresponding integer in the numeric display (Monday = 1, Sunday = 7).
DAYS+	h X.FCN DAYS+	DECM	Works like DATE in <i>HP-12C</i> , adding x days on a date in \mathbf{Y} in the format selected and displaying the resulting date including the day of week in the same format as DAY does.
DBLR	h X.FCN DBLR	Integer	Double precision commands like in <i>HP-16C</i> .
DBL ×	h X.FCN DBL×		
DBL /	h X.FCN DBL/		
DEC	h P.FCN DEC r	$\lambda\alpha$	Decrements r by one, equivalent to 1 STO− r , but without modifying the stack.
DECM	f H.d	$\lambda\alpha$	
DECOMP	h X.FCN DECOMP	FRC	Decomposes x (after converting it into an improper fraction, if applicable), resulting in a stack [numerator (x), denominator (x), y , z] or [num (x), den (x), y , z , t , a , b , c], respectively. Reversible by division.
DEG	g DEG	DECM	Sets angular mode to degrees.
DENANY	h MODE DENANY	$\lambda\alpha$	Sets default fraction format like in <i>HP-35S</i> , allowing maximum precision. Any denominator up to the value set by DENMAX may appear.
DENFAC	h MODE DENFAC	$\lambda\alpha$	Sets “factors of the maximum denominator”. With e.g. DENMAX = 60, possible denominators are 2, 3, 4, 5, 6, 10, 12, 15, 20, 30, and 60.

Name	Keys to press	in modes	Remarks
DENFIX	h MODE DENFIX	$\backslash \alpha$	Sets fixed denominator format, i.e. the denominator equaling DENMAX always.
DENMAX	h MODE DENMAX	$\backslash \alpha$	Works like $\backslash c$ in <i>HP-35S</i> , but maximum value settable is 9999. The maximum denominator will be set to 9999 if $x < 1$ or $x > 9999$ at execution time. For $x = 1$ the current setting is recalled.
DISP	h MODE DISP	DECM	Changes the number of decimals while keeping the display format (FIX, SCI, ENG) as is.
DROP	h P.FCN DROP	$\backslash \alpha$	Drops x , changing stack contents to $[y, z, t, t]$ or $[y, z, t, a, b, c, d, d]$, respectively. See above for c DROP.
DSE	f DSE r	PRG & DECM	Given $cccccc.ffffi$ in r , this function decrements r by ii , skipping next program line if then $cccccc \leq fff$.
DSZ	h P.FCN DSZ r	PRG	Decrements r by one, skipping next program line if then $ r < 1$.
D.MY	h MODE D.MY	$\backslash \alpha$	Sets the format for date display.
D→J	h X.FCN D→J	DECM	Takes x as a date in the format selected and converts it to a Julian day number.
D→R	h X.FCN D→R	DECM	Takes x as degrees and converts them to radians. Angular mode is kept.
E3OFF	h MODE E3OFF	$\backslash \alpha$	Toggle the thousands separator (either a point or a comma depending on the radix setting).
E3ON	h MODE E3ON		
ENG	h ENG n	$\backslash \alpha$	Sets engineering display format.
ENGOVR	h ENG \square	$\backslash \alpha$	Numbers exceeding the range displayable in ALL or the FIX format selected will be shown in engineering format. See SCIOVR.
ENTER↑	ENTER ↑	$\backslash \alpha$	See above for c ENTER.
erf	h STAT erf	DECM	Calculates the error function $\operatorname{erf}(x) = \frac{2}{\sqrt{\pi}} \int_0^x e^{-\tau^2} d\tau$
EVEN?	h TEST EVEN?	$\backslash \alpha$	Checks if x is integer and even.

Name	Keys to press	in modes	Remarks
e^x	f e^x	DECM	
ExpF	h STAT ExpF	DECM	Selects the exponential curve fit model.
Expon	h PROB Expon	DECM	pdf: $f_{Ex}(x) = \lambda \cdot e^{-\lambda x} = \text{EXPONDIST}(x; \lambda; 0)$, cdf: $f_{Ex}(x) = 1 - e^{-\lambda x} = \text{EXPONDIST}(x; \lambda; 1)$ in MS Excel, with J containing the rate λ . Expon ⁻¹ returns the survival time t_s for a given probability p in X .
Expon _P	h PROB Expon _P		
Expon ⁻¹	h PROB Expon ⁻¹		
$e^x - 1$	h X.FCN $e^x - 1$	DECM	Returns more accurate results for the fractional part of e^x with $x \approx 0$.
FB	h X.FCN FB <u>n</u>	Integer	Inverts ("flips") the specified bit in x .
FC?	h TEST FC? <u>n</u> etc.	$\backslash \alpha$	Tests the flag specified. Clears, flips, or sets this flag after testing, if applicable.
FC?C			
FC?F			
FC?S			
FF	h P.FCN FF <u>n</u>	$\backslash \alpha$	Flips the flag specified.
FIB	h X.FCN FIB	$\backslash \alpha$	Calculates the Fibonacci number F_x .
FILL	g FILL	$\backslash \alpha$	Copies x to all stack levels. See above for ^C FILL.
FIX	h FIX <u>n</u>	$\backslash \alpha$	Sets fixed point display format.
FLOOR	h X.FCN FLOOR	DECM	Returns the largest integer $\leq x$.
FP	g FP	DECM	Returns the fractional part of x .
FP?	h TEST FP?	$\backslash \alpha$	Tests x for having a nonzero fractional part.
FRACT	h P.FCN FRACT	DECM	Sets fraction mode like in HP-35S, but keeps display format as set by PROFRC and IMPFRC.
FS?	h TEST FS? <u>n</u> etc.	$\backslash \alpha$	Tests the flag specified. Clears, flips, or sets this flag after testing, if applicable.
FS?C			
FS?F			
FS?S			

Name	Keys to press	in modes	Remarks
F(x)	h PROB F(x)	DECM	F equals 1 - Q(F) in HP-21S. The degrees of freedom are specified in J and K .
F ⁻¹ (p)	h PROB F ⁻¹ (p)		
f'(x)	h P.FCN f'(x) <i>label</i>	DECM	Return the first or second derivative of the function f(x) at position x = x , respectively, with f(x) being specified in a routine starting with LBL <i>label</i> . The return stack will have y , z , and t cleared and the position x in L . Either function will attempt to call a user routine labeled 'dx' to provide a fixed step size dx . If that routine is not defined, a step size of 0.1 is employed instead.
f''(x)	h P.FCN f''(x) <i>label</i>		
GCD	h X.FCN GCD	$\backslash\alpha$	Returns the Greatest Common Divisor of x and y .
Geom	h PROB Geom	DECM	Geometric distribution: $Ge(m) = 1 - (1 - p_0)^m$ is the probability for a first success after m = x Bernoulli experiments. The probability p₀ for a success in each such experiment must be specified in J . Geom ⁻¹ returns the number of failures f before the first success for a given probability p in X .
Geom ⁻¹	h PROB Geom ⁻¹		
GRAD	g GRAD	DECM	Sets angular mode to gon or grads.
GTO	h GTO <i>label</i>	PRG	Inserts an unconditional branch to <i>label</i> .
		\backslash PRG, $\backslash\alpha$	Positions the program pointer to <i>label</i> .
	h GTO \square <i>nnn</i>	$\backslash\alpha$	Positions the program pointer to line <i>nnn</i> (not programmable).
	h GTO \square \square	$\backslash\alpha$	Sets the program pointer to line 000 (not programmable) and lights the annunciator BEG .
H.MS	f H.MS	DECM	Assumes X containing decimal hours or degrees, and displays them in the format hhhh°mm'ss.dd" as shown above . Returns to the previous decimal display with the next keystroke.
H.MS+	h P.FCN H.MS+	DECM	Assumes X and Y containing times or degrees in the format hhhh.mmssdd, and adds or subtracts them, respectively.
H.MS-	h P.FCN H.MS-		

Name	Keys to press	in modes	Remarks
IMPFR	g d/c	$\backslash \alpha$	Sets fraction mode allowing improper fractions in display (i.e. 5/3 instead of 1 2/3). Converts x according to the settings by DEN... Absolute decimal equivalents of x must be $>1E-5$ and $<1E5$. Compare PROFRC.
		FRC	Allows displaying improper fractions. Thus converts a proper fraction in X into the equivalent improper fraction, if applicable.
INC	h P.FCN INC r	$\backslash \alpha$	Increments r by one, equivalent to 1 STO+ r , but without modifying the stack.
INT?	h TEST INT?	$\backslash \alpha$	Tests x for being an integer, i.e. having a fractional part equal to zero. Compare FP?.
IP	f IP	DECM	Returns the integer part of x .
ISG	g ISG r	PRG & DECM	Given $cccccc.ffffi$ in r , this function increments r by ii , skipping next program line if then $ccccccc > fff$.
ISZ	h P.FCN ISZ r	PRG	Increments r by one, skipping next program line if then $ r < 1$.
$I \beta$	h X.FCN $I \beta$	DECM	Returns the regularized incomplete beta function $\frac{\beta_x(x, y, z)}{\beta(y, z)} = \frac{1}{\beta(y, z)} \cdot \int_0^x t^{y-1} (1-t)^{z-1} dt$ with β_x being the incomplete beta function..
$I \Gamma$	h X.FCN $I \Gamma$	DECM	Returns the regularized incomplete gamma function $\frac{\gamma(x, y)}{\Gamma(x)}$ with $\gamma(x, y) = \int_0^y t^{x-1} e^{-t} dt$ being the lower incomplete gamma function.
J→D	h X.FCN J→D	DECM	Takes x as a Julian day number and converts it to a date in the format selected.
LASTx	RCL L	$\backslash \alpha$	See above for c LASTx .
LBL	f LBL <i>label</i>	PRG	Identifies programs and routines for execution and branching. See opportunities for specifying <i>label</i> in the table above .
LBL?	h TEST LBL? <i>label</i>	All	Tests for the existence of the label specified, anywhere in program memory. See opportunities for specifying <i>label</i> in the table above .
LCM	h X.FCN LCM	$\backslash \alpha$	Returns the Least Common Multiple of x and y .

Name	Keys to press	in modes	Remarks
LEAP?	h TEST LEAP?	DECM	Takes x as a date in the format selected, extracts the year, and tests for a leap year.
LgNrm	h PROB LgNrm	DECM	Lognormal distribution: pdf: $f_{Ln}(x) = \frac{1}{x\sigma\sqrt{2\pi}} e^{-\frac{(\ln x - \mu)^2}{2\sigma^2}}$, cdf: $F_{Ln}(x) = \Phi\left(\frac{\ln x - \mu}{\sigma}\right)$ with $\mu = \ln \bar{x}_g$ specified in J and $\sigma = \ln \varepsilon$ in K . See \bar{x}_g and ε below. Φ denotes the standard normal cdf.
LgNrm _p	h PROB LgNrm _p		
LgNrm ⁻¹	h PROB LgNrm ⁻¹		
LinF	h STAT LinF	DECM	Selects the linear curve fit model.
LJ	h X.FCN LJ	Integer	
LN	g LN	DECM	
LN1+x	h X.FCN LN1+x	DECM	Natural logarithm for values close to zero. Returns $\ln(1+x)$, providing a much higher accuracy in the fractional part of the result.
LN β	h STAT LN β	DECM	Returns the natural logarithm of $\beta(x, y)$. See there.
	h X.FCN LN β		
LN Γ	h STAT LN Γ	DECM	Returns the natural logarithm of $\Gamma(x)$. See there.
	h X.FCN LN Γ		
LOG ₁₀	g LG	DECM	
LOG ₂	g LB	$\backslash\alpha$	Calculates the logarithm of x for base 2.
LogF	h STAT LogF	DECM	Selects the logarithmic curve fit model.
Logis	h PROB Logis	DECM	Logistic distribution: pdf: $f_{Lg}(x) = e^{-\frac{x-\mu}{s}} / \left(s \cdot \left(1 + e^{-\frac{x-\mu}{s}} \right)^2 \right)$, cdf: $F_{Lg}(x) = \left(1 + e^{-\frac{x-\mu}{s}} \right)^{-1}$ with μ specified in J and s in K . The inverse cdf is $F_{Lg}^{-1}(p) = \mu + s \cdot \ln\left(\frac{p}{1-p}\right)$.
Logis _p	h PROB Logis _p		
Logis ⁻¹	h PROB Logis ⁻¹		

Name	Keys to press	in modes	Remarks
LOGx	g LOGx	DECM	Calculates the logarithm of y for base x .
	CPX g LOGx	DECM	Calculates the complex logarithm of $z + it$ for the complex base $x + iy$.
LZOFF	h MODE LZOFF	Integer	Toggles leading zeros like flag 3 does in <i>HP-16C</i> .
LZON	h MODE LZON		
L.R.	h L.R.	DECM	Calculates the parameters a1 and a0 of the fit curve through the data points accumulated, according to the model selected, and pushes them on the stack. For a straight regression line, a0 is the y-intercept and a1 the slope.
MASKL	h X.FCN MASKL n	Integer	Work like MASKL and MASKR on <i>HP-16C</i> , but with the mask length following the command instead of taken from X .
MASKR	h X.FCN MASKR n		
MAX	h X.FCN MAX	$\backslash \alpha$	Returns the maximum of x and y .
MIN	h X.FCN MIN	$\backslash \alpha$	Returns the minimum of x and y .
MIRROR	h X.FCN MIRROR	Integer	Reflects the bit pattern in x (e.g. 000101 becomes 101000 for word size 6).
MOD	h MOD	$\backslash \alpha$	MOD of <i>HP-42S</i> equals RMD of <i>HP-16C</i> .
M.DY	h MODE M.DY	$\backslash \alpha$	Sets the format for date display.
NAND	h X.FCN NAND	$\backslash \alpha$	Works in analogy to AND.
NaN?	h TEST NaN?	$\backslash \alpha$	Tests x for "Not a Number".
nBITS	h X.FCN nBITS	Integer	Counts bits set in x like #B does on <i>HP-16C</i> .
NOP	h P.FCN NOP	PRG	
NOR	h X.FCN NOR	$\backslash \alpha$	Works in analogy to AND.
Norml	h PROB Norml	DECM	Normal distribution with an arbitrary mean μ specified in J and standard deviation σ in K : pdf: $f_N(x) = \frac{1}{\sigma\sqrt{2\pi}} e^{-\frac{(x-\mu)^2}{2\sigma^2}}$, cdf: $F_N(x) = \Phi\left(\frac{x-\mu}{\sigma}\right)$ with Φ denoting the standard normal distribution. Norml ⁻¹ = NORMINV($x; j; k$) in MS Excel.
Normlp	h PROB Normlp		
Norml ⁻¹	h PROB Norml ⁻¹		

Name	Keys to press	in modes	Remarks
NOT	h NOT	$\backslash\alpha$	Works in analogy to AND.
nΣ	h STAT nΣ	DECM	Recalls the number of accumulated data points. Necessary for basic statistics.
ODD?	h TEST ODD?	$\backslash\alpha$	Checks if x is integer and odd.
OFF	h P.FCN OFF	PRG	
OR	h OR	$\backslash\alpha$	Works in analogy to AND.
PERM	g Py,x	DECM	Returns the number of possible <u>arrangements</u> of y items taken x at a time. No item occurs more than once in an arrangement, and different orders of the same x items <u>are</u> counted separately. Formula: $P_{y,x} = x!C_{y,x}$, see COMB.
Poiss	h PROB Poiss	DECM	= POISSON(x ; $j*k$; 1) in MS Excel, with the gross error probability j and the sample size k . Alternatively, the Poisson parameter λ may be in J if $k = 1$.
Poiss ⁻¹	h PROB Poiss ⁻¹	DECM	Poiss ⁻¹ returns the number of successes g for a given probability p in X . See P(x) for more.
PowerF	h STAT PowerF	DECM	Selects the power curve fit model.
PRIME?	h TEST PRIME?	$\backslash\alpha$	Checks if the absolute value of the integer part of x is a prime number. Exact for $x < 66049$, Miller-Rabin with 40 iterations otherwise, with the probability P for erroneously claiming a composite is prime being $P \approx 2^{-80} \approx 10^{-24}$.
PROFRC	f a b/c	DECM	Sets fraction mode like in <i>HP-35S</i> , allowing only proper fractions or mixed numbers in display. Converts x according to the settings by DEN... Absolute decimal equivalents of x must be $>1E-5$ and $<1E5$. Compare IMPFRC.
		FRC	Allows displaying only proper fractions. Thus converts an improper fraction in X , e.g. 5/3 into 1 2/3, if applicable.

Name	Keys to press	in modes	Remarks
PROMPT	h P.FCN PROMPT	PRG	Displays <i>alpha</i> and stops program execution (equaling α VIEW followed by STOP actually). If alpha input is requested, use the sequence α ON PROMPT α OFF. With a program running, enter the value or text requested and press (R/S) to continue.
PSE	h PSE <u>nn</u>	PRG	Pauses program execution for <i>nn</i> times 0.1s, with $0 \leq nn \leq 99$. Refreshes the display.
RAD	g RAD	DECM	Sets angular mode to radians.
RAN#	f RAN#	DECM	Returns a random number between 0 and 1 like RAN in HP-42S.
		Integer	Returns a random bit pattern for the word size set.
RCL	RCL <u>s</u>	$\backslash \alpha$	See the addressing table above for $^{\circ}$ RCL.
RCLM	RCL MODE	$\backslash \alpha$	Recalls selected mode settings into X . See the paragraph about indicators above.
RCLS	h P.FCN RCLS <u>s</u>	$\backslash \alpha$	Recalls 4 or 8 values from a set of registers starting at address s , and pushes them on the stack. This is the converse command of STOS.
RCL+	RCL + <u>s</u>	$\backslash \alpha$	Recalls the content of address s , executes the specified operation on it and pushes the result on the stack. E.g. RCL-12 recalls <i>r12</i> , subtracts <i>x</i> from it and displays the result. RCL \uparrow (\downarrow) recalls the maximum (minimum) of the values in s and X . See the addressing table above for $^{\circ}$ RCL.
RCL-	RCL - <u>s</u>		
RCLx	RCL x <u>s</u>		
RCL/	RCL / <u>s</u>		
RCL \uparrow	RCL \blacktriangle <u>s</u>		
RCL \downarrow	RCL \blacktriangledown <u>s</u>		
RDX, RDX.	h ./,	DECM	Toggle the radix mark. Also available in P.FCN FWIW.
RJ	h X.FCN RJ	Integer	Works in analogy to LJ.
RL	h X.FCN RL <u>n</u>	Integer	Works like <i>n</i> consecutive RLs / RLCs on HP-16C. For RL, $1 \leq n \leq 63$. For RLC, $1 \leq n \leq 64$. RL 0 and RLC 0 execute as NOP.
RLC	h X.FCN RLC <u>n</u>		

Name	Keys to press	in modes	Remarks
ROUND	g RND	DECM	Rounds x using the current display format, like RND in HP-42S.
		FRC	Rounds x using the current denominator, like RND in HP-35S.
ROUNDI	h X.FCN ROUNDI	DECM	Rounds x to next integer. $\frac{1}{2}$ rounds to 1.
RR	h X.FCN RR <u>n</u>	Integer	Works like n consecutive RRs / RRCs on HP-16C. See RL / RLC for more.
RRC	h X.FCN RRC <u>n</u>		
RTN	g RTN	\PRG	Moves the program pointer to step 000.
		PRG	Last command in a routine. Returns control to the calling routine in program execution, i.e. moves the program pointer one step behind the most recent XEQ instruction encountered. If there is none, program execution halts.
R-CLR	h P.FCN R-CLR	DECM	Interprets x in the form $ss.nn$. Clears nn registers starting with number ss . E.g. for $x = 34.56$, R-CLR will clear R34 through R89 .
R-COPY	h P.FCN R-COPY	DECM	Interprets x in the form $ss.nndd$. Takes nn registers starting with number ss and copies their contents to dd . E.g. for $x = 7.0345678$, r07 , r08 , r09 will be moved into R45 , R46 , R47 , respectively.
R-SORT	h P.FCN R-SORT	DECM	Interprets x in the form $ss.nn$. Sorts the contents of nn registers starting with number ss . Assume $x = 49.026$, r49 = 1.2, r50 = -3.4; then R-SORT returns r49 = -3.4, r50 = 1.2.
R-SWAP	h P.FCN R-SWAP	DECM	Works like R-COPY but swaps the register contents of source and destination.
R→D	h X.FCN R→D	DECM	Takes x as radians and converts them to degrees. Angular mode is kept.
R↑	h R↑	$\backslash\alpha$	Rotates the stack contents one level up or down, respectively. See above for complex rotations.
R↓	R↓		
s	g s	DECM	Calculates the standard deviations s_y and s_x and pushes them on the stack.

Name	Keys to press	in modes	Remarks
SB	h X.FCN SB <u><i>n</i></u>	Integer	Sets the specified bit in <i>x</i> .
SCI	h SCI <u><i>n</i></u>	$\backslash \alpha$	Sets scientific display format.
SCIOVR	h SCI \square	$\backslash \alpha$	Numbers exceeding the range displayable in ALL or the FIX format selected will be shown in scientific format (default). See ENGOVR.
SEED	h STAT SEED	DECM	Stores a seed for random number generation.
SERR	h STAT SERR	DECM	Works like s but pushes the standard errors s/\sqrt{n} on the stack (i.e. the standard deviations of \bar{x} and y).
SERRw	h STAT SERRw	DECM	Works like sw but returns the standard error $s/\sqrt{\sum y_i}$ (i.e. the standard deviation of $\bar{x}w$).
SETDAT	h X.FCN SETDAT	DECM	Sets the date or time, respectively, for the real time clock (don't work with the emulator).
SETTIM	h X.FCN SETTIM		
SF	h P.FCN SF <u><i>n</i></u>	$\backslash \alpha$	Sets the flag specified.
SIGN	h X.FCN SIGN	$\backslash \alpha$	Returns 1 for $x > 0$, -1 for $x < 0$, and 0 for $x = 0$ or non-numbers.
	CPX X.FCN SIGN	DECM	Returns the unit vector of $x + iy$ in X and Y .
SIGNMT	h MODE SIGNMT	$\backslash \alpha$	Sets sign-and-mantissa mode for integers.
SIN	f SIN	DECM	
SINC	h X.FCN SINC	DECM	Returns $\frac{\sin x}{x}$.
SINH	f HYP SIN	DECM	
SL	h X.FCN SL <u><i>n</i></u>	Integer	Works like <i>n</i> (up to 63) consecutive SLs on HP-16C. SL 0 executes as NOP.
SLV	f SLV <u><i>label</i></u>	DECM	Solves the equation $f(x) = 0$, with $f(x)$ calculated by the routine specified. Two initial estimates of the root must be supplied in X and Y when calling SLV. For the rest, the user interface is as in HP-15C.
SR	h X.FCN SR <u><i>n</i></u>	Integer	Works like <i>n</i> consecutive SRs on HP-16C. SR 0 executes as NOP.

Name	Keys to press	in modes	Remarks
SSIZE4	h MODE SSIZE4	$\backslash \alpha$	Set the stack size to 4 or 8 levels, respectively. If stack size grows, the top level contents will be copied into the new levels. If the stack shrinks, previous top levels will be lost. The same will happen if stack size is changed via STOM.
SSIZE8	h MODE SSIZE8		
SSIZE?	h TEST SSIZE?	$\backslash \alpha$	Returns the number of stack levels accessible.
STO	STO d	$\backslash \alpha$	See the addressing table above for ^c STO.
STOM	STO MODE	$\backslash \alpha$	Sets selected modes as encoded in x . See the paragraph about indicators above.
STOP	R/S	PRG	Stops program execution.
STOS	h P.FCN STOS d	$\backslash \alpha$	Stores all stack levels in a set of 4 or 8 registers, starting at destination d .
STO+	STO + d	$\backslash \alpha$	Executes the specified operation on the content of address d and stores the result into said address. E.g. STO–12 subtracts x from r12 , and stores the result in R12 again. STO↑ (↓) takes the maximum (minimum) of the values in d and X and stores it. See the addressing table above for ^c STO.
STO–	STO – d		
STO×	STO × d		
STO/	STO / d		
STO↑	STO ▲ d		
STO↓	STO ▼ d		
SUM	h STAT SUM	DECM	Recalls the linear sums Σy and Σx . Useful for basic vector algebra.
sw	h STAT sw	DECM	Returns the standard deviation for weighted data: $s_w = + \sqrt{\frac{\sum y_i \cdot \sum (y_i \cdot x_i^2) - [\sum (y_i \cdot x_i)]^2}{(\sum y_i)^2 - \sum y_i^2}}$
TAN	f TAN	DECM	
TANH	f HYP TAN		
TIME	h TIME	DECM, α	Recalls the time from the real time clock at execution and shows it in decimal mode.
t(x)	h PROB t(x)	DECM	t(x) equals 1 – Q(t) in HP-21S. The degree of freedom is stored in J .
t ^{–1} (p)	h PROB t ^{–1} (p)		
UNSIGN	h MODE UNSIGN	$\backslash \alpha$	Sets unsigned mode for integers.

Name	Keys to press	in modes	Remarks
VIEW	h VIEW <u>s</u>	All	Displays the content of address s until the next key is pressed.
W	h X.FCN W	DECM	W returns Lambert's W for given $x \geq -1/e$, while W ⁻¹ returns x for given W (≥ -1).
W ⁻¹	h X.FCN W ⁻¹		
Weibl	h PROB Weibl	DECM	= WEIBULL($x; j; k; 1$) in MS Excel, with the <i>shape parameter j</i> and the <i>characteristic life-time k</i> . Weibl ⁻¹ returns the survival time t_s for given probability p .
Weibl ⁻¹	h PROB Weibl ⁻¹		
WSIZE	h MODE WSIZE <u>n</u>	$\backslash \alpha$	Works like WSIZE on <i>HP-16C</i> , but with the parameter following the command instead of taken from X . WSIZE 0 sets the word size to maximum, i.e. 64 bits.
WSIZE?	h TEST WSIZE?	$\backslash \alpha$	Recalls the word size set.
x ²	g x ²	$\backslash \alpha$	
XEQ	XEQ <u>label</u>	PRG	Calls the respective subroutine.
		\backslash PRG, $\backslash \alpha$	Executes the respective program.
	B , C , or D (you may need f for accessing these hotkeys in integer bases >10.)	PRG	Calls the respective subroutine, so e.g. XEQ C will be inserted when C is pressed.
		\backslash PRG, $\backslash \alpha$	Executes the respective program if defined.
XNOR	h X.FCN XNOR	$\backslash \alpha$	Works in analogy to AND.
XOR	h XOR	$\backslash \alpha$	Works in analogy to AND.
\bar{x}	f \bar{x}	DECM	Calculates the arithmetic means. Pushes $\frac{1}{n} \sum y$ and $\frac{1}{n} \sum x$ on the stack.
$\bar{x}g$	h STAT $\bar{x}g$	DECM	Calculates the geometric means. Pushes $\sqrt[n]{\prod y} = e^{\frac{1}{n} \sum \ln y}$ and $\sqrt[n]{\prod x}$ on the stack.
$\bar{x}w$	h STAT $\bar{x}w$	DECM	Calculates the weighted arithmetic mean $\frac{\sum xy}{\sum y}$.
\hat{x}	h STAT \hat{x}	DECM	Returns a forecast x for a given y (in X) following the fit model chosen. See L.R. for more.
x !	h !	DECM	

Name	Keys to press	in modes	Remarks
$x \rightarrow \alpha$		All	Interprets x as a code of up to 6 characters. Appends these characters to <i>alpha</i> , similar to XTOA in HP-42S.
$x \leftrightarrow$		$\backslash \alpha$	Swaps the contents of \mathbf{X} and \mathbf{r} . See above for complex $x \leftrightarrow$.
$x \leftrightarrow y$		$\backslash \alpha$	Swaps x and y , performing $\text{Re} \leftrightarrow \text{Im}$ if a complex operation was executed immediately before. See above for ${}^c x \leftrightarrow y$.
$x < \dots ?$	$x < ?$	$\backslash \alpha$	<p>Compare x with \mathbf{a}. The three dots will be replaced in the listing by \mathbf{a} according to the examples given in the addressing table above.</p> <p>$x \approx ?$ will be true if the <u>rounded</u> values of x and \mathbf{a} are equal (see ROUND).</p> <p> and</p> <p> compare the complex number $x + i y$ as explained in the addressing table above.</p>
$x \leq \dots ?$	$x \leq ?$		
$x = \dots ?$			
$x \approx \dots ?$	$x \approx ?$		
$x \neq \dots ?$			
$x \geq \dots ?$	$x \geq ?$		
$x > \dots ?$	$x > ?$		
y^x		$\backslash \alpha$	In integer modes x must be ≥ 0 .
		$\backslash (\alpha, -3, -4, -5, h)$	Shortcut working as long as label C is not defined yet.
\hat{y}		DECM	Returns a forecast \mathbf{y} (in \mathbf{X}) for a given \mathbf{x} following the fit model chosen. See L.R. for more.
Y.MD	Y.MD	$\backslash \alpha$	Sets the format for date display.
αDATE	αDATE	$\backslash \text{integer}$	Takes x as a date and appends it to <i>alpha</i> in the format set. See DATE. – To append a date stamp to <i>alpha</i> , call DATE αDATE .
αDAY	αDAY	$\backslash \text{integer}$	Takes x as a date, recalls the name of the respective day and appends its first 3 letters to <i>alpha</i> .
αIP	αIP	All	Appends the integer part of x to <i>alpha</i> , similar to AIP in HP-42S.
αLENG	αLENG	All	Returns the number of characters found in <i>alpha</i> , like ALENG in HP-42S.
αMONTH	αMONTH	$\backslash \text{integer}$	Works like αDAY , but processing the month.

Name	Keys to press	in modes	Remarks
α OFF	h P.FCN α OFF	PRG & α	Work like AOFF and AON in <i>HP-42S</i> , turning alpha mode off and on.
α ON	h P.FCN α ON	PRG & $\backslash\alpha$	
α RCL	f RCL <u>s</u>	α	Interprets the content of the source s as characters and appends them to <i>alpha</i> .
	h X.FCN α RCL <u>s</u>	$\backslash\alpha$	
α RC#	h X.FCN α RC# <u>s</u>	All	Takes the content of s as a number, converts it to a string in the format set, and appends this to <i>alpha</i> . If e.g. s = 1234 and ENG 2 and RDX. are set, then <u>1.23E3</u> will be appended.
α RL	h X.FCN α RL <u>n</u>	All	Rotates <i>alpha</i> by n characters like AROT in <i>HP-42S</i> , but with n ≥ 0 and the parameter trailing the command instead of taken from X . α RL 0 executes as NOP.
α RR	h X.FCN α RR <u>n</u>	All	Works like α RL but rotates to the right.
α SL	h X.FCN α SL <u>n</u>	All	Shifts the n leftmost characters out of <i>alpha</i> , like ASHF in <i>HP-42S</i> . α SL 0 equals NOP.
α SR	h X.FCN α SR <u>n</u>	All	Works like α SL but takes the n rightmost characters instead.
α STO	f STO <u>d</u>	α	Stores the first (i.e. leftmost) 6 characters in the alpha register into destination d .
	h X.FCN α STO <u>d</u>	$\backslash\alpha$	
α TIME	h X.FCN α TIME	\backslash integer	Takes x as a time and appends it to <i>alpha</i> in the format hh:mm:ss according to the time mode selected. See TIME. – To append a time stamp to <i>alpha</i> , call TIME α TIME.
α VIEW	h X.FCN α VIEW	$\backslash\alpha$	Displays <i>alpha</i> . In programs, use α VIEW followed by PSE for message output.
$\alpha \rightarrow x$	f x ▶◀ a	All	Returns the character code of the leftmost character in <i>alpha</i> and deletes this character, like ATOX in <i>HP-42S</i> .
β	h STAT β	DECM	Returns Euler's Beta $B(x, y) = \frac{\Gamma(x) \cdot \Gamma(y)}{\Gamma(x+y)}$ with $\text{Re}(x) > 0$, $\text{Re}(y) > 0$. Called β here for avoiding ambiguities.
	h X.FCN β		

Name	Keys to press	in modes	Remarks
Γ	h STAT Γ	DECM	
	h X.FCN Γ		
ΔDAYS	h X.FCN ΔDAYS	DECM	Assumes X and Y containing dates in the format chosen and calculates the number of days between them. Works like in <i>HP-12C</i> .
$\Delta\%$	f Δ%	DECM	Calculates $100 \cdot \frac{x-y}{y}$ like %CH in <i>HP-42S</i> .
ε	h STAT ε	DECM	Calculates the scattering factors (or geometric standard deviations) $\ln(\varepsilon_y) = \sqrt{\frac{\sum \ln^2(y) - 2n \cdot \ln(\bar{y}_G)}{n-1}}$ and $\ln(\varepsilon_x)$ and pushes them on the stack. ε works for the geometric mean in analogy to s for the arithmetic mean but multiplicative.
ε_m	h STAT ε_m	DECM	Works like ε but pushes $\varepsilon_m = \varepsilon^{\frac{1}{\sqrt{n}}}$ on the stack (the scattering factors of the geometric means).
ε_p	h STAT ε	DECM	Works like ε but with a denominator n instead of $n-1$, returning the scattering factors of the populations.
π	h π	DECM	Complex version copies π in X and clears Y .
Π	f π <u>label</u>	DECM	Computes a product with the routine specified by <u>label</u> . Initially, X contains the loop control number in the format <code>cccccc.ffffii</code> and the product is set to 1. Each run through the routine specified computes a factor. At its end, this factor is multiplied with said product; the operation then decrements <code>cccccc</code> by <code>ii</code> and runs said routine again if then <code>cccccc > fff</code> , else returns the resulting product in X .
Σ	g Σ <u>label</u>	DECM	Computes a sum with the routine specified by <u>label</u> . Initially, X contains the loop control number in the format <code>cccccc.ffffii</code> and the sum is set to 0. Each run through the routine specified computes a summand; at its end, this is added to said sum; the operation then decrements <code>cccccc</code> by <code>ii</code> and runs said routine again if then <code>cccccc > fff</code> , else returns the resulting sum in X .

Name	Keys to press	in modes	Remarks
σ	h STAT σ	DECM	Works like s but calculates the standard deviations of the populations instead.
$\Sigma \ln^2 x$	h STAT $\Sigma \ln^2 x$ etc.	DECM	Recall the respective statistical sums. These sums are necessary for curve fitting models beyond pure linear. Calling them by name enhances readability of programs significantly.
$\Sigma \ln^2 y$			
$\Sigma \ln x$			
$\Sigma \ln xy$			
$\Sigma \ln y$			
$\Sigma x \ln y$			
$\Sigma y \ln x$			
σ_w	h STAT σ_w	DECM	Works like s_w but calculates the standard deviation of the population instead. $\sigma_w = + \sqrt{\frac{\sum y_i (x_i - \bar{x}_w)^2}{\sum y_i}}$
Σx	h STAT Σx etc.	DECM	Recall the respective statistical sums. These sums are necessary for basic statistics and linear curve fitting. Calling them by name enhances readability of programs significantly.
Σx^2			
Σxy			
Σy			
Σy^2			
$\Sigma +$	Σ+	DECM	
$\Sigma -$	h Σ-		
$\varphi(x)$	h PROB $\varphi(x)$		Standard normal pdf: $\varphi(x) = \frac{1}{\sqrt{2\pi}} e^{-x^2/2}$
$\Phi(x)$	f (Φ)	DECM	The standard normal cdf $\Phi(z)$ equals $1 - Q$ in <i>HP-32E</i> and $1 - Q(z)$ in <i>HP-21S</i> with $z = x$.
$\Phi^{-1}(p)$	g (Φ⁻¹)		
χ^2	h PROB χ^2	DECM	χ^2 equals $1 - Q(\chi^2)$ in <i>HP-21S</i> . The degree of freedom is given in J .
$\chi^2 \text{INV}$	h PROB $\chi^2 \text{INV}$		

Name	Keys to press	in modes	Remarks
+		$\backslash \alpha$	
-			
×			
/			
//		DECM	Calculates $\left(\frac{1}{x} + \frac{1}{y}\right)^{-1}$.
+/-		$\backslash \alpha$	
→DEG	()	DECM	Takes x as an angle in the angular mode set, converts it to degrees and changes angular mode in parallel. Prefix may be omitted here.
→GRAD	()	DECM	Works like →DEG, but converts to grads.
→H		DECM	Takes x as hours or degrees in the format hhhh.mmssdd and converts them into a decimal time or angle.
→H.MS		DECM	Takes x as decimal hours or degrees, converts them into hhhh.mmssdd and displays the result in the format hhhh°mm'ss.dd" as shown above . Returns to hhhh.mmssdd with the next keystroke.
→POL		DECM	Assumes X and Y containing Cartesian coordinates (x, y) and converts them to the respective cylinder coordinates (r, θ) .
→RAD	()	DECM	Works like →DEG, but converts to radians.
→REC		DECM	Assumes X and Y containing cylinder coordinates (r, θ) and converts them to the respective Cartesian coordinates (x, y) .
%		DECM	Calculates $\frac{x \cdot y}{100}$.
%MG	MG	DECM	Calculates the margin $100 \cdot \frac{x-y}{x}$ in % for a price x and cost y , like %MU-Price in HP-17B.


















Name	Keys to press	in modes	Remarks
%MRR	h X.FCN h % MRR	DECM	Calculates the mean rate of return in % per period, i.e. $100 \cdot \left[\left(\frac{x}{y} \right)^{\frac{1}{z}} - 1 \right]$ with $x = \text{FV} = \text{future value after } z \text{ periods}$, $y = \text{PV} = \text{present value}$. For $z = 1$, $\Delta\%$ returns the same result easier.
%T	h X.FCN h % T	DECM	Calculates $100 \cdot \frac{x}{y}$, i.e. percent of total FWIW.
%Σ	h STAT h % Σ h X.FCN h % Σ	DECM	Calculates $100 \cdot \frac{x}{\sum x}$.
%+	h %+	DECM	Adds a markup of $x\%$ to a price y , calculating $y \cdot (1 + 0.01 \cdot x)$ like in %MU-Cost of HP-17B.
%+MG	h X.FCN h % +MG	DECM	Calculates a sales price $y / (1 - 0.01 \cdot x)$ by adding a margin ¹⁷ of $x\%$ to the cost y , as %MU-Price does in HP-17B.
%-	h %-	DECM	Subtracts a discount of $x\%$ from the price y , calculating $y \cdot (1 - 0.01 \cdot x)$.
$\sqrt{}$	f \sqrt{x}	$\backslash \alpha$	
	D	$\backslash(\alpha, -4, -5, h)$	Shortcut working as long as label D is not defined yet.
\int	g \int <u>label</u>	DECM	Integrates the function given in the routine specified. Lower and upper integration limits must be supplied in Y and X , respectively. Otherwise, the user interface is as in HP-15C.
$\infty?$	h TEST $\infty?$	$\backslash \alpha$	Tests x for infinity.

¹⁷ Margin corresponds to „Handelsspanne“ in German.

Alphanumeric input:





Letter or digit	Keys to press	in modes	Remarks
°		DECM	Separates degrees or hours from minutes and seconds, so input format is <code>hhhh.mmssdd</code> . The user has to take care where an arbitrary real number represents such an angle or time.
0 ... 9	...	$\backslash \alpha$	Standard numeric input. For integer bases <10, input of illegal digits throws an error message .
		in addressing	Register input. See the addressing tables above for more.
	, , , ... ,	α	Appends the respective digit to <i>alpha</i> .
A ... F	... (red print)	-1, -2, -3, -4, -5, h	Numeric input for digits >10. See page 6 for more information.
A ... Z	... (red print)	in addressing	Register input. See the addressing tables above for the letters applicable.
		α	Alphabetic input. See page 7 for more.
E	(the key)	DECM	Like EEX in the older vintage calculators.
(or)	/	α	Appends a left / right parenthesis to <i>alpha</i> .
[/]	Second	DECM	A persistent 2 nd in input switches to fraction mode and will be interpreted as explained below. Please note you cannot enter after you entered twice – but you may delete the 2 nd dot while editing the input line.
		FRC	First is interpreted as a space, 2 nd as a fraction mark. E.g. input of results in 2 ³ / ₄ in the display. Improper fractions may be entered starting with a , e.g. .
[,]	/ ,	α	Appends a comma to <i>alpha</i> .
[.] or [,]		DECM	Inserts a radix mark as selected.





































Non-programmable control, clearing and information commands:

Keys to press	in modes	Remarks
 / 	Status open	Goes to previous / next set of flags.
	Catalog open	Goes to previous / next item in this catalog.
	α	Shifts the display window to the left / right in <i>alpha</i> if possible. Useful for longer strings.
	Else	Acts like BST / SST in <i>HP-42S</i> .
	Input pending	Deletes the last digit or character put in.
	α	Deletes the rightmost character in <i>alpha</i> .
	PRG	Deletes current step.
	Else	Acts like CLx.
 / 	Integer	Shifts the display window to the left / right like in <i>HP-16C</i> . Helpful while working with small bases.
	α	Toggles upper and lower case.
 CLALL	\PRG	Clears all registers and programs if confirmed.
	\ α	Clears the current program (i.e. the one the program pointer is in) after confirmation.
	Catalog open	Selects the current item like  below.
	α	Turns alpha mode off.
	Catalog open	Leaves the catalog without executing anything.
	Input pending	Cancels the execution of pending operations, returning to the calculator status as it was before.
	\PRG & program running	Stops this program like  below.
	PRG	Leaves programming mode like  below.
	α	Turns alpha mode off like  above.
	Else	Does nothing.
	All	Turns calculator off.
	Calculator off	Turns calculator on.
	\PRG, \ α	Toggle programming mode for keyboard entry.
	PRG	

Keys to press	in modes	Remarks
h X.FCN RESET	All	Executes CLALL and resets all modes to start-up default, i.e. 24h, 2COMPL, ALL, DEG, DENANY, DENMAX 0, DECM, LinF, PROFRC, SSIZE4, WSIZE 64, Y.MD.
R/S	\PRG, \α	Entered from the keyboard: Runs the current program starting with the current step or stops the running program immediately. Compare the programmable command STOP.
h SHOW	DECM & \PRG	Shows the full mantissa until the next key is pressed.
	PRG	Displays a CRC-32 checksum of program memory contents (8 hex digits), allowing validation of program integrity.
h STATUS	\PRG	Shows the status of all user flags, similar to STATUS on HP-16C. See above .
h X.FCN VERS	\PRG	Shows the firmware version.
XEQ	Catalog open	Selects the item currently displayed and exits, executing the respective command. See above .
f α	\α	Turns on alpha mode for keyboard entry. When entering alpha constants in programs, please note there is no concatenation character, since added characters are appended to <i>alpha</i> always. For starting a new string, use CLα first. Alpha constants will be listed like e.g. 'Test 1'.
→ f 2	\α	These commands show <i>x</i> in target integer representation until the next key is pressed. Base is kept as set. Prefix g may be omitted here. If used in integer bases 15 and 16, prefix f must precede the key →
→ f 10		
→ (g) 16		
→ (g) 8		

Catalogs (not programmable):

Calling a catalog will set temporary alpha mode to allow for typing the first 1 or 2 characters of the item wanted.  and  browse the catalog,  selects the item displayed and exits, while  leaves the catalog without executing anything, returning to the mode as set before. See the [table above about addressing cataloged items](#), and the [next paragraph](#) for detailed item lists.

Keys to press	in modes	Contents
 	DECM	Constants like in HP35s. See them listed in a table below .
 	DECM	This will clear Υ in recalling the constant selected since they are all real.
 	DECM	Conversions as listed in a table below .
 	α	“Complex” letters mandatory for many languages. Upper or lower case will be displayed according to setting (see   above).
 	$\backslash\alpha$	Mode setting functions.
 	DECM	Extra probability distributions.
 	$\backslash\alpha$	Extra programming functions.
 	α	Subscripts.
 	α	Superscripts.
 	DECM	Extra statistical functions.
 	$\backslash\alpha$	All tests except the two on the keyboard.
	α	Comparison symbols and brackets. Parentheses are called by   and   , respectively.
 	DECM	Extra real functions.
	Integer	Extra integer functions.
	α	Extra alpha functions.
 	DECM	Extra complex functions.
 	α	Punctuation marks and text symbols.
 	α	Arrows and mathematical symbols.

DETAILED CATALOG CONTENTS

The characters necessary to access a specific function from an arbitrary position in the respective catalog are printed bold in this table – \blacktriangledown has to be pressed once then for each character printed red – if even the last letter of a name is red, more strokes of \blacktriangledown may be needed. A single function, e.g. CB, may be contained in more than one catalog.

The alpha catalogs are found two pages below. See also CONST and CONV in separate paragraphs further below.

MODE	PROB		STAT		TEST	P.FCN
12h	Binom	Logis	BestF	ε	BC?	CF
1COMPL	B inom ⁻¹	L ogis _p	erf	ε_m	BS?	CLFLAG
24h	Cauch	L ogis ⁻¹	ExpF	ε_p	EVEN?	CLSTK
2COMPL	C auch _p	N orml	LinF	σ	FC?	DEC
BASE	C auch ⁻¹	N orml _p	LN β	$\Sigma \ln^2 x$	FC? C	DROP
DENANY	Expon	N orml ⁻¹	LN Γ	$\Sigma \ln^2 y$	FC? F	DSZ
D ENFAC	E xpon _p	P oiss	LogF	$\Sigma \ln x$	FC? S	FF
D ENFIX	E xpon ⁻¹	P oiss ⁻¹	n Σ	$\Sigma \ln xy$	FP?	FRACT
D ENMAX	F(x)	t(x)	PowerF	$\Sigma \ln y$	FS?	f'(x)
DISP	F ⁻¹ (p)	t ⁻¹ (p)	SEED	σw	FS? C	f''(x)
D.MY	Geom	Weibl	S ERR	Σx	FS? F	H.MS+
E3OFF	G geom ⁻¹	W eibl ⁻¹	S ERRw	Σx^2	FS? S	H.MS-
E 3ON	Lgnrm	$\varphi(x)$	SUM	$\Sigma x^2 y$	INT?	INC
LZOFF	L gnrm _p	χ^2	sw	$\Sigma x \ln y$	LBL?	ISZ
L ZON	L gnrm ⁻¹	χ^2 INV	$\bar{x}g$	Σxy	LEAP?	NOP
M.DY			$\bar{x}w$	Σy	NaN?	PROMPT
SIGNMT			\hat{x}	Σy^2	ODD?	RCLM
SSIZE4			β	$\Sigma y \ln x$	PRIME?	RCLS
S SIZE8			Γ	% Σ	SSIZE?	RDX,
UNSIGN					WSIZE?	RDX.
WSIZE					x < ?	R-CLR
Y.MD					x ≤ ?	R- C OPY
					x ≈ ?	R-SORT
					x ≥ ?	R-SWAP
					x > ?	SF
					∞?	STOM
						ST OS
						αOFF
						α O N

CPX				
À	Ā	Ā	à	ā
Á	Ā	Ā	á	ā
Â Ã Ä Å	Ā	Ā	â ã ä å	ā
Ä	Ā	Ā	ä (ä)	ā
Å	Ā	Ā	å	ā
Ć	Ā	Ā	ć	ā
Č	Ā	Ā	č	ā
Ç	Ā	Ā	ç	ā
È	Ā	Ā	è	ā
É	Ā	Ā	é	ā
Ê Ë Ě Ě	Ā	Ā	ê ë ě ě	ā
Ě	Ā	Ā	ě (ě)	ā
			ħ	ā
Ĭ	Ā	Ā	ĭ	ā
Í	Ā	Ā	í	ā
Î Ï Ĳ Ĳ	Ā	Ā	î ï ĳ ĳ	ā
Ĳ	Ā	Ā	ĳ (ĳ)	ā
Ñ Ñ	Ā	Ā	ñ ñ	ā
Ò	Ā	Ā	ò	ā
Ó	Ā	Ā	ó	ā
Ô Õ Ö Ö	Ā	Ā	ô õ ö ö	ā
Ö	Ā	Ā	ö (ö)	ā
Ø	Ā	Ā	ø	ā
Ř	Ā	Ā	ř	ā
Š	Ā	Ā	š	ā
			ß	ā
Ù	Ā	Ā	ù	ā
Ú	Ā	Ā	ú	ā
Û Ü Ů Ů	Ā	Ā	û ü ů ů	ā
Ü	Ā	Ā	ü (ü)	ā
Ů	Ā	Ā	ů	ā
Ý	Ā	Ā	ý	ā
ÿ	Ā	Ā	ÿ	ā
Ž	Ā	Ā	ž	ā

Here are the contents of the alpha catalogs making the WP 34S the most versatile global calculator known. Large font is printed in left column or upper row, small font in right or lower. Accented letters show the same width as unaccented ones wherever possible.

./,
, ? : ; ' " # * @ _ ~ `
, ? : ; ' " # * @ _ ~ `
, ? : ; ' " # * @ _ ~ `

TEST
< ≤ = ~ ≥ > [] { }
≤ ≥ = ~ > [] { }
< ≤ = ~ > [] { }

→
→ ← ↑ ↓ ∫ ∞ ^
→ ← ↑ ↓ ∫ ∞ ^
→ ← ↑ ↓ ∫ ∞ ^

R↓ (subscripts)
0 1 2 A B c e k m n p u μ ∞
0 1 2 A B c e k m n p u μ ∞
0 1 2 A B c e k m n p u μ ∞


R↑ (superscripts)
c ° 2 x x̄ x̂ x̃ x̄ x̅ x̆ ẋ ẍ x̉ x̊ x̋ x̌ x̍ x̎ x̏ x̐ x̑ x̒ x̓ x̔ x̕ x̖ x̗ x̘ x̙ x̚ x̛ x̜ x̝ x̞ x̟ x̠ x̡ x̢ x̣ x̤ x̥ x̦ x̧ x̨ x̩ x̪ x̫ x̬ x̭ x̮ x̯ x̰ x̱ x̲ x̳ x̴ x̵ x̶ x̷ x̸ x̹ x̺ x̻ x̼ x̽ x̾ x̿ x̺ x̻ x̼ x̽ x̾ x̿
0 1 2 A B c e k m n p u μ ∞
0 1 2 A B c e k m n p u μ ∞

The letters provided here allow for correct writing the languages of more than 3·10⁹ people, i.e. Afrikaans, Català, Cebuano, Český, Cymraeg, Deutsch, Eesti, English, Español, Euskara, Français, Gaeilge, Galego, Bahasa Indonesia, Italiano, Basa Jawa, Kiswahili, Kreyòl ayisyen, Magyar, Bahasa Melayu, Nederlands, Português, Quechua, Shqip, Slovenčina, Slovenščina, Basa Sunda, Suomeksi, Svenska, Tagalog, Winaray, Zhōngwén (with a little trick explained below), and almost Hrvatski and Srpski (sorry, no đ) as well as Dansk and Norsk (no æ). If you know further living languages covered, please tell us.

Mandarin Chinese (Zhōngwén) features four tones, usually transcribed like e.g. mā, má, mǎ, and mà. So you need different letters for ā and ǎ here, and for e, i, o, and u as well. With 6 pixels total character height we found no way to display these in both fonts nicely, keeping letters and accents separated for easy reading. For an unambiguous solution, we suggest using a dieresis (else not employed in Hànyǔ pīnyīn) representing the third tone here. Pinyin writers, we ask for your understanding.

CONSTANTS

This lists the contents of the catalog CONST. Values of physical constants (*incl. their relative standard deviations given in parentheses below*) are from CODATA 2006, copied in August 2010. Green background denotes exact or almost exact values. The more the color turns to red, the less precise the respective constant is known¹⁸.

The characters necessary to get to a specific function in the catalog are printed bold in this index –  has to be pressed once for each character printed red.

For the units, remember Tesla with $1T = 1 \frac{Wb}{m^2} = 1 \frac{V \cdot s}{m^2}$, Joule with $1J = 1N \cdot m = 1 \frac{kg \cdot m^2}{s^2}$

and on the other hand $1J = 1W \cdot s = 1V \cdot A \cdot s = \frac{1}{e} eV \approx 6.24 \cdot 10^6 TeV$. Thus $1 \frac{J}{T} = 1A \cdot m^2$.

	Numeric value	Unit	Remarks
a	365.2425	<i>d</i>	Gregorian year (per definition)
a₀	5.2917720859E-11 (6.8E-10)	<i>m</i>	Bohr radius $= \frac{\alpha}{4\pi \cdot R_{\infty}}$
c	2.99792458E8	$\frac{m}{s}$	Vacuum speed of light (per definition)
c₁	3.74177118E-16 (5.0E-8)	$m^2 \cdot W$	First radiation constant $= 2\pi \cdot h \cdot c^2$
c₂	0.014387752 (1.7E-6)	$m \cdot K$	Second radiation constant $= \frac{hc}{k}$
e	1.602176487E-19 (2.5E-8)	<i>C</i>	Electron charge $= \frac{2}{K_J R_K} = \Phi_0 G_0$
eE	2.718281828459045...	1	Euler's e. Please note the letter <i>e</i> is used for the electron charge elsewhere in this table.
F	96485.3399 (2.5E-8)	$\frac{C}{mol}$	Faraday's constant $= e N_A$
g	9.80665	$\frac{m}{s^2}$	Standard earth acceleration (per definition)
G	6.67428E-11 (1.0E-4)	$\frac{m^3}{kg \cdot s^2}$	Newton's gravitation constant
G₀	7.7480917004E-5 (6.8E-10)	$\frac{1}{\Omega}$	Conductance quantum $= \frac{2e^2}{h} = \frac{2}{R_K}$ with the von Klitzing constant $R_K = 25812.807557 \Omega$

¹⁸ The bracketed values printed here for your kind attention allow you to compute the precision of results you may obtain using these constants. The procedure to be employed is called error propagation. It is often ignored, though essential for trustworthy results – not only in science. Please turn to respective texts before you believe in 4 decimals of a calculation result based on yardstick measurements.

	Numeric value	Unit	Remarks
g_e	2.0023193043622 (7.4E-13)	1	Landé's g-factor
h	6.62606896E-34 (5.0E-8)	$J \cdot s$	Planck constant
\hbar	1.054571628E-34 (5.0E-8)		$= \frac{h}{2\pi}$
k	1.3806504E-23 (1.7E-6)	J/K	Boltzmann constant $= \frac{R}{N_A}$
m_e	9.10938215E-31 (5.0E-8)	kg	Electron mass
m_n	1.674927211E-27 (5.0E-8)		Neutron mass
m_p	1.672621637E-27 (5.0E-8)		Proton mass
m_u	1.660538782E-27 (5.0E-8)		Atomic unit mass $= 10^{-3} \text{ kg} / N_A$
m_μ	1.88353103E-28 (5.6E-8)		Muon mass
N_A	6.02214179E23 (5.0E-8)	$1/mol$	Avogadro's number
NaN			"not a number"
p_o	101325	Pa	standard atmospheric pressure (per definition)
R	8.314472 (1.7E-6)	$\frac{J}{mol \cdot K}$	Molar gas constant
r_e	2.8179402894E-15 (2.1E-9)	m	Classical electron radius $= \alpha^2 \cdot a_0$
R_∞	1.0973731568527E7 (6.6E-12)	$1/m$	Rydberg constant $= \frac{\alpha^2 m_e c}{2h}$
T_o	273.15	K	= 0°C, standard temperature (per definition)
t_p	5.39124E-44 (5.0E-5)	s	Planck time $= \sqrt{\frac{\hbar G}{c^5}}$
V_m	0.022413996 (1.7E-6)	m^3/mol	Molar volume of an ideal gas at standard conditions $= \frac{RT_0}{p_0}$
Z_o	376.730313461...	Ω	Characteristic impedance of vacuum $= \sqrt{\frac{\mu_0}{\epsilon_0}} = \mu_0 c$
α	7.2973525376E-3 (6.8E-10)	1	Fine-structure constant $= \frac{e^2}{4\pi\epsilon_0 \hbar c} \approx \frac{1}{137}$
γ_{EM}	0.57721566490153286...	1	Euler-Mascheroni constant

	Numeric value	Unit	Remarks
γ_p	2.675222099E8 (2.6E-8)	$\frac{1}{s \cdot T}$	Proton gyromagnetic ratio $= 2\mu_p/\hbar$
ϵ_0	8.854187817...E-12	$\frac{A \cdot s}{V \cdot m}$ or F/m	Electric constant, vacuum permittivity $= \frac{1}{\mu_0 c^2}$
λ_c	2.4263102175E-12 (1.4E-9)	m	Compton wavelength of the electron $= \hbar/m_e c$
λ_{cn}	1.3195908951E-15 (1.5E-9)		Compton wavelength of the neutron $= \hbar/m_n c$
λ_{cp}	1.3214098446E-15 (1.9E-9)		Compton wavelength of the proton $= \hbar/m_p c$
μ_0	1.2566370614...E-6	$\frac{V \cdot s}{A \cdot m}$	Magnetic constant, also known as vacuum permeability $= 4\pi \cdot 10^{-7} \frac{V \cdot s}{A \cdot m}$ (per definition)
μ_B	9.27400915E-24 (2.5E-8)	$\frac{J}{T}$ or $A \cdot m^2$	Bohr's magneton $= e\hbar/2m_e$
μ_e	-9.28476377E-24 (2.5E-8)		Electron magnetic moment
μ_n	-9.6623641E-27 (2.4E-7)		Neutron magnetic moment
μ_p	1.410606662E-26 (2.6E-8)		Proton magnetic moment
μ_u	5.05078324E-27 (2.5E-8)		Nuclear magneton $= e\hbar/2m_p$
μ_μ	-4.49044786E-26 (3.6E-8)		Muon magnetic moment
π	3.141592653589793...	1	
σ_B	5.6704E-8 (7.0E-6)	$\frac{W}{m^2 K^4}$	Stefan Boltzmann constant $= \frac{2\pi^5 k^4}{15h^3 c^2}$
Φ	1.61803398874989485...	1	Golden ratio $= \frac{1+\sqrt{5}}{2}$
Φ_0	2.067833667E-15 (2.5E-8)	V s	Magnetic flux quantum $= \hbar/2e = 1/K_J$ with the Josephson constant $K_J = 4.83597891 \cdot 10^{14} Hz/V$
∞		1	Infinity (may the Lord of Mathematics forgive us calling this a constant)

UNIT CONVERSIONS

These are the contents of the catalog CONV¹⁹. The characters necessary to access a specific conversion there are printed bold in this index – **▼** has to be pressed once for each character printed red. The constant **T₀** may be useful for conversions, too; it is found in the [catalog CONST](#). The conversion factors or divisors listed in this table will not be seen when executing a conversion.

Conversion		Remarks	Class
°C→°F	* 1.8 + 32	Exactly	Temperature
°F→°C	- 32) / 1.8	Exactly	Temperature
acres→ha	* 0.4046873	1 ha = 10 ⁴ m ²	Area
ar.→dB	10 * lg(R)	Amplitude ratio. Exactly	Ratio
atm→Pa	* 1.01325E5	Exactly	Pressure
AU→km	* 1.495979E8	Astronomic units	Length
bhp→W	* 745.6999	British horse power	Power
Btu→J	* 1055.056		Energy
cal→J	* 4.1868	Exactly	Energy
cft→l	* 28.31685	Cubic feet	Volume
cm→inches	/ 2.54	Exactly	Length
dB→ar.	10 ^{R_{dB}/20}	Amplitude ratio. Exactly	Ratio
dB →pr.	10 ^{R_{dB}/10}	Power ratio. Exactly	Ratio
fathom→m	* 1.8288		Length
feet→m	* 0.3048	Exactly	Length
flozUK→ml	* 28.41306	1 ml = 1 cm ³	Volume
fl ozUS→ml	* 29.57353		Volume
galUK→ l	* 4.54609		Volume
ga lUS→ l	* 3.785418		Volume
g→oz	/ 28.34952		Mass
g→tr.oz	/ 31.10348		Mass
ha→acres	/ 0.4046873		Area

¹⁹ For most readers, many of the units appearing here may look obsolete at least. They die hard, however, in some corners of this world. For symmetry reasons, we may also add some traditional Indian and Chinese units. Anyway, this catalog provides the means to convert local to common units.

Conversion		Remarks	Class
HP_e→W	* 746	Exactly	Power
inches→cm	* 2.54	Exactly	Length
inHg→Pa	* 3386.389		Pressure
J→Btu	/ 1055.056		Energy
J→cal	/ 4.1868	Exactly	Energy
J→kWh	/ 3.6E6	Exactly, since 1 h = 3600 s	Energy
kg→lbm	/ 0.4535924		Mass
km→AU	/ 1.495979E8	Astronomic units	Length
km→l.y.	/ 9.460730E12	Light years	Length
km→mi	/ 1.609344	Exactly	Length
km→nmi	/ 1.852	Nautical miles, exactly	Length
km→pc	/ 3.085678E16	Parsec	Length
kWh→J	* 3.6E6	Exactly	Energy
lbf→N	* 4.448222		Force
lbm→kg	* 0.4535924		Mass
l.y.→km	* 9.460730E12	Light years	Length
l→cft	/ 28.31685	Cubic feet	Volume
l→galUK	/ 4.54609		Volume
l→galUS	/ 3.785418		Volume
mbar→Pa	* 100	Exactly	Pressure
mi→km	* 1.609344	Exactly	Length
ml→flozUK	/ 28.41306		Volume
ml→flozUS	/ 29.57353		Volume
mmHg→Pa	* 133.3224	1 torr = 1 mm Hg	Pressure
m→fathom	/ 1.8288		Length
m→feet	/ 0.3048	Exactly	Length
m→yards	/ 0.9144	Exactly	Length
nmi→km	* 1.852	Nautical miles, exactly	Length
N→lbf	/ 4.448222		Force


Conversion		Remarks	Class
oz →g	* 28.34952		Mass
Pa →atm	/ 1.01325E5	Exactly	Pressure
Pa →inHg	/ 3386.389		Pressure
Pa →mbar	/ 100	Exactly	Pressure
Pa →mmHg	/ 133.3224		Pressure
Pa →psi	/ 6894.757		Pressure
Pa →torr	/ 133.3224		Pressure
pc →km	* 3.085678E16	Parsec	Length
pr. →dB	10 * lg(R)	Power ratio. Exactly	Ratio
psi →Pa	* 6894.757		Pressure
PS (hp)→W	* 735.4988		Power
s.tons →t	* 0.9071847	1 t = 10 ³ kg	Mass
tons →t	* 1.016047		Mass
torr →Pa	* 133.3224	1 torr = 1 mm Hg	Pressure
tr.oz →g	* 31.10348		Mass
t →s.tons	/ 0.9071847		Mass
t →tons	/ 1.016047		Mass
W →bhp	/ 745.6999		Power
W →HP _e	/ 746	Exactly	Power
W →PS(hp)	* 735.4988		Power
yards →m	* 0.9144	Exactly	Length

In cases of emergency of a particular type, remember that Becquerel equals Hertz, Gray is the unit for deposited or absorbed energy ($1\text{Gy} = 1\text{J/kg}$), and Sievert is Gray times a radiation dependant dose conversion factor for the damage caused in human bodies. In this area also some outdated units may be found in older literature: Pour les amis de Mme. Curie, $1\text{Ci} = 3.7 \cdot 10^{10} \text{Bq} = 3.7 \cdot 10^{10} \text{decays/s}$. And for those admiring the very first Nobel laureate in physics, Mr. Röntgen, for finding the x-rays (ruining his hands in these experiments), $1\text{R} = 2.58 \cdot 10^{-4} \text{As/kg}$.


MESSAGES

There are some commands generating messages also in the dot matrix section of the display. Four of them, DAY, DAYS+, STATUS, and VERS, were introduced above in the [paragraph about display](#) already. Others are PROMPT, α VIEW and many more alpha commands, and the test commands as mentioned [above](#).

Two constants will return a special display when called: **NaN** and ∞ will show you


















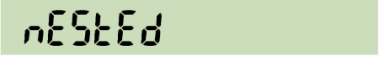
or



, respectively.

Furthermore, there are a number of error messages. Depending on error conditions, the following messages will be displayed in the mode(s) listed:

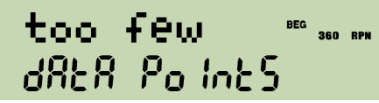Message	Error Code	Mode(s)	Explanation and Examples
	2	DECM	Invalid date format or incorrect date in input, e.g. month >12, day >31 etc.
	9	Integer	Invalid digit in integer input, e.g. 2 in binary, 9 in octal, or +/- in unsigned mode.
	13	All	Caused by calling an operation in a mode where it is not defined, e.g. SIN in hexadecimal.
	1	α	An argument exceeds the domain of the mathematical function called. May be caused by roots or logs of negative numbers (if not preceded by CPX), by $0/0$, $\text{LN}(0)$, $\Gamma(0)$, $\text{TAN}(90^\circ)$ and equivalents, $\text{ATANH}(x)$ for $ \text{Re}(x) \geq 1$, $\text{ACOSH}(x)$ for $\text{Re}(x) < 1$, etc.
	16	α	Similar to error 1 but a parameter specified in J or K is out of supported range for the function called. May appear e.g. if $\text{Ln}(x)$ is called with $j < 0$.
	6	All	Attempt to address an undefined label.

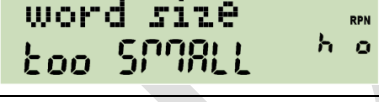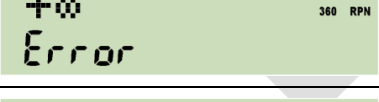Message	Error Code	Mode(s)	Explanation and Examples
	8	All	<ul style="list-style-type: none"> A number exceeds the valid range. Caused e.g. by specifying decimals >11, word size >64, negative flag numbers, integers $\geq 2^{64}$, hours or degrees >9000, invalid times, denominators ≥ 9999 etc. A register address exceeds the valid range. May also happen in indirect addressing. An R-operation (e.g. R-COPY) attempts exceeding valid register numbers (0 .. 99).
	7	PRG	Nested use of solve, integrate, sum or product is not allowed.
	12	All	STOS or RCLS attempt using registers that would overlap the stack, e.g. SSIZE = 8 and STOS 94.
	15	DECM	A statistical calculation was started based on too few data points, e.g. regression or standard deviation for < 2 points.
	10	All	Keyboard input is too long for the buffer (should never happen, but who knows).
	3	All	An instruction with an undefined op-code occurred (should never happen, but who knows).
	14	Integer, \PRG	Stack or register content is too big for the word size set.
	4	\α, \PRG	<ul style="list-style-type: none"> Division of a number > 0 (or < 0) by zero. Divergent sum or product or integral. Positive (or negative) overflow in DECM (see above).
	5		
	11	PRG	Subroutine nesting exceeds 8 levels.

Any key pressed will erase the error message displayed and execute with the stack contents present. Thus, the easiest return to the display shown before the error occurred is pressing a prefix twice.

APPENDIX A: INTERNAL SUPPORT COMMANDS

Some commands are used in internal routines exclusively and are not accessible from the keyboard. They are listed here for sake of a complete documentation:

Name	Purpose and remarks																																																																																													
BACK <u><i>n</i></u>	Jumps <i>n</i> program steps backwards ($1 \leq n \leq 99$). So e.g. BACK 01 goes to the previous step. Reaching step 000 stops program execution.																																																																																													
ERR <u><i>n</i></u>	Raises the error specified. See above for the respective error codes.																																																																																													
iC <u><i>n</i></u>	<p>Internal constants, selected by the number specified:</p> <table><tr><td>0</td><td>0</td><td></td></tr><tr><td>1</td><td>1</td><td></td></tr><tr><td>2</td><td>5.01402</td><td>Kronrod only weight loop initializer (constants 5 - 14 below)</td></tr><tr><td>3</td><td>15.02903</td><td>Gauss-Kronrod weight loop initializer (constants 15 - 29 below)</td></tr><tr><td></td><td></td><td>Midpoint location is 0.5.</td></tr><tr><td>4</td><td>0.149445554002916905664936468389821</td><td>Kronrod weight for midpoint k10</td></tr><tr><td>5</td><td>0.995657163025808080735527280689003</td><td>Kronrod location of k0 and k20</td></tr><tr><td>6</td><td>0.011694638867371874278064396062192</td><td>Kronrod weight for k0 and k20</td></tr><tr><td>7</td><td>0.930157491355708226001207180059508</td><td>Kronrod location of k2 and k18</td></tr><tr><td>8</td><td>0.054755896574351996031381300244580</td><td>Kronrod weight for k2 and k18</td></tr><tr><td>9</td><td>0.780817726586416897063717578345042</td><td>Kronrod location of k4 and k16</td></tr><tr><td>10</td><td>0.093125454583697605535065465083366</td><td>Kronrod weight for k4 and k16</td></tr><tr><td>11</td><td>0.562757134668604683339000099272694</td><td>Kronrod location of k6 and k14</td></tr><tr><td>12</td><td>0.123491976262065851077958109831074</td><td>Kronrod weight for k6 and k14</td></tr><tr><td>13</td><td>0.294392862701460198131126603103866</td><td>Kronrod location of k8 and k12</td></tr><tr><td>14</td><td>0.142775938577060080797094273138717</td><td>Kronrod weight for k8 and k12</td></tr><tr><td>15</td><td>0.973906528517171720077964012084452</td><td>Location of g0, g9, k1 and k19</td></tr><tr><td>16</td><td>0.066671344308688137593568809893332</td><td>Gauss weight for g0 and g9</td></tr><tr><td>17</td><td>0.032558162307964727478818972459390</td><td>Kronrod weight for k1 and k19</td></tr><tr><td>18</td><td>0.865063366688984510732096688423493</td><td>Location of g1, g8, k3 and k17</td></tr><tr><td>19</td><td>0.149451349150580593145776339657697</td><td>Gauss weight for g1 and g8</td></tr><tr><td>20</td><td>0.075039674810919952767043140916190</td><td>Kronrod weight for k3 and k17</td></tr><tr><td>21</td><td>0.679409568299024406234327365114874</td><td>Location of g2, g7, k5 and k15</td></tr><tr><td>22</td><td>0.219086362515982043995534934228163</td><td>Gauss weight for g2 and g7</td></tr><tr><td>23</td><td>0.109387158802297641899210590325805</td><td>Kronrod weight for k5 and k15</td></tr><tr><td>24</td><td>0.433395394129247190799265943165784</td><td>Location of g3, g6, k7 and k13</td></tr><tr><td>25</td><td>0.269266719309996355091226921569469</td><td>Gauss weight for g3 and g6</td></tr><tr><td>26</td><td>0.134709217311473325928054001771707</td><td>Kronrod weight for k7 and k13</td></tr><tr><td>27</td><td>0.148874338981631210884826001129720</td><td>Location of g4, g5, k9 and k11</td></tr><tr><td>28</td><td>0.295524224714752870173892994651338</td><td>Gauss weight for g4 and g5</td></tr><tr><td>29</td><td>0.147739104901338491374841515972068</td><td>Kronrod weight for k9 and k11</td></tr></table> <p>Constants 2 .. 29 are for the 10 / 21 point Gauss-Kronrod quadrature used by the internal integration command. Locations are in the range (0, 1) which is scaled to match the interval of integration. The quadrature sums the weight times the function value at each location to estimate the integral. In Gauss-Kronrod schemes the Gauss points are common to both quadratures although the weights are different. This means two estimates of the integral can be performed without increasing the number of function evaluations which in turn allows an estimate of the error to be made. The cost for this is a reduction in the degree of polynomial function that is always integrated exactly.</p>	0	0		1	1		2	5.01402	Kronrod only weight loop initializer (constants 5 - 14 below)	3	15.02903	Gauss-Kronrod weight loop initializer (constants 15 - 29 below)			Midpoint location is 0.5.	4	0.149445554002916905664936468389821	Kronrod weight for midpoint k10	5	0.995657163025808080735527280689003	Kronrod location of k0 and k20	6	0.011694638867371874278064396062192	Kronrod weight for k0 and k20	7	0.930157491355708226001207180059508	Kronrod location of k2 and k18	8	0.054755896574351996031381300244580	Kronrod weight for k2 and k18	9	0.780817726586416897063717578345042	Kronrod location of k4 and k16	10	0.093125454583697605535065465083366	Kronrod weight for k4 and k16	11	0.562757134668604683339000099272694	Kronrod location of k6 and k14	12	0.123491976262065851077958109831074	Kronrod weight for k6 and k14	13	0.294392862701460198131126603103866	Kronrod location of k8 and k12	14	0.142775938577060080797094273138717	Kronrod weight for k8 and k12	15	0.973906528517171720077964012084452	Location of g0, g9, k1 and k19	16	0.066671344308688137593568809893332	Gauss weight for g0 and g9	17	0.032558162307964727478818972459390	Kronrod weight for k1 and k19	18	0.865063366688984510732096688423493	Location of g1, g8, k3 and k17	19	0.149451349150580593145776339657697	Gauss weight for g1 and g8	20	0.075039674810919952767043140916190	Kronrod weight for k3 and k17	21	0.679409568299024406234327365114874	Location of g2, g7, k5 and k15	22	0.219086362515982043995534934228163	Gauss weight for g2 and g7	23	0.109387158802297641899210590325805	Kronrod weight for k5 and k15	24	0.433395394129247190799265943165784	Location of g3, g6, k7 and k13	25	0.269266719309996355091226921569469	Gauss weight for g3 and g6	26	0.134709217311473325928054001771707	Kronrod weight for k7 and k13	27	0.148874338981631210884826001129720	Location of g4, g5, k9 and k11	28	0.295524224714752870173892994651338	Gauss weight for g4 and g5	29	0.147739104901338491374841515972068	Kronrod weight for k9 and k11
0	0																																																																																													
1	1																																																																																													
2	5.01402	Kronrod only weight loop initializer (constants 5 - 14 below)																																																																																												
3	15.02903	Gauss-Kronrod weight loop initializer (constants 15 - 29 below)																																																																																												
		Midpoint location is 0.5.																																																																																												
4	0.149445554002916905664936468389821	Kronrod weight for midpoint k10																																																																																												
5	0.995657163025808080735527280689003	Kronrod location of k0 and k20																																																																																												
6	0.011694638867371874278064396062192	Kronrod weight for k0 and k20																																																																																												
7	0.930157491355708226001207180059508	Kronrod location of k2 and k18																																																																																												
8	0.054755896574351996031381300244580	Kronrod weight for k2 and k18																																																																																												
9	0.780817726586416897063717578345042	Kronrod location of k4 and k16																																																																																												
10	0.093125454583697605535065465083366	Kronrod weight for k4 and k16																																																																																												
11	0.562757134668604683339000099272694	Kronrod location of k6 and k14																																																																																												
12	0.123491976262065851077958109831074	Kronrod weight for k6 and k14																																																																																												
13	0.294392862701460198131126603103866	Kronrod location of k8 and k12																																																																																												
14	0.142775938577060080797094273138717	Kronrod weight for k8 and k12																																																																																												
15	0.973906528517171720077964012084452	Location of g0, g9, k1 and k19																																																																																												
16	0.066671344308688137593568809893332	Gauss weight for g0 and g9																																																																																												
17	0.032558162307964727478818972459390	Kronrod weight for k1 and k19																																																																																												
18	0.865063366688984510732096688423493	Location of g1, g8, k3 and k17																																																																																												
19	0.149451349150580593145776339657697	Gauss weight for g1 and g8																																																																																												
20	0.075039674810919952767043140916190	Kronrod weight for k3 and k17																																																																																												
21	0.679409568299024406234327365114874	Location of g2, g7, k5 and k15																																																																																												
22	0.219086362515982043995534934228163	Gauss weight for g2 and g7																																																																																												
23	0.109387158802297641899210590325805	Kronrod weight for k5 and k15																																																																																												
24	0.433395394129247190799265943165784	Location of g3, g6, k7 and k13																																																																																												
25	0.269266719309996355091226921569469	Gauss weight for g3 and g6																																																																																												
26	0.134709217311473325928054001771707	Kronrod weight for k7 and k13																																																																																												
27	0.148874338981631210884826001129720	Location of g4, g5, k9 and k11																																																																																												
28	0.295524224714752870173892994651338	Gauss weight for g4 and g5																																																																																												
29	0.147739104901338491374841515972068	Kronrod weight for k9 and k11																																																																																												

Name	Purpose and remarks
RTN+1	Returns control to the calling routine like RTN does, but moves the program pointer to the <u>second</u> line following the most recent XEQ instruction encountered. If there is no matching XEQ, program execution halts.
SKIP <u>n</u>	Skips n program steps forwards ($1 \leq n \leq 99$). So e.g. SKIP 02 skips over the next two steps, going e.g. from step 123 to step 126. If the skip would land beyond the end of <u>occupied</u> program memory, the same will happen as if a RTN had been encountered.
	<p>The two solver commands described below may use some hidden registers and flags. The start points of the respective register and flag blocks are passed as one argument n.</p> <p>Registers:</p> <ul style="list-style-type: none"> n+0 .. n+1: first two estimates a and b for the root n+2: third estimate c n+3: function value at first estimate f(a) n+4: function value at second estimate f(b) <p>Flags:</p> <ul style="list-style-type: none"> n+0 .. n+7: an eight bit iteration counter n+8: "bracket flag" – true if we've got an interval with $f(a) * f(b) < 0$ n+9: true if all function evaluations have been constant so far
SLVI <u>n</u>	Initializes the solver. SLVI clears the iteration counter, takes a and b and calculates f(a) and f(b) , sets the last two flags accordingly, and produces a guess c . There is no stack interaction.
SLVS <u>n</u>	Solver step. Updates the internal solver state based on the last function evaluation. In particular, SLVS takes a , b , c , f(a) , and f(b) from the register block plus f(c) from X and updates the register values so that c and f(c) replace one of a and f(a) or b and f(b) . It also produces a new guess c and returns zero in X if the solving should continue and non-zero if not. Otherwise, the stack isn't altered.
	<p>The built in solver loop looks like this in principle, assuming n = 0:</p> <pre> SLVI ; calculate f(a) and f(b) and initialize the registers and flags LBL 00 RCL 02 ; recall c XEQUSR ; call the user's subroutine calculating f(c) x≈ 0? ; test if the solution has converged GTO 01 ; converged, so exit SLVS ; update estimates x= 0? ; should we continue? GTO 00 ; loop back again LBL 01 RCL 02 ; best guess so far RTN </pre> <p>The actual solver is fairly complex. A combination of quadratic interpolation and a guarded secant method is used.</p>
SPEC?	Tests if x is special (i.e. NaN or infinite).
XEQUSR	Calls a user subroutine (used by SLV, ∫, ∏ and Σ). The subroutine is defined by the argument to the initial command (either numeric or alpha label).

APPENDIX B: CANDIDATES FOR FURTHER FUNCTIONS

If space allows, the following functions may be implemented easily since they are coded already. None of these are counting the catalog and function table overheads. Two bytes for a catalog entry (one for each catalog it is in) and 12-20 bytes for a function table entry (but only one of these), i.e. not terribly significant. These are all moderately useful functions.

Function name and remarks	Size	Domain
AGM = limit of arithmetic geometric mean.	528 B	R
Bessel functions of first and second kinds: J_n & I_n : real and complex (argument and order); Y_n & K_n : real and complex (argument and order). Remember: $J_n(x) = \sum_{r=0}^{\infty} \frac{(-1)^r \cdot \left(\frac{x}{2}\right)^{2r+n}}{r! \Gamma(n+r+1)}$	4470 B	R, C
Cube / cube root	576 B	Z, R, C
Digamma function (ψ , needed for Bessel functions of second kind of integer order)	1384 B	R, C
Fused multiply and add The real version can be replaced by complex multiply. $x+y*z$ can be done via $(y, x) * (z, -1)$ at a pinch.	96 B	Z, R
Jacobi elliptic functions S_n , C_n & D_n	1780 B	R, C
Riemann's Zeta function $\zeta(x) = \sum_{n=1}^{\infty} \frac{1}{n^x}$ with $\text{Re}(x) > 1$.	2012 B	R, C
x!!	288 B	R, C

PRIME? also includes overflow resistant code for $(a * b) \bmod c$ and $(a ^ b) \bmod c$ which could also be exposed if required.

	Date	Release notes
1	9.12.08	Start
1.1	15.12.08	Added the table of indicators; added NAND, NOR, XNOR, RCLWS, STOWS, //, N, SERR, SIGMA, < and >; deleted HR, INPUT, 2 flag commands, and 2 conversions; extended explanations for addressing and COMPLEX & ...; put XOR on the keyboard; corrected errors.
1.2	4.1.09	Added ASRN, CBC?, CBS?, CCB, SCB, FLOAT, MIRROR, SLN, SRN, >BIN, >DEC, >HEX, >OCT, BETA, D>R, DATE, DDAYS, D.MY, M.DY, Y.MD, CEIL, FLOOR, DSZ, ISZ, D>R, R>D, EMGAM, GSB, LNBETA, LNGAMMA, MAX, MIN, NOP, REAL, RJ, W and WINV, ZETA, %+ and %-; renamed the top left keys B, C, and D, and bottom left EXIT.
1.3	17.1.09	Added AIP, ALENG, ARCL, AROT, ASHF, ASTO, ATOX, XTOA, AVIEW, CLA, PROMPT (all taken from 42S), CAPP, FC?C, FS?C, SGMNT, and the ...# commands; renamed NBITS to BITS and STOWS to WSIZE; specified the bit commands closer; deleted the 4 carry bit operations.
1.4	10.2.09	Added CONST and a table of constants provided, D>J and J>D, LEAP?, %T, RCL and STO ▲ and ▼, and 2 forgotten statistics registers; deleted CHS, EMGAM, GSB, REAL and ZETA; purged and renamed the bit operations; renamed many commands.
1.5	5.3.09	Added RNDINT, CONV and its table, a memory table, the description of XEQ B, C, D to the operation index, and a and g_e to the table of constants; put CLSTK on a key, moved CLΣ and FILL, changed the % and log labels on the keyboard, put CLALL in X.FCN; checked and cleaned alpha mode keyboard and added a temporary alpha keyboard; rearranged the alphabet to put Greek after Latin, symbols after Greek consistently; separated the input and non-programmable commands; cleaned the addressing tables.
1.6	12.8.09	Added BASE, DAYS+, DROP, DROPY, E3OFF, E3ON, FC?F, FC?S, FIB, FS?F, FS?S, GCD, LCM, SETDAT, SETTIM, SET24, SINC, TIME, VERS, αDAY, αMONTH, αRC#: %Σ, as well as F-, t-, and χ^2 -distributions and their inverses; reassigned DATE, modified DENMAX, FLOAT, αROT, and αSHIFT; deleted BASE arithmetic, BIN, DEC, HEX, and OCT; updated the alpha keyboards; added flags in the memory table; included indirect addressing for comparisons; added a paragraph about the display; updated the table of indicators; corrected errors.
1.7	9.9.09	Added P.FCN and STAT catalogs, 4 more conversions, 3 more flags, Greek character access, CLFLAG, DECOMP, DENANY, DENFAC, DENFIX, Iβ, IΓ, αDATE, αRL, αRR, αSL, αSR, αTIME, 12h, 24h, fraction mode limits, normal distribution and its inverse for arbitrary μ and σ , and Boolean operations working within FLOAT; deleted αROT, αSHIFT, the timer, and forced radians after inverse hyperbolics; renamed WINV to W^{-1} , and beta and gamma commands to Greek; added tables of catalog contents; modified label addressing; relabeled PRGM to P/R and PAUSE to PSE; swapped SHOW and PSE as well as Δ% and % on the keyboard; relabeled Q; corrected CEIL and FLOOR; updated X.FCN and alpha commands; updated the virtual alpha keyboard.
1.8	29.10.09	Added R-CLR, R-COPY, R-SORT, R-SWAP, RCLM, STOM, alpha catalogs, 1 more constant and some more conversions, a table of error messages, as well as the binomial, Poisson, geometric, Weibull and exponential distributions and their inverses; renamed some commands; put $\sqrt{}$ instead of π on hotkey D.
1.9	14.12.09	Added two complex comparisons; swapped and changed labels in the top three rows of keys, dropped CLST; completed function descriptions in the index.
1.10	19.1.10	Added IMPFRC, PROFRC, °ENTER, αBEG, αEND, and an addressing table for items in catalogs; updated temporary alpha mode, display and indicators, RCLM and STOM, alpha-commands and the message table; renamed the exponential distribution; wrote the introduction.
1.11	21.9.10	Changed keyboard layout to bring Π and Σ to the front, relabeled binary log, swapped the locations of π, CLPR, and STATUS, as well as SF and FS?; created a menu TEST for the comparisons removed and the other programmable tests from P.FCN; added %MG, %+MG, %MRR, RESET, SSIZE4, SSIZE8, SSIZE?, °DROP, °FILL, °R↓, °R↑, registers J and K, a table of contents and tables for stack mechanics and addressing in complex operations; updated memory and real number addressing tables, DECOMP, αOFF, αON, Π, and Σ; renamed ROUNDI, WSIZE?, β(x,y), Γ(x) and the constant p_0 ; deleted DROPY (use $x\leftrightarrow y$, DROP instead), αAPP, αBEG, αEND, and the "too long error" message; deleted Josephson and von Klitzing constants (they are just the inverses of other constants included in CONST already); brought more symbols on the alpha keyboard.
1.12	22.12.10	Modified keyboard layout; added catalogs MODE and PROB; changed mode word, catalog contents and handling (XEQ instead of ENTER), as well as some non-programmable info commands; expanded IMPFRC and PROFRC; added a paragraph about the fonts provided and explained alpha catalogs in detail; added PRIME? and some conversions; deleted FRACT, OFF and ON.
1.13	3.2.11	Modified keyboard layout; modified αTIME, radix setting, H.MS+ and H.MS-; added EVEN?, FP?, INT?, LZOFF, LZON, ODD?, RCLS, STOS, returned FRACT; added and renamed some conversions; updated the paragraph about display; added appendices A and B; baptized the device WP 34S.
1.14	18.3.11	Added DEC and INC, renamed FLOAT to DECM; redefined αTIME and H.MS mode; updated appendix A; documented the annunciators BEG and = as well as underflows and overflows in H.MS; corrected some errors showing up with the emulator.
1.15	21.3.11	Modified FIX, removed ALL from MODE, updated CONV.
1.16	27.3.11	Added LBL?, f'(x), and f''(x); modified PSE; upgraded catalog searching.
1.17	ff	Added Cauch, Lgnrm, Logis and their inverses, all the pdf, ENGOVR, SCIOVR, SERRw, sw, xg, ε, ε _m , ε _p , σw, 3 messages; renamed most cdf; killed H.MS mode; corrected errors.