

microEnable IV

Camera Link Product Family

Runtime Version 5.2.2

Getting Started

Imprint

Silicon Software GmbH
Steubenstraße 46
68163 Mannheim, Germany
Tel.: +49 (0) 621 789507 0
Fax: +49 (0) 621 789507 10

© Copyright 2014 Silicon Software GmbH. All rights reserved.

Document Version: 3.0
Document Language: en (US)

Last Change: May 2014

Content

1	Installation and Setup	4
1.1	Getting the Frame Grabber Ready	4
1.1.1	System Requirements	4
1.1.2	Installing the Hardware	5
1.1.3	Installing the Runtime Software under Windows	7
1.1.4	Installing the Runtime Software under Linux	10
1.1.5	Hardware Diagnostics (microDiagnostics)	10
1.2	Getting the Camera Ready	11
2	Image Acquisition with the Tool microDisplay	12
	Appendix	16
	A1: Checking for Installed Firmware and Device Driver Versions	16
	A2: Installing Firmware (microDiagnostics)	17
	A3: Updating the Driver	19
	A4: SDK	19
	A5: Silent Installation Under Windows	20
	A6: Where to Find Further Documentation	24
	A7: Support	25

1 Installation and Setup

1.1 Getting the Frame Grabber Ready

1.1.1 System Requirements

Operating System: You can use your microEnable IV frame grabber with one of the following operating systems:

- Windows® Vista 32bit/64bit
- Windows® 7 32bit/64bit
- Windows® 8 32bit/64bit
- Linux 32bit/64bit (distribution independent; tested with Ubuntu 12.04 LTS)

PCIe Interface: Depending on the frame grabber type you are using, you need one of the following PCIe interfaces on your motherboard for use with the frame grabber:


microEnable IV-AS1-PoCL,
microEnable IV-AD1-CL / -PoCL / -mPoCL,
microEnable IV-VD1-CL:

- PCIe (PCI Express) x1 or
- PCIe x4 or
- PCIe x8 or
- PCIe x16

microEnable IV-AD4-CL / -PoCL,
microEnable IV-VD4-CL / -PoCL:

- PCIe (PCI Express) x4 or
- PCIe x8 or
- PCIe x16

1.1.2 Installing the Hardware

	<p>Power Off</p> <p>Before installing hardware, ensure that</p> <ul style="list-style-type: none">▪ the system power is OFF and unplugged from the power outlet,▪ proper electrical grounding procedures have been followed.
---	--

To install the Frame Grabber Hardware:

1. Shut down your computer.
2. Unplug your computer from the power outlet.
3. Plug the frame grabber into a free, appropriate PCIe slot (see [PCIe Interface](#)) of your PC.


	<p>Prevent Overheating</p> <p>Make sure you use an adequate ventilation system within your computer.</p> <p>This is of special importance if</p> <ul style="list-style-type: none">▪ there is little space between boards in a multi board installation,▪ an installation is close to a graphics card. <p>We also recommend leaving enough free space between boards.</p>
---	---



Figure 1: Plugged frame grabber board within a PC

4. Boot the system.

- Windows: After booting, the frame grabber is recognized in the Windows *Device Manager* under *Multifunction adapters*.
- Linux: If you use Linux, skip the following and proceed with section [1.1.4 Installing the Runtime Software under Linux](#).

There are two ways the frame grabber may be displayed under *Multifunction adapters*.

5. If the frame grabber is displayed

- as *Unknown device*: Proceed with the following section ([1.1.3 Installing the Runtime Software under Windows](#)). The relevant driver will be installed together with the runtime.
- with the full name of the frame grabber (microEnable IV ...): Make sure the frame grabber's driver is the same as the one available in the installation folder of the runtime (see section [A1: Checking for Installed Firmware and Device Driver Versions](#)). If this is not the case, update the frame grabber's driver with the driver you find in the installation folder of the Silicon Software runtime (see section [A3: Updating the Driver](#))

1.1.3 Installing the Runtime Software under Windows



Installation under Linux

If you use a Linux system, please refer to the [Linux Installation Guide](#) for installation under Linux.

Runtime installation 5 includes:

- Advanced AcquisitionApplets
- AcquisitionApplets
- microDisplay
- microDiagnostics
- CIsComWrapper for set-up of virtual COM Ports *(new)*
- Third Party Interfaces:
 - Cognex Adapter *(new)*
 - LabView Interface *(new)*
- FirmwareFlasher (command line version)
- GenIcam Explorer
- Software Development Kit (SDK)
- Silicon Software Generic Service
- CLShell
- Driver
- Microsoft Visual Studio 2005, 2008 (SP1) and 2010 Redistributonal Packages (only Win)
- Documentation
- SDK Examples



Silent Installation under Windows

The Runtime installer supports silent installation, see section [A5: Silent Installation Under Windows](#)).



Downloading the Installer

You are provided with the installer file / an installation DVD by Silicon Software or your local distributor. Alternatively, you can download the runtime installer for your specific frame grabber type from the download area at www.silicon-software.de.

Make sure you download the version that matches your frame grabber type and operating system.

1. Boot the system.
2. Uninstall any Silicon Software runtimes prior to version 5.1.4 that might be installed on your system. From version 5.1.4 onwards, you can keep installations of earlier Silicon Software runtime versions on your system when installing new versions.
3. Decide if you need to install the 64 bit version or the 32 bit version of the Silicon Software runtime.



Full Access Rights to Installation Directory

During the installation process, you will have to specify the target directory for your installation. Make sure you define an installation directory where you have full access rights to (i.e., your personal user directory). This is of special importance if you work with the VisualApplets programming environment, or if you use VA applets.

4. Start installing runtime 5.x:
 - Run the installer for runtime 5.x (64 bit / 32 bit).
 - Alternatively, insert the installation DVD. Setup should start automatically. If this is not the case, start the setup file within the windows folder of the installation DVD.

5. Install the runtime software by following the installation dialogs.

Take special care of two aspects:

a. Minimize Disk Space Consumption

To use minimum disk space for your installation, select only the applets you really need and that comply with the frame grabber model you are using. (For example, if you use a microEnable IV Camera Link frame grabber, uncheck all applets for GigE frame grabbers.)

For the frame grabbers microEnable IV AD4-CL/PoCL and microEnable IV VD4-CL/PoCL, there is a new, improved set of **Advanced AcquisitionApplets** available. We recommend to use these *Advanced AcquisitionApplets* instead of the “classical” *AcquisitionApplets* (which nevertheless can also be installed and used).

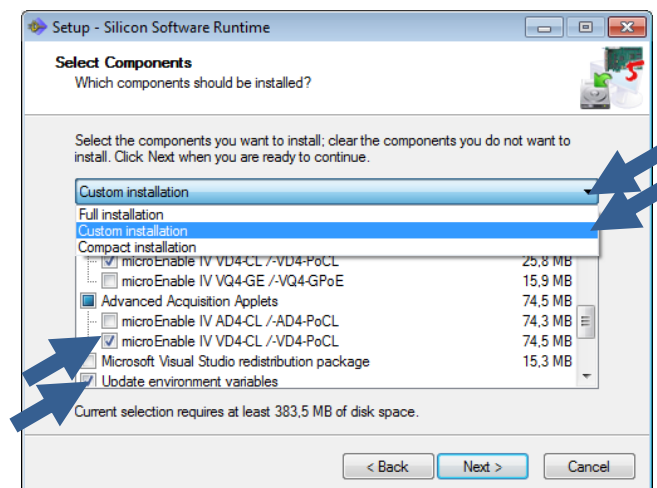


Figure 2: Selecting applets for a specific frame grabber model

b. Specify Shortcuts in Start Menu

Make sure you control and (if necessary) manually adapt the menu entry for the shortcuts in the Start Menu of your system (see figure below).

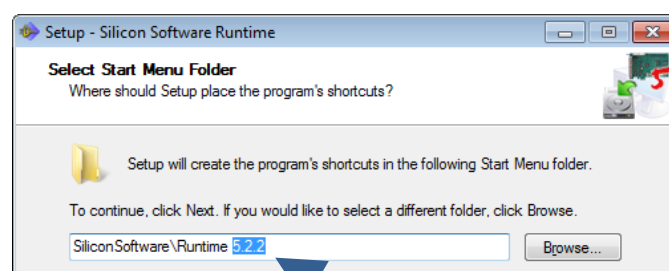


Figure 3: Adapting the menu entry in the Start Menu of your system

1.1.4 Installing the Runtime Software under Linux

If you use a Linux system, please refer to the [Linux Installation Guide](#) for installation under Linux.


1.1.5 Hardware Diagnostics (microDiagnostics)

To perform a full hardware test on your frame grabber, you have the *microDiagnostics* tool available that comes as part of the delivery package.

	Firmware and Driver Versions
	<p>Before you run tests in microDiagnostics, use microDisplay, any other tool, or set up an SDK project: Make sure that for the specific runtime version you are using,</p> <ul style="list-style-type: none"> ▪ the required firmware is loaded onto the frame grabber, and ▪ the required device driver is installed on your system. <p>See section A1: Checking for Installed Firmware and Device Driver Versions.</p>

To perform a full hardware test:

1. Open microDiagnostics.
2. Select the frame grabber you want to test first.

	Frame Grabber not listed?
	<p>If the frame grabber you want to test is not listed, install the latest driver version (see section A3: Updating the Driver).</p>

3. Use the options at the bottom of the program start window to perform your tests:




Figure 4: Test Options in microDiagnostics

While a test is running, the buttons are not available. A test is finished as soon as all buttons are available again.

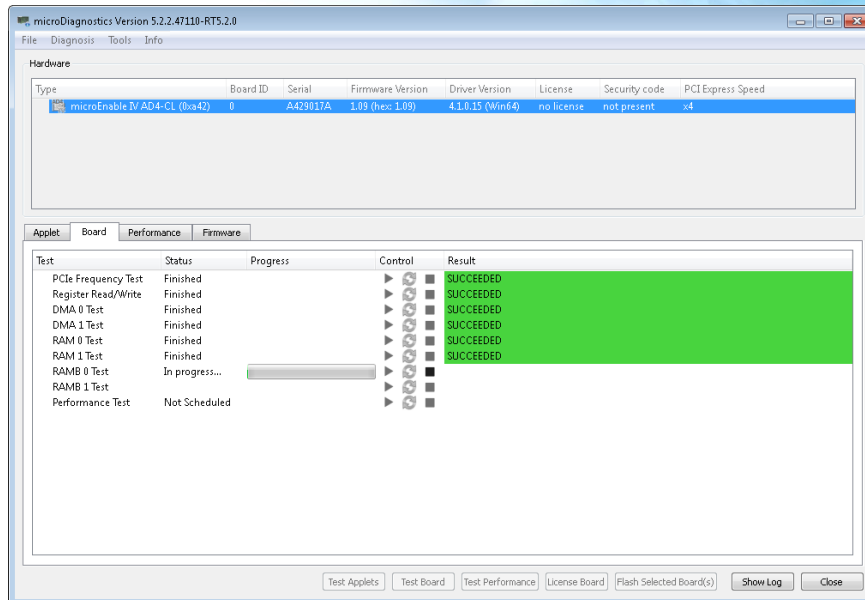


Figure 5: Running Board Test



Tip

You can check the log file containing the data of all your tests by clicking on the **Show Log** button at the bottom of the program start window.

1.2 Getting the Camera Ready

To connect your camera to the frame grabber:

1. Plug the cable(s) of your camera(s) to the connector(s) (Port A and Port B) of the frame grabber.
2. If your camera doesn't use the CL Power Over feature, plug the camera to a power supply.
3. Install the camera configuration tool which comes together with the camera.
4. Configure the camera as recommended by the camera manufacturer. For specific information on the camera link configuration interface of the Silicon Software frame grabbers, see the [Clser Interface](#) and [Virtual COM Port Quick Start](#) / [Virtual COM Port](#) documentation.

2 Image Acquisition with the Tool microDisplay

Depending on the link topology, the Camera Link interface and the camera type you use, as well as on the image data pre-processing you need, you have to load a specific applet onto the frame grabber.

To load an applet:

1. Start the tool microDisplay (START -> All programs -> SiliconSoftware -> RT 5.x -> microDisplay)
2. In the dialog *I want to...*, select **Load Applet**.
3. In the *Load Hardware Applet* dialog under *Board*, select the frame grabber you want to use.
4. The available applets are displayed.



Information on Applet Features

The speaking file names provide information on the most relevant applet features. To get further information, use the applet documentation you find under

- http://www.siliconsoftware.de/download/live_docu/RT5/en/advancedacquisitionapplets/overview.html (for Advanced Acquisition Applets), and
- http://www.siliconsoftware.de/download/live_docu/RT5/en/overviews/applet_feature_overview_av.html (for Acquisition Applets)

5. Select the applet you want to use.

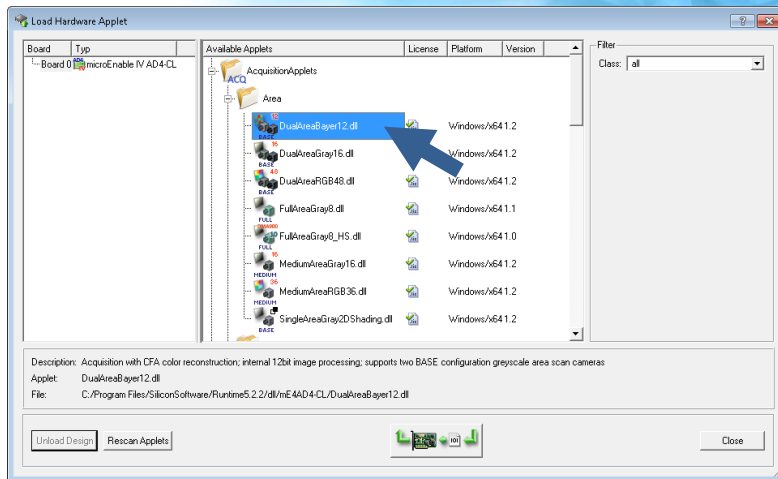



Figure 6: Selecting an applet in microDisplay

6. Click on the Load button  to load the selected applet onto the frame grabber.

As soon as the applet is loaded (and the camera plugged to the frame grabber), the camera is detected by the system and the connection is displayed in microDisplay:

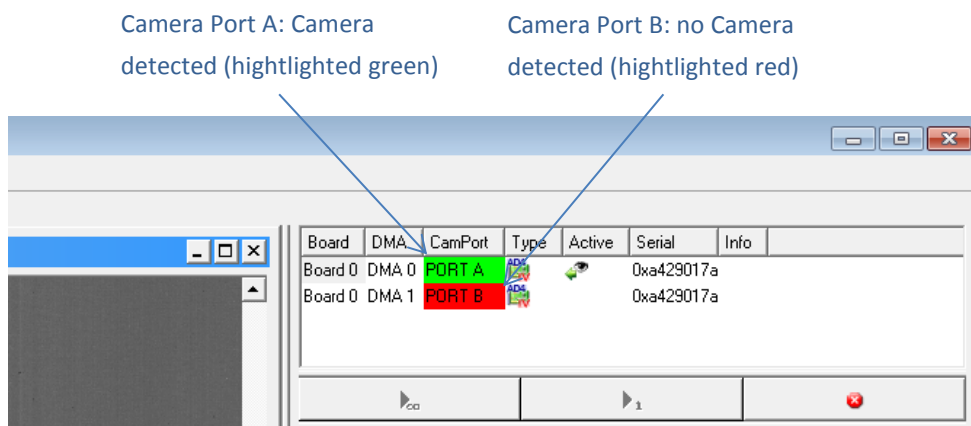


Figure 7: Port A with connected camera, Port B without connected camera as displayed in microDisplay

7. Close the Load Hardware Applet dialog.

You can configure now the frame grabber using the parameter panel of the microDisplay program window.

8. When working with more than one camera: Select the port you are going to configure.

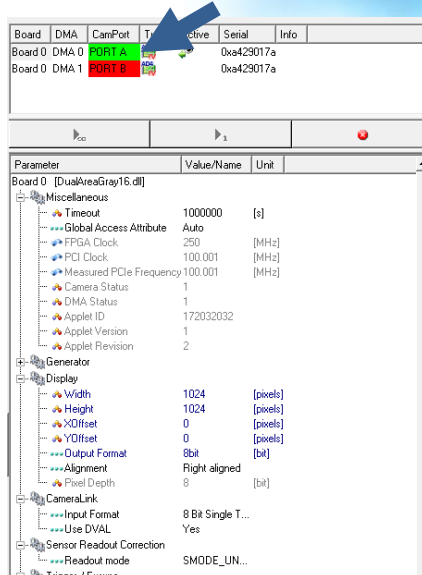


Figure 8: Configuration Parameters for Frame Grabber Parameterization

9. Set the parameters to your needs, e.g., image height and image width.
 - a. Right-click directly on the value and select **Edit**.
 - b. Enter the value.

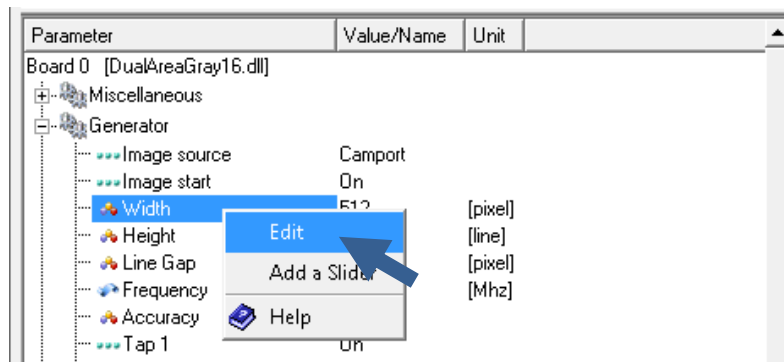



Figure 9: Entering Parameters

10. Optional: Configure specific operation modes you want to use (e.g., trigger settings).
11. Start image acquisition on the frame grabber by clicking on the button *Grab and display an infinite number of frames*  .

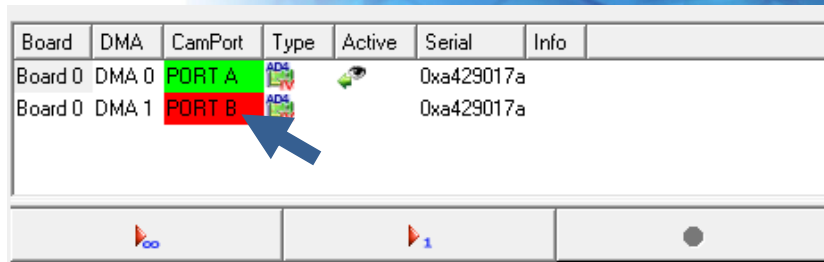


Figure 10: Starting image acquisition on the frame grabber

The grabbed images are now displayed in *microDisplay*:

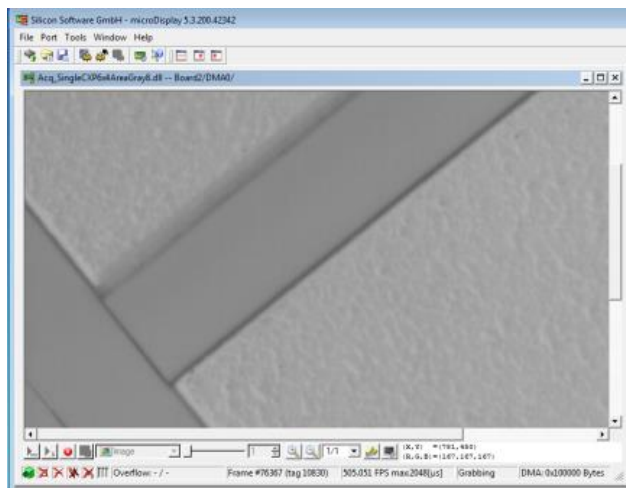


Figure 11: Display of grabbed images in the tool *microDisplay*

12. To stop the acquisition, click on the stop button in *microDisplay*:

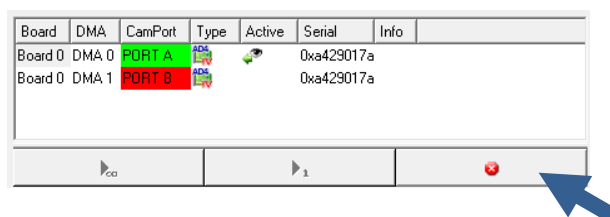


Figure 12: Stopping acquisition on the frame grabber via *microDisplay*


Appendix

A1: Checking for Installed Firmware and Device Driver Versions

To compare installed and required firmware and device driver versions:

1. Open *microDiagnostics* (START -> All programs -> SiliconSoftware -> RT 5.x -> microDiagnostics)

In the first window that opens, all frame grabbers installed on your PC are listed. Here, you find information on the currently installed firmware and device driver versions:

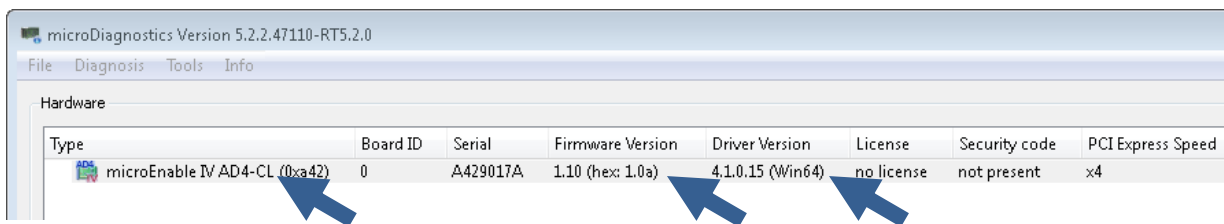

Type	Board ID	Serial	Firmware Version	Driver Version	License	Security code	PCI Express Speed
microEnable IV AD4-CL (0xa42)	0	A429017A	1.10 (hex: 1.0a)	4.10.15 (Win64)	no license	not present	x4

2. Compare the displayed versions with the required versions as stated in the release notes.
 - If the installed firmware and driver versions match the versions specified in the release notes of your runtime version, proceed with installing the runtime as described in section [1.1.3](#) (Windows) or [1.1.4](#) (Linux).
 - If you need another firmware version on your frame grabber, proceed as described in section [A2: Installing Firmware](#) (microDiagnostics).
 - If you need another driver version for your frame grabber, proceed as described in section [A3: Updating the Driver](#).

A2: Installing Firmware (microDiagnostics)

To install another firmware on the frame grabber:

1. Start the tool microDiagnostics (START -> All programs -> SiliconSoftware -> RT 5.x -> microDiagnostics).
2. Select the frame grabber you want to use.

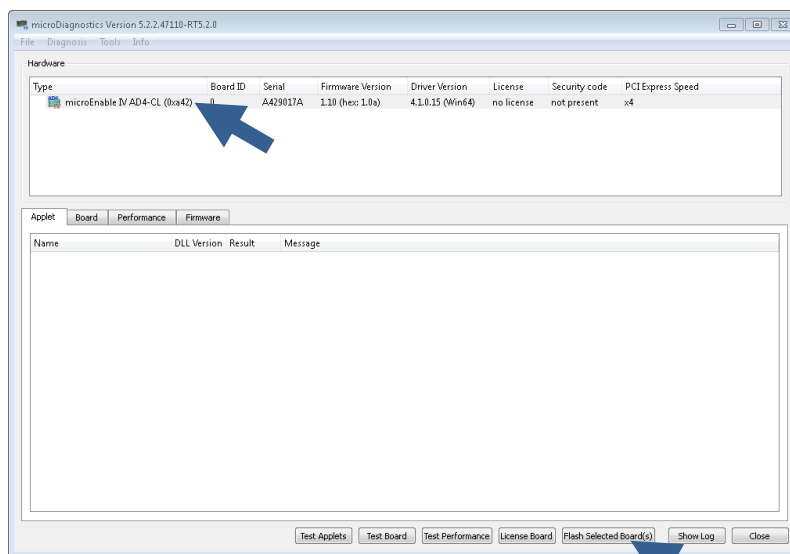


Figure 13: Start window of microDiagnostics

3. Click the button **Flash Selected Board(s)**. A new window opens.
4. Open the folder which has the name of your frame grabber. Here, you find the firmware files available for this frame grabber.

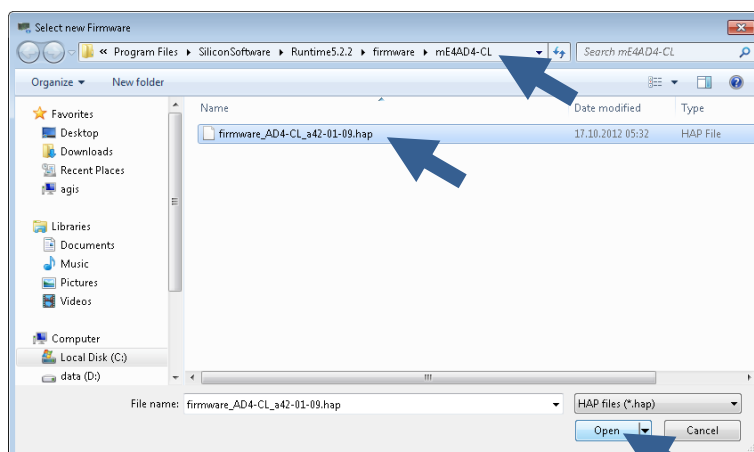


Figure 14: List of firmware files available for flashing the selected frame grabber board

5. Select the firmware you need.
6. Click on **Open** and confirm by clicking on **Yes**.


Applet	Board	Performance	Firmware	
	Board ID	Board Serial	Progress	
	microEnable IV AD4-CL	A429017A	<div><div></div></div> 15% flashing...	


Figure 15: Flashing in progress – as displayed in microDiagnostics

7. Wait until the new firmware is completely installed. You get an according message in microDiagnostics.

Message
Board flashed successfully. You must power cycle your computer for the changes to take effect.

Figure 16: Message after successful flashing

8. Power cycle your computer:
 - a. Shut down your computer.
 - b. After the computer is completely off, wait for some seconds.
 - c. Start the computer again.



Complete Shut Down Essential

For power cycling, it is not enough use the *Restart* option of Windows. Complete shut down and following new start are essential when you need to power cycle your computer.

9. Proceed with
 - Section [A3: Updating the Driver](#) (if you also need another driver version),
 - Installing the runtime as described in section [1.1.3](#) (Windows) or [1.1.4](#) (Linux), or
 - Section [1.1.5 Hardware Diagnostics \(microDiagnostics\)](#).

A3: Updating the Driver

To update the driver:

1. Open the "Device Manager".
2. Under "Multifunction adapters", search for the subentry listing the frame grabber you want to work with.
3. Right-click onto it and select "Update Driver Software".
4. Follow the driver update dialogs and install the driver you find in the installation folder of the runtime.
5. After driver update, reboot your system.
6. Proceed with one of the following sections:
 - Installing the runtime as described in section [1.1.3](#) (Windows) or [1.1.4](#) (Linux), or
 - Section [1.1.5 Hardware Diagnostics \(microDiagnostics\)](#)

A4: SDK

For detailed information on the Silicon Software SDK, please refer to the SDK documentation that comes with the runtime documentation. Here, you will find all SDK documentation, including a general function reference and a Camera Link specific function reference. Silicon Software also provides a set of SDK examples which comes together with the SDK documentation.

A5: Silent Installation Under Windows

The Runtime installer supports silent installation. The setup program accepts optional command line parameters. These can be useful for system administrators and other programs calling the setup program.

Setup Command Line Parameters

/SILENT, /VERYSILENT

Instructs the setup to be *silent* or *very silent*.

- Silent setup: The wizard and the background window are not displayed, but the installation progress window is visible on screen.
- Very silent setup: Wizard and background window are not displayed; even the installation progress window is not displayed.

Everything else is normal, e.g., error messages during installation are displayed, as well as the startup prompt (if you haven't disabled it with `DisableStartupPrompt` or the `'/SP-'` command line option).

If a restart is necessary and the `'/NORESTART'` command isn't used (see below):

- Silent setup: A "Reboot now?" message box is displayed.
- Very silent setup: The system reboots without asking.

/SUPPRESSMSGBOXES

Instructs the setup to suppress message boxes. This command line parameter has only an effect when combined with `'/SILENT'` or `'/VERYSILENT'`.

The used defaults are the following:

- 'Keep newer file?' **Yes**
- 'File exists, confirm overwrite.' **No**
- Abort/Retry: **Abort**
- Retry/Cancel: **Cancel**
- DiskSpaceWarning/ DirExists/ DirDoesntExist/ /NoUninstallWarning/ ExitSetupMessage/ ConfirmUninstall: **Yes (=continue)**
- FinishedRestartMessage/ /UninstalledAndNeedsRestart: **Yes (=restart)**



5 message boxes are not suppressible:

- The “About Setup” message box,
- The “Exit Setup?” message box, and
- The “FileNotInDir2” message box which is displayed when setup requires a new disk to be inserted and the disk was not found.
- Any (error) message box displayed before Setup (or Uninstall) could read the command line parameters.
- Any message box displayed by [Code] support function **MsgBox**.

/LOG="filename"

Same as /LOG, except that this parameter allows you to specify a fixed path/filename to use for the log file. If a file with the specified name already exists, it will be overwritten. If the file cannot be created, setup will abort with an error message.

/NORESTART

Instructs setup not to reboot even if ia reboot is necessary.

/DIR="x:\dirname"

Overrides the default directory name displayed on the *Select Destination Location* wizard page. A fully qualified pathname must be specified.

/GROUP="folder name"

Overrides the default folder name displayed on the *Select Start Menu Folder* wizard page. If the [Setup] section directive `DisableProgramGroupPage` was set to **yes**, this command line parameter is ignored.

/NOICONS

Instructs setup to initially check the *Don't create a Start Menu Folder* check box on the *Select Start Menu Folder* wizard page.

/COMPONENTS="comma separated list of component names"

Overrides the default component settings. Using this command line parameter causes the setup to automatically select a custom type. If no custom type is defined, this parameter is ignored.

Only the specified components will be selected; the rest will be deselected. If a component name is prefixed with a "*" character, any child components will be selected as well (except for those that include the dontinheritcheck flag). If a component name is prefixed with a "!" character, the component will be deselected.

This parameter does not change the state of components that include the fixed flag.

Usage:

<SISO_INSTALLER_EXE.exe> /Components = "<component1>,<component2>"

Available components:

Component	Description
core	Installation of core components (required)
tools_cli	Installation of command line tools
tools_gui	Installation of GUI tools
doc	Installation of documentation
gige	Support for GigE Vision frame grabber
dev\core	Installation of libs and header files
dev\examples	Installation of SDK examples
dev\examples_source	Installation of the source code of the examples
dev\examples_bin	Installation of example binaries
dev\cmake	Installation of cmake files
acq_applets	Installation of AcquisitionApplets
acq_applets\me4as1cl	Installation of frame grabber specific AcquisitionApplets
acq_applets\me4ad1cl	Installation of frame grabber specific AcquisitionApplets
acq_applets\me4ad4cl	Installation of frame grabber specific AcquisitionApplets
acq_applets\me4aq4ge	Installation of frame grabber specific AcquisitionApplets
acq_applets\me4vd1cl	Installation of frame grabber specific AcquisitionApplets
acq_applets\me4vd4cl	Installation of frame grabber specific AcquisitionApplets
acq_applets\me4vq4ge	Installation of frame grabber specific AcquisitionApplets
advanced_acq_applets	Installation of Advanced AcquisitionApplets
advanced_acq_applets\me4ad4cl	Installation of frame grabber specific AcquisitionApplets

advanced_acq_applets\me4vd4cl	Installation of frame grabber specific AcquisitionApplets
UpdateEnvironment	Update of the environment variables
CompCLStandardVersion_2	Installation of CLser as defined in Camera Link 2.0
Com_0_Com	Installation of virtual null modem
bin_libs	Installation of libs into the system directory
redist_package	Installation of redistributable packages

Notes:

- Multiple components are applied by a commata separated list.
- The list may not contain any blanks.

/TASKS="comma separated list of task names"

Specifies a list of tasks that should be initially selected.

Only the specified tasks will be selected; the rest will be deselected. Use the /MERGETASKS parameter instead if you want to keep the default set of tasks and only select/deselect some of them.

If a task name is prefixed with a "*" character, any child tasks will be selected as well (except for those that include the dontinheritcheck flag). If a task name is prefixed with a "!" character, the task will be deselected.

Usage:

<SISO_INSTALLER_EXE.exe> /Tasks = "<task1>,<task2>"

Available tasks:

Task	Description
taskDesktopicon	installs a desktop icon
taskDrvInstall64	update of the device drivers


Example for a silent installation:

```
RuntimeSetup_v5.2.2_Win64.exe
/component=core,tools_cli,acq_applets\me4ad1cl,acq_applets\me4vd1
cl /silent
```

A6: Where to Find Further Documentation

Silicon Software provides deep and comprehensive documentation for its frame grabber series. The documentation is part of the installation package. After installation of the runtime software package, you find the documentation in the Windows start menu:

START -> All Programs -> SiliconSoftware -> Runtime 5.3 CXP -> Documentation

	<p>Live Documentation</p> <p>You always find the last update of our documentation in the download area at http://www.silicon-software.de</p>
---	--

The most relevant information for running your frame grabber for the first time is:



Figure 17: Documentation set for the microEnable Frame Grabbers & Runtime

You get the following information:

1) Image Acquisition

Information on

- How frame grabber applets work
- Applets for individual frame grabber models
- How to set up an image acquisition
- Trigger boards and how to use them

2) Frame Grabber Hardware

Information on

- Individual frame grabber boards and accessories

3) Software Development Kit (API)

- Introduction to this powerful image acquisition library
- SDK Manual
- SDK Reference
- SDK examples as a quick and simple starting point for your own C/C++ projects

4) Tools

Information on

- Camera configuration with GenICam Explorer
- Image acquisition with microDisplay

A7: Support

Feel free to contact our support team for any technical support you may need:

<mailto:support@silicon-software.de>

Phone: +49 621 789 50 70

Contact Details

SILICONSOFTWARE GmbH

Steubenstrasse 46

D - 68163 Mannheim, Germany

Phone: +49(0)621.789 507 39

Fax: +49(0)621.789 507 10

Email: vertrieb@silicon-software.de

Web: www.silicon-software.info

SILICONSOFTWARE Inc.

1 Tara Boulevard, Suite 200

Nashua, NH 03062, USA

Phone: +1 603 324 7172

Fax: +1 603 324 7101

Email: info@silicon-software.com

Web: www.silicon-software.info

Disclaimer

While every precaution has been taken in the preparation of this manual, Silicon Software GmbH assumes no responsibility for errors or omissions. Silicon Software GmbH reserves the right to change the specification of the product described within this manual and the manual itself at any time without notice and without obligation of Silicon Software GmbH to notify any person of such revisions or changes.

Trademarks

All trademarks and registered trademarks are the property of their respective owners.

Copyright Note

© Copyright 2000–2014 Silicon Software GmbH. All rights reserved. This document may not in whole or in part, be reproduced, transmitted, transcribed, stored in any electronic medium or machine readable form, or translated into any language or computer language without the prior written consent of Silicon Software GmbH.