

# OpenHarmony E53模块开发-智慧农业



# 目 录


## C O N T E N T S

- [ 01 ] 硬件设计
- [ 02 ] 硬件连接
- [ 03 ] API分析
- [ 04 ] 实例分析

# 01


## 硬件设计

### 资源介绍

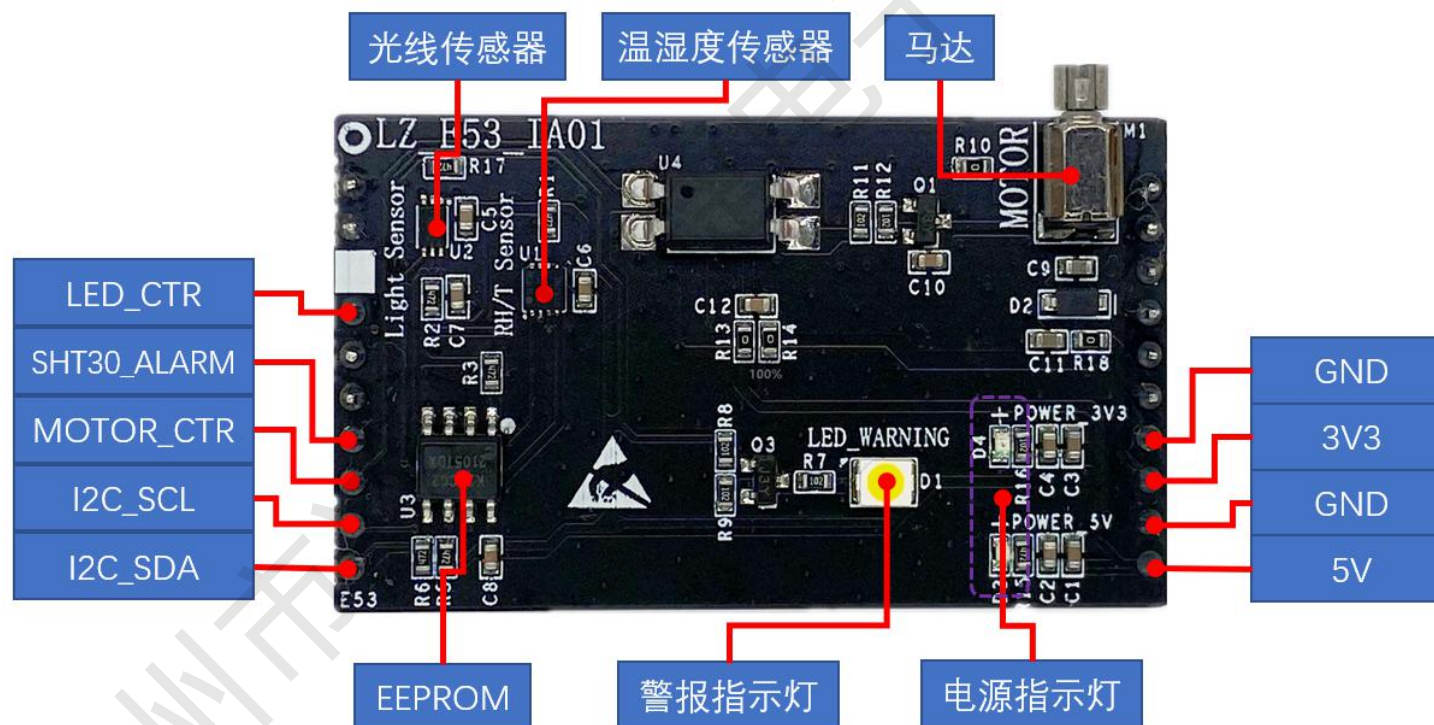

## 02

## 硬件连接

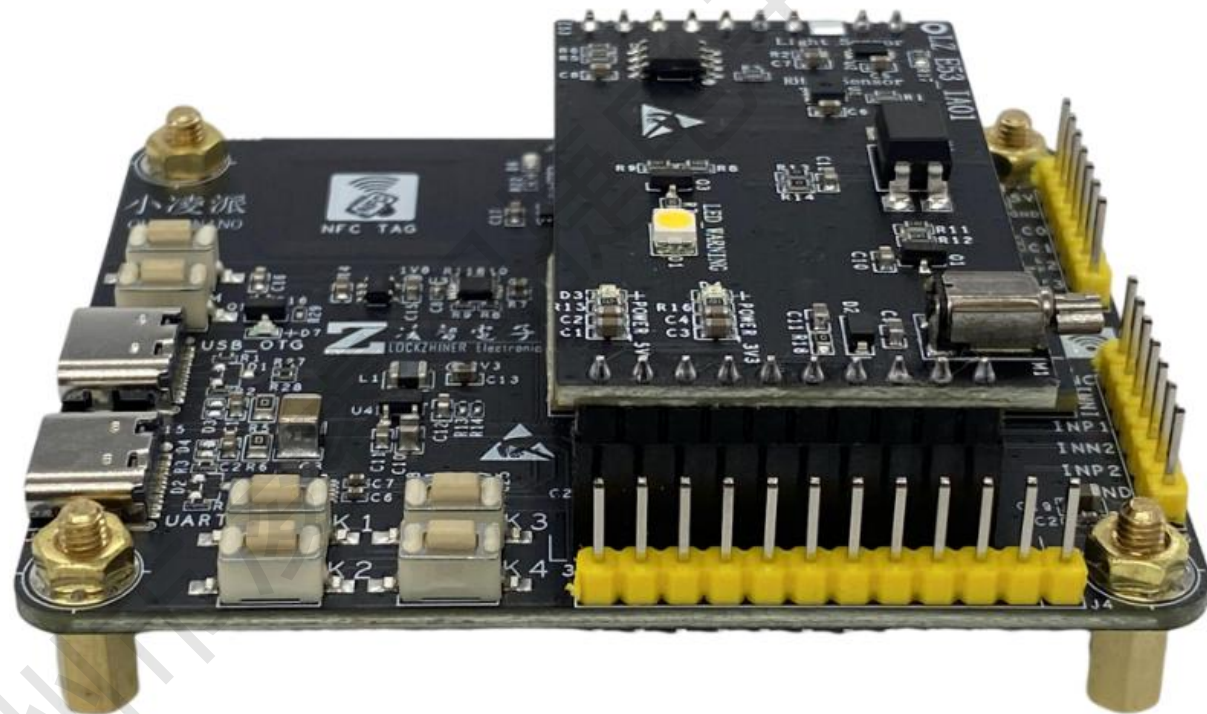

## 03

# API分析

```
void e53_ia_init();
```

该函数主要功能是E53智慧农业模块初始化，包括初始化I2C0、紫光灯GPIO、电机GPIO；初始化BH1750传感器和SHT30传感器。

```
void e53_ia_read_data(e53_ia_data_t *pData);
```

该函数主要功能是E53智慧农业模块获取测量光照强度、温度、湿度，参数pData包含了光照强度、温度和湿度。

## 03

# API分析

```
void light_set(SWITCH_STATUS_ENUM status);
```

该函数主要功能是E53智慧农业模块紫光灯控制，参数status为 ON打开紫光灯，为OFF关闭紫光灯。

```
void motor_set_status(SWITCH_STATUS_ENUM status)
```

该函数主要功能是E53智慧农业模块电机控制，参数status为 ON打开电机，为OFF关闭电机。

## 04 实例分析

### 1、打开sdk下面路径的文件

```
vendor/lockzhiner/rk2206/samples/c1_e53_intelligent_agriculture/e53_intelligent_agriculture_example.c
```

### 2、创建任务

在e53\_ia\_example函数中，创建的一个线程e53\_ia\_thread。

```
void e53_ia_example()
{
    unsigned int ret = LOS_OK;
    unsigned int thread_id;
    TSK_INIT_PARAM_S task = {0};

    task.pfnTaskEntry = (TSK_ENTRY_FUNC)e53_ia_thread;
    task.uwStackSize = 10240;
    task.pcName = "e53_ia_thread";
```

```
    task.usTaskPrio = 24;
    ret = LOS_TaskCreate(&thread_id, &task);
    if (ret != LOS_OK)
    {
        printf("Falied to create e53_ia_thread ret:0x%x\n",
ret);
        return;
    }
}
```

e53\_ia\_thread函数先调用e53\_ia\_init()初始化E53智慧农业模块，然后每隔2秒调用e53\_ia\_read\_data () 通过I2C总线获取BH1750传感器的光照强度值、SHT30传感器的温度与湿度值。当光照强度低于一定值后打开紫光灯进行补光，当温度或湿度大于一定值时开启电机通风。

```
void e53_ia_thread()
```

```
{
```

```
e53_ia_data_t data;
```

```
    e53_ia_init();
```

```
    while (1)
```

```
    {
```

```
        e53_ia_read_data(&data);
```

```
        printf("\nLuminance is %.2f\n", data.luminance);  
        printf("\nHumidity is %.2f\n", data.humidity);  
        printf("\nTemperature is %.2f\n", data.temperature);  
        if (data.luminance < 20)  
        {  
            light_set(ON);  
            printf("light on\n");  
        }  
        else  
        {  
            light_set(OFF);  
            printf("light off\n");  
        }
```



```
if ((data.humidity > 60) || (data.temperature > 30))  
{  
    motor_set_status(ON);  
    printf("motor on\n");  
}  
else  
{  
    motor_set_status(OFF);  
    printf("motor off\n");  
}  
LOS_Msleep(2000);  
}
```

### 3、修改编译脚本

修改 `vendor/lockzhiner/rk2206/sample` 路径下 `BUILD.gn` 文件，指定 `e53_ia_example` 参与编译。

```
"/c1_e53_intelligent_agriculture:e53_ia_example",
```

修改 `device/lockzhiner/rk2206/sdk_liteos` 路径下 `Makefile` 文件，添加 `-le53_ia_example` 参与编译。

```
hardware_LIBS = -lhal_iohardware -lhardware -le53_ia_example
```

### 4、编译固件

```
hb set -root .
```

```
hb set
```

```
hb build -f
```

## 5、烧写固件

## 6、通过串口查看结果

运行结果

```
Luminance is 153.33  
Humidity is 37.69  
Temperature is 21.30  
light on  
motor off  
Luminance is 726.67  
Humidity is 61.02  
Temperature is 20.79  
light off  
motor on  
.....
```



# 谢谢聆听

单击此处添加副标题内容