



Research & Vehicle Technology
“Infotainment Systems Product Development”

Feature – Multi Contoured Seats Client V2

**Infotainment Subsystem Part Specific
Specification (SPSS)**

Version 1.7

UNCONTROLLED COPY IF PRINTED

Version Date: April 13, 2022

FORD CONFIDENTIAL



Revision History

Date	Version	Notes
December 1, 2016	1.0	Initial Release
February 20, 2017	1.1	
	STR-407596/B-Architectural Design	MBORREL4: Added REQ-250012/A-Multi Contoured Seat Remote Client2
	MCSv2-SV-REQ-237612/B-IBD_MultiContouredSeatSystem	MBORREL4: Replaced draft IBD with higher level diagram
	MCS-DOC-417814/B-Physical Mapping of Classes	MBORREL4: Added MultiContouredSeatRemoteClient2
	MCS-CLD-REQ-250012/A-Multi Contoured Seat Remote Client2	MBORREL4: New class description for the 5way controller
	MCS-CLD-REQ-239811/B-Multi Contoured Seat Server	MBORREL4: Updated to include execution from RemoteClient2
	STR-417487/B-Functional Requirements	MBORREL4: Added REQ-250020, REQ-250536
	MCS-SR-REQ-239812/B-Request to display MCS Screen via MultiContouredSeatRemoteClient	MBORREL4: Updated title to reflect that this is only for Shortcut Key. Updated content for clarity
	MCS-SR-REQ-250020/A-Request to display MCS Screen via MultiContouredSeatRemoteClient2	MBORREL4: New req. to define 5way controller button input
	MCS-SR-REQ-239444/B-Inactivity of any user input to MultiContoured Seats	MBORREL4: Updated to convey timer reset on user input and timer initialization on release of input. Updated to include 5way controller signals/behavior
	MCS-TMR-REQ-239445/B-T_MCS_Input	MBORREL4: Updated to include 5way controller
	MCS-TMR-REQ-239813/B-T_MCS_Screen	MBORREL4: Updated to include 5way controller
	MCS-SR-REQ-250536/A-Selecting a Massage Pattern from the touch screen	MBORREL4: New req. to capture selecting a massage pattern from HMI
	MCSv2-IIR-REQ-237614/B-MultiContouredSeatsClient_Rx	MBORREL4: Added REQ-021447 & REQ-021456 and updated table
	MCS-ACT-REQ-237767/B-Activate/Deactivate Multi Contour Seat Feature Screen HMI	MBORREL4: Updated diagram to correctly reflect user input request (no functional changes, clarification only)
	MCS-SD-REQ-237620/B-Activate/Deactivate Multi Contour Seat Feature Screen HMI	MBORREL4: Updated diagram to correctly reflect user input request (no functional changes, clarification only)
	STR-407602/B-Use Cases	MBORREL4: Added REQ-250097, REQ-021354, REQ-021356
	MCS-UC-REQ-250097/A-Select Front Seat Massage Pattern from Seat	MBORREL4: New usecase for 5way controller
	MCS-UC-REQ-021354/B-Adjust Front Seat Massage Intensity from Seat (TcSE ROIN-291761)	MBORREL4: Updated precondition to include IGN = ACC
	MCS-UC-REQ-021356/B-Exiting Front Massage and transitioning to Adjust bladder pressure via Seat (TcSE ROIN-292491)	MBORREL4: Updated precondition to include IGN = ACC
	STR-407603/B-White Box View	MBORREL4: Added REQ-250099, REQ-250100, REQ-250101, REQ-250102, REQ-250103
	MCS-ACT-REQ-237796/B-Select Massage Pattern from Touch Screen	MBORREL4: Updated name to include "from Touch Screen", added a final activity point
	MCS-ACT-REQ-250099/A-Select Massage Pattern from Seat	MBORREL4: New act. diag. for 5way controller
	MCS-ACT-REQ-237797/B-Set Massage Intensity from Touch Screen	MBORREL4: Updated name to include "from Touch Screen", added note, and changed "InitiateMassageIntensity" action to "InitiateMassageIntensityRequest" action (Clarification only, no functional change)
	MCS-ACT-REQ-250100/A-Set Massage Intensity from Seat	MBORREL4: New act. diag. for 5way controller
	MCS-SD-REQ-239326/B-Turn ON Massage Mode from Touch Screen	MBORREL4: Changed "InitiateMassageIntensity()" to "InitiateMassageIntensityRequest()" (Clarification only, no functional change)
	MCS-SD-REQ-250101/A-Turn ON Massage Mode from Seat	MBORREL4: New seq. diag. for 5way controller
	MCS-SD-REQ-250102/A-Select Massage Pattern from Seat	MBORREL4: New seq. diag. for 5way controller
	MCS-SD-REQ-237799/B-Set Massage Intensity to High from Touch Screen	MBORREL4: Changed "InitiateMassageIntensity()" to "InitiateMassageIntensityRequest()" (Clarification only, no functional change)
	MCS-SD-REQ-237800/B-Set Massage Intensity to Medium from Touch Screen	MBORREL4: Changed "InitiateMassageIntensity()" to "InitiateMassageIntensityRequest()" (Clarification only, no functional change)
	MCS-SD-REQ-237801/B-Set Massage Intensity to Low from Touch Screen	MBORREL4: Changed "InitiateMassageIntensity()" to "InitiateMassageIntensityRequest()" (Clarification only, no functional change)
	MCS-SD-REQ-250103/A-Set Massage Intensity from Seat	MBORREL4: New seq. diag. for 5way controller



STR-407600/B-Use Cases	MBORREL4: Added UC-REQ-021336
MCS-UC-REQ-021336/B-Adjust Front Seat Bladder Pressure from Seat (TcSE ROIN-291759)	MBORREL4: Remove IGN=Run precondition and IGN !=Run exception usecase
STR-407601/B-White Box View	MBORREL4: Added REQ-250048, REQ-250049, REQ-021351
MCS-ACT-REQ-250048/A-Set Lumbar - Seat Initiated	MBORREL4: New act. diag. for 5way controller
MCS-SD-REQ-250049/A-Set Lumbar Bladder at Seat	MBORREL4: New seq. diag. for 5way controller
STR-407604/B-Use Cases	MBORREL4: Added REQ-021369
MCS-UC-REQ-021369/B-Adjust Front Seat Bolster Bladder from Seat (TcSE ROIN-293589)	MBORREL4: Remove IGN=Run precondition
STR-407605/B-White Box View	MBORREL4: Added REQ-250054, REQ-250055, REQ-250092, REQ-021380
MCS-ACT-REQ-250054/A-Set Bolster - Seat Initiated	MBORREL4: New act. diag. for 5way controller
MCS-SD-REQ-250055/A-Initiate Bolster Adjust at Seat - No pressure updates	MBORREL4: New seq. diag. for 5way controller
MCS-SD-REQ-250092/A-Set Bolster at Seat	MBORREL4: New seq. diag. for 5way controller

March 8, 2017

1.2

MCS-SR-REQ-239787/B-Powermode Conditions	cwu3: Deleted ACC from pre-conditions. Updated Seat Adjust and Massage Mode to have the same powermode conditions
MCS-TMR-REQ-239813/C-T_MCS_Screen	cwu3: Changed default value from 8 to 12. Added requirement for default value not less than the time needed by Multi Contoured Seat Server to rebuild or adjust pressures.
MCSv2-IIR-REQ-237614/C-MultiContouredSeatsClient_Rx	cwu3: Added MD-REQ-199809/A- IgnitionStatus_St
MCS-UC-REQ-237633/B-Open Seat Adjust Screen from Shortcut Key	cwu3: Added Note to clarify when Ignition is not in Run. No content changed.
MCS-UC-REQ-237634/B-Exit Seat Adjust Screen from Shortcut Key	cwu3: Added Note for time out timer reference
MCS-UC-REQ-237772/B-Select Front Seat Massage Pattern from HMI	cwu3: Deleted ACC from Pre-conditions
MCS-UC-REQ-250097/B-Select Front Seat Massage Pattern from Seat	cwu3: Deleted ACC from Pre-conditions
MCS-UC-REQ-021353/C-Adjust Front Seat Massage Intensity from HMI (TcSE ROIN-291760)	cwu3: Deleted ACC from Pre-conditions
MCS-UC-REQ-021354/C-Adjust Front Seat Massage Intensity from Seat (TcSE ROIN-291761)	cwu3: Deleted ACC from Pre-conditions
MCS-UC-REQ-021355/C-Exiting Front Massage and transitioning to Adjust bladder pressure via HMI (TcSE ROIN-292490)	cwu3: Deleted ACC from Pre-conditions
MCS-UC-REQ-021356/C-Exiting Front Massage and transitioning to Adjust bladder pressure via Seat (TcSE ROIN-292491)	cwu3: Deleted ACC from Pre-Conditions
MCS-UC-REQ-240862/B-Adjust Front Seat Bladder Pressure from HMI	cwu3: Added Ignition is Run to Pre-conditions
MCS-UC-REQ-021336/C-Adjust Front Seat Bladder Pressure from Seat (TcSE ROIN-291759)	cwu3: Added Ignition is Run to Pre-conditions
MCS-SD-REQ-021337/B-Select Lumbar Middle Bladder at Touch Screen - No pressure updates (TcSE ROIN-200149-1)	cwu3: Added Ignition is Run to Pre-conditions
MCS-SD-REQ-021338/B-Select Lumbar Upper Bladder at Touch Screen - No pressure updates (TcSE ROIN-200156-1)	cwu3: Added Ignition is Run to Pre-conditions
MCS-SD-REQ-021340/B-Select Lumbar Lower Bladder at Touch Screen - No pressure updates (TcSE ROIN-200170-1)	cwu3: Added Ignition is Run to Pre-conditions
MCS-SD-REQ-021341/C-Decrease Lumbar Lower Bladder from Touch Screen (TcSE ROIN-200773-1)	cwu3: Added Ignition is Run to Pre-conditions
MCS-SD-REQ-021342/C-Decrease Lumbar Middle Bladder from Touch Screen (TcSE ROIN-200780-1)	cwu3: Added Ignition is Run to Pre-conditions
MCS-SD-REQ-021343/C-Decrease Lumbar Upper Bladder from Touch Screen (TcSE ROIN-200787-1)	cwu3: Added Ignition is Run to Pre-conditions
MCS-SD-REQ-021344/C-Increase Lumbar Lower Bladder from Touch Screen (TcSE ROIN-200794-1)	cwu3: Added Ignition is Run to Pre-conditions
MCS-SD-REQ-021345/C-Increase Lumbar Middle Bladder from Touch Screen (TcSE ROIN-200801-1)	cwu3: Added Ignition is Run to Pre-conditions
MCS-SD-REQ-021346/C-Increase Lumbar Upper Bladder from Touch Screen (TcSE ROIN-200808-1)	cwu3: Added Ignition is Run to Pre-conditions
MCS-SD-REQ-250049/B-Set Lumbar Bladder at Seat	cwu3: Revised to add Ignition is Run to Pre-conditions and move Pre-conditions from Scenarios to Constraints
MCS-UC-REQ-240863/B-Adjust Front Seat Bolster Bladder from HMI	cwu3: Added Ignition is Run to Pre-conditions



MCS-UC-REQ-021369/C-Adjust Front Seat Bolster Bladder from Seat (TcSE ROIN-293589)	cwu3: Added Ignition is Run to Pre-conditions
MCS-SD-REQ-021375/C-Increase Bolster Upper Bladders from Touch Screen (TcSE ROIN-199118-1)	cwu3: Added Ignition is Run to Pre-conditions
MCS-SD-REQ-021371/C-Increase Bolster Lower Bladders from Touch Screen (TcSE ROIN-199090-1)	cwu3: Added Ignition is Run to Pre-conditions
MCS-SD-REQ-021372/C-Decrease Bolster Upper Bladders from Touch Screen (TcSE ROIN-199097-1)	cwu3: Added Ignition is Run to Pre-conditions
MCS-SD-REQ-021373/C-Decrease Bolster Lower Bladders from Touch Screen (TcSE ROIN-199104-1)	cwu3: Added Ignition is Run to Pre-conditions
MCS-SD-REQ-021376/B-Select Bolster Upper Bladders at Touch Screen - No pressure updates (TcSE ROIN-200177-1)	cwu3: Added Ignition is Run to Pre-conditions
MCS-SD-REQ-021378/B-Select Bolster Lower Bladders at Touch Screen - No pressure updates (TcSE ROIN-200815-1)	cwu3: Added Ignition is Run to Pre-conditions
MCS-SD-REQ-250055/B-Initiate Bolster Adjust at Seat - No pressure updates	cwu3: Revised to add ignition Run to Pre-conditions and move Post-conditions from Scenarios to Constraints
MCS-SD-REQ-250092/B-Set Bolster at Seat	cwu3: Revised to add ignition Run to Pre-conditions and move Post-conditions from Scenarios to Constraints
STR-407606/B-Appendix: Reference Documents	cwu3: Added HMI specification H74a

June 28, 2018	1.3	First release as a Common SPSS
	MCS-DOC-417814/C-Physical Mapping of Classes	MBORREL4: Added CTR
	MCSv2-IIR-REQ-237613/B-MultiContouredSeatsClient_Tx	cwu3: Removed REQ-021436 & REQ-021437. These methods were not needed and were never implemented
	MCSv2-IIR-REQ-237614/D-MultiContouredSeatsClient_Rx	cwu3: Updated GSDB signal name "SeatScrnDrvOn_B_Stat" and "SeatScrnPsngOn_B_Stat" to "SeatScrnDrvOn_B_Rq" and "SeatScrnPsngOn_B_Rq"
	MCS-SD-REQ-239326/C-Turn ON Massage Mode from Touch Screen	MBORREL4: Updated diagram to include ActiveSeatControl status back from MCSServer (conveying implementation, clarification only)
	MCS-SD-REQ-250101/B-Turn ON Massage Mode from Seat	MBORREL4: Updated diagram to include ActiveSeatControl status back from MCSServer (conveying implementation, clarification only)
	MCS-SD-REQ-237811/B-Select Massage Pattern from Touch Screen	MBORREL4: Updated diagram to include ActiveSeatControl status back from MCSServer (conveying implementation, clarification only)
	MCS-SD-REQ-250102/B-Select Massage Pattern from Seat	MBORREL4: Updated diagram to include ActiveSeatControl status back from MCSServer (conveying implementation, clarification only)
March 6, 2020	1.4	
	STR-417487/C-Functional Requirements	MBORREL4: Added REQ-383519-522
	MCS-REQ-383519/A-Configurable Parameter(s) for Bladders	MBORREL4: New req.
	MCS-REQ-383520/A-Massage Pattern Availability	MBORREL4: New req.
	MCS-REQ-383521/A-Massage Intensity Indicators	MBORREL4: New req.
	MCS-SR-REQ-243309/B-Adjusting the Massage Pattern levels from the touch screen (Low/Mid/High Buttons)	MBORREL4: Updated req.
	MCS-SR-REQ-383522/A-Adjusting the Massage Pattern levels from the touch screen (Intensity Indicators)	MBORREL4: New req.
	MCS-SR-REQ-250536/B-Selecting a Massage Pattern from the touch screen	MBORREL4: Updated req.
	MD-REQ-237625/B-DriverMassagePattern_Rq	MBORREL4: Added patterns 6-10
	MD-REQ-237626/B-PassengerMassagePattern_Rq	MBORREL4: Added patterns 6-10
	MD-REQ-237627/C-DriverMassagePattern_St	MBORREL4: Added patterns 6-10
	MD-REQ-237628/C-PassengerMassagePattern_St	MBORREL4: Added patterns 6-10
June 9, 2020	1.5	
	MCS-DOC-417814/D-Physical Mapping of Classes	MBORREL4: Updated table
	STR-417487/D-Functional Requirements	MBORREL4: Added REQ-392306, REQ-392308, REQ-392309
	MCS-REQ-392306/A-Configurable Parameter for Number of Shortcut Keys	MBORREL4: New req.
	MCS-REQ-383521/B-Massage Intensity Indicators	MBORREL4: Updated req.
	MCS-SR-REQ-239812/C-Request to display MCS Screen via MultiContouredSeatRemoteClient (single shortcut key)	MBORREL4: Updated title and req.
	MCS-REQ-392308/A-Request to display MCS Adjust Screen via MultiContouredSeatRemoteClient (double shortcut keys)	MBORREL4: New req.



MCS-REQ-392309/A-Request to display MCS Message Screen via MultiContouredSeatRemoteClient (double shortcut keys)	MBORREL4: New req.
MCS-SR-REQ-239444/C-Inactivity of any user input to MultiContoured Seats	MBORREL4: Updated req.
MCS-SR-REQ-021427/B-Selecting the Adjust Tab from the touch screen (TcSE ROIN-200453-1)	MBORREL4: Updated req.
MCSv2-IIR-REQ-237614/E-MultiContouredSeatsClient_Rx	MBORREL4: Updated table. Added REQ-392372, REQ-392373
MD-REQ-237615/B-DriverSeatScreenToggle_St	MBORREL4: Updated description
MD-REQ-392372/A-DriverMassageScreenToggle_St	MBORREL4: New req.
MD-REQ-237617/B-PassengerSeatScreenToggle_St	MBORREL4: Updated description
MD-REQ-392373/A-PassengerMassageScreenToggle_St	MBORREL4: New req.
STR-407599/B-Functional Definition	MBORREL4: Added REQ-392374
MCS-FUN-REQ-237635/B-Activate Multi Contour Seat Display HMI via Single Shortcut Key	MBORREL4: Update title
MCS-FUN-REQ-392374/A-Activate Multi Contour Seat Display HMI via Double Shortcut Key	MBORREL4: New req.
STR-772579/A-Use Cases	MBORREL4: New section/STR
MCS-UC-REQ-392375/A-Open Seat Adjust Screen from Adjust Shortcut Key	MBORREL4: New usecase
MCS-UC-REQ-392376/A-Exit Seat Adjust Screen from Adjust Shortcut Key	MBORREL4: New usecase
MCS-UC-REQ-392377/A-Open Seat Massage Screen from Massage Shortcut Key (Massage is On)	MBORREL4: New usecase
MCS-UC-REQ-392378/A-Open Seat Massage Screen from Massage Shortcut Key (Massage is Off)	MBORREL4: New usecase
MCS-UC-REQ-392379/A-Exit Seat Massage Screen from Massage Shortcut Key	MBORREL4: New usecase
STR-772581/A-White Box View	MBORREL4: New section/STR
MCS-ACT-REQ-392384/A-Activate/Deactivate Adjust Screen HMI	MBORREL4: New req.
MCS-ACT-REQ-392388/A-Activate/Deactivate Massage Screen HMI	MBORREL4: New req.
MCS-SD-REQ-392385/A-Activate/Deactivate Adjust Screen HMI	MBORREL4: New req.
MCS-SD-REQ-392389/A-Activate/Deactivate Massage Screen HMI	MBORREL4: New req.

October 7, 2021

1.6

STR-417487/E-Functional Requirements	MBORREL4: Added REQ-454257-454260
MCSv2-REQ-454257/A-Powermode Conditions v2 - Front Driver	MBORREL4: New req. for DCO and PDC
MCSv2-REQ-454258/A-Powermode Conditions v2 - Front Driver Notifications	MBORREL4: New req. for DCO and PDC
MCSv2-REQ-454259/A-Powermode Conditions v2 - Front Passenger	MBORREL4: New req. for DCO and PDC
MCSv2-REQ-454260/A-Powermode Conditions v2 - Front Passenger Notifications	MBORREL4: New req. for DCO and PDC
MCSv2-IIR-REQ-237614/F-MultiContouredSeatsClient_Rx	MBORREL4: Updated table. Added REQ-454277, REQ-454278
MD-REQ-454277/A-FrontDriverMCSMode_St	MBORREL4: New req. for DCO
MD-REQ-454278/A-FrontPassengerMCSMode_St	MBORREL4: New req. for DCO
MCS-UC-REQ-237772/C-Select Front Seat Massage Pattern from HMI	MBORREL4: Updated Pre-conditions to "Powermode Conditions Met"
MCS-UC-REQ-250097/C-Select Front Seat Massage Pattern from Seat	MBORREL4: Updated Pre-conditions to "Powermode Conditions Met"
MCS-UC-REQ-021353/D-Adjust Front Seat Massage Intensity from HMI (TcSE ROIN-291760)	MBORREL4: Updated Pre-conditions to "Powermode Conditions Met"
MCS-UC-REQ-021354/D-Adjust Front Seat Massage Intensity from Seat (TcSE ROIN-291761)	MBORREL4: Updated Pre-conditions to "Powermode Conditions Met"
MCS-UC-REQ-021355/D-Exiting Front Massage and transitioning to Adjust bladder pressure via HMI (TcSE ROIN-292490)	MBORREL4: Updated Pre-conditions to "Powermode Conditions Met"
MCS-UC-REQ-021356/D-Exiting Front Massage and transitioning to Adjust bladder pressure via Seat (TcSE ROIN-292491)	MBORREL4: Updated Pre-conditions to "Powermode Conditions Met"
MCS-UC-REQ-240862/C-Adjust Front Seat Bladder Pressure from HMI	MBORREL4: Updated Pre-conditions to "Powermode Conditions Met"



MCS-UC-REQ-021336/D-Adjust Front Seat Bladder Pressure from Seat (TcSE ROIN-291759)	MBORREL4: Updated Pre-conditions to "Powermode Conditions Met"
MCS-SD-REQ-021337/C-Select Lumbar Middle Bladder at Touch Screen - No pressure updates (TcSE ROIN-200149-1)	MBORREL4: Updated Pre-conditions to "Powermode Conditions Met"
MCS-SD-REQ-021338/C-Select Lumbar Upper Bladder at Touch Screen - No pressure updates (TcSE ROIN-200156-1)	MBORREL4: Updated Pre-conditions to "Powermode Conditions Met"
MCS-SD-REQ-021340/C-Select Lumbar Lower Bladder at Touch Screen - No pressure updates (TcSE ROIN-200170-1)	MBORREL4: Updated Pre-conditions to "Powermode Conditions Met"
MCS-SD-REQ-021341/D-Decrease Lumbar Lower Bladder from Touch Screen (TcSE ROIN-200773-1)	MBORREL4: Updated Pre-conditions to "Powermode Conditions Met"
MCS-SD-REQ-021342/D-Decrease Lumbar Middle Bladder from Touch Screen (TcSE ROIN-200780-1)	MBORREL4: Updated Pre-conditions to "Powermode Conditions Met"
MCS-SD-REQ-021343/D-Decrease Lumbar Upper Bladder from Touch Screen (TcSE ROIN-200787-1)	MBORREL4: Updated Pre-conditions to "Powermode Conditions Met"
MCS-SD-REQ-021344/D-Increase Lumbar Lower Bladder from Touch Screen (TcSE ROIN-200794-1)	MBORREL4: Updated Pre-conditions to "Powermode Conditions Met"
MCS-SD-REQ-021345/D-Increase Lumbar Middle Bladder from Touch Screen (TcSE ROIN-200801-1)	MBORREL4: Updated Pre-conditions to "Powermode Conditions Met"
MCS-SD-REQ-021346/D-Increase Lumbar Upper Bladder from Touch Screen (TcSE ROIN-200808-1)	MBORREL4: Updated Pre-conditions to "Powermode Conditions Met"
MCS-SD-REQ-250049/C-Set Lumbar Bladder at Seat	MBORREL4: Updated Pre-conditions to "Powermode Conditions Met"
MCS-UC-REQ-240863/C-Adjust Front Seat Bolster Bladder from HMI	MBORREL4: Updated Pre-Conditions to "Powermode Conditions Met"
MCS-UC-REQ-021369/D-Adjust Front Seat Bolster Bladder from Seat (TcSE ROIN-293589)	MBORREL4: Updated Pre-Conditions to "Powermode Conditions Met"
MCS-SD-REQ-021375/D-Increase Bolster Upper Bladders from Touch Screen (TcSE ROIN-199118-1)	MBORREL4: Updated Pre-conditions to "Powermode Conditions Met"
MCS-SD-REQ-021371/D-Increase Bolster Lower Bladders from Touch Screen (TcSE ROIN-199090-1)	MBORREL4: Updated Pre-conditions to "Powermode Conditions Met"
MCS-SD-REQ-021372/D-Decrease Bolster Upper Bladders from Touch Screen (TcSE ROIN-199097-1)	MBORREL4: Updated Pre-conditions to "Powermode Conditions Met"
MCS-SD-REQ-021373/D-Decrease Bolster Lower Bladders from Touch Screen (TcSE ROIN-199104-1)	MBORREL4: Updated Pre-conditions to "Powermode Conditions Met"
MCS-SD-REQ-021376/C-Select Bolster Upper Bladders at Touch Screen - No pressure updates (TcSE ROIN-200177-1)	MBORREL4: Updated Pre-conditions to "Powermode Conditions Met"
MCS-SD-REQ-021378/C-Select Bolster Lower Bladders at Touch Screen - No pressure updates (TcSE ROIN-200815-1)	MBORREL4: Updated Pre-conditions to "Powermode Conditions Met"
MCS-SD-REQ-250055/C-Initiate Bolster Adjust at Seat - No pressure updates	MBORREL4: Updated Pre-conditions to "Powermode Conditions Met"
MCS-SD-REQ-250092/C-Set Bolster at Seat	MBORREL4: Updated Pre-conditions to "Powermode Conditions Met"

April 13, 2022

1.7

STR-407596/C-Architectural Design	MBORREL4: Added
MCSv3-SV-REQ-489358/A-IBD_MultiContouredSeatSystem	MBORREL4: New diagram for FRS usecase
STR-417487/F-Functional Requirements	MBORREL4: Added REQ-488837-840
MCS-REQ-488837/A-Configurable Parameter for First Row Seats Support	MBORREL4: New req.
MCS-REQ-383520/B-Massage Pattern Availability	MBORREL4: Updated table to match implementation:
MCSv2-REQ-488838/A-Massage Intensity Indicators v2	MBORREL4: New req.
MCS-REQ-488839/A-Navigating Tabs from the touch screen	MBORREL4: New req.
MCSv2-REQ-488840/A-Adjusting the Massage Pattern levels from the touch screen (Intensity Indicators) v2	MBORREL4: New req.
MCSv2-IIR-REQ-237614/G-MultiContouredSeatsClient_Rx	MBORREL4: Updated table. Added REQ-465313-316, REQ-465326-327, REQ-488859-860
MD-REQ-465313/A-SeatSetMenuDriver_St	MBORREL4: New req
MD-REQ-465315/A-SeatDeviceSetDriver_St	MBORREL4: New req
MD-REQ-465326/A-SeatMassageDriver_St	MBORREL4: New req
MD-REQ-488859/A-SeatDeviceAdjustRow1Driver_St	MBORREL4: New req.
MD-REQ-465314/A-SeatSetMenuPassenger_St	MBORREL4: New req
MD-REQ-465316/A-SeatDeviceSetPassenger_St	MBORREL4: New req
MD-REQ-465327/A-SeatMassagePassenger_St	MBORREL4: New req
MD-REQ-488860/A-SeatDeviceAdjustRow1Passenger_St	MBORREL4: New req.
STR-407599/C-Functional Definition	MBORREL4: Added FUN-REQ-488877
MCS-FUN-REQ-488877/A-First Row Seats – Message Handling	MBORREL4: New function



STR-1049410/A-Use Cases	MBORREL4: New section
MCS-UC-REQ-488957/A-MCS Seat Adjustment from Multi Contoured Seat Remote Client2	MBORREL4: New req.
MCS-UC-REQ-488958/A-MCS Massage Adjustment from Multi Contoured Seat Remote Client2	MBORREL4: New req.
MCS-UC-REQ-488959/A-MCS Massage On/Off from Multi Contoured Seat Remote Client2 – Massage Screen not active	MBORREL4: New req.
MCS-UC-REQ-488960/A-MCS Massage On/Off from Multi Contoured Seat Remote Client2 – Massage Screen active	MBORREL4: New req.
STR-1049411/A-Requirements	MBORREL4: New section
MCS-REQ-488961/A-Translating Seat Adjustment Requests – Driver	MBORREL4: New req.
MCS-REQ-488962/A-Translating Seat Adjustment Requests – Passenger	MBORREL4: New req.
MCS-REQ-488963/A-Translating Massage On Request – Driver	MBORREL4: New req.
MCS-REQ-488964/A-Translating Massage Off Request – Driver	MBORREL4: New req.
MCS-REQ-488965/A-Translating Massage Pattern Requests – Driver	MBORREL4: New req.
MCS-REQ-488966/A-Translating Massage Intensity Requests – Driver	MBORREL4: New req.
MCS-REQ-488967/A-Translating Massage Pattern Requests – Passenger	MBORREL4: New req.
MCS-REQ-488968/A-Translating Massage Intensity Requests – Passenger	MBORREL4: New req.
MCS-REQ-488969/A-Translating Massage On Request – Passenger	MBORREL4: New req.
MCS-REQ-488970/A-Translating Massage Off Request – Passenger	MBORREL4: New req.



Table of Contents


REVISION HISTORY	2
1 ARCHITECTURAL DESIGN.....	9
1.1 MCSv2-SV-REQ-237612/B-IBD_MultiContouredSeatSystem.....	9
1.2 MCSv3-SV-REQ-489358/A-IBD_MultiContouredSeatSystem.....	9
1.3 Physical Mapping of Classes	10
1.4 MCS-CLD-REQ-239296/A-Multi Contoured Seat Remote Server.....	10
1.5 MCS-CLD-REQ-239805/A-Multi Contoured Seat Remote Client	10
1.6 MCS-CLD-REQ-250012/A-Multi Contoured Seat Remote Client2	10
1.7 MCS-CLD-REQ-239811/B-Multi Contoured Seat Server	11
1.8 MCS-CLD-REQ-239443/A-Multi Contoured Seat Client.....	11
1.8.1 Functional Requirements	11
1.9 MultiContouredSeatClient Interface	18
1.9.1 MCSv2-IIR-REQ-237613/B-MultiContouredSeatsClient_Tx.....	18
1.9.2 MCSv2-IIR-REQ-237614/G-MultiContouredSeatsClient_Rx.....	21
2 FUNCTIONAL DEFINITION	31
2.1 MCS-FUN-REQ-237635/B-Activate Multi Contour Seat Display HMI via Single Shortcut Key.....	31
2.1.1 Use Cases	31
2.1.2 White Bow View.....	32
2.2 MCS-FUN-REQ-392374/A-Activate Multi Contour Seat Display HMI via Double Shortcut Key.....	34
2.2.1 Use Cases	34
2.2.2 White Box View	36
2.3 MCS-FUN-REQ-237622/A-Set Massage Pattern	39
2.3.1 Use Cases	39
2.3.2 White Box View	42
2.4 MCSv2-FUN-REQ-237619/A-Set Lumbar	52
2.4.1 Use Cases	52
2.4.2 White Box View	53
2.5 MCSv2-FUN-REQ-237624/A-Set Bolster	77
2.5.1 Use Cases	77
2.5.2 White Box View	78
2.6 MCS-FUN-REQ-488877/A-First Row Seats – Message Handling	98
2.6.1 Use Cases	98
2.6.2 Requirements	100
3 APPENDIX: REFERENCE DOCUMENTS.....	106



1 Architectural Design


1.1 MCSv2-SV-REQ-237612/B-IBD_MultiContouredSeatSystem

Internal Block Diagram

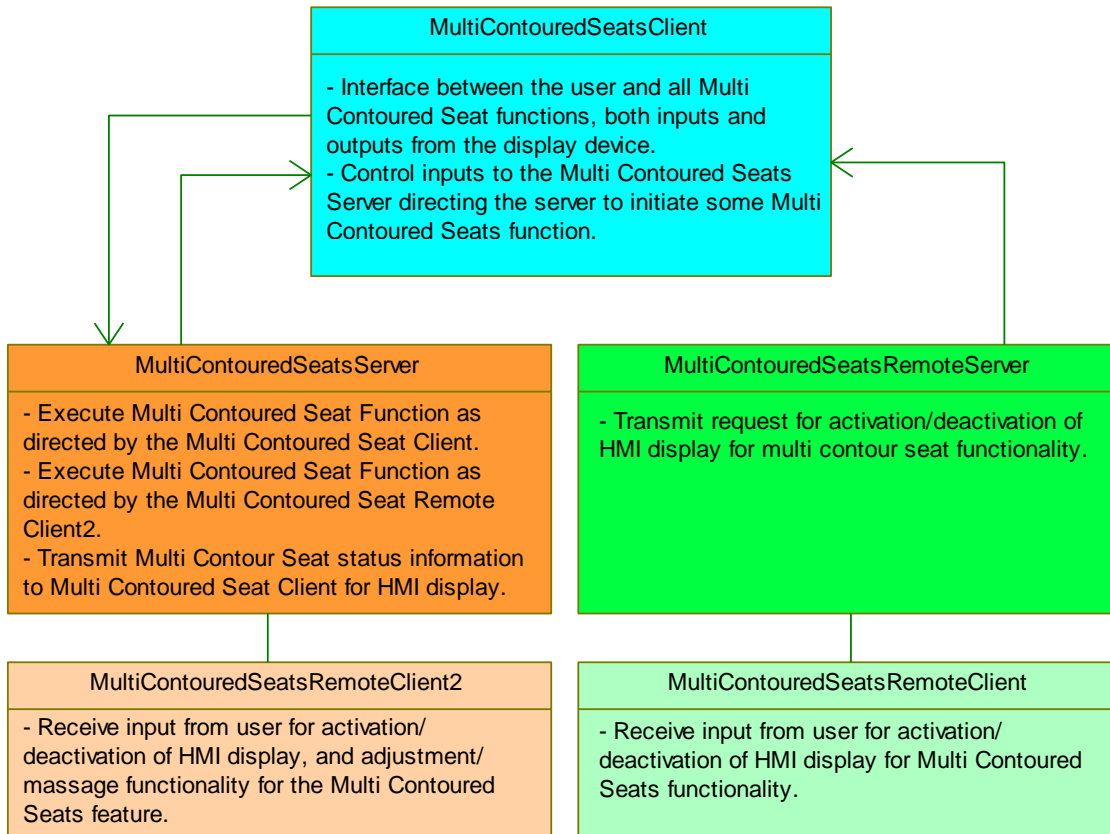

1.2 MCSv3-SV-REQ-489358/A-IBD_MultiContouredSeatSystem

Internal Block Diagram

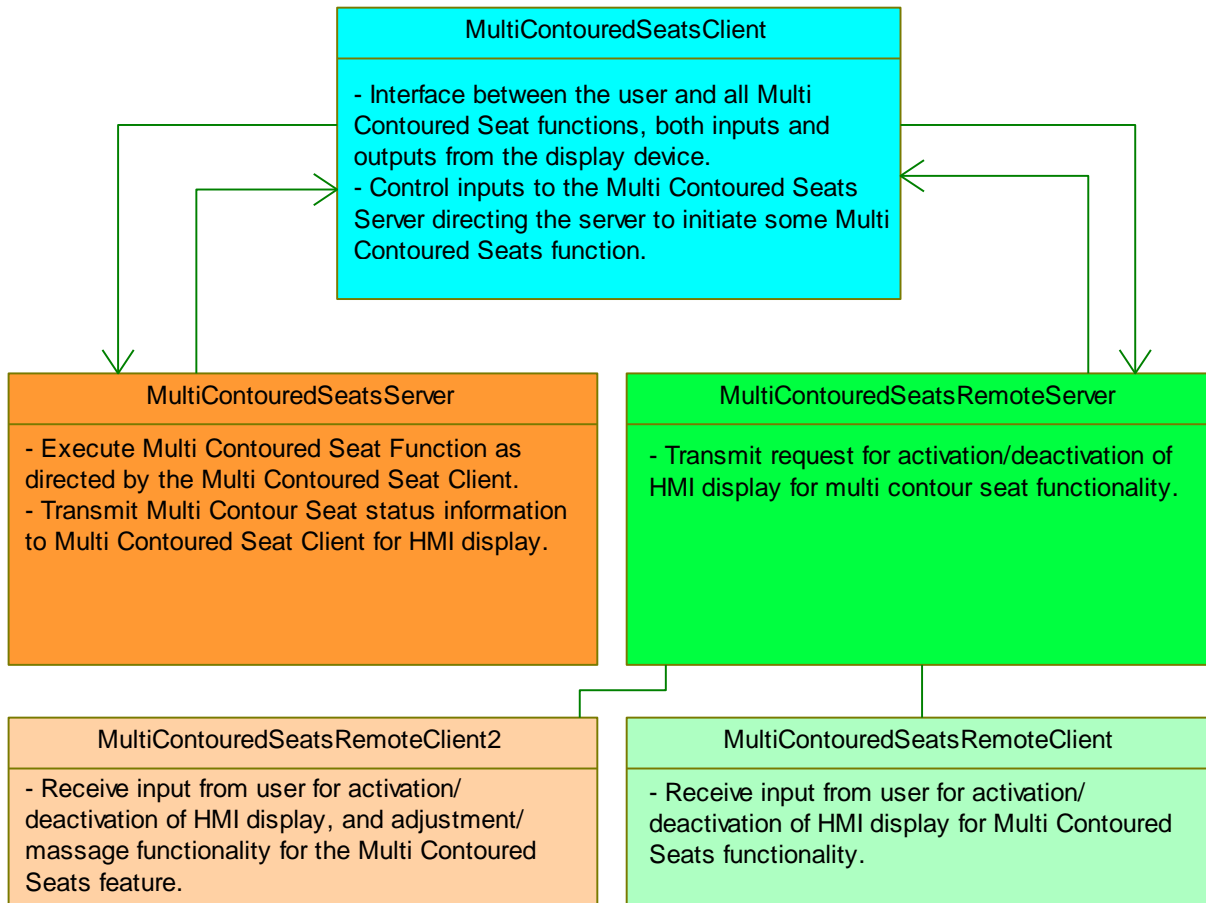

1.3 Physical Mapping of Classes

The table below shows an example of how the logical classes may be mapped into physical modules. This mapping example is specific to the CGEA1.3 architecture and does not necessarily carryover to other vehicle architectures.

Logical Class	Physical Module (ECU)
Multi Contoured Seat Remote Client	Switch Pack (Shortcut Key or Keys)
Multi Contoured Seat Remote Client2	Switch Pack (5way Controller)
Multi Contoured Seat Remote Server	DSM / PSM
Multi Contoured Seat Server	MCSM
Multi Contoured Seat Client	APIM, CTR

1.4 MCS-CLD-REQ-239296/A-Multi Contoured Seat Remote Server

The Multi Contoured Seat Remote Server has one function:

1. Transmit request for activation/deactivation of HMI display for multi contour seat functionality.

1.5 MCS-CLD-REQ-239805/A-Multi Contoured Seat Remote Client

The Multi Contoured Seat Remote Client has one function:

1. Receive input from user for activation/deactivation of HMI display for Multi Contoured Seats functionality.

1.6 MCS-CLD-REQ-250012/A-Multi Contoured Seat Remote Client2

The Multi Contoured Seat Remote Client2 has one function:



1. Receive input from user for activation/deactivation of HMI display, and adjustment/massage functionality for the Multi Contoured Seats feature.

1.7 MCS-CLD-REQ-239811/B-Multi Contoured Seat Server

The Multi Contoured Seat Server has three functions:

1. Execute Multi Contoured Seat Function as directed by the Multi Contoured Seat Client.
2. Execute Multi Contoured Seat Function as directed by the Multi Contoured Seat Remote Client2.
3. Transmit Multi Contour Seat status information to Multi Contoured Seat Client for HMI display.

1.8 MCS-CLD-REQ-239443/A-Multi Contoured Seat Client

The Multi Contoured Seats Client has two functions:

1. Interface between the user and all Multi Contoured Seat functions, both inputs and outputs from the display device.
2. Control inputs to the Multi Contoured Seats Server directing the server to initiate some Multi Contoured Seats function.

1.8.1 Functional Requirements

1.8.1.1 MCS-SR-REQ-239787/B-Powermode Conditions

The MultiContoured Seat Client shall only allow the massage and seat adjust functionality of this feature when the Ignition_Status = Run, and the touch screen display is On (HMI_HMIMode_St=On).

1.8.1.2 MCSv2-REQ-454257/A-Powermode Conditions v2 - Front Driver

When DCO (Drive Control Optimization) is supported/enabled on the MultiContoured Seat Client, the MultiContoured Seat Client shall allow the front driver MCS functionality as per the below:

- When FrontDriverMCSMode_St = "(0x2) Partially_Active", front driver Adjust functionality shall be allowed
- When FrontDriverMCSMode_St = "(0x3) Fully_Active", front driver Massage & Adjust functionality shall be allowed

1.8.1.3 MCSv2-REQ-454258/A-Powermode Conditions v2 - Front Driver Notifications

Per REQ-454257, if the user attempts to use the front driver MCS screens/menu when the below conditions are true, the corresponding notifications shall be shown:

- If FrontDriverMCSMode_St = "(0x0) Null" or "(0x1) Off", the MultiContoured Seat Client shall display a notification indicating that the driver side Massage and Adjust functionality is not available
- If FrontDriverMCSMode_St = "(0x2) Partially_Active", the MultiContoured Seat Client shall display a notification indicating that the driver side Massage functionality is not available
- If FrontDriverMCSMode_St & FrontPassengerMCSMode_St = "(0x0) Null" or "(0x1) Off", the MultiContoured Seat Client shall display a notification indicating that MCS feature is not available

1.8.1.4 MCSv2-REQ-454259/A-Powermode Conditions v2 - Front Passenger

When DCO (Drive Control Optimization) is supported/enabled on the MultiContoured Seat Client, the MultiContoured Seat Client shall allow the front passenger MCS functionality as per the below:

- When FrontPassengerMCSMode_St = "(0x2) Partially_Active", front passenger Adjust functionality shall be allowed
- When FrontPassengerMCSMode_St = "(0x3) Fully_Active", front passenger Massage & Adjust functionality shall be allowed

1.8.1.5 MCSv2-REQ-454260/A-Powermode Conditions v2 - Front Passenger Notifications

Per REQ-454259, if the user attempts to use the front passenger MCS screens/menu when the below conditions true, the corresponding notifications shall be shown:

- If FrontPassengerMCSMode_St = "(0x0) Null" or "(0x1) Off", the MultiContoured Seat Client shall display a notification indicating that the passenger side Massage and Adjust functionality is not available
- If FrontPassengerMCSMode_St = "(0x2) Partially_Active", the MultiContoured Seat Client shall display a notification indicating that the passenger side Massage functionality is not available



- If FrontDriverMCSMode_St & FrontPassengerMCSMode_St = "(0x0) Null" or "(0x1) Off", the MultiContoured Seat Client shall display a notification indicating that MCS feature is not available

1.8.1.6 MCS-SR-REQ-239563/A-Configurable Parameter for Enhanced MCS

The Multi Contoured Seat Client shall have a configurable parameter to determine whether the vehicle supports Enhanced Multi Contoured Seats. If the parameter indicates that the vehicle is to support Enhanced Multi Contoured Seats, then all functionality and signals defined in this SPSS shall be used. The Legacy Multi Contoured Seats SPSS shall not be used.

If the configurable parameter for the Legacy Multi Contoured Seats feature is also configured On, the Enhanced Multi Contoured Seats feature shall take priority and a DTC shall be set by the Multi Contoured Seat Client to signify this conflict.

1.8.1.7 MCS-REQ-488837/A-Configurable Parameter for First Row Seats Support

The Multi Contoured Seat Client shall use the 24 Way Seat and 30 Way Seat configurable parameters to determine whether the Seat Adjustments via First Row Seat are present and require message handling. This shall only be applicable when the vehicle supports Enhanced Multi Contoured Seats.

- If either the 24 or 30 Way Seat parameter indicates 'Enabled', then the functionality and signals defined in MCS-FUN-REQ-488877 shall be performed/used.
- If both parameters indicate 'Disabled', then the functionality and signals defined in MCS-FUN-REQ-488877 shall not be performed/used.

1.8.1.8 MCS-REQ-392306/A-Configurable Parameter for Number of Shortcut Keys

The Multi Contoured Seat Client shall have a configurable parameter to determine the number of Shortcut Keys the Multi Contoured Seat Remote Client supports. This parameter shall only be applicable when the vehicle supports Enhanced Multi Contoured Seats.

- If the parameter indicates a Single Shortcut Key, then all functionality and signals defined in MCS-FUN-REQ-237635 shall be used. All requirements referencing "shortcut key" shall be applicable.
- If the parameter indicates Double Shortcut Keys, then all functionality and signals defined in MCS-FUN-REQ-392374 shall be used. All requirements referencing "adjust shortcut key," "message shortcut key," or "double shortcut keys" shall be applicable.

1.8.1.9 MCS-REQ-383519/A-Configurable Parameter(s) for Bladders

The Multi Contoured Seat Client shall have a configurable parameter(s) for the number of bladders. The number of bladders shall include: 3, 7, 11, 17, 21 bladders.

1.8.1.10 MCS-REQ-383520/B-Massage Pattern Availability

The Multi Contoured Seat Client shall offer/allow the Massage Patterns below when configured for Enhanced MCS:

Bladder Configuration	Available Massage Patterns
3 or 5	1-2
7 or 11	1-5
13	1-2, 8-10
17 or 21	6-10

1.8.1.11 MCS-REQ-383521/B-Massage Intensity Indicators

When the Multi Contoured Seat Client is configured for Enhanced MCS (per REQ-239563) and the Vehicle Config. != P702, the Multi Contoured Seat Client shall provide Massage Intensity Indicators rather than separate Low/Med/High Intensity buttons. Refer to REQ-383522 for button behavior.

1.8.1.12 MCSv2-REQ-488838/A-Massage Intensity Indicators v2

When the Multi Contoured Seat Client is configured for Enhanced MCS (per REQ-239563), the Multi Contoured Seat Client shall provide Massage Intensity Indicators rather than separate Low/Med/High Intensity buttons.

1.8.1.13 MCS-SR-REQ-021423/A-MultiContoured Seats Change Request Latency - Driver Seat (TcSE ROIN-199636-1)

The MultiContoured Seats Client shall ignore the DriverActiveSeatControl_St status message for T_Response_SeatMode after sending DriverActiveSeatControl_Rq to the MultiContoured Seats Server to allow for Gateway Latency.

**1.8.1.14 MCS-SR-REQ-021429/A-MultiContoured Seats Change Request Latency - Passenger Seat (TcSE ROIN-201074-1)**

The MultiContoured Seats Client shall ignore the PassengerActiveSeatControl_St status message for T_Response_SeatMode after sending PassengerActiveSeatControl_Rq to the MultiContoured Seats Server to allow for Gateway Latency.

1.8.1.15 MCS-TMR-REQ-021424/A-Change Request Latency timing (TcSE ROIN-199637-1)

Name	Description	Units	Range	Resolution	Default
Change Request Latency timing	Minimum amount of time between sending signals (DriverActiveSeatControl_Rq or PassengerActiveSeatControl_Rq) then updating the HMI based on status signals (DriverActiveSeatControl_St or PassengerActiveSeatControl_St) by the MultiContoured Seats Client.	msec	0-1000	10	500

1.8.1.16 MCS-SR-REQ-239812/C-Request to display MCS Screen via MultiContouredSeatRemoteClient (single shortcut key)

When the MultiContouredSeatsUser requests to make seat adjustments via the specific single Driver or Passenger Shortcut Keys, the Multi Contoured Seat Client shall monitor the respective signals:

DriverSeatScreenToggle_St
PassengerSeatScreenToggle_St

When these signals transition from Off to On:

- If not already displayed, the Multi Contoured Seat Client shall display the Seat Adjust Screen for the respective signal/user (Driver or Passenger) when allowed (see [REQ-239444](#) & [REQ-239445](#)).
- If already displayed, the Multi Contoured Seat Client shall close the Seat Adjust Screen for the respective signal/user (Driver or Passenger) and return to the last displayed screen.

When the MultiContouredSeatsUser completes their input (releases the button) and the respective signal reverts to Off, there shall be no change of display by the Multi Contoured Seat Client.

1.8.1.17 MCS-REQ-392308/A-Request to display MCS Adjust Screen via MultiContouredSeatRemoteClient (double shortcut keys)

When the MultiContouredSeatsUser requests to make a seat adjustment via the specific Driver or Passenger Adjust Shortcut Keys, the Multi Contoured Seat Client shall monitor the respective signals:

DriverSeatScreenToggle_St
PassengerSeatScreenToggle_St

When these signals transition from Off to On:

- If not already displayed, the Multi Contoured Seat Client shall display the Seat Adjust Screen for the respective signal/user (Driver or Passenger) when allowed (see [REQ-239444](#) & [REQ-239445](#)).
- If already displayed, the Multi Contoured Seat Client shall close the Seat Adjust Screen for the respective signal/user (Driver or Passenger) and return to the last displayed screen.
- If the Massage Mode is active for the respective signal/user (Driver or Passenger), the Multi Contoured Seat Client shall request to activate Adjust Mode (per [REQ-021427](#)) before displaying the Seat Adjust Screen for the respective signal/user (Driver or Passenger) when allowed (see [REQ-239444](#) & [REQ-239445](#)).

When the MultiContouredSeatsUser completes their input (releases the button) and the respective signal reverts to Off, there shall be no change of display by the Multi Contoured Seat Client.

1.8.1.18 MCS-REQ-392309/A-Request to display MCS Massage Screen via MultiContouredSeatRemoteClient (double shortcut keys)

When the MultiContouredSeatsUser requests to make a seat massage adjustment via the specific Driver or Passenger Massage Shortcut Keys, the Multi Contoured Seat Client shall monitor the respective signals:



DriverMassageScreenToggle_St
PassengerMassageScreenToggle_St

When these signals transition from Off to On:

- If not already displayed, the Multi Contoured Seat Client shall display the Seat Message Screen for the respective signal/user (Driver or Passenger) when allowed (see REQ-239444 & REQ-239445).
- If already displayed, the Multi Contoured Seat Client shall close the Seat Message Screen for the respective signal/user (Driver or Passenger) and return to the last displayed screen.
- If the Message Mode is not active for the respective signal/user (Driver or Passenger), the Multi Contoured Seat Client shall request to activate Message Mode (per REQ-239446) before displaying the Seat Message Screen for the respective signal/user (Driver or Passenger) when allowed (see REQ-239444 & REQ-239445).
 - If the powermode conditions are not met (see REQ-239787), this request shall not be sent.

When the MultiContouredSeatsUser completes their input (releases the button) and the respective signal reverts to Off, there shall be no change of display by the Multi Contoured Seat Client.

1.8.1.19 MCS-SR-REQ-250020/A-Request to display MCS Screen via MultiContouredSeatRemoteClient2

When the MultiContouredSeatsUser requests to make seat adjustments via the specific Driver or Passenger 5way controller, the Multi Contoured Seat Client shall monitor the respective signals:

DriverInitiateSeatControlMode_St
PassengerInitiateSeatControlMode_St

When these signals transition from from SeatControlOff to SeatControlOn:

- If not already displayed, the Multi Contoured Seat Client shall display the Seat Adjust Screen for the respective signal/user (Driver or Passenger) when allowed (see REQ-239444 & REQ-239445).
- If already displayed, the Multi Contoured Seat Client shall continue to display the current Seat Adjust Screen (no screen change).

When the MultiContouredSeatsUser completes their input (releases the button) and the respective signal reverts to SeatControlOff, there shall be no change of display by the Multi Contoured Seat Client.

1.8.1.20 MCS-SR-REQ-239444/C-Inactivity of any user input to MultiContoured Seats

After the MultiContouredSeatUser has made their last input, and all seat adjustment and message request signals have reverted to Inactive or Null, and the:

- DriverSeatScreenToggle_St or PassengerSeatScreenToggle_St has reverted to Off (when configured for Single Shortcut Key), OR
- DriverSeatScreenToggle_St or PassengerSeatScreenToggle_St or DriverMassageScreenToggle_St or PassengerMassageScreenToggle_St has reverted to Off (when configured for Double Shortcut Key), OR
- DriverInitiateSeatControlMode_St or PassengerInitiateSeatControlMode_St has reverted to SeatControlOff (for programs with the 5way controller),

the Multi Contoured Seat Client shall start the T_MCS_Input and T_MCS_Screen timers.

- While T_MCS_Input is active (not expired), the opposing seat's Shortcut Key(s) or 5way controller shall not be able to request to become the primary seat on the touch screen display.
 - This timer shall not apply to the "Driver / Passenger" touch screen buttons. These buttons shall always have request control.
- After T_MCS_Input expires, the opposing seat's Shortcut Key(s) or 5way controller shall be able to request to become the primary seat on the touch screen display.
- After T_MCS_Screen expires, the Seat Adjust Screen or Seat Message Screen being shown on the touch screen display shall close.

If the user makes another input on the HMI (via any seat or message request signal) or a 5way controller (via DriverInitiateSeatControlMode_St or PassengerInitiateSeatControlMode_St) within either timer, both the T_MCS_Input and



T_MCS_Screen timers shall restart on input, and initialize upon the release of the users last input, when the relevant request signal has once again reverted to Inactive or Null.

If the user closes the Seat Adjust Screen or Seat Massage Screen using the HMI or the originating Shortcut Key (via DriverSeatScreenToggle_St or PassengerSeatScreenToggle_St or DriverMassageScreenToggle_St or PassengerMassageScreenToggle_St) within either timer, both the T_MCS_Input and T_MCS_Screen timers shall become inactive and return to their default state. These timers and their functionality shall not be used when the Seat Adjust Screen or Seat Massage Screen is not displayed.

1.8.1.21 MCS-TMR-REQ-239445/B-T_MCS_Input

Name	Description	Units	Range	Resolution	Default
T_MCS_Input	Time allowed from the MultiContoured Seats Client after the users last input (either by the Shortcut Key, touch screen display, or 5way controller) before allowing the opposing seat's Shortcut Key or 5way controller to request screen control.	sec	0-20	1	6

1.8.1.22 MCS-TMR-REQ-239813/C-T_MCS_Screen

Name	Description	Units	Range	Resolution	Default
T_MCS_Screen	Time allowed from the Multi Contoured Seat Client after the users last input (either from the Shortcut Key, touch screen display, or 5way controller) before closing the HMI screen. The default value of this timer shall not be less than the required time by Multi Contoured Seat Server to rebuild or change bladder pressure. Please refer to HMI requirement [H74a.R014] for the most recent and correct value.	sec	0-20	1	12

1.8.1.23 MCS-SR-REQ-021430/A-Highlighted Function and pressure percentage memory (TcSE ROIN-201098-1)

The MultiContouredSeats Client shall remember Lumbar bladder fill percentages, and Bolster bladder fill percentages upon powering down of current key cycle. The Client will use these values during initialization of the next key cycle, until it receives an updated actual value from the MultiContouredSeats Server.

1.8.1.24 MCS-SR-REQ-021427/B-Selecting the Adjust Tab from the touch screen (TcSE ROIN-200453-1)

If the user selects the adjust tab from the touch screen, or the Massage Off button (when configured for Double Shortcut Key), the MCS Client shall initiate a DriverActiveSeatControl_Rq or PassengerActiveSeatControl_Rq with parameters equal to

HighlightedFunction = MiddleLumbar
SeatModeSelect = Inactive

1.8.1.25 MCS-SR-REQ-239446/A-Selecting the Massage Tab from the touch screen

If the user selects the Massage tab from the touch screen, the MCS Client shall initiate an DriverActiveSeatControl_Rq or PassengerActiveSeatControl_Rq with parameters equal to

HighlightedFunction = CushionMassage
SeatModeSelect = Inactive

1.8.1.26 MCS-REQ-488839/A-Navigating Tabs from the touch screen

The user shall be able to navigate between the various tabs on the MCS Client without impacting or changing the active mode (massage vs adjust). The MCS Client shall only initiate a DriverActiveSeatControl_Rq or PassengerActiveSeatControl_Rq (with the requested HighlightedFunction and SeatModeSelect) when a user attempts to adjust an MCS related adjustment (Lumbar, Bolster, Massage) within the Massage or Seats tab.



Note: The HMI for MCS with First Row Seat Adjustments includes adjustments under the Seats tab that do not trigger the MCS requests above. When these are selected and adjusted, if Massage is active, it shall remain active. The Headrest tab and its items also do not trigger the MCS requests above.

1.8.1.27 MCS-SR-REQ-243309/B-Adjusting the Massage Pattern levels from the touch screen (Low/Mid/High Buttons)

If the user selects the Massage Pattern's Low, Med, or High buttons from the touch screen, the MCS Client shall initiate an `DriverActiveSeatControl_Rq` or `PassengerActiveSeatControl_Rq` with parameters equal to

HighlightedFunction = CushionMassage
SeatModeSelect = Low_2, Med_2, or High_2

Note: These encodings shall only be used for the Massage Patterns offered by this feature (not for the Legacy MCS).

Note: This requirement shall not be used when configured as per REQ-383521.

1.8.1.28 MCS-SR-REQ-383522/A-Adjusting the Massage Pattern levels from the touch screen (Intensity Indicators)

If the user selects an already active Massage Pattern button from the touch screen (per `DriverMassagePattern_St`, `PassengerMassagePattern_St`), the MCS Client shall initiate a `DriverActiveSeatControl_Rq` or `PassengerActiveSeatControl_Rq` with parameters equal to

HighlightedFunction = CushionMassage
SeatModeSelect = Low_2, Med_2, or High_2

Where SeatModeSelect shall:

- Step through the above three values for every press of the active Massage Pattern button
- Step through starting from the active intensity value (per `DriverMassageIntensity_St`, `PassengerMassageIntensity_St`)
 - Ex. If `DriverMassageIntensity_St` = Medium, the next press shall initiate a `DriverActiveSeatControl_Rq` with `SeatModeSelect` = Low_2
- Step through in the order of High_2 > Med_2 > Low_2 > High_2...

Note: These encodings shall only be used for the Massage Patterns offered by this feature (not for the Legacy MCS).

Note: This requirement shall only be used when configured as per REQ-383521.

1.8.1.29 MCSv2-REQ-488840/A-Adjusting the Massage Pattern levels from the touch screen (Intensity Indicators) v2

If the user selects an already active Massage Pattern button from the touch screen (per `DriverMassagePattern_St`, `PassengerMassagePattern_St`), the MCS Client shall initiate a `DriverActiveSeatControl_Rq` or `PassengerActiveSeatControl_Rq` with parameters equal to

HighlightedFunction = CushionMassage
SeatModeSelect = Low_2, Med_2, or High_2

Where SeatModeSelect shall:

- Step through the above three values for every press of the active Massage Pattern button
- Step through starting from the active intensity value (per `DriverMassageIntensity_St`, `PassengerMassageIntensity_St`)
 - Ex. If `DriverMassageIntensity_St` = Medium, the next press shall initiate a `DriverActiveSeatControl_Rq` with `SeatModeSelect` = High_2
- Step through in the order of Low_2 > Med_2 > High_2 > Low_2...

Note: These encodings shall only be used for the Massage Patterns offered by this feature (not for the Legacy MCS).

Note: This requirement shall only be used when configured as per REQ-383521.

1.8.1.30 MCS-SR-REQ-250536/B-Selecting a Massage Pattern from the touch screen

If the user selects a Massage Pattern button from the touch screen, the MCS Client shall initiate a `DriverMassagePattern_Rq` or `PassengerMassagePattern_Rq` with the Preset parameter equal to the selected pattern.

If the MCS Client is configured as per REQ-383521, the selection of a new (not currently active) Massage Pattern shall not result in a change or request of a new Massage Pattern Intensity. Massage Pattern Intensity shall carry forward to all Massage Patterns.



1.8.1.31 MCS-SR-REQ-239814/A-Multi Contoured Seats Adjustment via TouchScreen

If the user presses any seat adjustment or massage button from the touch screen display, the Multi Contoured Seat Client shall set the applicable request signals (See REQ-237613) to their associated parameters.

Those request signals shall then transmit the associated parameters continuously as long as the button is pressed by the user. Upon release of the button, those request signals shall return to "Inactive" or "Null."

When any seat adjustment or massage button is pressed from the touch screen display, the associated parameters shall be held for a minimum of 100ms.

The Multi Contoured Seat Client does not arbitrate if an input is a "press and hold" or a "tap". This shall be done by the Multi Contoured Seat Server.



1.9 MultiContouredSeatClient Interface

1.9.1 MCSv2-IIR-REQ-237613/B-MultiContouredSeatsClient_Tx

The MultiContouredSeatsClient_Tx represents all the Multi Contoured Seats feature related signals transmitted by the Multi Countoured Seat Client object. The below table represents the mapping of the logical signal names (as described in this specification) to the global GSDB signal names.

Logical Signal Name	Parameter Name	GSDB Signal Name
DriverActiveSeatControl_Rq	HighlightedFunction	SeatFnDrv_D_Rq
	SeatModeSelect	SeatFnChngDrv2_D_Rq
DriverMassagePattern_Rq	Preset	SeatMasgDrv_D_Rq
PassengerActiveSeatControl_Rq	HighlightedFunction	SeatFnPsgr_D_Rq
	SeatModeSelect	SeatFnChngPsgr2_D_Rq
PassengerMassagePattern_Rq	Preset	SeatMasgPsngr_D_Rq

Note: GSDB signal names are reference only. The Global Signal Database (GSDB) is the master for all signals. If there is a conflict bring to the module D&R's attention.

1.9.1.1 MD-REQ-021435/B-DriverActiveSeatControl_Rq (TcSE ROIN-199569-2)

Message Type: Request

This method is a signal from the Multi Contoured Seat Client to the Multi Contoured Seat Server (Driver's side). This request indicates to the server what seat control update is requested (Massage, Bolster, Lumbar)

Name	Literals	Value	Description
HighlightedFunction	-	-	Requested active function.
	Inactive	0x0	
	LowerLumbar	0x1	
	MiddleLumbar	0x2	
	UpperLumbar	0x3	
	LowerBolster	0x4	
	UpperBolster	0x5	
	LumbarMassage	0x6	
SeatModeSelect	CushionMassage	0x7	This encoding shall be used for "Massage Patterns" when configured for Enhanced MCS
	-	-	Indicates if the current highlighted function should increase pressure, decrease pressure, or increase/decrease seat/lumbar massage intensity.
	Inactive	0x0	
	Not_Used	0x1	
	Increase	0x2	
	Decrease	0x3	
	Off	0x4	
	Low	0x5	
	High	0x6	
	Off_2	0x7	This encoding shall be used to request Massage Pattern changes when configured for Enhanced MCS
	Low_2	0x8	This encoding shall be used to request Massage Pattern changes when configured for Enhanced MCS
	Med_2	0x9	This encoding shall be used to request Massage Pattern changes when configured for Enhanced MCS
	High_2	0xA	This encoding shall be used to request Massage Pattern changes when configured for Enhanced MCS
	Not_Used	0xB-0xE	
	Fault	0xF	

**1.9.1.2 MD-REQ-237625/B-DriverMassagePattern_Rq**

Message Type : Request

This method is a signal from the Multi Contoured Seat Client to the Multi Contoured Seat Server (Driver's side). This request indicates to the server what seat massage pattern preset the user has selected.

Name	Literals	Value	Description
Preset	-	-	Requested Pattern Preset
	Null	0x0	
	Pattern 1	0x1	
	Pattern 2	0x2	
	Pattern 3	0x3	
	Pattern 4	0x4	
	Pattern 5	0x5	
	Pattern 6	0x6	
	Pattern 7	0x7	
	Pattern 8	0x8	
	Pattern 9	0x9	
	Pattern 10	0xA	
	Not Used	0xB-0xF	

1.9.1.3 MD-REQ-021437/B-PassengerActiveSeatControl_Rq (TcSE ROIN-201060-2)

Message Type: Request

This method is a signal from the Multi Contoured Seat Client to the Multi Contoured Seat Server (Passenger's side). This request indicates to the server what seat control update is requested (Massage, Bolster, Lumbar)

Name	Literals	Value	Description
HighlightedFunction	-	-	Requested active function.
	Inactive	0x0	
	LowerLumbar	0x1	
	MiddleLumbar	0x2	
	UpperLumbar	0x3	
	LowerBolster	0x4	
	UpperBolster	0x5	
	LumbarMassage	0x6	
	CushionMassage	0x7	This encoding shall be used for "Massage Patterns" when configured for Enhanced MCS
SeatModeSelect	-	-	Indicates if the current highlighted function should increase pressure, decrease pressure, or increase/decrease seat/lumbar massage intensity.
	Inactive	0x0	
	Not_Used	0x1	
	Increase	0x2	
	Decrease	0x3	
	Off	0x4	
	Low	0x5	
	High	0x6	
	Off_2	0x7	This encoding shall be used to request Massage Pattern changes when configured for Enhanced MCS
	Low_2	0x8	This encoding shall be used to request Massage Pattern changes when configured for Enhanced MCS



	Med_2	0x9	This encoding shall be used to request Massage Pattern changes when configured for Enhanced MCS
	High_2	0xA	This encoding shall be used to request Massage Pattern changes when configured for Enhanced MCS
	Not_Used	0xB-0xE	
	Fault	0xF	

1.9.1.4 MD-REQ-237626/B-PassengerMassagePattern_Rq

Message Type : Request

This method is a signal from the Multi Contoured Seat Client to the Multi Contoured Seat Server (Passenger side). This request indicates to the server what seat massage pattern preset the user has selected.

Name	Literals	Value	Description
Preset	-	-	Requested Pattern Preset
	Null	0x0	
	Pattern 1	0x1	
	Pattern 2	0x2	
	Pattern 3	0x3	
	Pattern 4	0x4	
	Pattern 5	0x5	
	Pattern 6	0x6	
	Pattern 7	0x7	
	Pattern 8	0x8	
	Pattern 9	0x9	
	Pattern 10	0xA	
	Not Used	0xB-0xF	

**1.9.2 MCSv2-IIR-REQ-237614/G-MultiContouredSeatsClient_Rx**

The MultiContouredSeatsClient_Rx represents all the Multi Contoured Seats feature related signals received by the Multi Countoured Seat Client object. The below table represents the mapping of the logical signal names (as described in this specification) to the global GSDB signal names.

Logical Signal Name	Parameter Name	GSDB Signal Name
DriverActiveSeatControl_St	HighlightedFunction	SeatFnDrv_D_Stat
	PressureUpdates	SeatPDrv_B_Stat
DriverBolsterPressureLower_St	ActualPressure	SeatBILoDrv_Pc_Actl
DriverBolsterPressureUpper_St	ActualPressure	SeatBIUpDrv_Pc_Actl
DriverLumbarPressureLower_St	ActualPressure	SeatLmbrLoDrv_Pc_Actl
DriverLumbarPressureMiddle_St	ActualPressure	SeatLmbrMidDrv_Pc_Actl
DriverLumbarPressureUpper_St	ActualPressure	SeatLmbrUpDrv_Pc_Actl
DriverSeatScreenToggle_St	Mode	SeatScrnDrvOn_B_Rq
DriverMassageScreenToggle_St	Mode	StmsScrnDrvOn_B_Rq
DriverMassageIntensity_St	MassageIntensity	SeatIntnsDrv_D_Stat
DriverMassagePattern_St	Preset	SeatMasgDrv_D_Stat
DriverInitiateSeatControlMode_St	Mode	SeatSwchDrv_B_Stat
FrontDriverMCSMode_St	Mode	MCSFrDrMode_Stat
SeatSetMenuDriver_St	Type	SeatSetMnuDrv_D_Stat
SeatDeviceSetDriver_St	Type	SeatDevcSetDrv_D_Stat
SeatMassageDriver_St	Type	StmsDrv_D_Stat
SeatDeviceAdjustRow1Driver_St	Type	SeatDevcAdjR1Drv_D_Stat
PassengerActiveSeatControl_St	HighlightedFunction	SeatFnPsgr_D_Stat
	PressureUpdates	SeatPPsgr_B_Stat
PassengerBolsterPressureLower_St	ActualPressure	SeatBILoPsgr_Pc_Actl
PassengerBolsterPressureUpper_St	ActualPressure	SeatBIUpPsgr_Pc_Actl
PassengerLumbarPressureLower_St	ActualPressure	SeatLmbrLoPsgr_Pc_Actl
PassengerLumbarPressureMiddle_St	ActualPressure	SeatLmbrMidPsgr_Pc_Actl
PassengerLumbarPressureUpper_St	ActualPressure	SeatLmbrUpPsgr_Pc_Actl
PassengerSeatScreenToggle_St	Mode	SeatScrnPsngrOn_B_Rq
PassengerMassageScreenToggle_St	Mode	StmsScrnPsngrOn_B_Rq
PassengerMassageIntensity_St	MassageIntensity	SeatIntnsPsngr_D_Stat
PassengerMassagePattern_St	Preset	SeatMasgPsngr_D_Stat
PassengerInitiateSeatControlMode_St	Mode	SeatSwchPsgr_B_Stat
FrontPassengerMCSMode_St	Mode	MCSFrPsngrMode_Stat
SeatSetMenuPassenger_St	Type	SeatSetMnuPsngr_D_Stat
SeatDeviceSetPassenger_St	Type	SeatDevcSetPsngr_D_Stat
SeatMassagePassenger_St	Type	StmsPsngr_D_Stat
SeatDeviceAdjustRow1Passenger_St	Type	SeatDevcAdjR1Psgr_D_Stat
IgnitionStatus_St	Type	Ignition_Status

Note: GSDB signal names are reference only. The Global Signal Database (GSDB) is the master for all signals. If there is a conflict bring to the module D&R's attention.

1.9.2.1 MD-REQ-021443/B-DriverActiveSeatControl_St (TcSE ROIN-199404-1)

Message Type: Status

This method is a signal from the Multi Contoured Seat Server to the Multi Contoured Seat Client. If the seat function is being controlled at the seat HMI, this signal indicates what seat mode is to be highlighted by the display HMI. If the seat function is



being controlled at the display HMI, this signal is a confirmation from the Server that the function that was requested by DriverActiveSeatControl_Rq has been accepted, and the Server is reacting to inputs from the display client.

Name	Literals	Value	Description
HighlightedFunction	-	-	Indicates the current active function.
	Null	0x0	
	LowerLumbar	0x1	
	MiddleLumbar	0x2	
	UpperLumbar	0x3	
	LowerBolster	0x4	
	UpperBolster	0x5	
	LumbarMassage	0x6	
	CushionMassage	0x7	This encoding shall be used for "Massage Patterns" when configured for Enhanced MCS
PressureUpdates	-	-	Indicates if the pressure of the highlighted function is currently being updated.
	NotUpdating	0x0	
	Updating	0x1	

1.9.2.2 MD-REQ-021444/A-DriverBolsterPressureLower_St (TcSE ROIN-199410-1)

Message Type: Status

This method is a signal from the Multi Contoured Seat Server to the Multi Contoured Seat Client indicating the status of the Bolster Lower Bladder Pair Pressure in percentage of full.

Name	Literals	Value	Description
ActualPressure	-	0x00 – 0x64	Percentage of Full

1.9.2.3 MD-REQ-021445/A-DriverBolsterPressureUpper_St (TcSE ROIN-199412-1)

This method is a signal from the Multi Contoured Seat Server to the Multi Contoured Seat Client indicating the status of the Bolster Upper Bladder Pair Pressure in percentage of full.

Name	Literals	Value	Description
ActualPressure	-	0x00 – 0x64	Percentage of Full

1.9.2.4 MD-REQ-021449/A-DriverLumbarPressureLower_St (TcSE ROIN-199409-1)

Message Type: Status

This method is a signal from the Multi Contoured Seat Server to the Multi Contoured Seat Client indicating the status of the Lumbar Lower Bladder Pressure in percentage of full.

Name	Literals	Value	Description
ActualPressure	-	0x00 – 0x64	Percentage of Full

1.9.2.5 MD-REQ-021450/A-DriverLumbarPressureMiddle_St (TcSE ROIN-199422-1)

Message Type: Status

This method is a signal from the Multi Contoured Seat Server to the Multi Contoured Seat Client indicating the status of the Lumbar Middle Bladder Pressure in percentage of full.



Name	Literals	Value	Description
ActualPressure	-	0x00 – 0x64	Percentage of Full

1.9.2.6 MD-REQ-021451/A-DriverLumbarPressureUpper_St (TcSE ROIN-199416-1)

Message Type: Status

This method is a signal from the Multi Contoured Seat Server to the Multi Contoured Seat Client indicating the status of the Lumbar Upper Bladder Pressure in percentage of full.

Name	Literals	Value	Description
ActualPressure	-	0x00 – 0x64	Percentage of Full

1.9.2.7 MD-REQ-237615/B-DriverSeatScreenToggle_St

Message Type: Status

This method is a signal from a seat feature server (Driver's side) to a seat feature client informing the Client that a request has been made by the user, via seat controls (Shortcut Key or Adjust Shortcut Key), to toggle the current on/off state of the seat feature's control function. This signal allows the Client to update the HMI output and activate/deactivate HMI controls.

Name	Literals	Value	Description
Mode	-	-	Request to activate drivers side seat adjust screen in HMI
	Off	0x0	
	On	0x1	

1.9.2.8 MD-REQ-392372/A-DriverMassageScreenToggle_St

Message Type: Status

This method is a signal from a seat feature server (Driver's side) to a seat feature client informing the Client that a request has been made by the user, via seat controls (Massage Shortcut Key), to toggle the current on/off state of the seat feature's massage control function. This signal allows the Client to update the HMI output and activate/deactivate HMI controls.

Name	Literals	Value	Description
Mode	-	-	Request to activate drivers side seat massage screen in HMI
	Off	0x0	
	On	0x1	

1.9.2.9 MD-REQ-237616/B-DriverMassageIntensity_St

Message Type: Status

This method is a signal from the Multi Contoured Seat Server (Driver's Side) to the Multi Contoured Seat Client which reports the current value of Massage Intensity.

Name	Literals	Value	Description
MassageIntensity	-	-	Current value of Massage Intensity
	Null	0x0	
	Off	0x1	
	Low	0x2	
	Medium	0x3	
	High	0x4	

**1.9.2.10 MD-REQ-237627/C-DriverMassagePattern_St**

Message Type: Status

This method is a signal from the Multi Contoured Seat Server to the Multi Contoured Seat Client (Driver's side). This status confirms client initiated request and reports what pattern is active.

Name	Literals	Value	Description
Preset	-	-	Requested Pattern Preset
	Null	0x0	
	Pattern 1	0x1	
	Pattern 2	0x2	
	Pattern 3	0x3	
	Pattern 4	0x4	
	Pattern 5	0x5	
	Pattern 6	0x6	
	Pattern 7	0x7	
	Pattern 8	0x8	
	Pattern 9	0x9	
	Pattern 10	0xA	
	Not Used	0xB-0xF	

1.9.2.11 MD-REQ-021447/A-DriverInitiateSeatControlMode_St (TcSE ROIN-199414-1)

Message Type: Status

This method is a signal from the Multi Contoured Seat Server (Driver's side) to the Multi Contoured Seat Client informing the Client that a request has been made by the user to change a Multi Contoured Seat function from the seat controls. This signal allows the Client to update the HMI output.

Name	Literals	Value	Description
Mode	-	-	
	SeatControlOff	0x0	
	SeatControlOn	0x1	

1.9.2.12 MD-REQ-454277/A-FrontDriverMCSMode_St

Message Type: Status

This method is a signal from the Multi Contoured Seat Server (Front Driver's side) to the Multi Contoured Seat Client informing the Client of the feature status.

Name	Literals	Value	Description
Mode	-	-	
	Null	0x0	
	Off	0x1	
	Partially_Active	0x2	
	Fully_Active	0x3	

1.9.2.13 MD-REQ-465313/A-SeatSetMenuDriver_St

Message Type: Status

Signal used to identify the menu header highlighter in the Driver seat settings HMI screen from hardswitch input.



Name	Literals	Value	Description
Type	-	-	Indicates menu header highlighter in the Driver seat settings HMI
	Inactive	0x0	
	Massage_Menu	0x1	
	Seat_Back_Menu	0x2	
	Seat_Cushion_Menu	0x3	
	Headrest_Menu	0x4	
	Unused	0x5-0x7	

1.9.2.14 MD-REQ-465315/A-SeatDeviceSetDriver_St

Message Type: Status

Signal used to identify the submenu option highlighter in the Driver seat settings HMI screen from hardswitch input.

Name	Literals	Value	Description
Type	-	-	Indicates the submenu option highlighter in the Driver seat settings HMI screen
	Inactive	0x00	
	Upper_Thoracic	0x01	
	Left_Thigh_Extension	0x02	
	Right_Thigh_Extension	0x03	
	Calf_Raise_Extension	0x04	
	Upper_Lumbar	0x05	
	Mid_Lumbar	0x06	
	Lower_Lumbar	0x07	
	Back_Bolsters	0x08	
	Cushion_Bolsters	0x09	
	Headrest	0x0A	
	Lumbar	0x0B	
	Pattern_1	0x0C	
	Pattern_2	0x0D	
	Pattern_3	0x0E	
	Pattern_4	0x0F	
	Pattern_5	0x10	
	Pattern_6	0x11	
	Pattern_7	0x12	
	Pattern_8	0x13	
	Pattern_9	0x14	
	Pattern_10	0x15	
	Unused	0x16-0x1F	

1.9.2.15 MD-REQ-465326/A-SeatMassageDriver_St

Message Type: Status

Signal used to identify massage status from Driver seat module.

Name	Literals	Value	Description
Type	-	-	Indicates massage status from Driver seat module.
	Null	0x0	
	Low	0x1	
	Medium	0x2	
	High	0x3	
	Off	0x4	

**1.9.2.16 MD-REQ-488859/A-SeatDeviceAdjustRow1Driver_St**

Message Type: Status

Signal used to indicate the Driver seat device adjustment status. Increase/decrease seat command for power adjustments to HMI.

Name	Literals	Value	Description
Type	-	-	Adjust driver seat device to HMI.
	Inactive	0x0	
	Increase	0x1	
	Decrease	0x2	
	Not Used	0x3	

1.9.2.17 MD-REQ-021452/B-PassengerActiveSeatControl_St (TcSE ROIN-201068-1)

Message Type: Status

This method is a signal from the Multi Contoured Seat Server to the Multi Contoured Seat Client. If the seat function is being controlled at the seat HMI, this signal indicates what seat mode is to be highlighted by the display HMI. If the seat function is being controlled at the display HMI, this signal is a confirmation from the Server that the function that was requested by PassengerActiveSeatControl_Rq has been accepted, and the Server is reacting to inputs from the display client.

Name	Literals	Value	Description
HighlightedFunction	-	-	Indicates the current active function.
	Null	0x0	
	LowerLumbar	0x1	
	MiddleLumbar	0x2	
	UpperLumbar	0x3	
	LowerBolster	0x4	
	UpperBolster	0x5	
	LumbarMassage	0x6	
	CushionMassage	0x7	This encoding shall be used for "Massage Patterns" when configured for Enhanced MCS
PressureUpdates	-	-	Indicates if the pressure of the highlighted function is currently being updated.
	NotUpdating	0x0	
	Updating	0x1	

1.9.2.18 MD-REQ-021453/A-PassengerBolsterPressureLower_St (TcSE ROIN-201069-1)

Message Type: Status

This method is a signal from the Multi Contoured Seat Server to the Multi Contoured Seat Client indicating the status of the Bolster Lower Bladder Pair Pressure in percentage of full.

Name	Literals	Value	Description
ActualPressure	-	0x00 – 0x64	Percentage of Full

1.9.2.19 MD-REQ-021454/A-PassengerBolsterPressureUpper_St (TcSE ROIN-201070-1)

This method is a signal from the Multi Contoured Seat Server to the Multi Contoured Seat Client indicating the status of the Bolster Upper Bladder Pair Pressure in percentage of full.

Name	Literals	Value	Description
ActualPressure	-	0x00 – 0x64	Percentage of Full

**1.9.2.20 MD-REQ-021458/A-PassengerLumbarPressureLower_St (TcSE ROIN-201071-1)**

Message Type: Status

This method is a signal from the Multi Contoured Seat Server to the Multi Contoured Seat Client indicating the status of the Lumbar Lower Bladder Pressure in percentage of full.

Name	Literals	Value	Description
ActualPressure	-	0x00 – 0x64	Percentage of Full

1.9.2.21 MD-REQ-021459/A-PassengerLumbarPressureMiddle_St (TcSE ROIN-201072-1)

Message Type: Status

This method is a signal from the Multi Contoured Seat Server to the Multi Contoured Seat Client indicating the status of the Lumbar Middle Bladder Pressure in percentage of full.

Name	Literals	Value	Description
ActualPressure	-	0x00 – 0x64	Percentage of Full

1.9.2.22 MD-REQ-021460/A-PassengerLumbarPressureUpper_St (TcSE ROIN-201073-1)

Message Type: Status

This method is a signal from the Multi Contoured Seat Server to the Multi Contoured Seat Client indicating the status of the Lumbar Upper Bladder Pressure in percentage of full.

Name	Literals	Value	Description
ActualPressure	-	0x00 – 0x64	Percentage of Full

1.9.2.23 MD-REQ-237617/B-PassengerSeatScreenToggle_St

Message Type: Status

This method is a signal from the seat feature server (Passenger's side) to a seat feature client informing the Client that a request has been made by the user, via seat controls (Shortcut Key or Adjust Shortcut Key), to toggle the current on/off state of the seat feature's control function. This signal allows the Client to update the HMI output and activate/deactivate HMI controls.

Name	Literals	Value	Description
Mode	-	-	Request to activate passengers side seat adjust screen in HMI
	Off	0x0	
	On	0x1	

1.9.2.24 MD-REQ-392373/A-PassengerMassageScreenToggle_St

Message Type: Status

This method is a signal from a seat feature server (Passenger's side) to a seat feature client informing the Client that a request has been made by the user, via seat controls (Massage Shortcut Key), to toggle the current on/off state of the seat feature's massage control function. This signal allows the Client to update the HMI output and activate/deactivate HMI controls.

Name	Literals	Value	Description
Mode	-	-	Request to activate passengers side seat massage screen in HMI



	Off	0x0	
	On	0x1	

1.9.2.25 MD-REQ-237629/B-PassengerMassageIntensity_St

Message Type: Status

This method is a signal from the Multi Contoured Seat Server (Passenger's Side) to the Multi Contoured Seat Client which reports the current value of Massage Intensity.

Name	Literals	Value	Description
MassageIntensity	-	-	Current value of Massage Intensity
	Null	0x0	
	Off	0x1	
	Low	0x2	
	Medium	0x3	
	High	0x4	

1.9.2.26 MD-REQ-237628/C-PassengerMassagePattern_St

Message Type: Status

This method is a signal from the Multi Contoured Seat Server to the Multi Contoured Seat Client (Passenger's side). This status confirms client initiated request and reports what pattern is active.

Name	Literals	Value	Description
Preset	-	-	Requested Pattern Preset
	Null	0x0	
	Pattern 1	0x1	
	Pattern 2	0x2	
	Pattern 3	0x3	
	Pattern 4	0x4	
	Pattern 5	0x5	
	Pattern 6	0x6	
	Pattern 7	0x7	
	Pattern 8	0x8	
	Pattern 9	0x9	
	Pattern 10	0xA	
	Not Used	0xB-0xF	

1.9.2.27 MD-REQ-021456/A-PassengerInitiateSeatControlMode_St (TcSE ROIN-201061-1)

Message Type: Status

This method is a signal from the Multi Contoured Seat Server (Passenger's side) to the Multi Contoured Seat Client informing the Client that a request has been made by the user to change a Multi Contoured Seat function from the seat controls. This signal allows the Client to update the HMI output.

Name	Literals	Value	Description
Mode	-	-	
	SeatControlOff	0x0	
	SeatControlOn	0x1	

**1.9.2.28 MD-REQ-454278/A-FrontPassengerMCSMode_St**

Message Type: Status

This method is a signal from the Multi Contoured Seat Server (Front Passenger's side) to the Multi Contoured Seat Client informing the Client of the feature status.

Name	Literals	Value	Description
Mode	-	-	
	Null	0x0	
	Off	0x1	
	Partially_Active	0x2	
	Fully_Active	0x3	

1.9.2.29 MD-REQ-465314/A-SeatSetMenuPassenger_St

Message Type: Status

Signal used to identify the menu header highlighter in the Passenger seat settings HMI screen from hardswitch input.

Name	Literals	Value	Description
Type	-	-	Indicates menu header highlighter in the Passenger seat settings HMI
	Inactive	0x0	
	Massage_Menu	0x1	
	Seat_Back_Menu	0x2	
	Seat_Cushion_Menu	0x3	
	Headrestrest_Menu	0x4	
	Unused	0x5-0x7	

1.9.2.30 MD-REQ-465316/A-SeatDeviceSetPassenger_St

Message Type: Status

Signal used to identify the submenu option highlighter in the Passenger seat settings HMI screen from hardswitch input.

Name	Literals	Value	Description
Type	-	-	Indicates the submenu option highlighter in the Passenger seat settings HMI screen
	Inactive	0x00	
	Upper_Thoracic	0x01	
	Left_Thigh_Extension	0x02	
	Right_Thigh_Extension	0x03	
	Calf_Raise_Extension	0x04	
	Upper_Lumbar	0x05	
	Mid_Lumbar	0x06	
	Lower_Lumbar	0x07	
	Back_Bolsters	0x08	
	Cushion_Bolsters	0x09	
	Headrest	0x0A	
	Lumbar	0x0B	
	Pattern_1	0x0C	
	Pattern_2	0x0D	
	Pattern_3	0x0E	
	Pattern_4	0x0F	
	Pattern_5	0x10	
	Pattern_6	0x11	



	Pattern_7	0x12	
	Pattern_8	0x13	
	Pattern_9	0x14	
	Pattern_10	0x15	
	Unused	0x16-0x1F	

1.9.2.31 MD-REQ-465327/A-SeatMassagePassenger_St

Message Type: Status

Signal used to identify massage status from Passenger seat module.

Name	Literals	Value	Description
Type	-	-	Indicates massage status from Passenger seat module.
	Null	0x0	
	Low	0x1	
	Medium	0x2	
	High	0x3	
	Off	0x4	

1.9.2.32 MD-REQ-488860/A-SeatDeviceAdjustRow1Passenger_St

Message Type: Status

Signal used to indicate the Passenger seat device adjustment status. Increase/decrease seat command for power adjustments to HMI.

Name	Literals	Value	Description
Type	-	-	Adjust passenger seat device to HMI.
	Inactive	0x0	
	Increase	0x1	
	Decrease	0x2	
	Not Used	0x3	

1.9.2.33 MD-REQ-199809/A-IgnitionStatus_St

Message Type: Status

Signal used to indicate ignition state.

Name	Literals	Value	Description
Type	-	-	Indicates ignition state
	Unknown	0x0	
	Off	0x1	
	Accessory	0x2	
	Run	0x4	
	Start	0x8	
	Invalid	0xF	



2 Functional Definition

2.1 MCS-FUN-REQ-237635/B-Activate Multi Contour Seat Display HMI via Single Shortcut Key

2.1.1 Use Cases

2.1.1.1 MCS-UC-REQ-237633/B-Open Seat Adjust Screen from Shortcut Key

Actors	Vehicle Occupant
Pre-conditions	Display is ON HMI is not displaying seat control feature screen
Scenario Description	User presses seat shortcut key to bring up seat controls
Post-conditions	HMI indicates {brings up seat control feature screen}
List of Exception Use Cases	MCS-UC-REQ-237634-Exit Seat Adjust Screen from Shortcut Key
Interfaces	G-HMI & vehicle system
Note	Pressing the Shortcut key will bring up the Multi Control Seat Menu when the HMI display is On. If Ignition is not in RUN, the real control menu (button input) will be greyed-out with only the Return button available. Please refer to [H74a.R030]

2.1.1.2 MCS-UC-REQ-237634/B-Exit Seat Adjust Screen from Shortcut Key


Actors	Vehicle Occupant
Pre-conditions	Display is ON HMI is displaying seat control feature screen
Scenario Description	User presses seat shortcut key prior to screen timeout
Post-conditions	HMI exits seat control screen and returns to prior screen
List of Exception Use Cases	Screen Timeout duration has expired
Interfaces	G-HMI & vehicle system
Note	For "screen timeout" refer to MCS-TMR-REQ-239813-T_MCS_Screen



2.1.2 White Bow View

2.1.2.1 MCS-ACT-REQ-237767/B-Activate/Deactivate Multi Contour Seat Feature Screen HMI


Activity Diagram

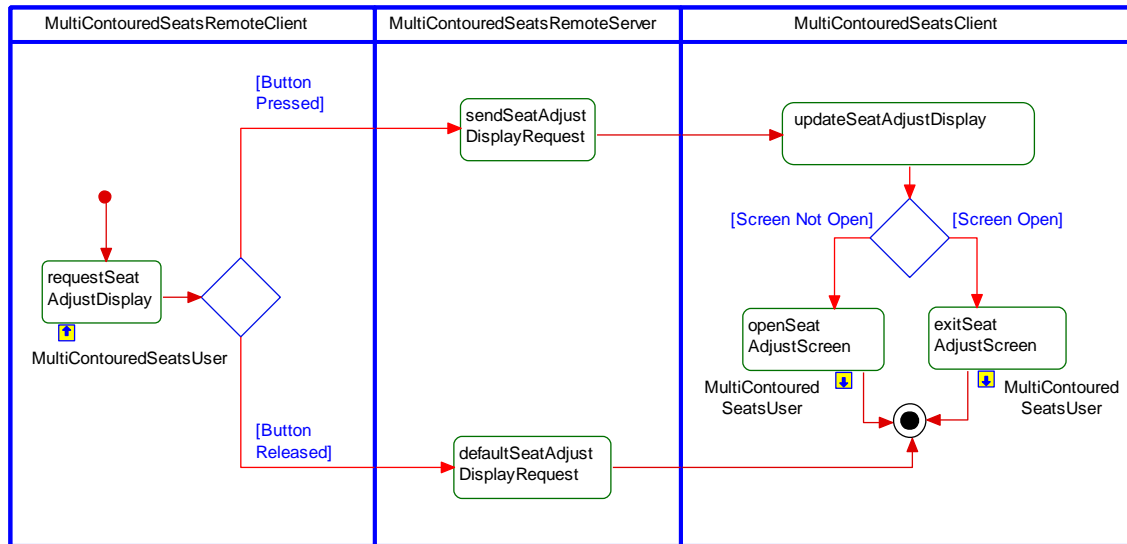



2.1.2.2 MCS-SD-REQ-237620/B-Activate/Deactivate Multi Contour Seat Feature Screen HMI

Sequence Diagram

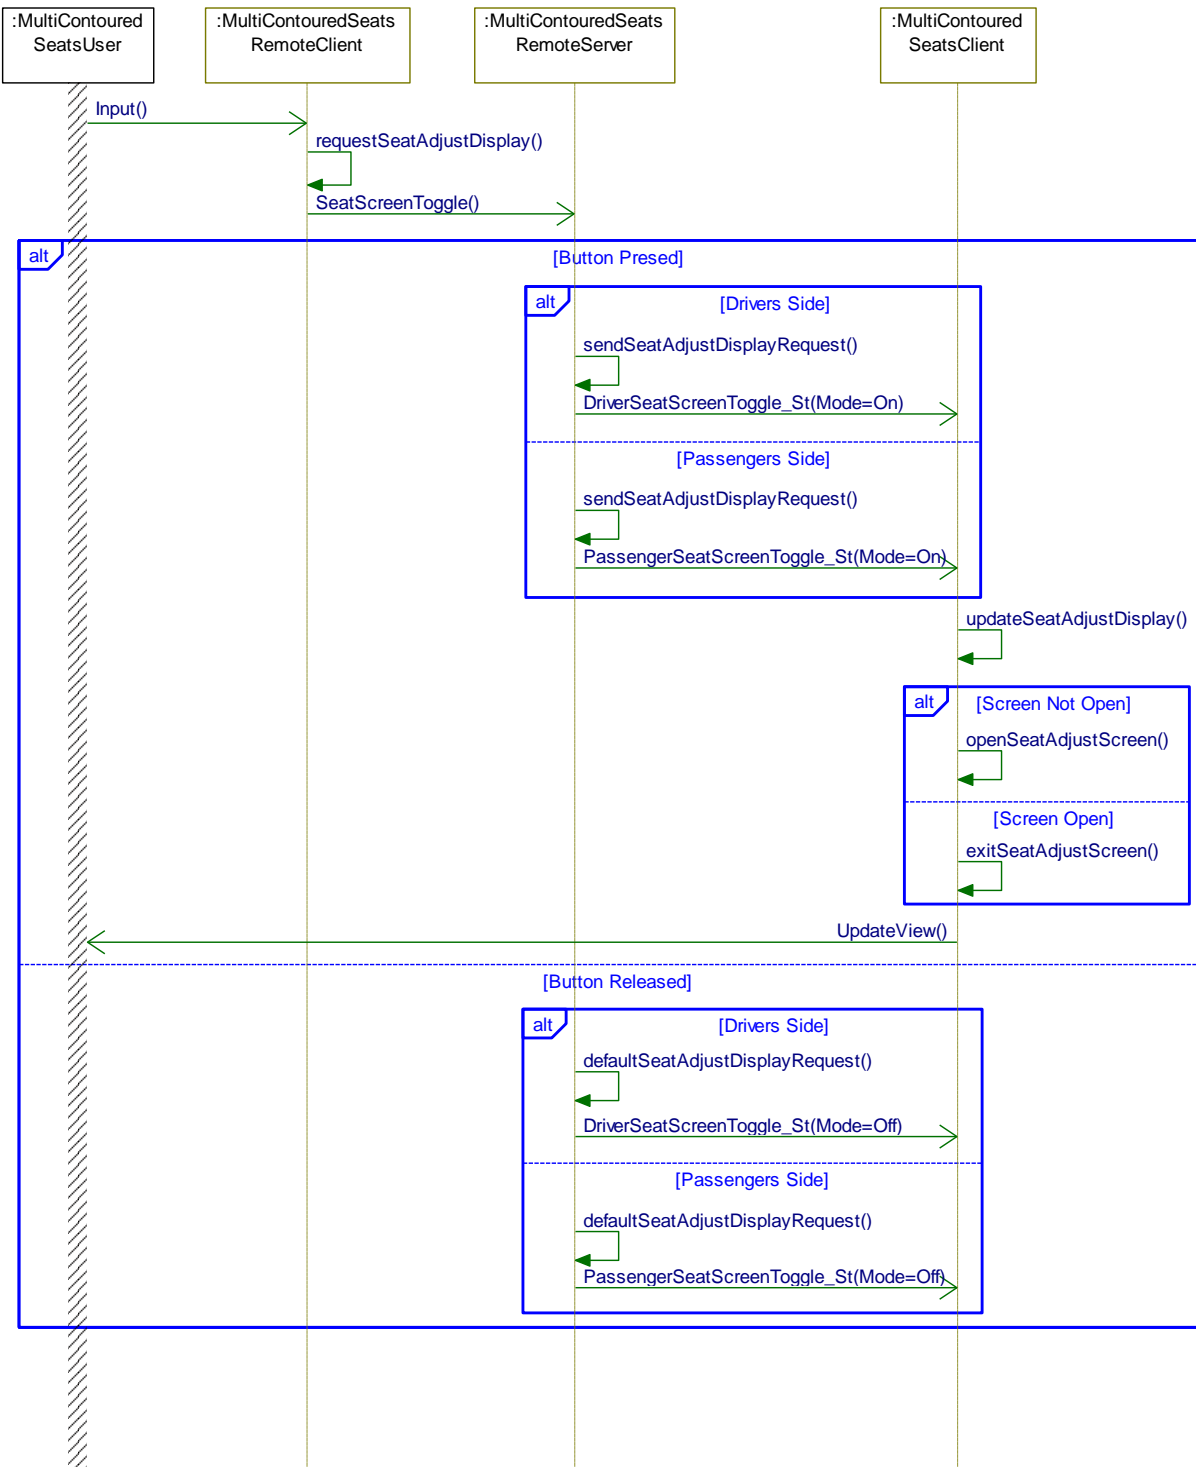



2.2 MCS-FUN-REQ-392374/A-Activate Multi Contour Seat Display HMI via Double Shortcut Key

2.2.1 Use Cases

2.2.1.1 MCS-UC-REQ-392375/A-Open Seat Adjust Screen from Adjust Shortcut Key

Actors	Vehicle Occupant
Pre-conditions	Display is ON HMI is not displaying seat control feature screen
Scenario Description	User presses seat adjust shortcut key to bring up seat controls
Post-conditions	HMI indicates {brings up seat control feature screen}
List of Exception Use Cases	MCS-UC-REQ-392376-Exit Seat Adjust Screen from Adjust Shortcut Key
Interfaces	G-HMI & vehicle system
Note	Pressing the Adjust Shortcut key will bring up the Multi Control Seat Adjust Menu when the HMI display is On. If Ignition is not in RUN, the real control menu (button input) will be greyed-out with only the Return button available. Please refer to [H74a.R030]

2.2.1.2 MCS-UC-REQ-392376/A-Exit Seat Adjust Screen from Adjust Shortcut Key

Actors	Vehicle Occupant
Pre-conditions	Display is ON HMI is displaying seat control feature screen
Scenario Description	User presses seat adjust shortcut key prior to screen timeout
Post-conditions	HMI exits seat control screen and returns to prior screen
List of Exception Use Cases	Screen Timeout duration has expired
Interfaces	G-HMI & vehicle system
Note	For "screen timeout" refer to MCS-TMR-REQ-239813-T_MCS_Screen

2.2.1.3 MCS-UC-REQ-392377/A-Open Seat Massage Screen from Massage Shortcut Key (Massage is On)

Actors	Vehicle Occupant
Pre-conditions	Display is ON Massage is ON HMI is not displaying seat massage controls feature screen
Scenario Description	User presses seat massage shortcut key to bring up seat massage controls



Post-conditions	HMI indicates {brings up seat massage control feature screen}
List of Exception Use Cases	MCS-UC-REQ-392379-Exit Seat Massage Screen from Massage Shortcut Key
Interfaces	G-HMI & vehicle system
Note	Pressing the Massage Shortcut key will bring up the Multi Control Seat Massage Menu when the HMI display is On. If Ignition is not in RUN, the real control menu (button input) will be greyed-out with only the Return button available. Please refer to [H74a.R030]

2.2.1.4 MCS-UC-REQ-392378/A-Open Seat Massage Screen from Massage Shortcut Key (Massage is Off)

Actors	Vehicle Occupant
Pre-conditions	Display is ON Massage is OFF HMI is not displaying seat massage controls feature screen
Scenario Description	User presses seat massage shortcut key to bring up seat massage controls
Post-conditions	Massage turns ON HMI indicates {brings up seat massage control feature screen}
List of Exception Use Cases	MCS-UC-REQ-392379-Exit Seat Massage Screen from Massage Shortcut Key
Interfaces	G-HMI & vehicle system
Note	Pressing the Massage Shortcut key will bring up the Multi Control Seat Massage Menu when the HMI display is On. If Ignition is not in RUN, the real control menu (button input) will be greyed-out with only the Return button available. Massage will not turn on when Ignition is not in RUN. Please refer to [H74a.R030]



2.2.1.5 MCS-UC-REQ-392379/A-Exit Seat Massage Screen from Massage Shortcut Key

Actors	Vehicle Occupant
Pre-conditions	Display is ON HMI is displaying seat massage control feature screen
Scenario Description	User presses seat massage shortcut key prior to screen timeout
Post-conditions	HMI exits seat massage control screen and returns to prior screen
List of Exception Use Cases	Screen Timeout duration has expired
Interfaces	G-HMI & vehicle system

**Note**

For “screen timeout” refer to MCS-TMR-REQ-239813-T_MCS_Screen


If Message is ON, it will remain ON. The message shortcut key will not turn Off Message.

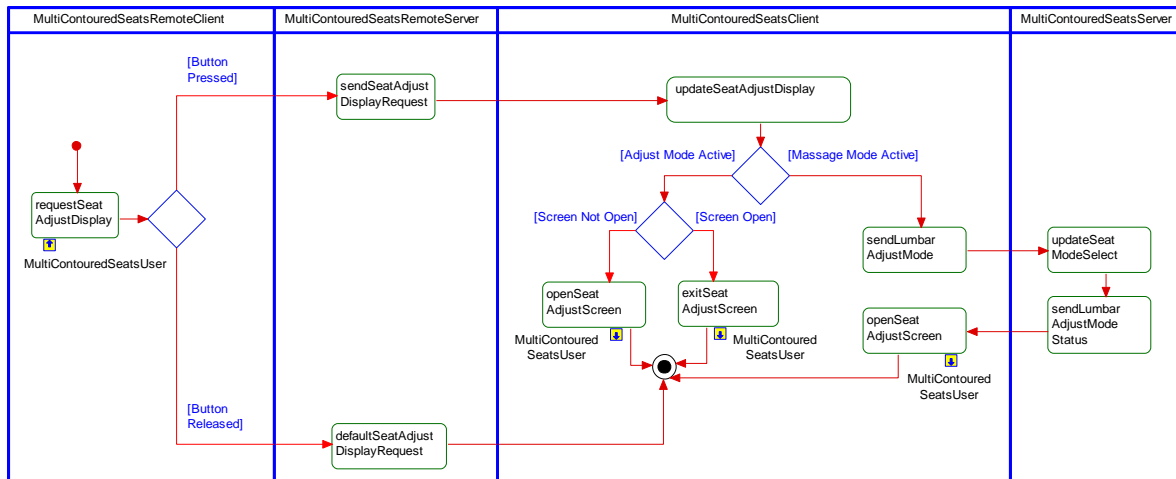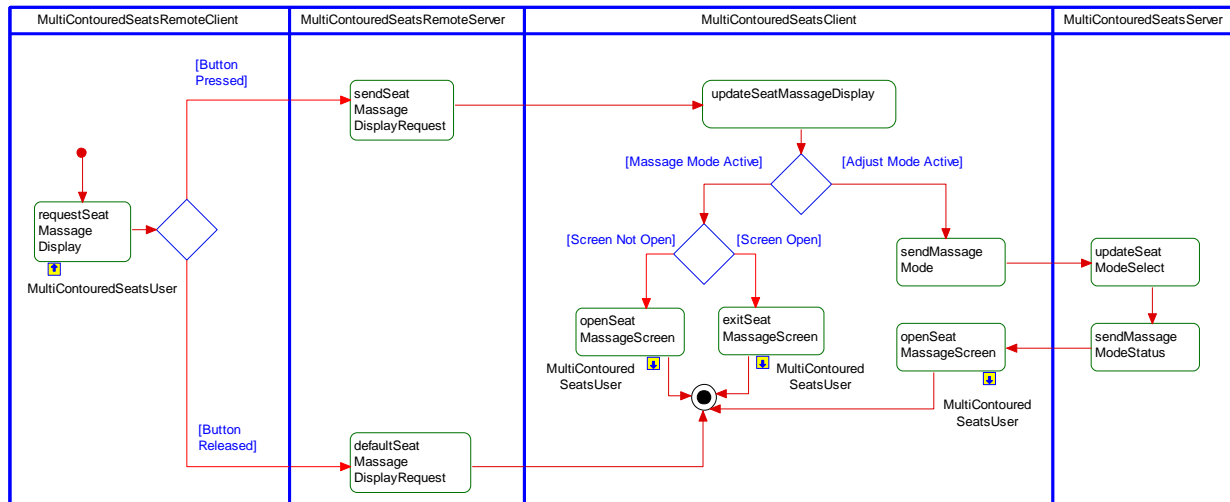2.2.2 White Box View**2.2.2.1 MCS-ACT-REQ-392384/A-Activate/Deactivate Adjust Screen HMI****Activity Diagram****2.2.2.2 MCS-ACT-REQ-392388/A-Activate/Deactivate Message Screen HMI****Activity Diagram**



2.2.2.3 MCS-SD-REQ-392385/A-Activate/Deactivate Adjust Screen HMI


Sequence Diagram

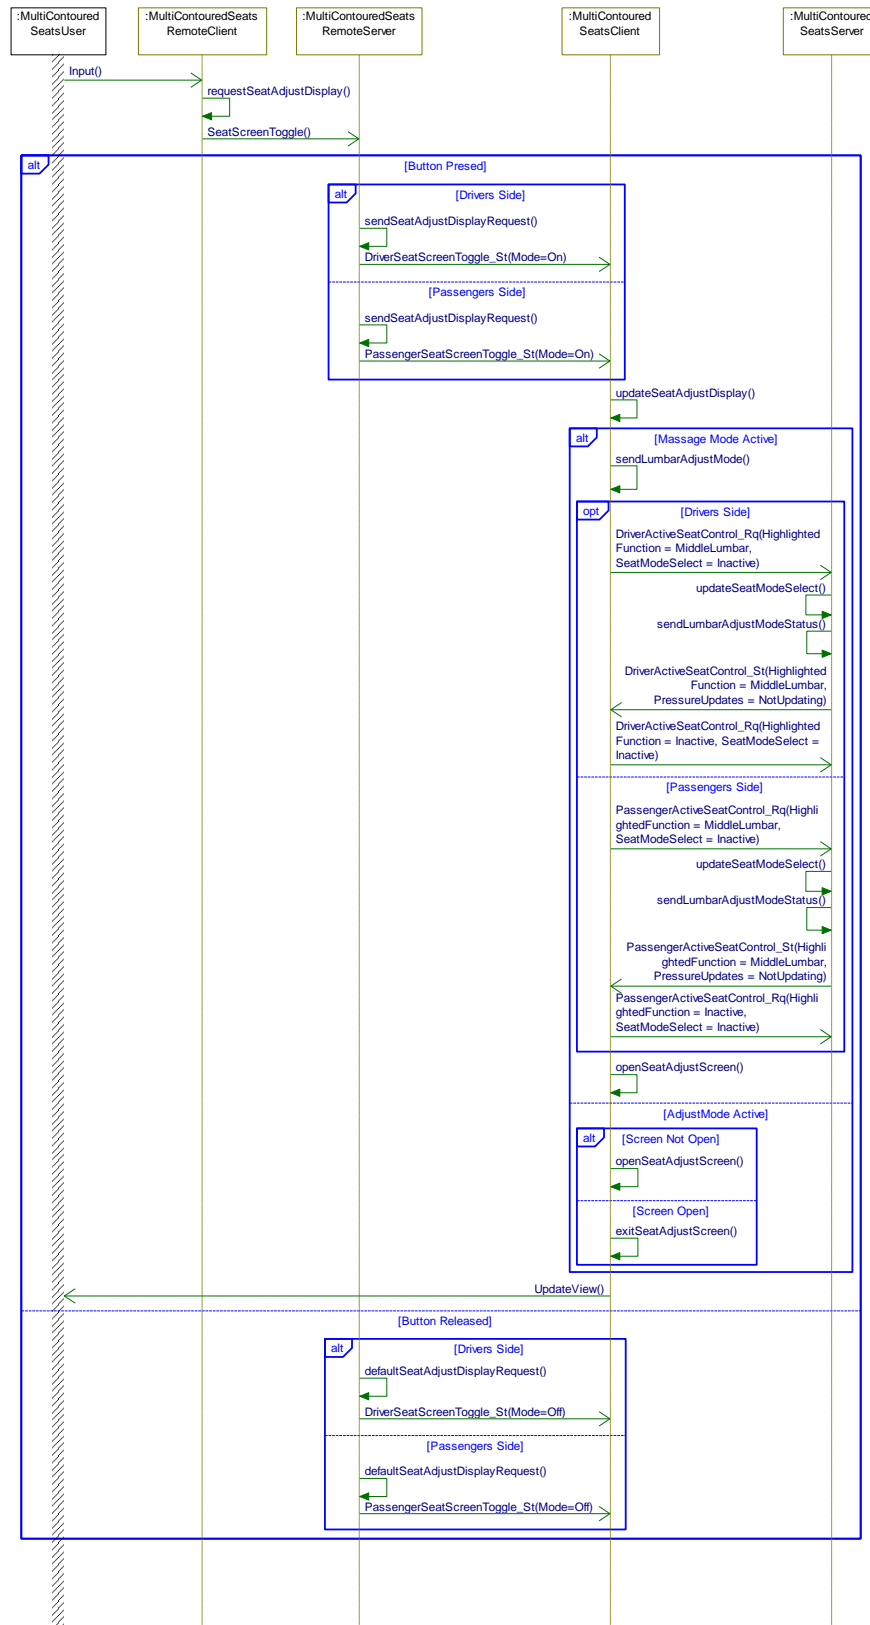



2.2.2.4 MCS-SD-REQ-392389/A-Activate/Deactivate Massage Screen HMI

Sequence Diagram

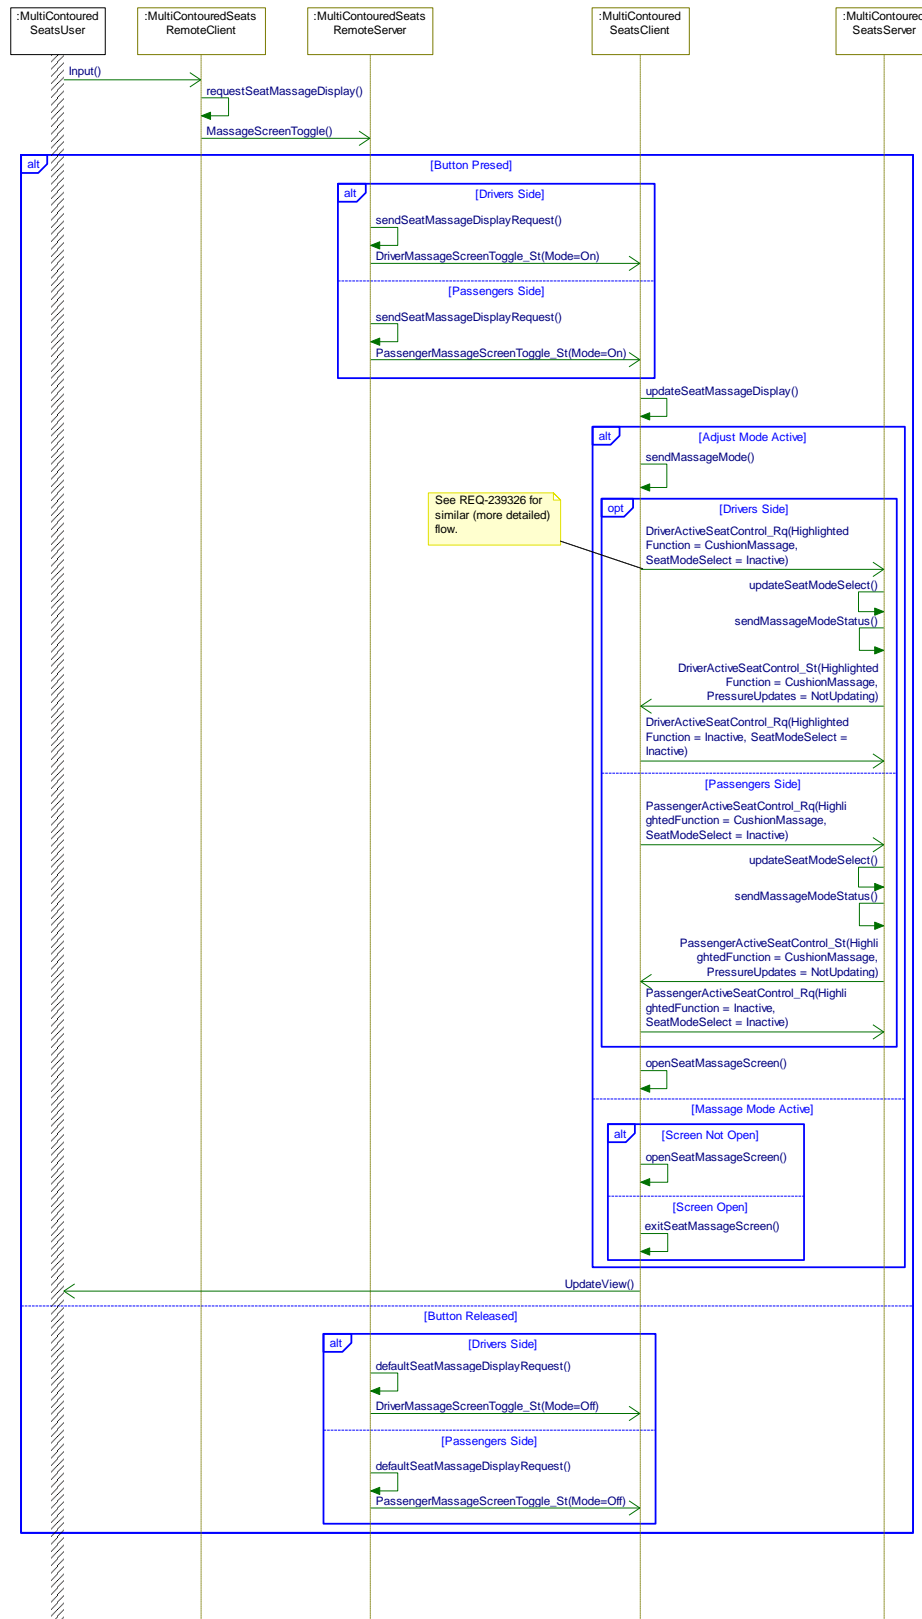



2.3 MCS-FUN-REQ-237622/A-Set Massage Pattern

2.3.1 Use Cases

2.3.1.1 MCS-UC-REQ-237772/C-Select Front Seat Massage Pattern from HMI

Actors	Vehicle Occupant
Pre-conditions	Powermode Conditions Met
Scenario Description	User Selects < Massage Pattern> via HMI
Post-conditions	HMI indicates (Selected Pattern & Intensity} Selected Massage Pattern Activates
List of Exception Use Cases	NA
Interfaces	G-HMI & vehicle system
Links to Referenced Use Cases	NA

2.3.1.2 MCS-UC-REQ-250097/C-Select Front Seat Massage Pattern from Seat

Actors	Vehicle Occupant
Pre-conditions	Powermode Conditions Met
Scenario Description	User Selects <Massage Pattern> via Seat
Post-conditions	HMI indicates (Selected Pattern & Intensity} Selected Massage Pattern Activates
List of Exception Use Cases	NA
Interfaces	G-HMI & vehicle system
Links to Referenced Use Cases	NA

**2.3.1.3 MCS-UC-REQ-021353/D-Adjust Front Seat Massage Intensity from HMI (TcSE ROIN-291760)**

Actors	Vehicle Occupant
Pre-conditions	Powermode Conditions Met
Scenario Description	User Selects < Massage Intensity> via HMI
Post-conditions	HMI indicates (Mode & Intensity}
List of Exception Use Cases	NA
Interfaces	G-HMI & vehicle system
Links to Referenced Use Cases	NA

2.3.1.4 MCS-UC-REQ-021354/D-Adjust Front Seat Massage Intensity from Seat (TcSE ROIN-291761)

Actors	Vehicle Occupant
Pre-conditions	Powermode Conditions Met
Scenario Description	User Selects <Massage Intensity> via seat
Post-conditions	HMI indicates (Mode & Intensity}
List of Exception Use Cases	NA
Interfaces	G-HMI & vehicle system
Links to Referenced Use Cases	NA

**2.3.1.5 MCS-UC-REQ-021355/D-Exiting Front Massage and transitioning to Adjust bladder pressure via HMI (TcSE ROIN-292490)**

Actors	Vehicle Occupant
Pre-conditions	Powermode Conditions Met Massage Screen is ON
Scenario Description	User exiting Massage and transitioning to Adjust bladder pressure via HMI
Post-conditions	HMI Pop – Up indicates {Massage off and restoring seat settings}
List of Exception Use Cases	NA
Interfaces	G-HMI & vehicle system
Links to Referenced Use Cases	NA

2.3.1.6 MCS-UC-REQ-021356/D-Exiting Front Massage and transitioning to Adjust bladder pressure via Seat (TcSE ROIN-292491)


Actors	Vehicle Occupant
Pre-conditions	Powermode Conditions Met Massage Screen is ON
Scenario Description	User exiting Massage and transitioning to Adjust bladder pressure via Seat.
Post-conditions	HMI Pop – Up indicates {Massage off and restoring seat settings}
List of Exception Use Cases	NA
Interfaces	G-HMI & vehicle system
Links to Referenced Use Cases	NA



2.3.2 White Box View


2.3.2.1 MCS-ACT-REQ-237796/B-Select Message Pattern from Touch Screen



Activity Diagram

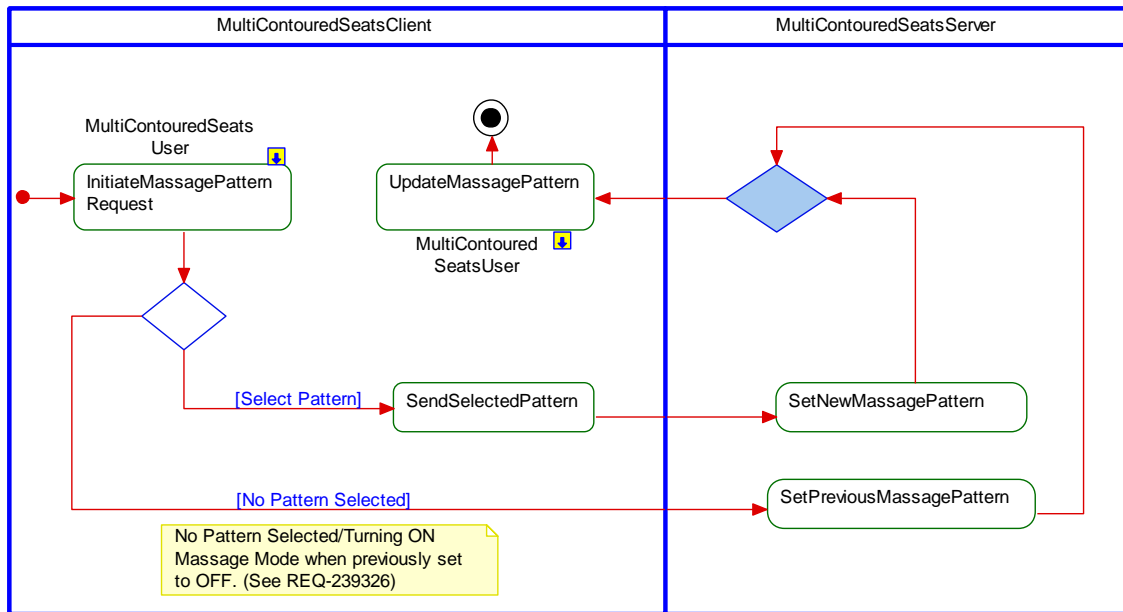


2.3.2.2 MCS-ACT-REQ-250099/A-Select Message Pattern from Seat

Activity Diagram

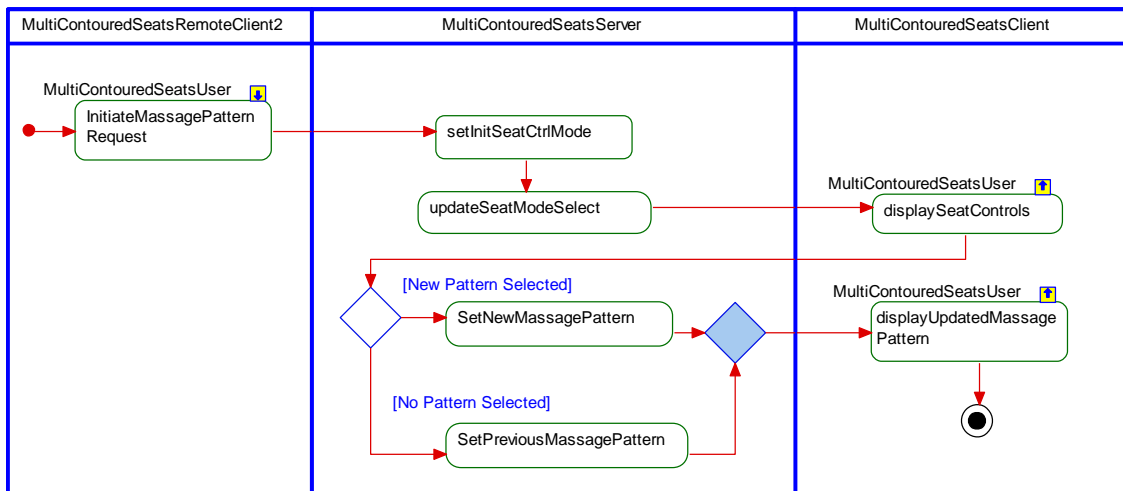

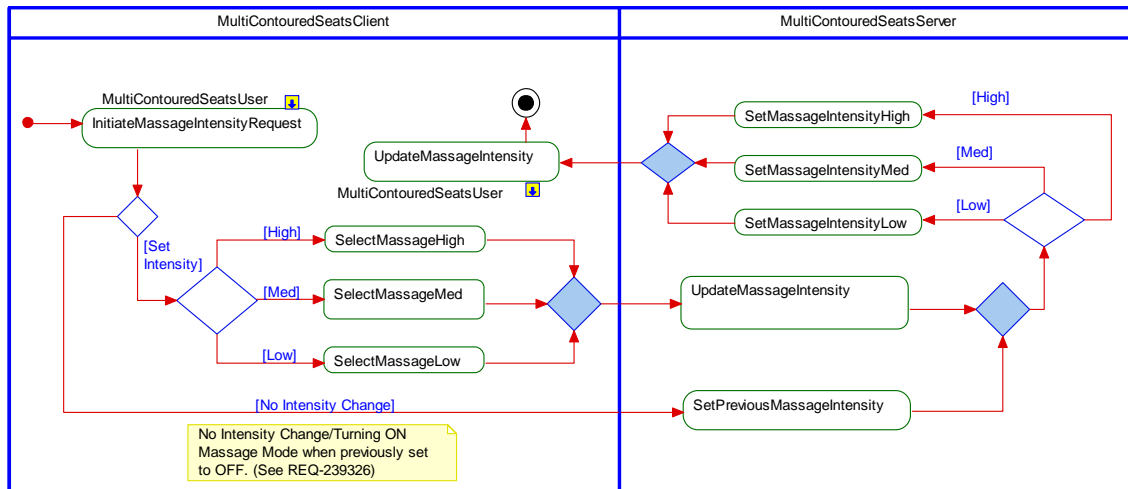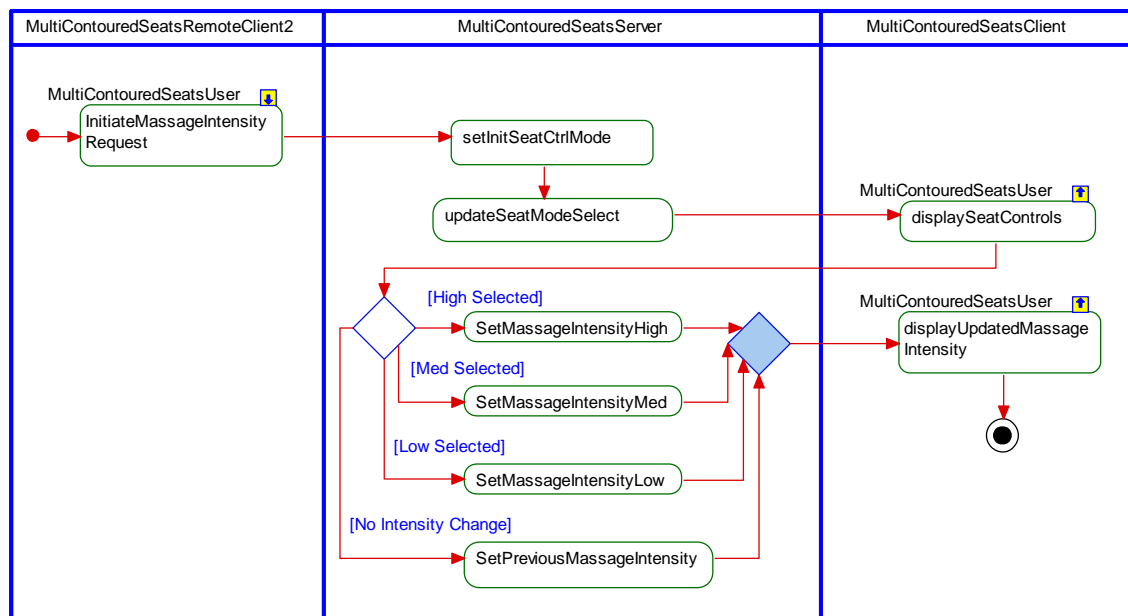
**2.3.2.3 MCS-ACT-REQ-237797/B-Set Message Intensity from Touch Screen****Activity Diagram****2.3.2.4 MCS-ACT-REQ-250100/A-Set Message Intensity from Seat****Activity Diagram**

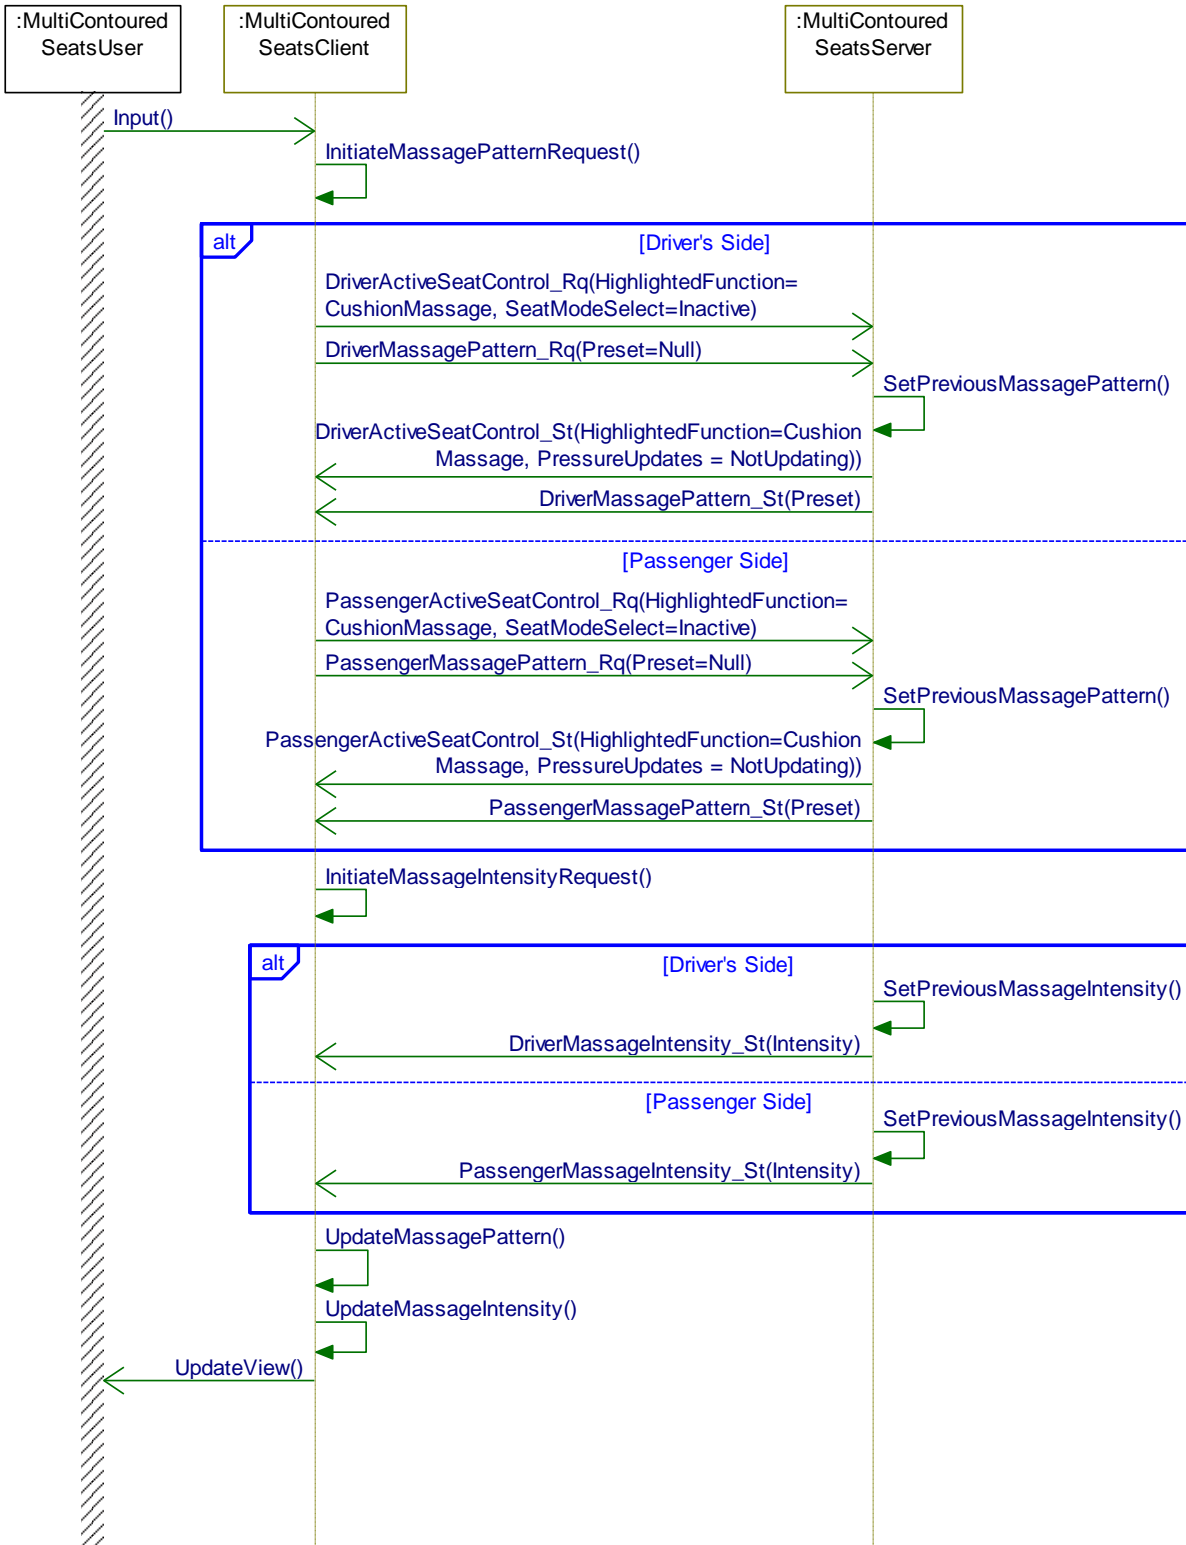
**2.3.2.5 MCS-SD-REQ-239326/C-Turn ON Massage Mode from Touch Screen****Sequence Diagram**



2.3.2.6 MCS-SD-REQ-250101/B-Turn ON Massage Mode from Seat

Sequence Diagram

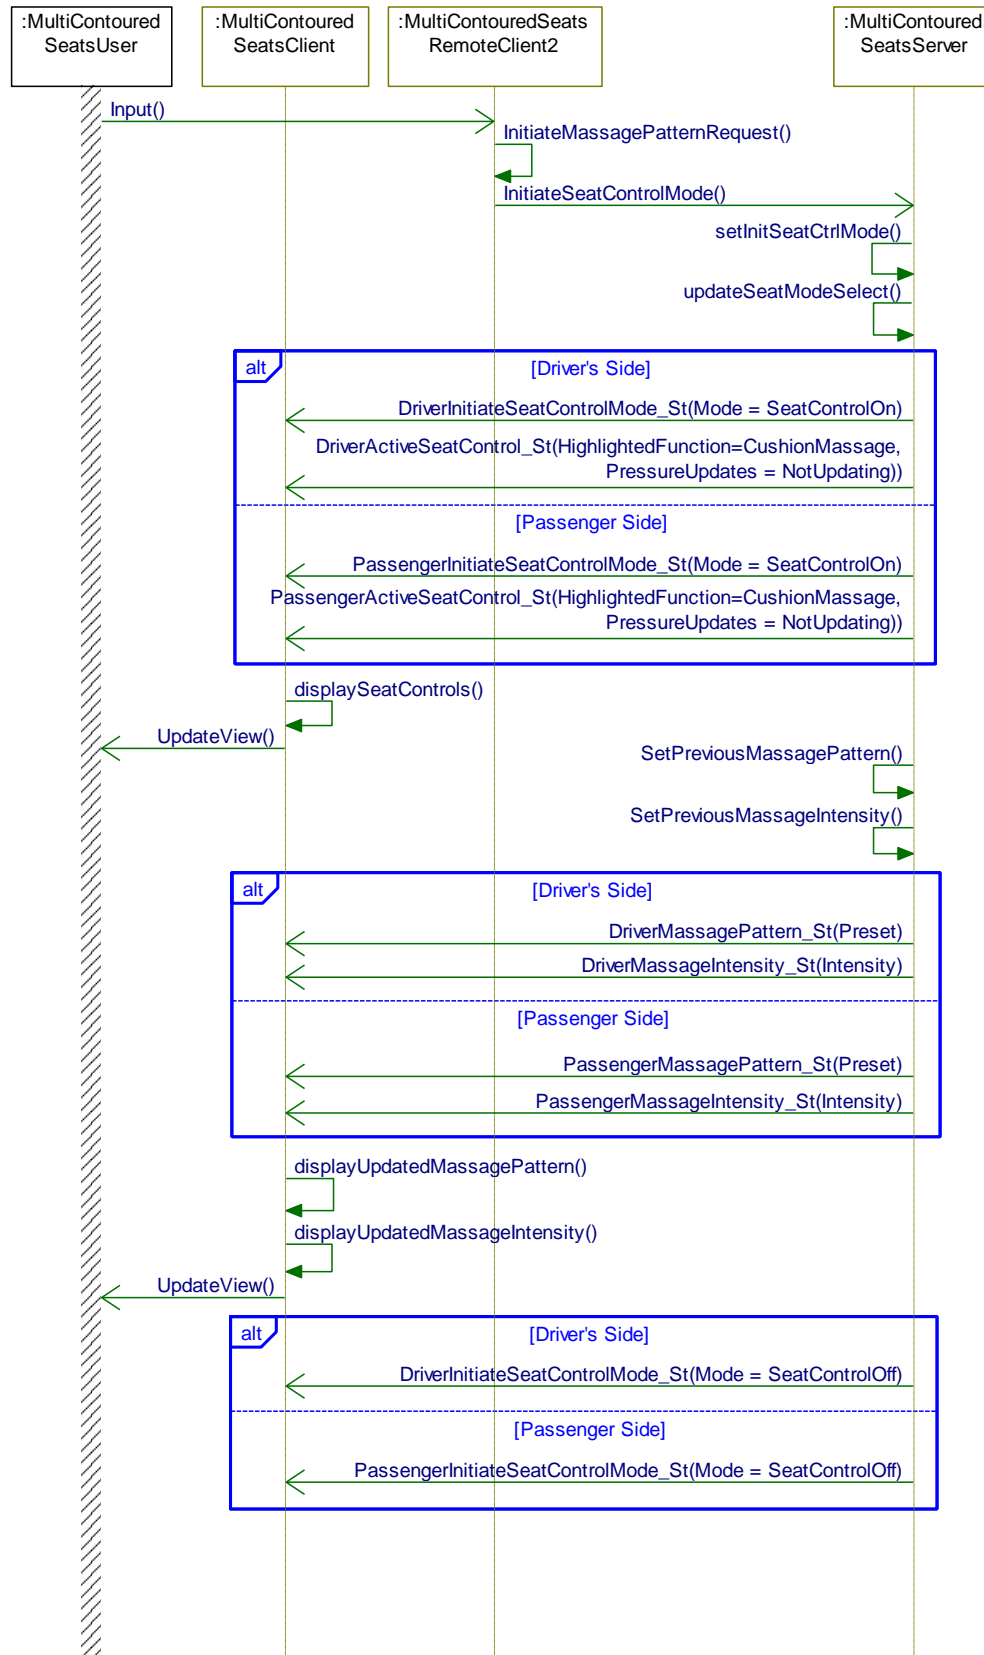


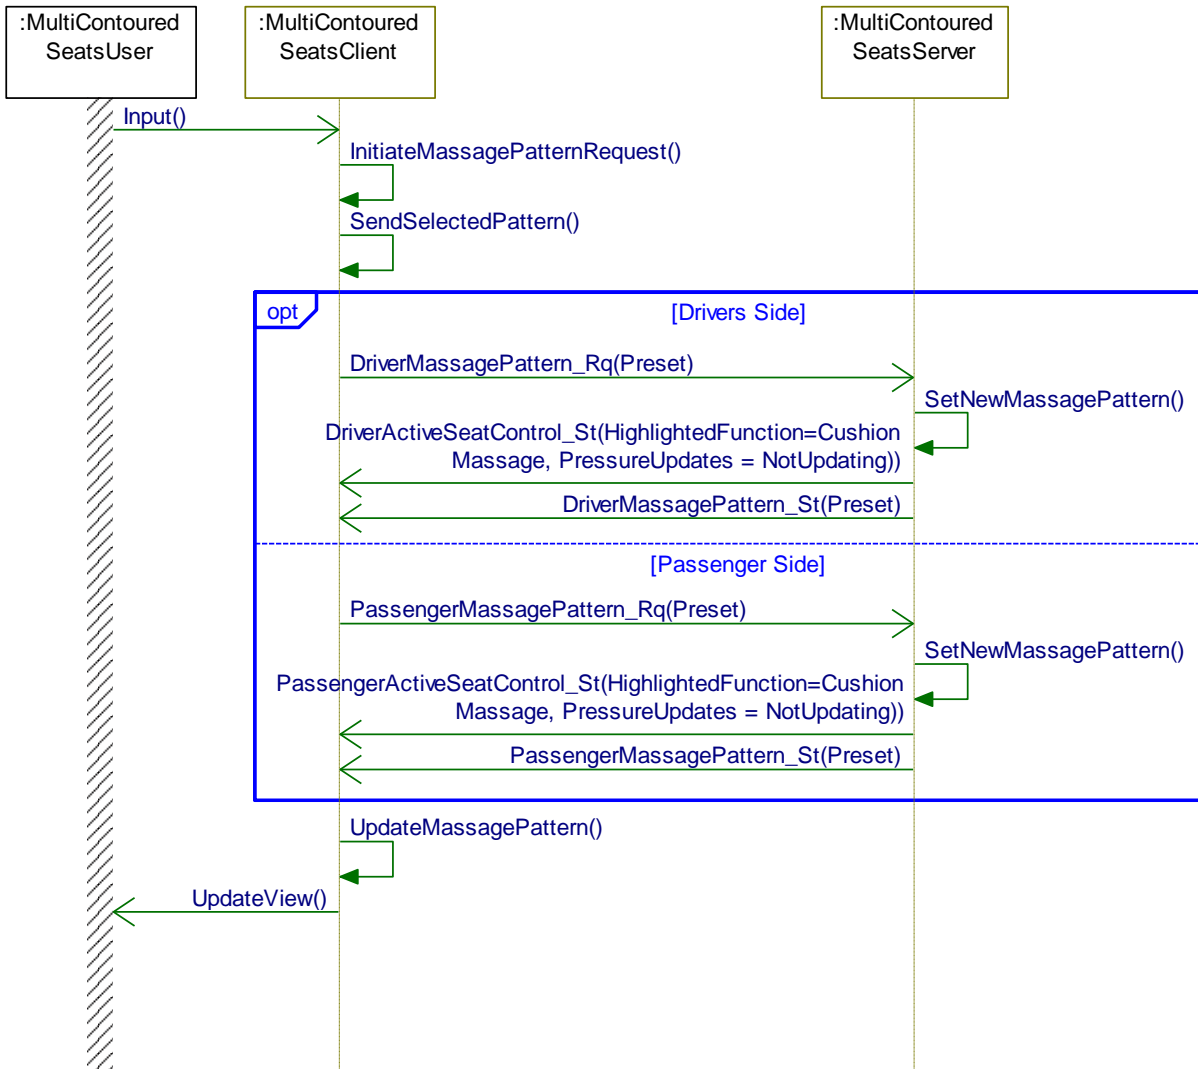
**2.3.2.7 MCS-SD-REQ-237811/B-Select Message Pattern from Touch Screen****Sequence Diagram**




2.3.2.8 MCS-SD-REQ-250102/B-Select Message Pattern from Seat

Sequence Diagram

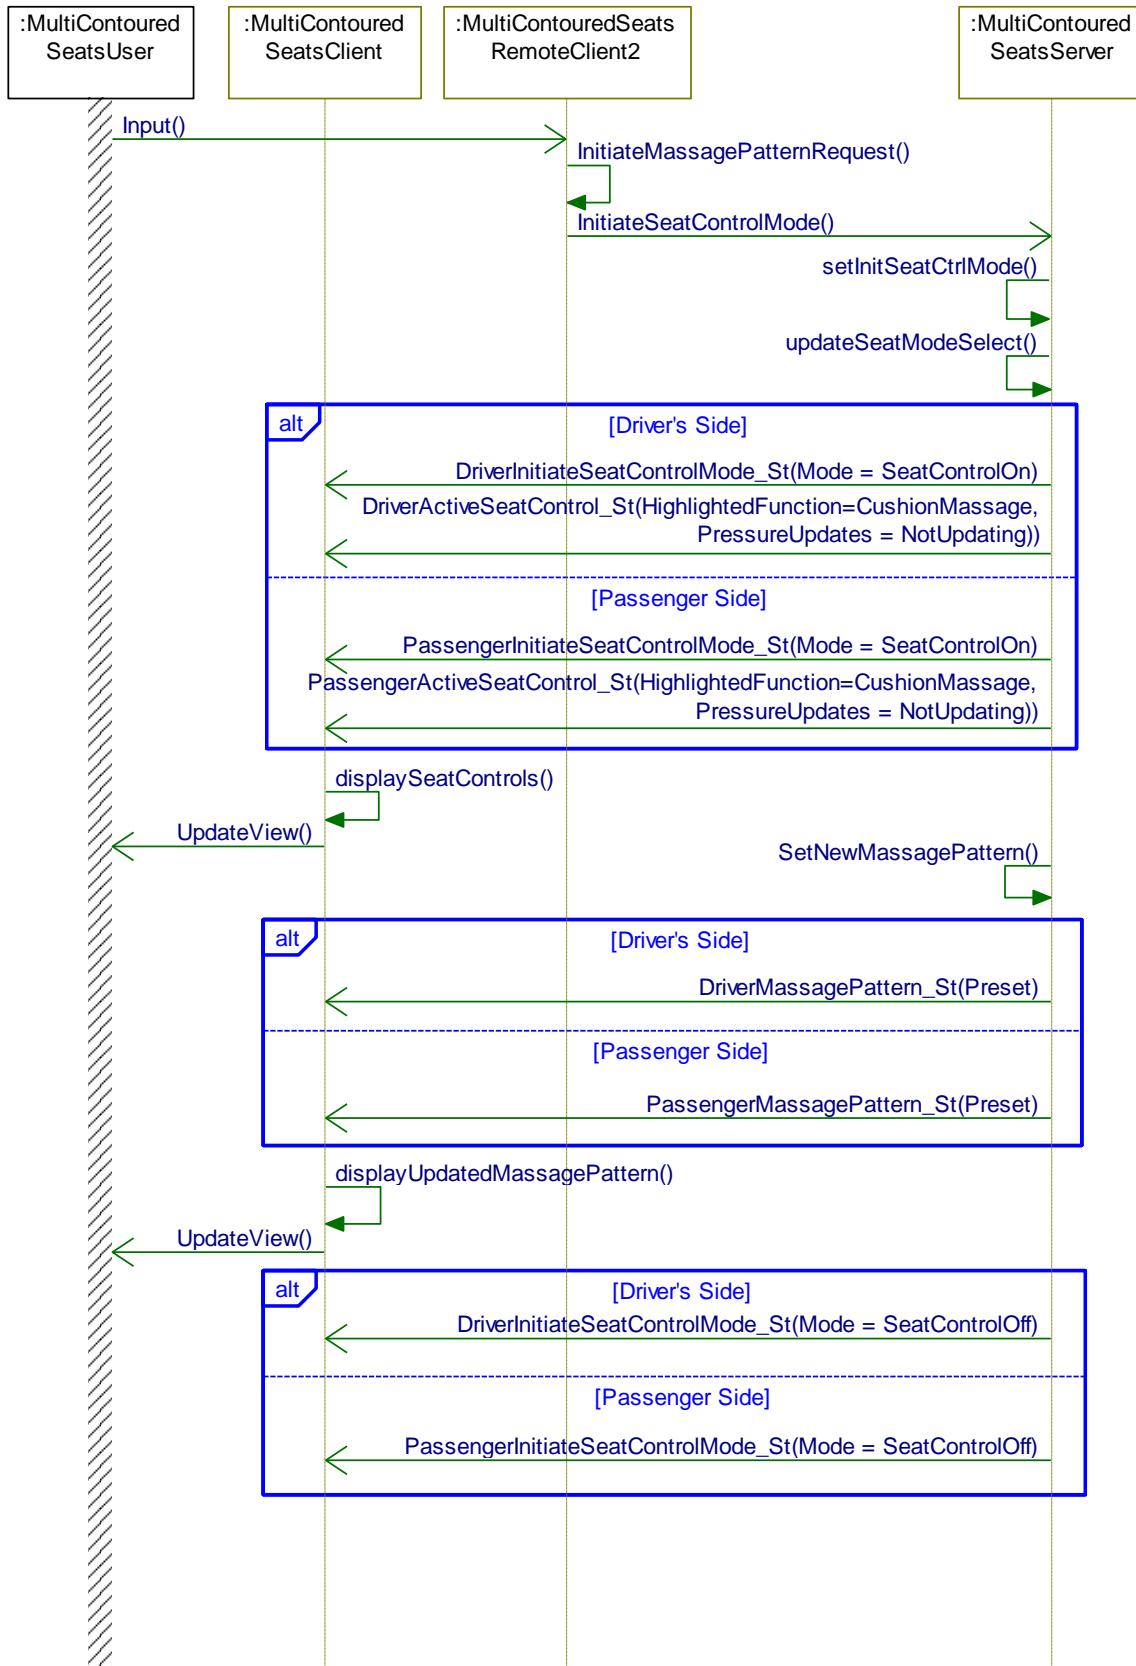

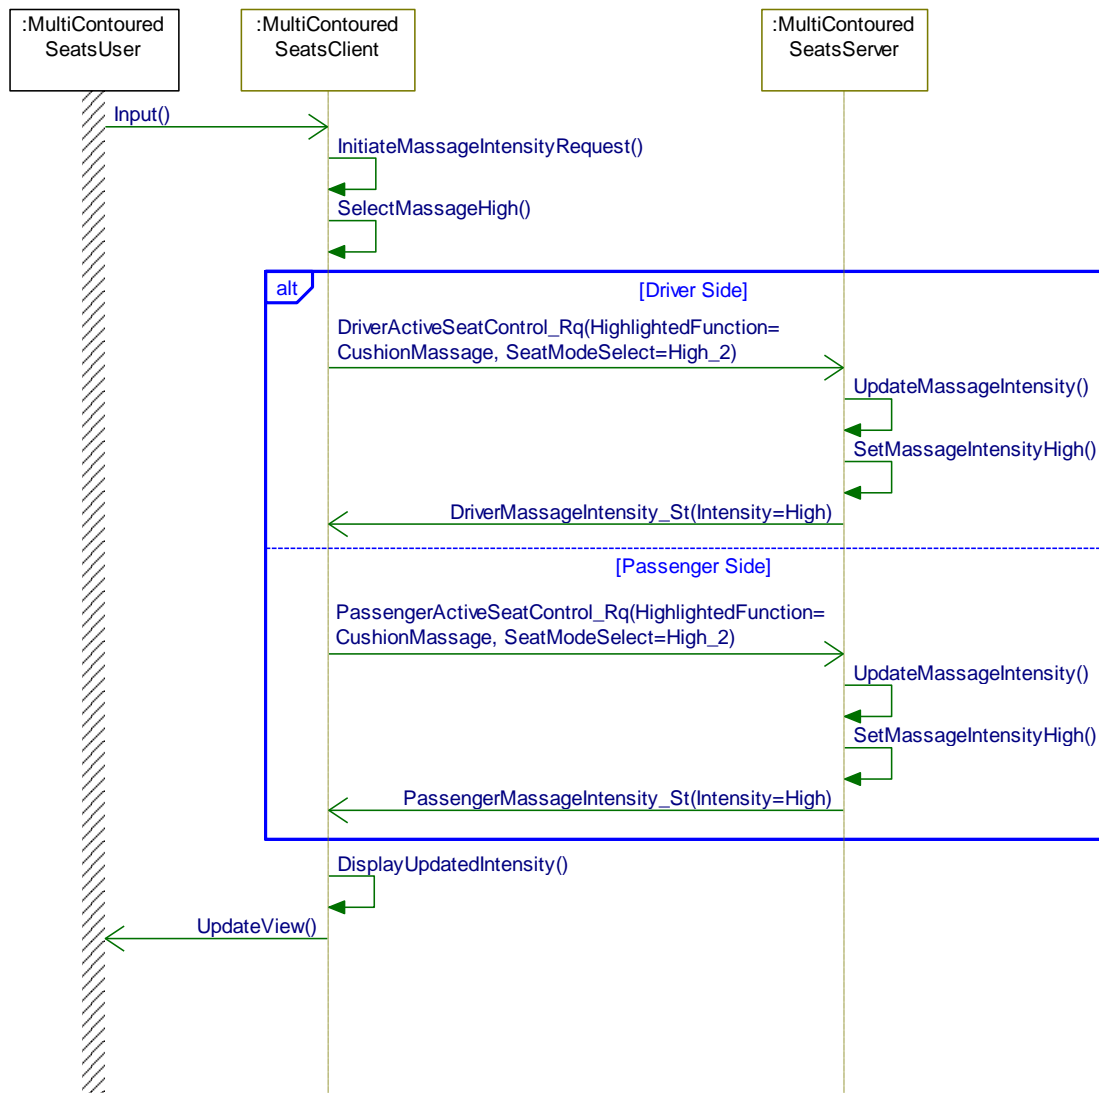
**2.3.2.9 MCS-SD-REQ-237799/B-Set Massage Intensity to High from Touch Screen****Sequence Diagram**

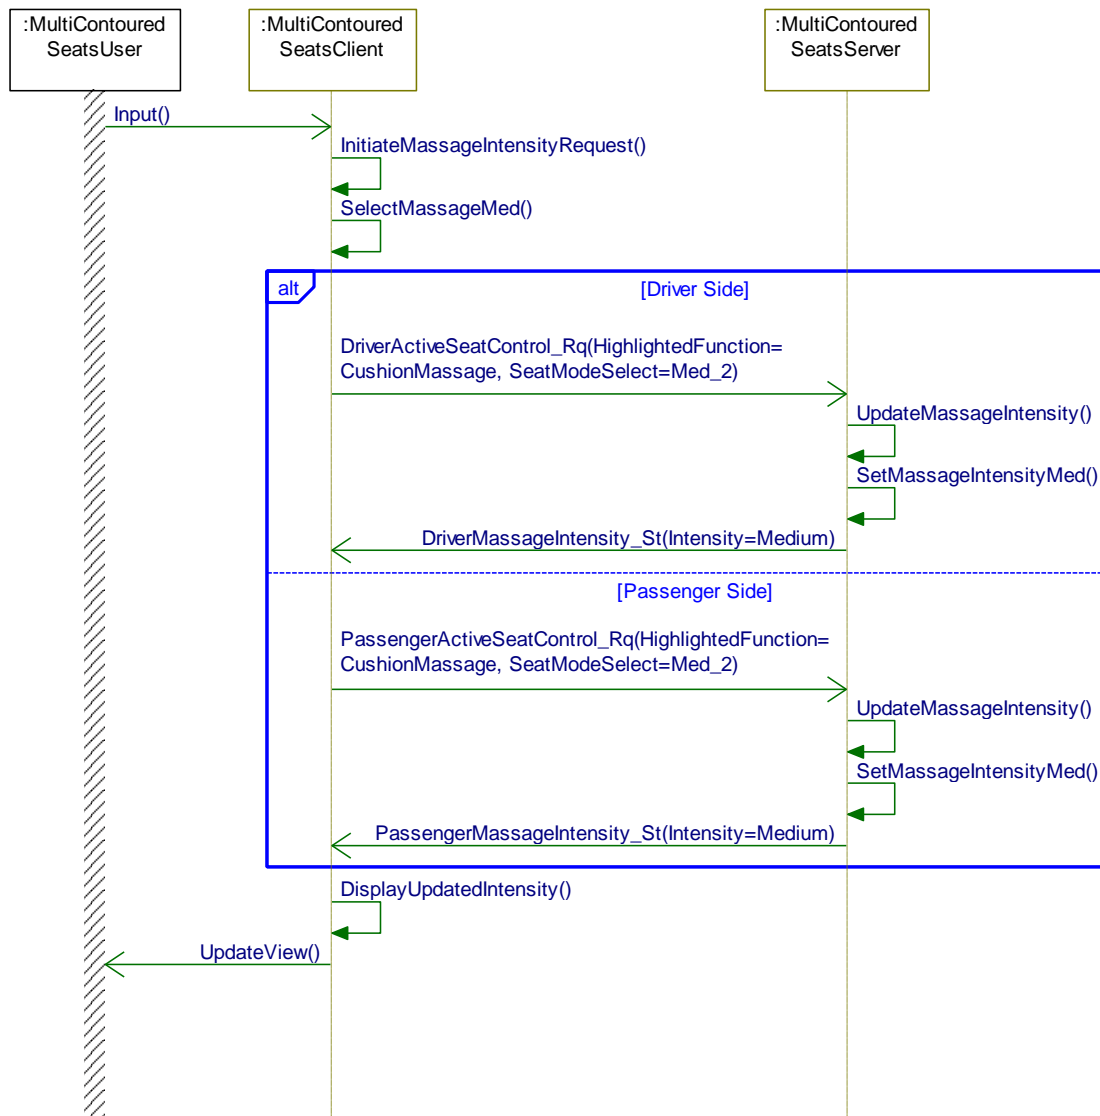**2.3.2.10 MCS-SD-REQ-237800/B-Set Massage Intensity to Medium from Touch Screen****Sequence Diagram**



2.3.2.11 MCS-SD-REQ-237801/B-Set Massage Intensity to Low from Touch Screen


Sequence Diagram

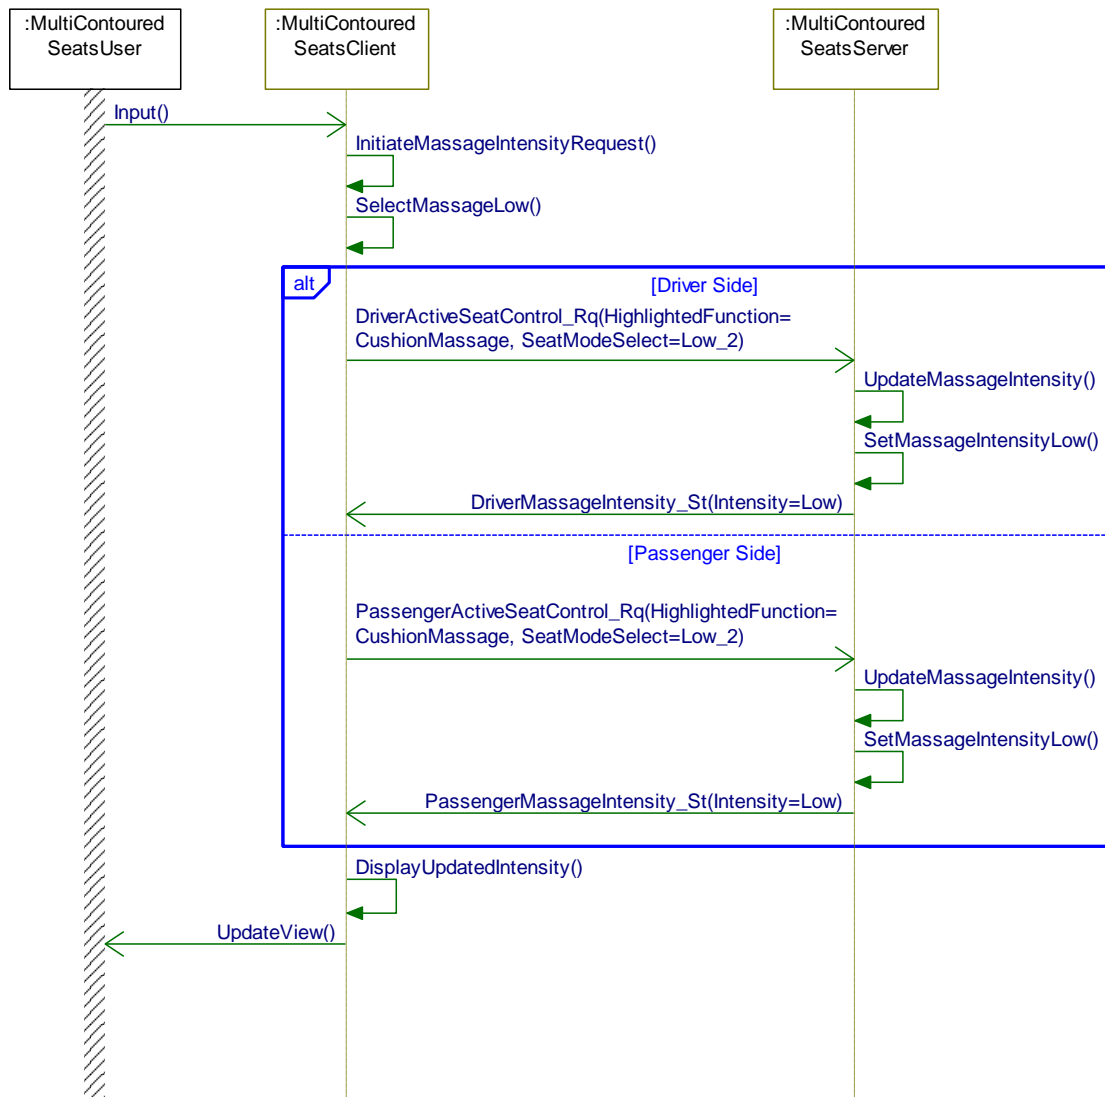



2.3.2.12 MCS-SD-REQ-250103/A-Set Massage Intensity from Seat

Sequence Diagram

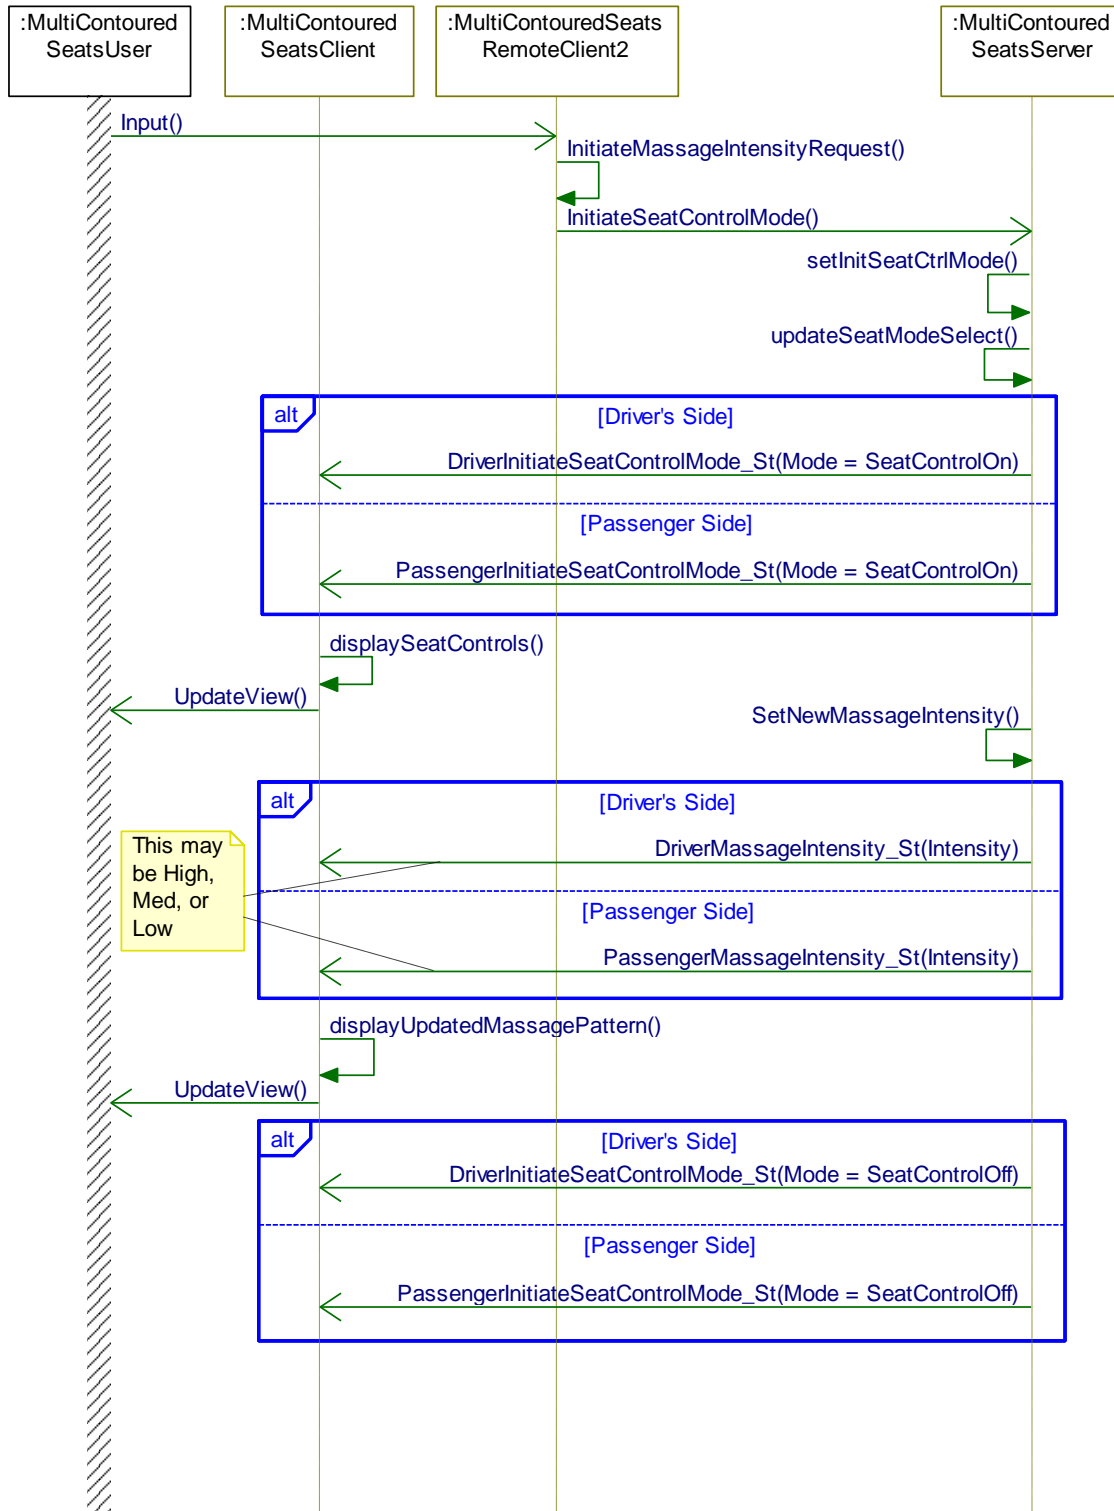



2.4 MCSv2-FUN-REQ-237619/A-Set Lumbar

2.4.1 Use Cases

2.4.1.1 MCS-UC-REQ-240862/C-Adjust Front Seat Bladder Pressure from HMI

Actors	Vehicle Occupant
Pre-conditions	Powermode Conditions Met
Scenario Description	User Selects Upper, Middle, or Lower < Adjust Bladder Pressure > via HMI
Post-conditions	HMI indicates {mode and pressure updates}
List of Exception Use Cases	
Interfaces	G-HMI & vehicle system
Links to Referenced Use Cases	NA


2.4.1.2 MCS-UC-REQ-021336/D-Adjust Front Seat Bladder Pressure from Seat (TcSE ROIN-291759)

Actors	Vehicle Occupant
Pre-conditions	Powermode Conditions Met
Scenario Description	User Selects Upper, Middle, or Lower <Adjust Bladder Pressure> via seat module
Post-conditions	HMI indicates {mode and pressure updates}
List of Exception Use Cases	
Interfaces	G-HMI & vehicle system
Links to Referenced Use Cases	NA

2.4.2 White Box View


2.4.2.1 MCS-ACT-REQ-021324/A-Set Lumbar - Display Initiated (TcSE ROIN-198769-1)

Activity Diagram

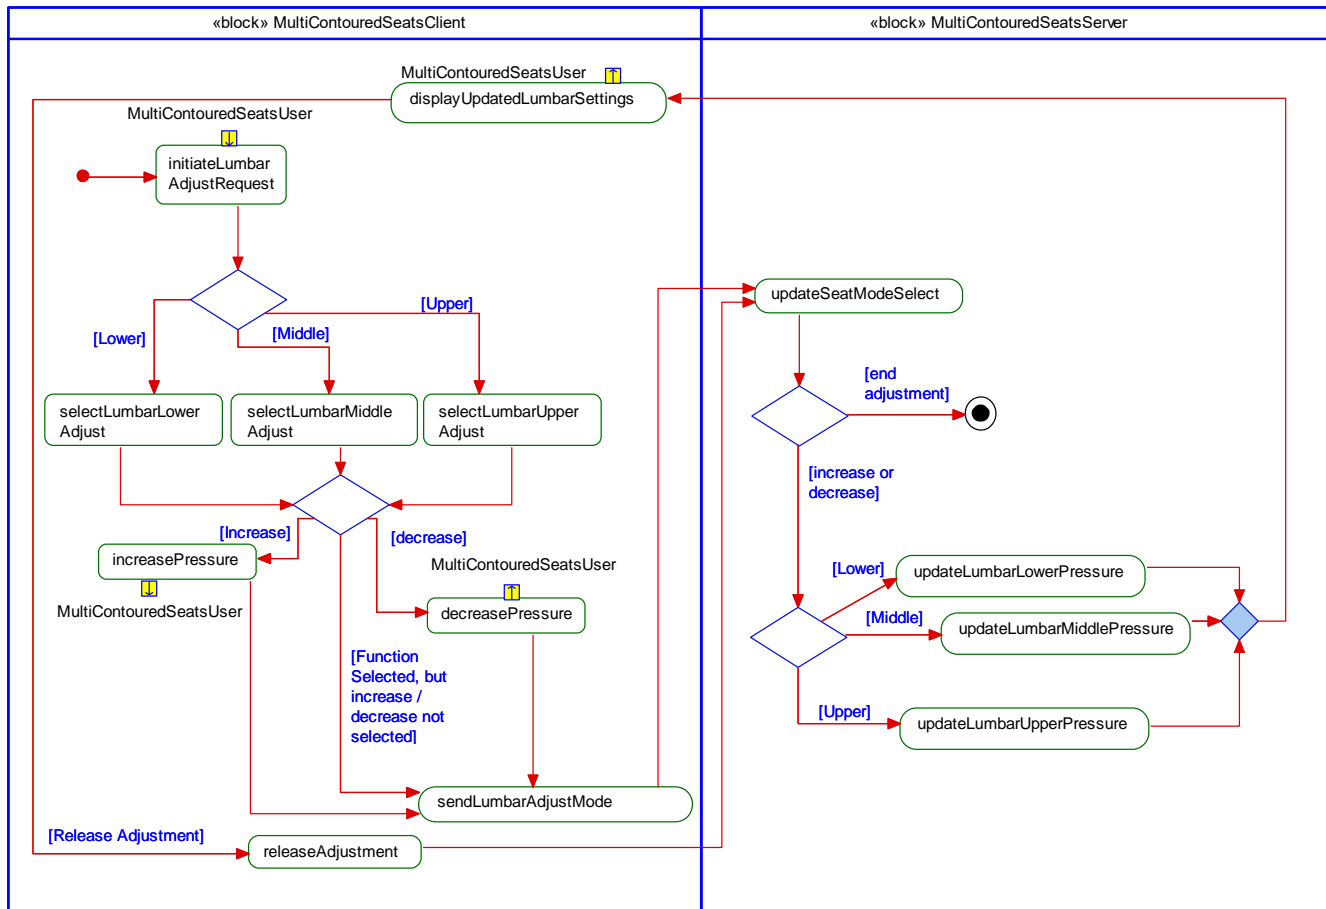

2.4.2.2 MCS-ACT-REQ-250048/A-Set Lumbar - Seat Initiated

Activity Diagram

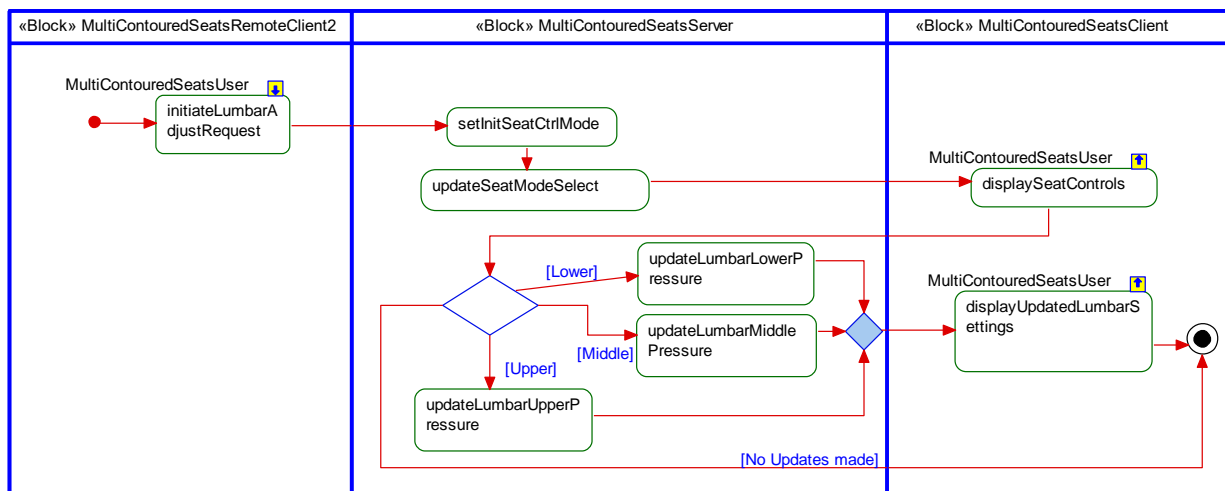

**2.4.2.3 MCS-SD-REQ-021337/C-Select Lumbar Middle Bladder at Touch Screen - No pressure updates (TcSE ROIN-200149-1)****Scenarios****Normal Usage**

User <selects Set Lumbar Middle Bladder> via touchscreen HMI, but does not make any changes to the actual pressure.

Constraints**Pre-condition**


Powermode Conditions Met

Post-condition

HMI indicates {changes to Lumbar Adjust Mode}



Sequence Diagram

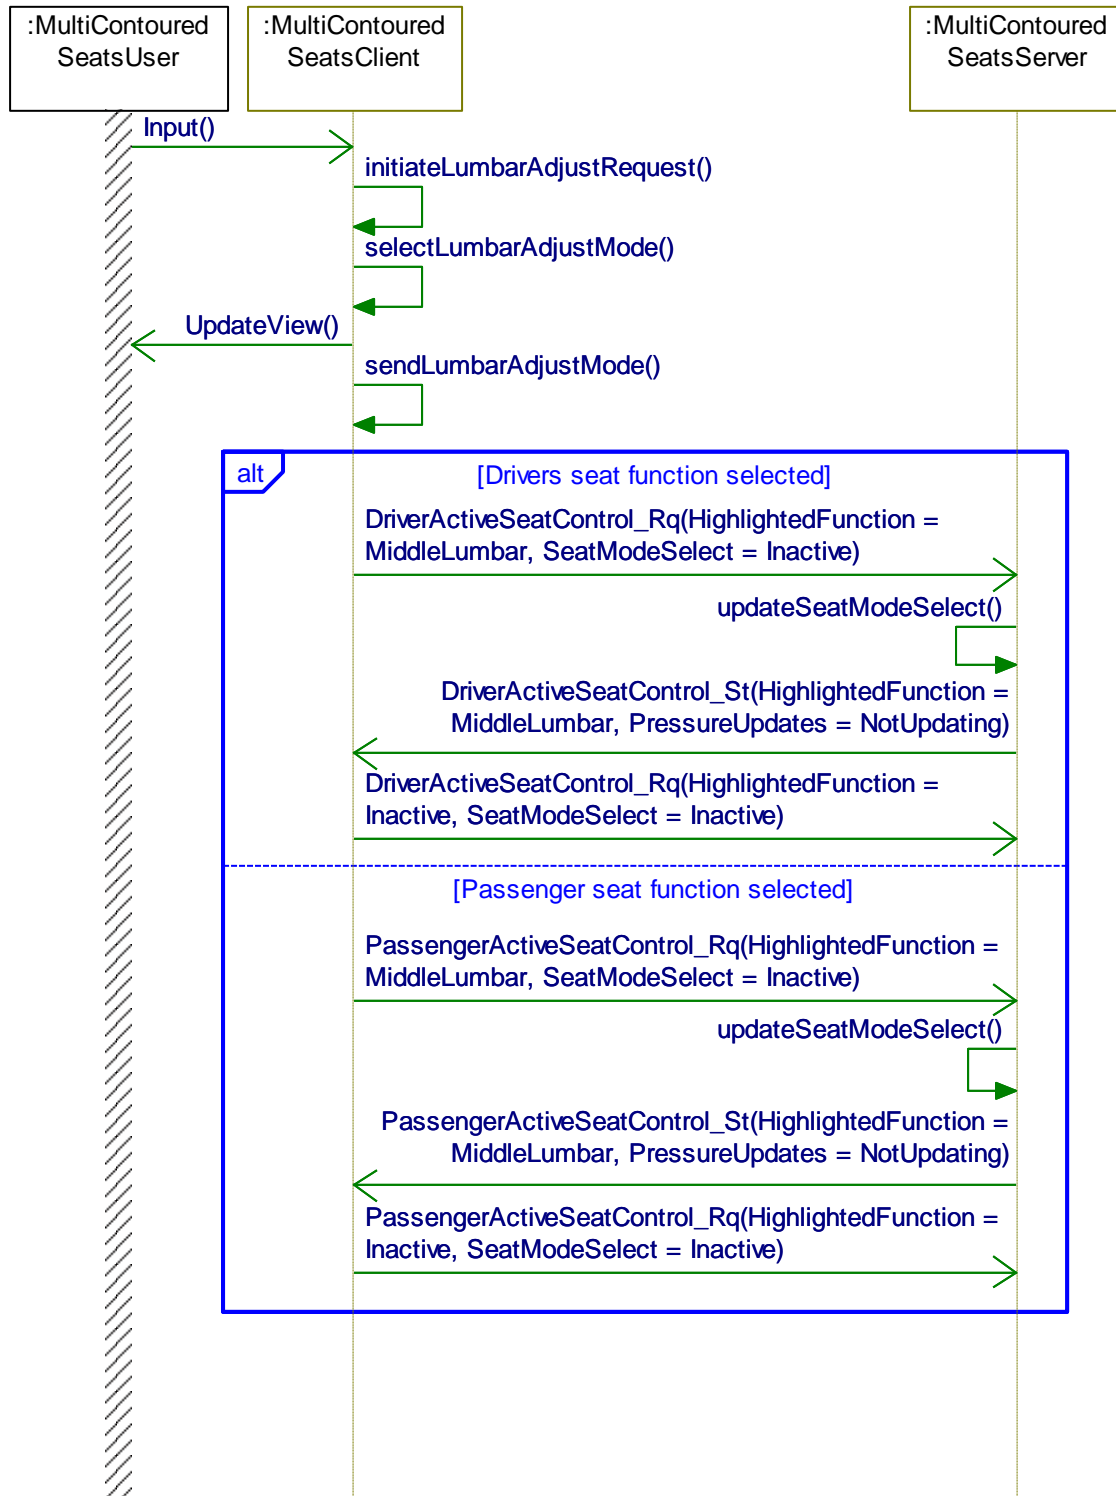

**2.4.2.4 MCS-SD-REQ-021338/C-Select Lumbar Upper Bladder at Touch Screen - No pressure updates (TcSE ROIN-200156-1)****Scenarios****Normal Usage**

User <selects Set Lumbar Upper Bladder> via touchscreen HMI, but does not make any changes to the actual pressure.

Constraints**Pre-condition**


Powermode Conditions Met

Post-condition

HMI indicates {changes to Lumbar Adjust Mode}



Sequence Diagram

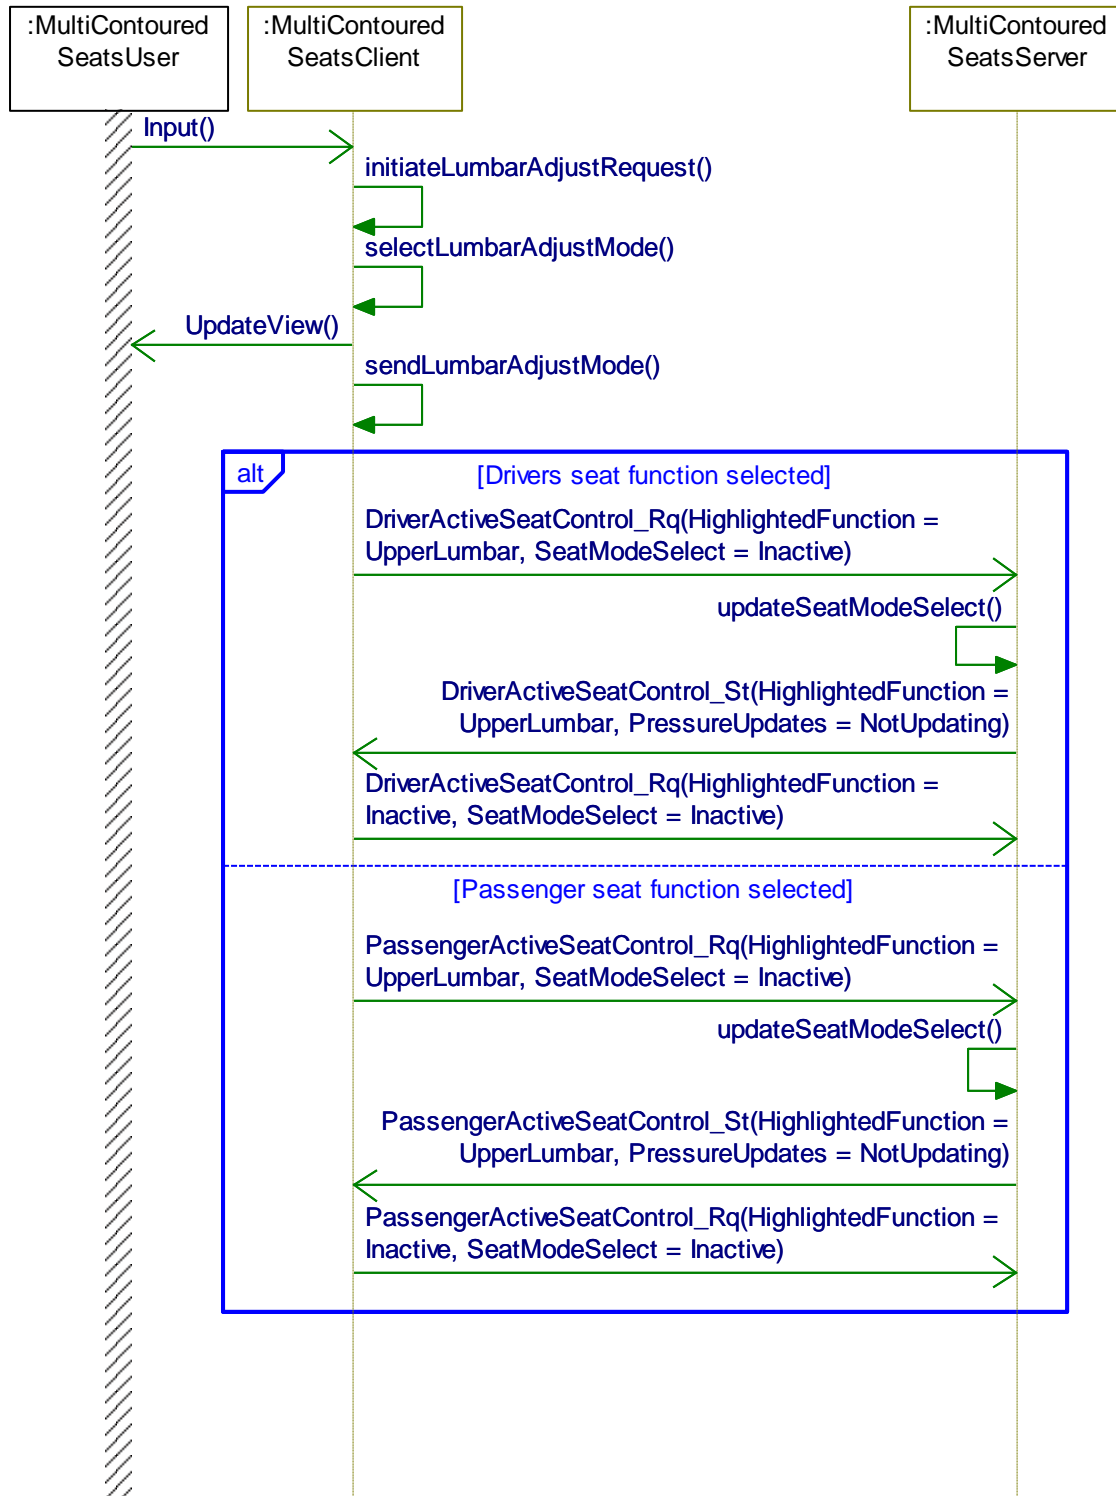

**2.4.2.5 MCS-SD-REQ-021340/C-Select Lumbar Lower Bladder at Touch Screen - No pressure updates (TcSE ROIN-200170-1)****Scenarios****Normal Usage**

User <selects Set Lumbar Lower Bladder> via touch screen HMI, but does not make any changes to the actual pressure.

Constraints**Pre-condition**


Powermode Conditions Met

Post-condition

HMI indicates {changes to Lumbar Adjust Mode}



Sequence Diagram

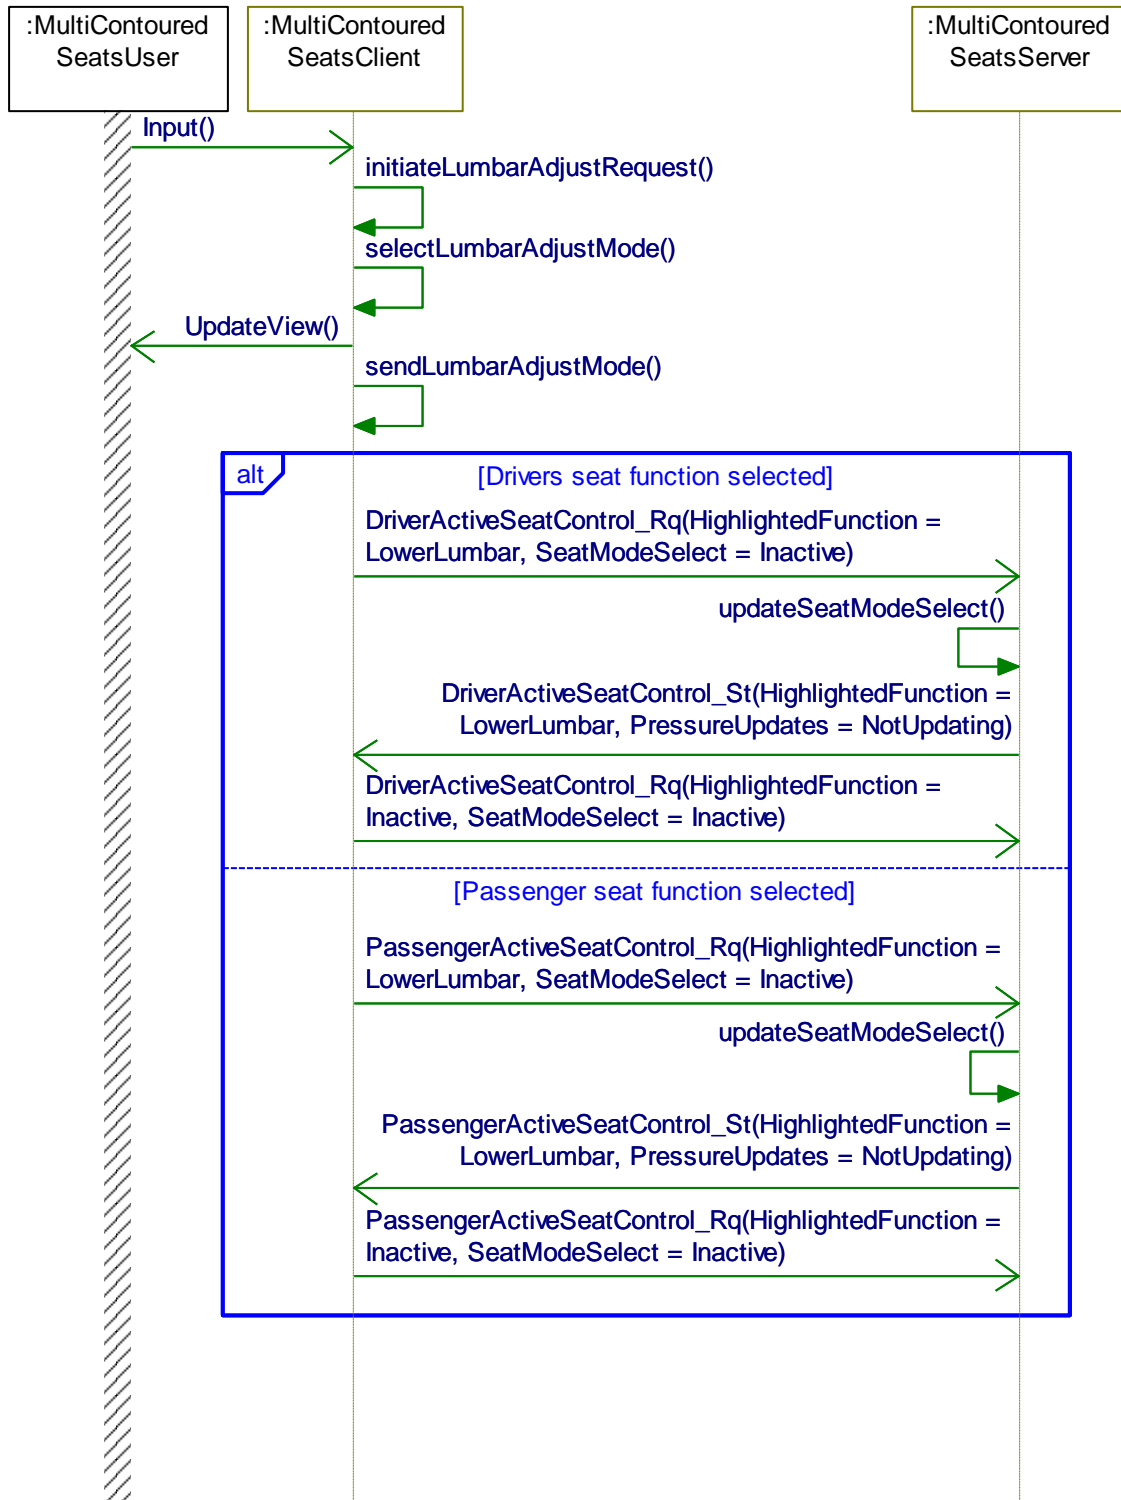

**2.4.2.6 MCS-SD-REQ-021341/D-Decrease Lumbar Lower Bladder from Touch Screen (TcSE ROIN-200773-1)****Scenarios****Normal Usage**

User <selects decrease Lumbar Lower Bladder> via touch screen HMI.

Constraints**Pre-condition**


Powermode Conditions Met

Post-condition

HMI indicates {change Actual Pressure Settings as Seat Bladder pressure changes}



Sequence Diagram

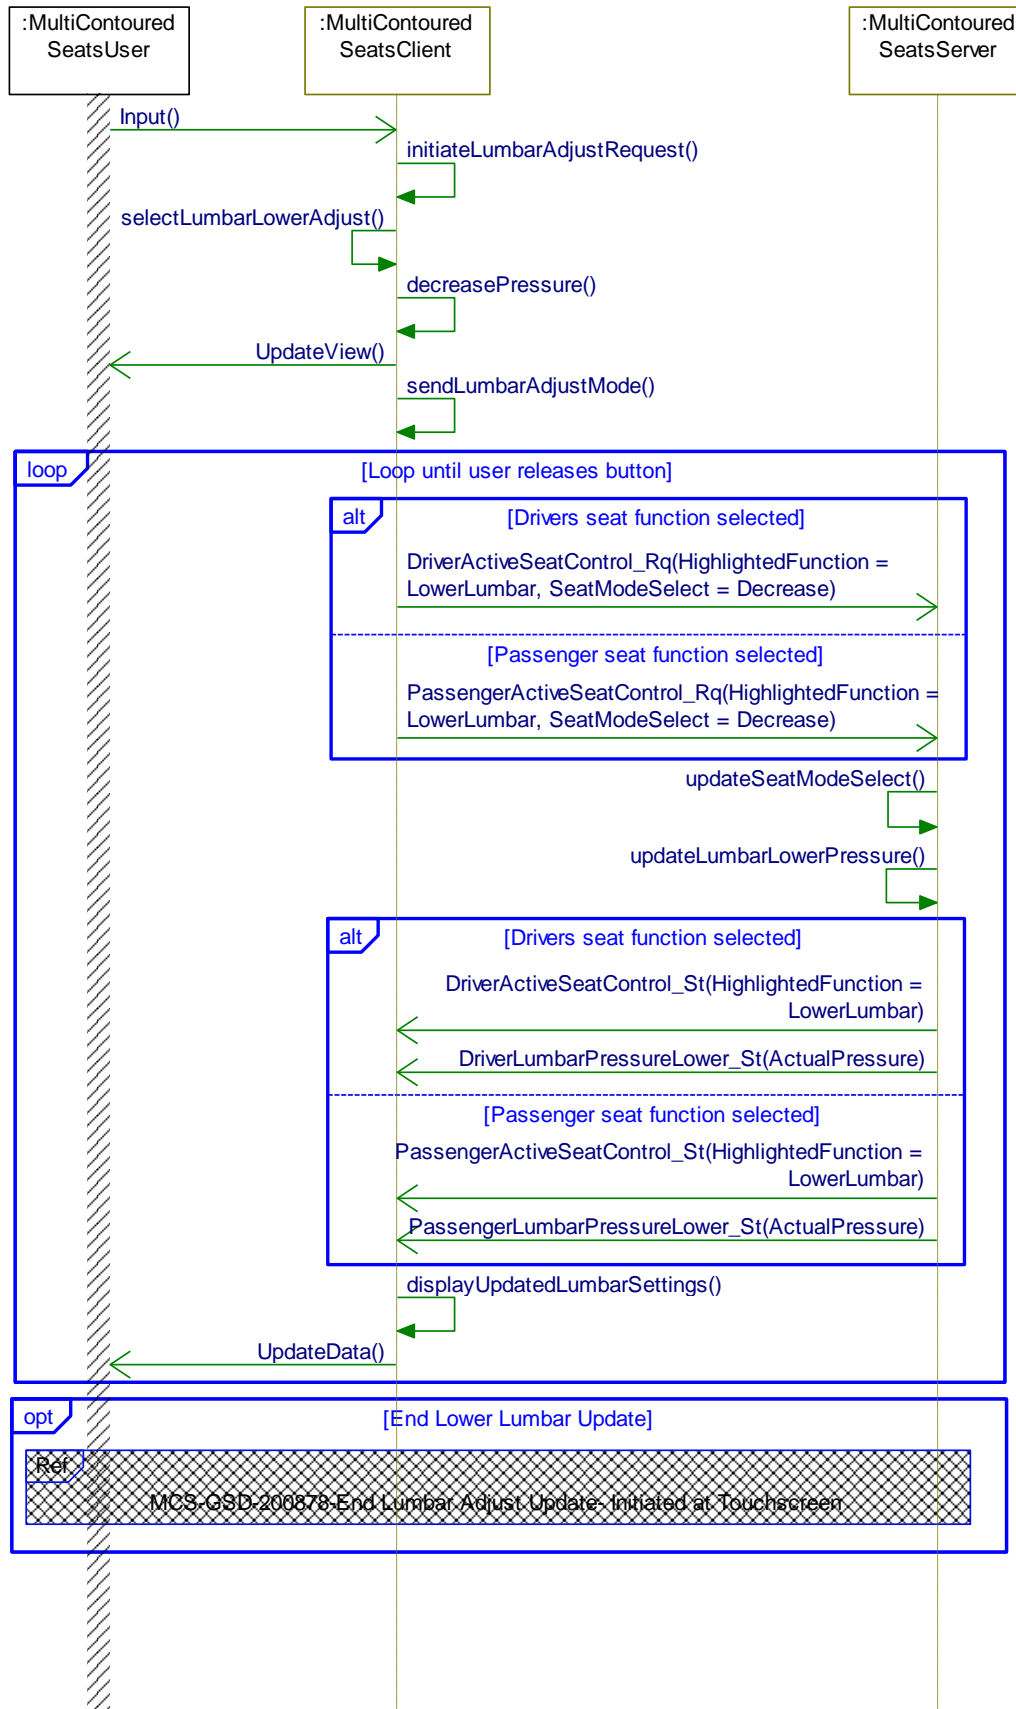

**2.4.2.7 MCS-SD-REQ-021342/D-Decrease Lumbar Middle Bladder from Touch Screen (TcSE ROIN-200780-1)****Scenarios****Normal Usage**

User <selects decrease Lumbar Middle Bladder> via touch screen HMI.

Constraints**Pre-condition**


Powermode Conditions Met

Post-condition

HMI indicates {change Actual Pressure Settings as Seat Bladder pressure changes}



Sequence Diagram

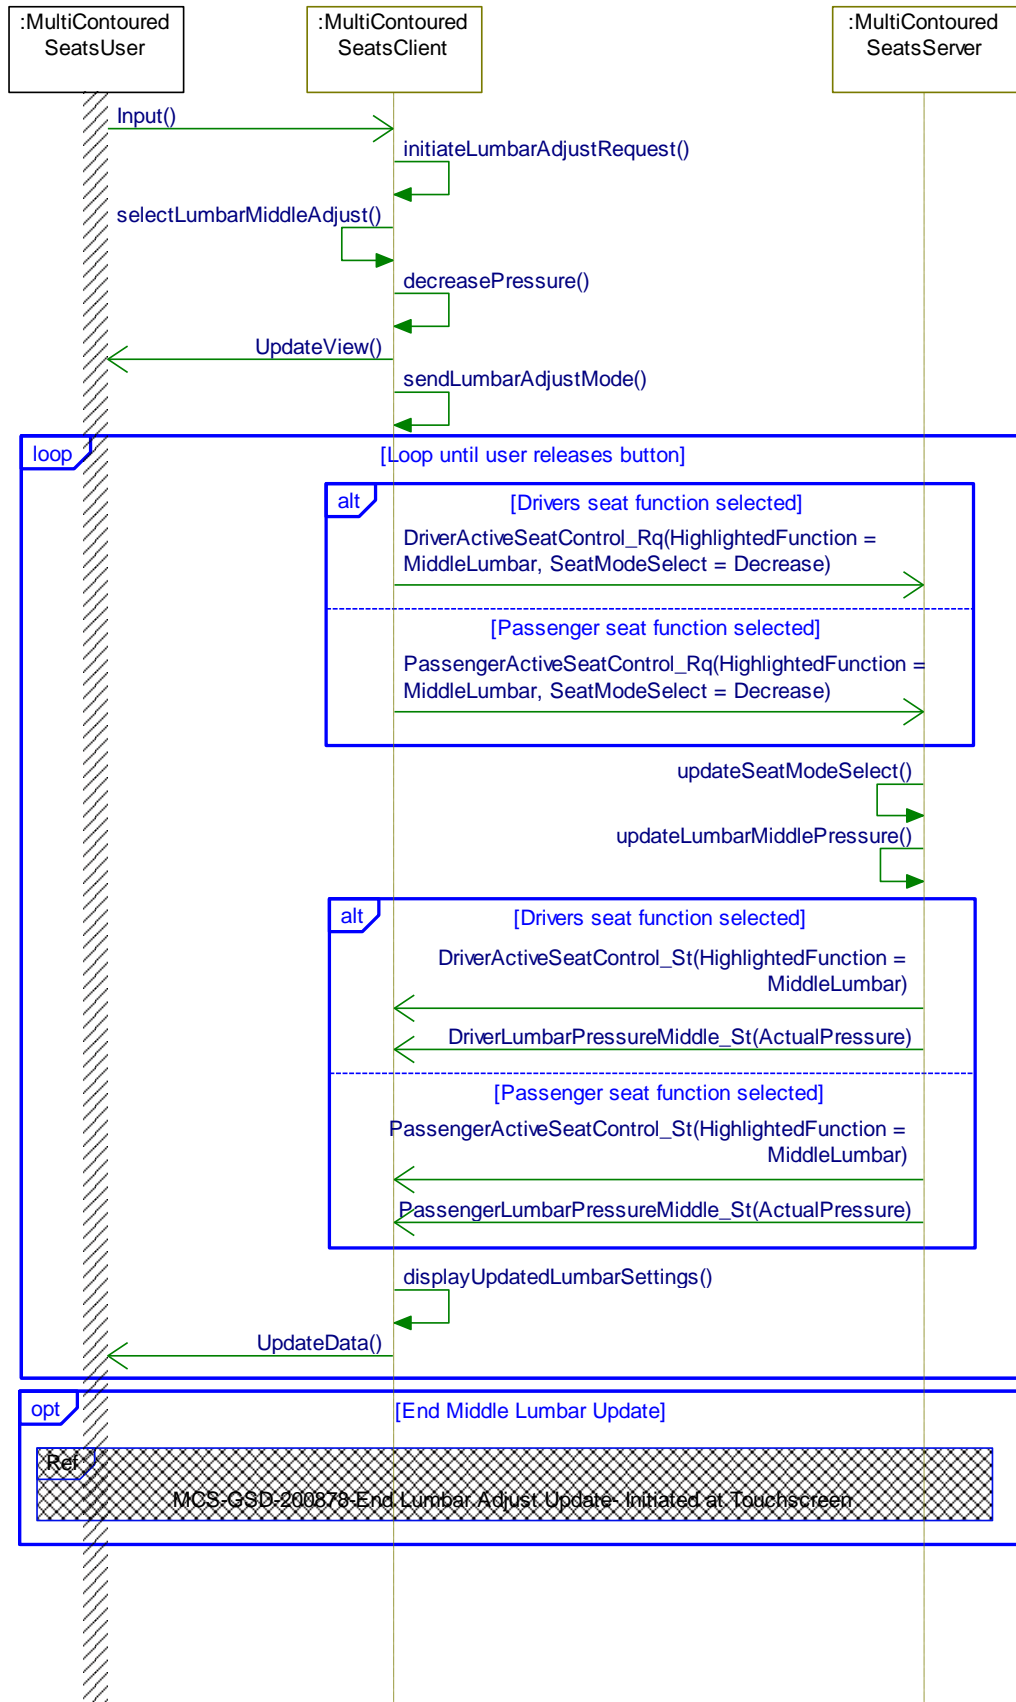

**2.4.2.8 MCS-SD-REQ-021343/D-Decrease Lumbar Upper Bladder from Touch Screen (TcSE ROIN-200787-1)****Scenarios****Normal Usage**

User <selects decrease Lumbar Upper Bladder> via touch screen HMI.

Constraints**Pre-condition**


Powermode Conditions Met

Post-condition

HMI indicates {change Actual Pressure Settings as Seat Bladder pressure changes}



Sequence Diagram

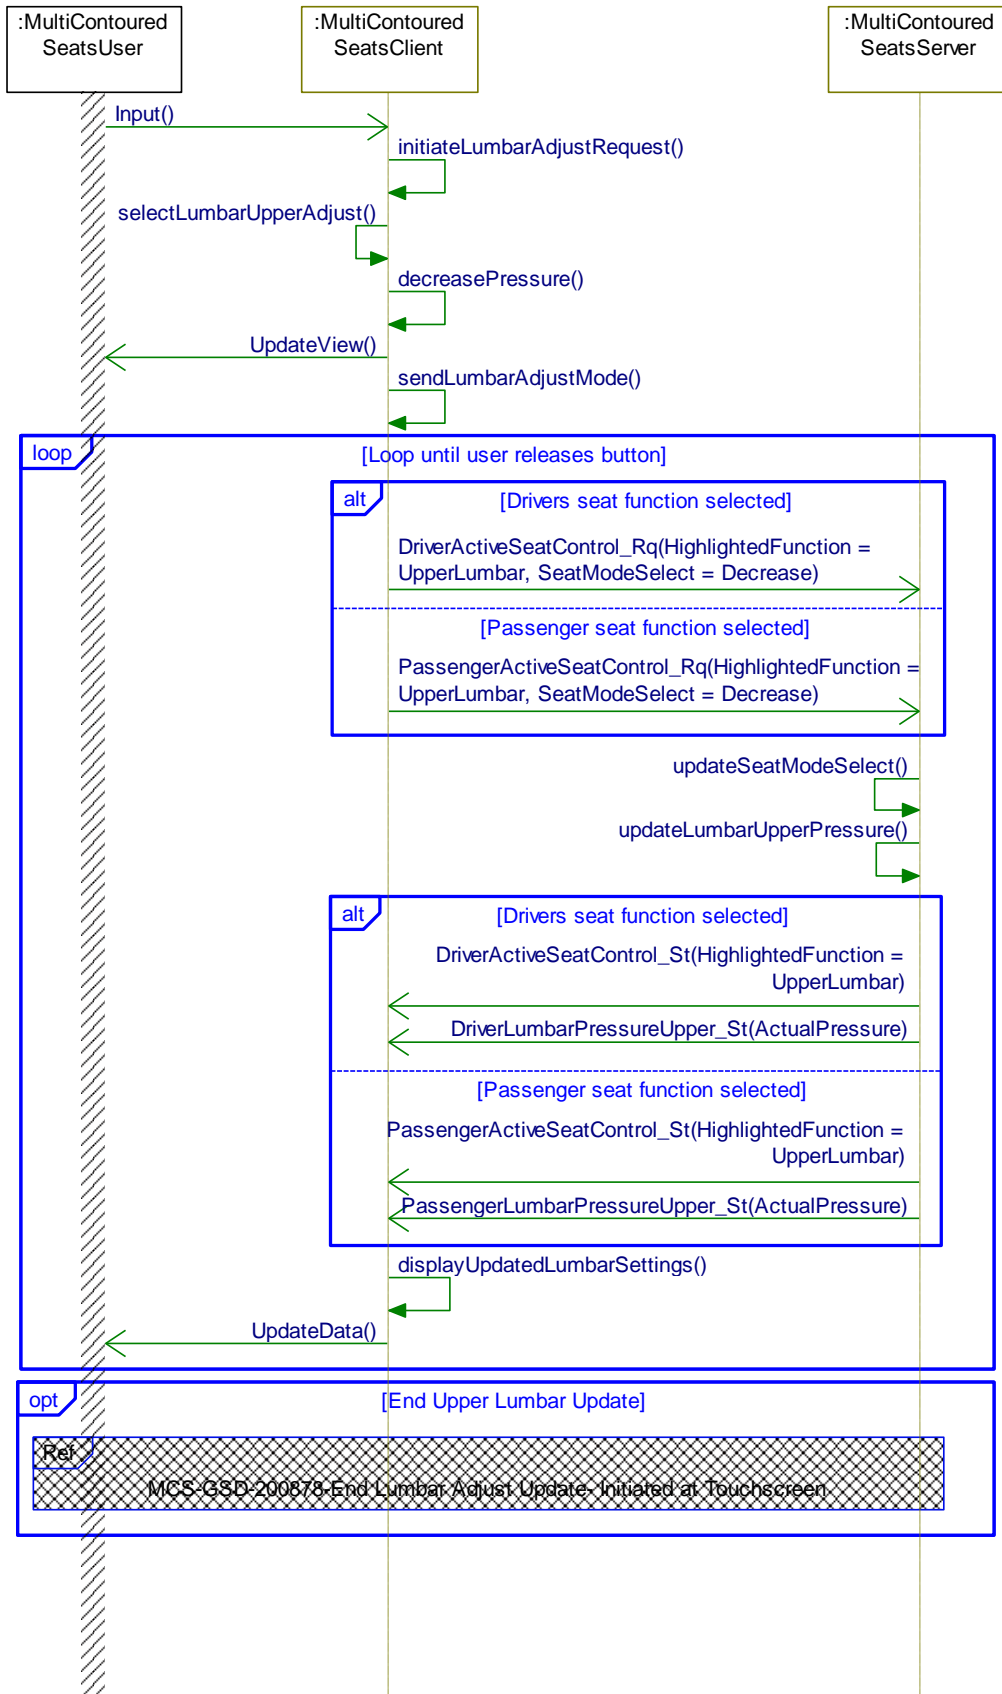

**2.4.2.9 MCS-SD-REQ-021344/D-Increase Lumbar Lower Bladder from Touch Screen (TcSE ROIN-200794-1)****Scenarios****Normal Usage**

User <selects increase Lumbar Lower Bladder> via touch screen HMI.

Constraints**Pre-condition**


Powermode Conditions Met

Post-condition

HMI indicates {change Actual Pressure Settings as Seat Bladder pressure changes}



Sequence Diagram

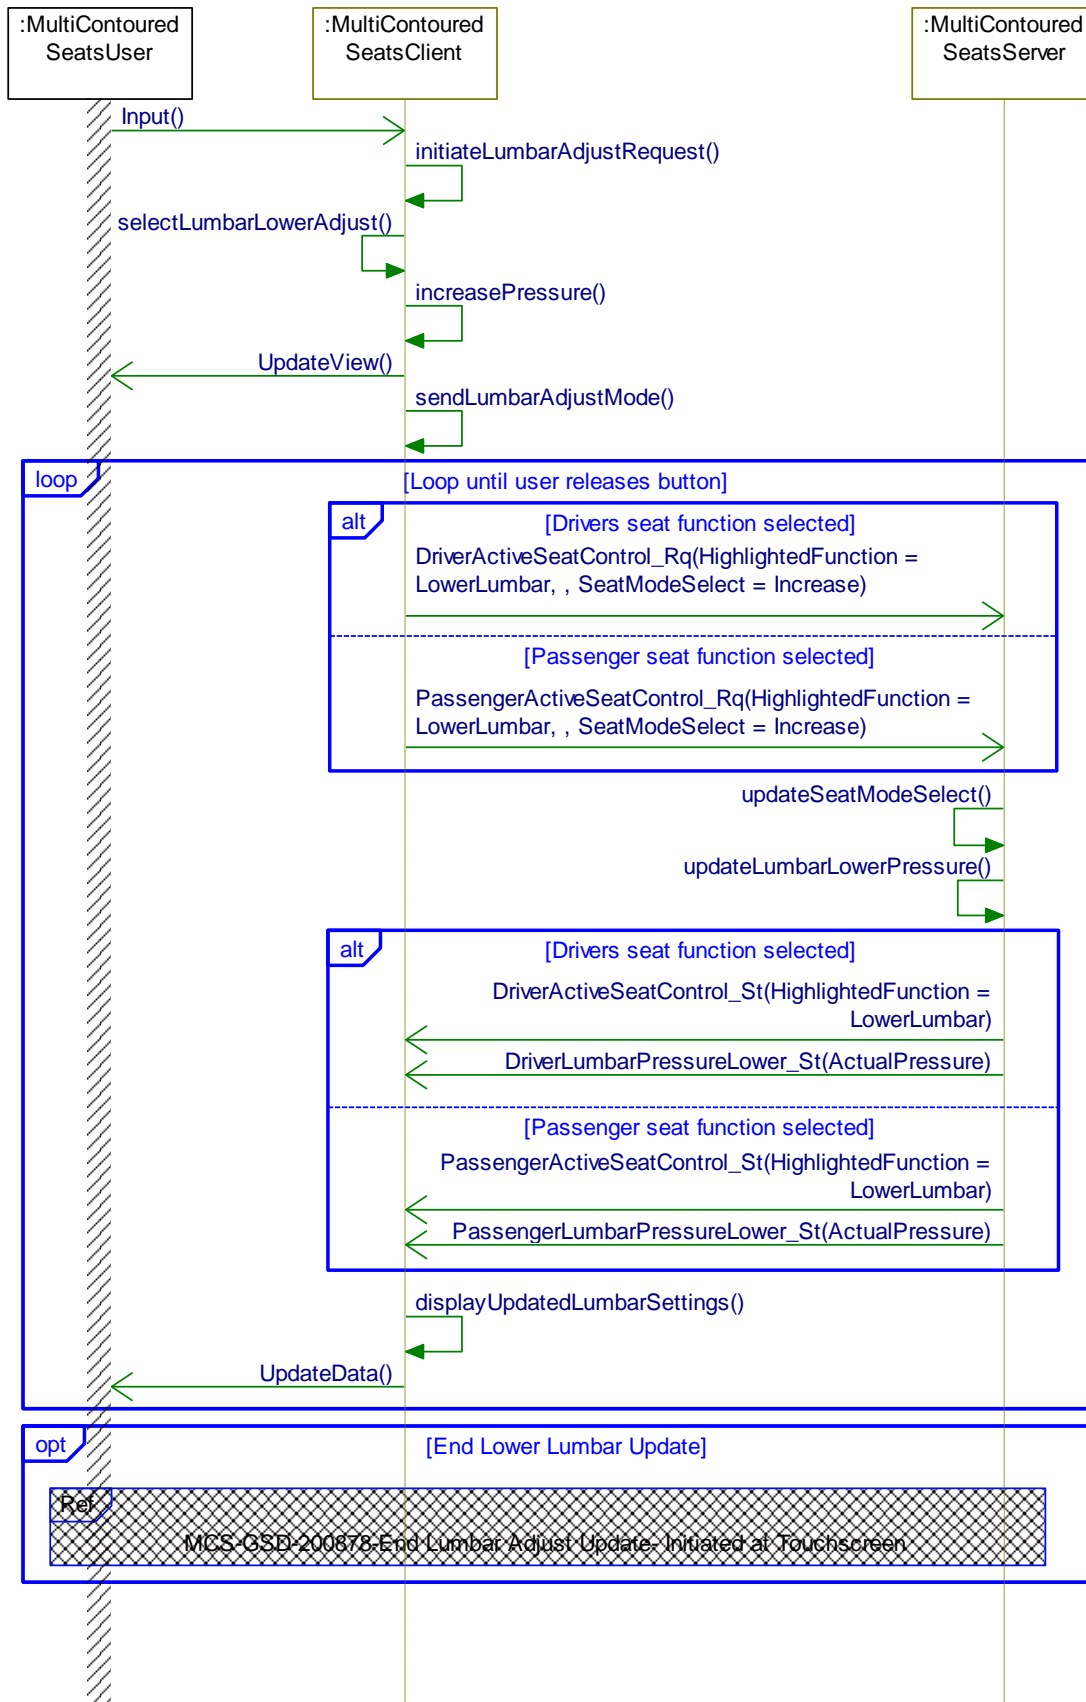

**2.4.2.10 MCS-SD-REQ-021345/D-Increase Lumbar Middle Bladder from Touch Screen (TcSE ROIN-200801-1)****Scenarios****Normal Usage**

User <selects increase Lumbar Middle Bladder> via touch screen HMI.

Constraints**Pre-condition**


Powermode Conditions Met

Post-condition

HMI indicates {change Actual Pressure Settings as Seat Bladder pressure changes}



Sequence Diagram

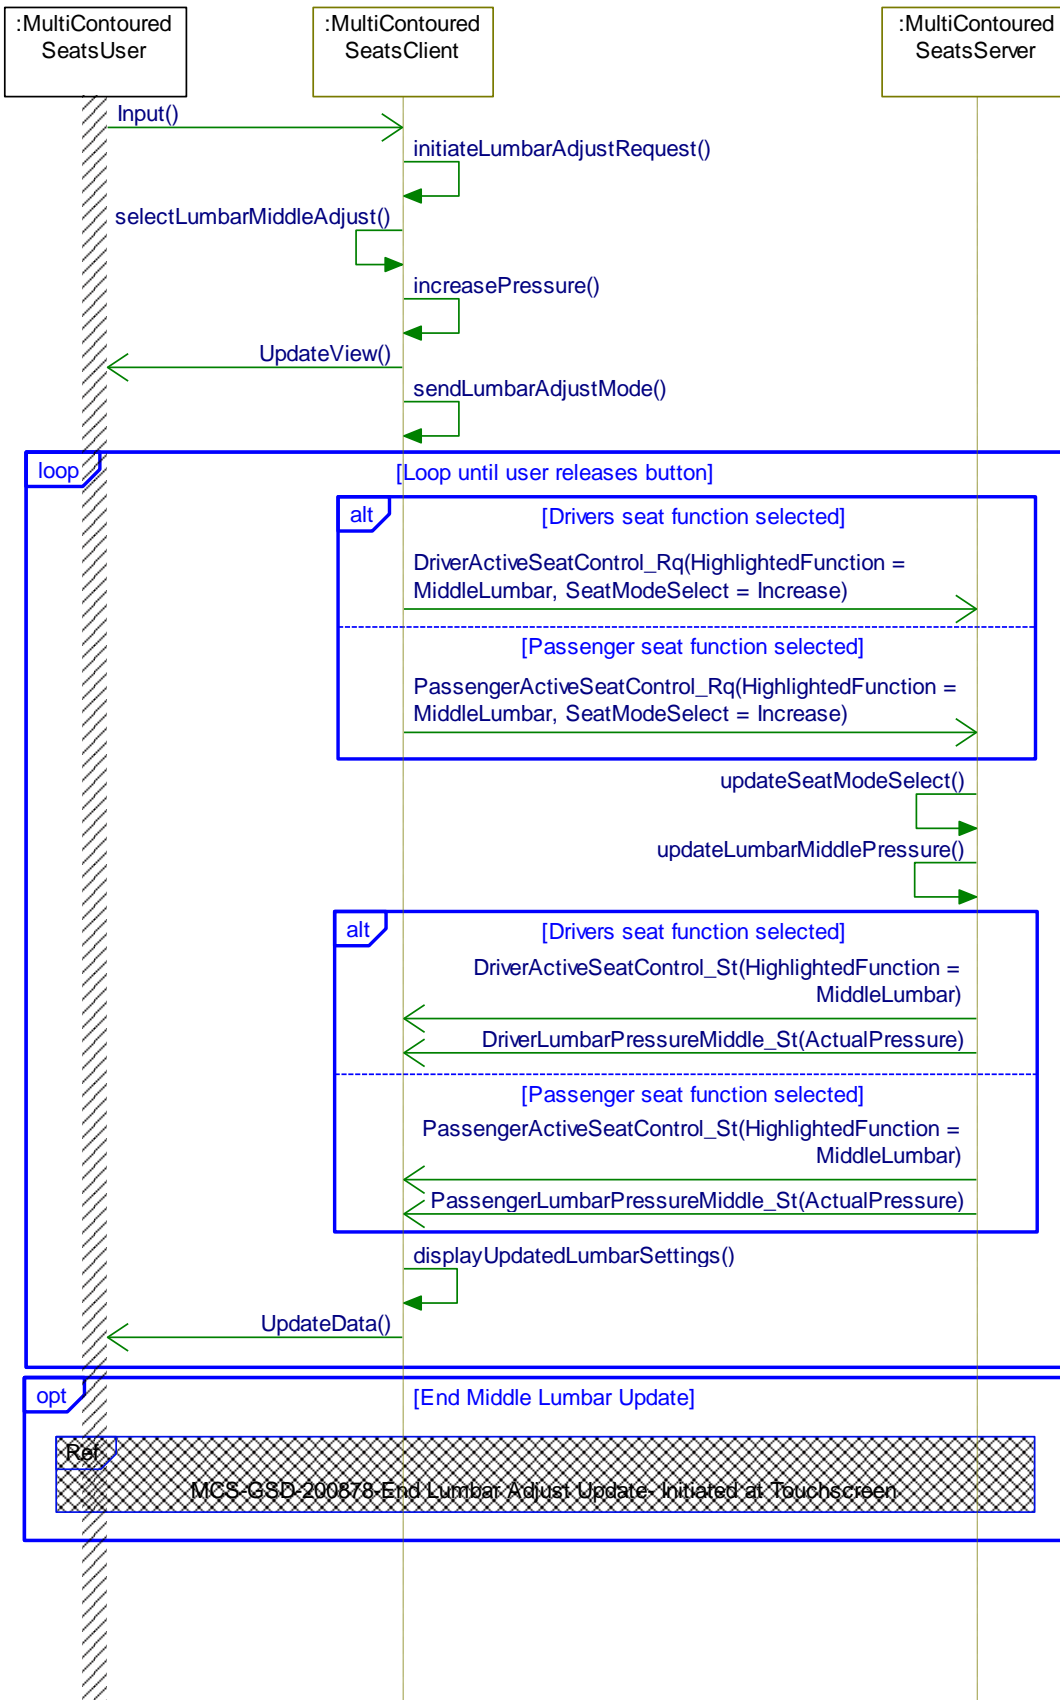

**2.4.2.11 MCS-SD-REQ-021346/D-Increase Lumbar Upper Bladder from Touch Screen (TcSE ROIN-200808-1)****Scenarios****Normal Usage**

User <selects increase Lumbar Upper Bladder> via touch screen HMI.

Constraints**Pre-condition**


Powermode Conditions Met

Post-condition

HMI indicates {change Actual Pressure Settings as Seat Bladder pressure changes}



Sequence Diagram

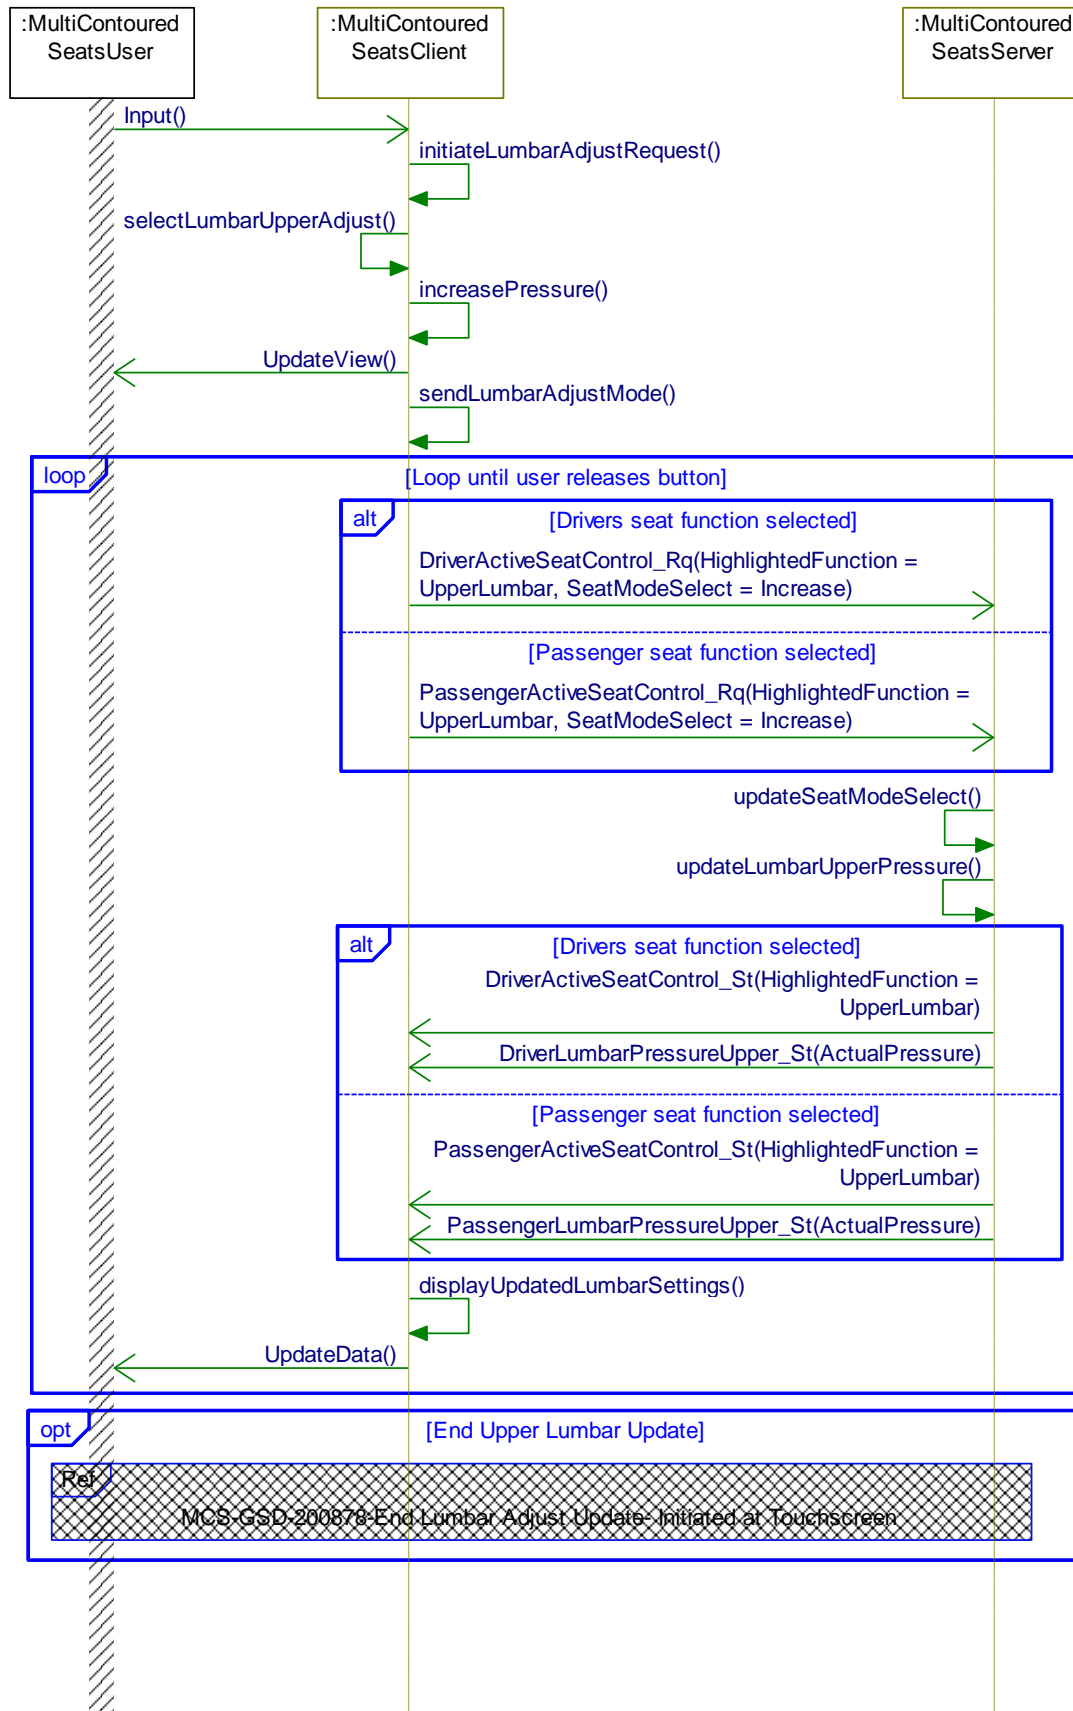

**2.4.2.12 MCS-SD-REQ-250049/C-Set Lumbar Bladder at Seat****Scenarios****Normal Usage**

User Selects Upper, Middle, or Lower <Adjust Bladder Pressure> via seat module.

Constraints**Pre-Condition**


Powermode Conditions Met

Post-Condition

HMI indicates {mode and pressure updates}.



Sequence Diagram

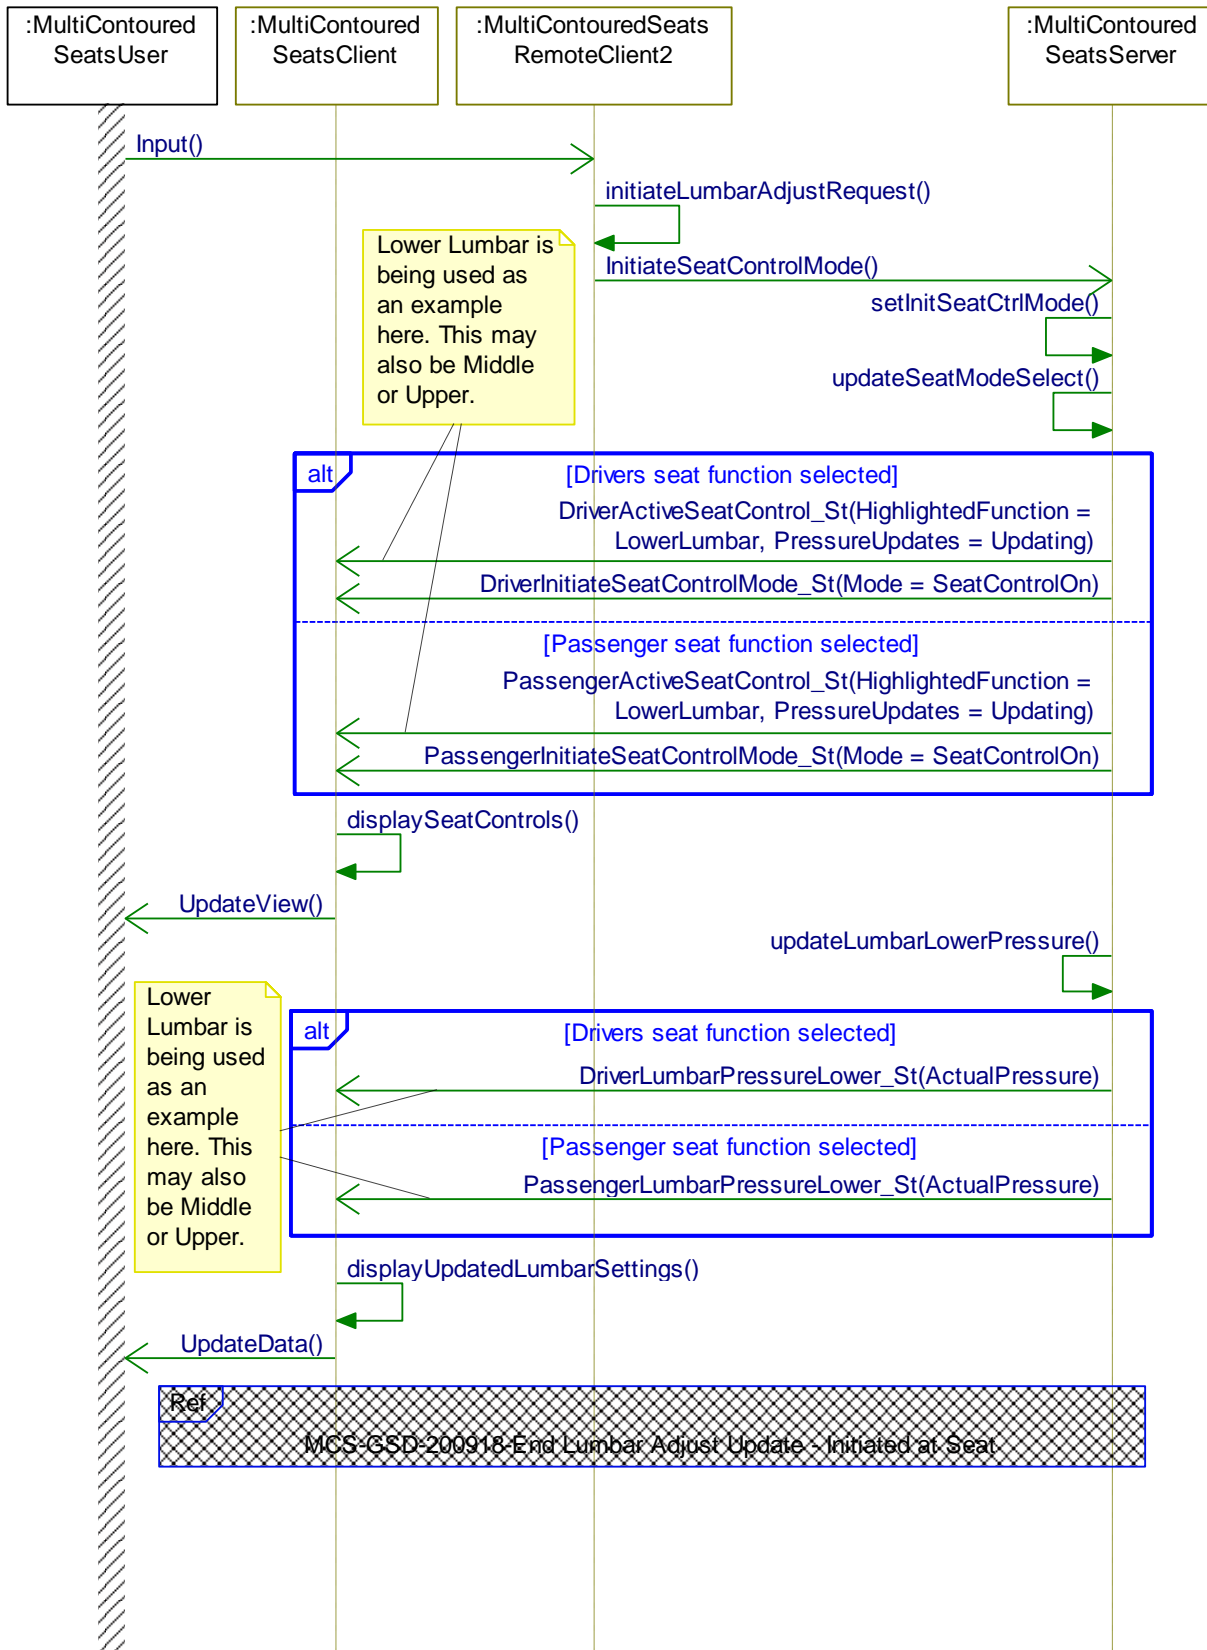

**2.4.2.13 MCS-SD-REQ-021350/A-End Lumbar Adjust Update- Initiated at Touchscreen (TcSE ROIN-200878-1)****Scenarios****Normal Usage**

The user ends Lumbar Adjust Mode update.

Constraints**Pre-condition**


Lumbar Adjust is currently being updated by the user via Touch screen HMI

Post-condition

Lumbar Adjust is no longer updated by the user via Touch screen HMI



Sequence Diagram

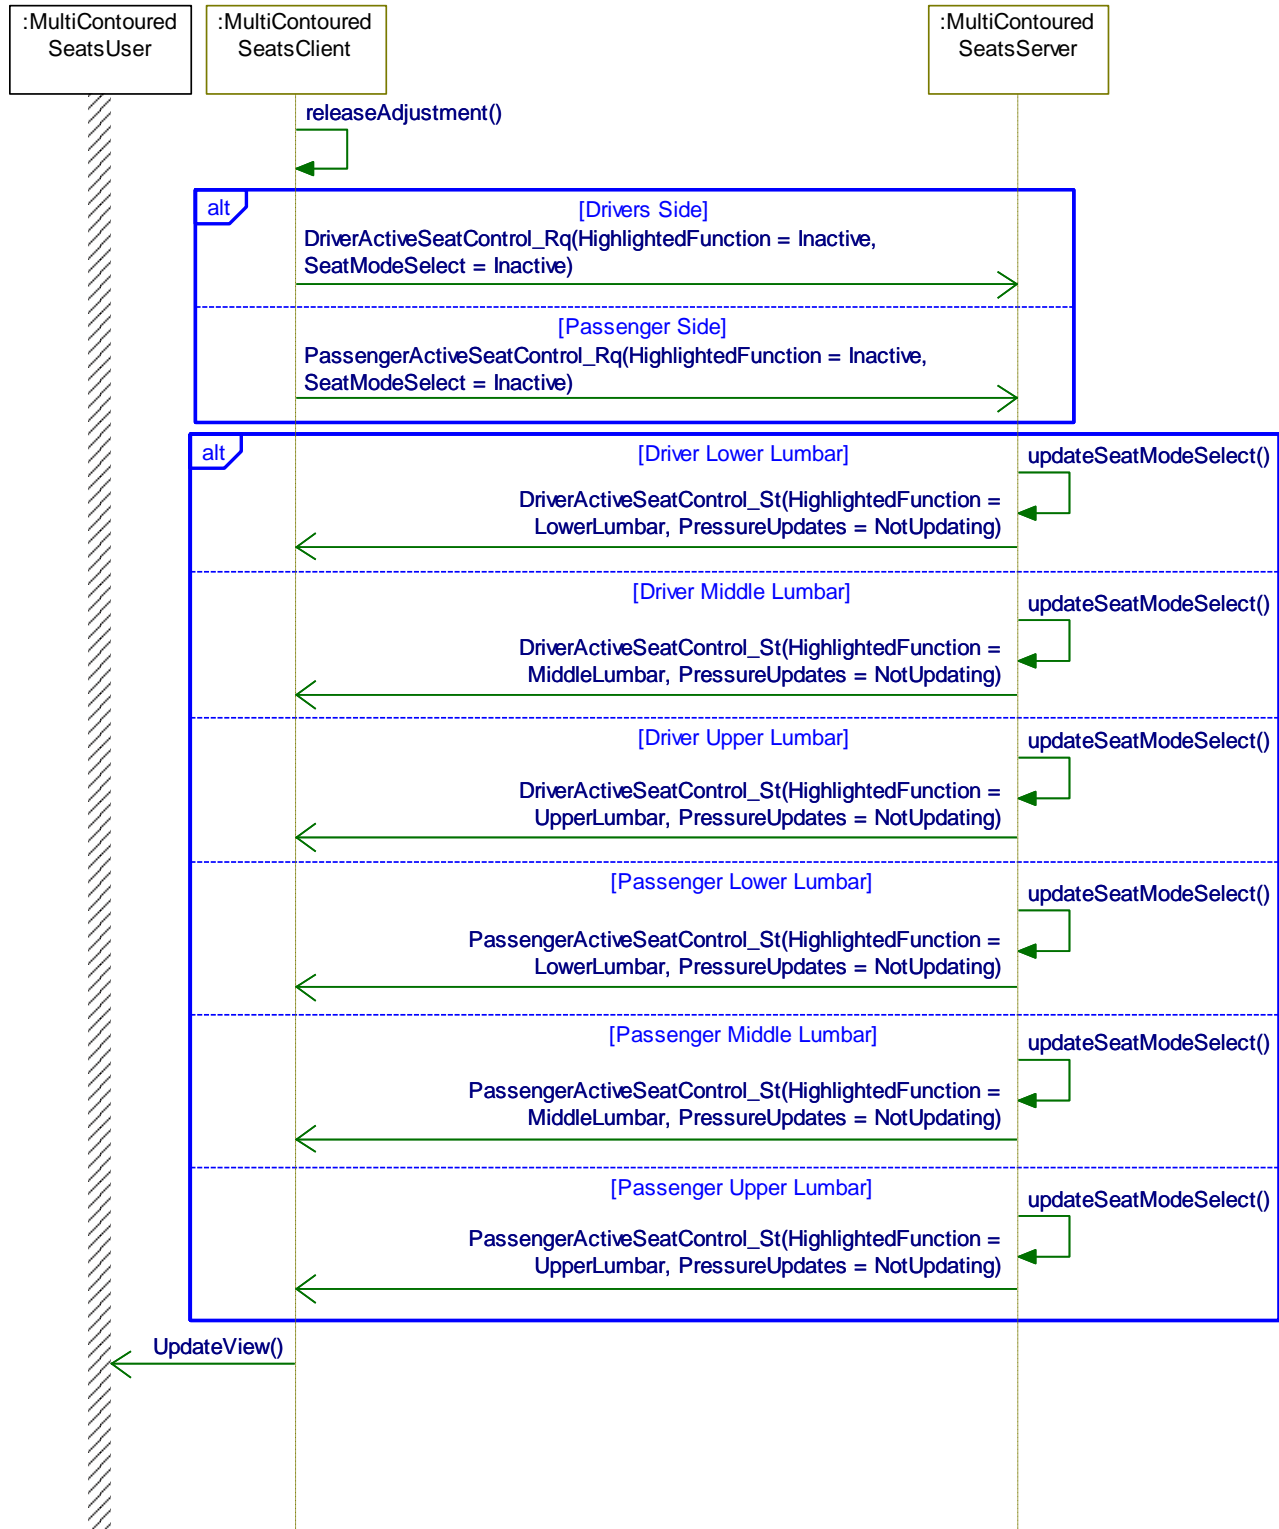

**2.4.2.14 MCS-SD-REQ-021351/A-End Lumbar Adjust Update - Initiated at Seat (TcSE ROIN-200918-1)****Scenarios****Normal Usage**


The user ends Lumbar Adjust Mode update.

Constraints**Pre-condition**

Lumbar Adjust is currently being updated by the user via Seat HMI

Post-condition

Lumbar Adjust is no longer being updated by the user via Seat HMI

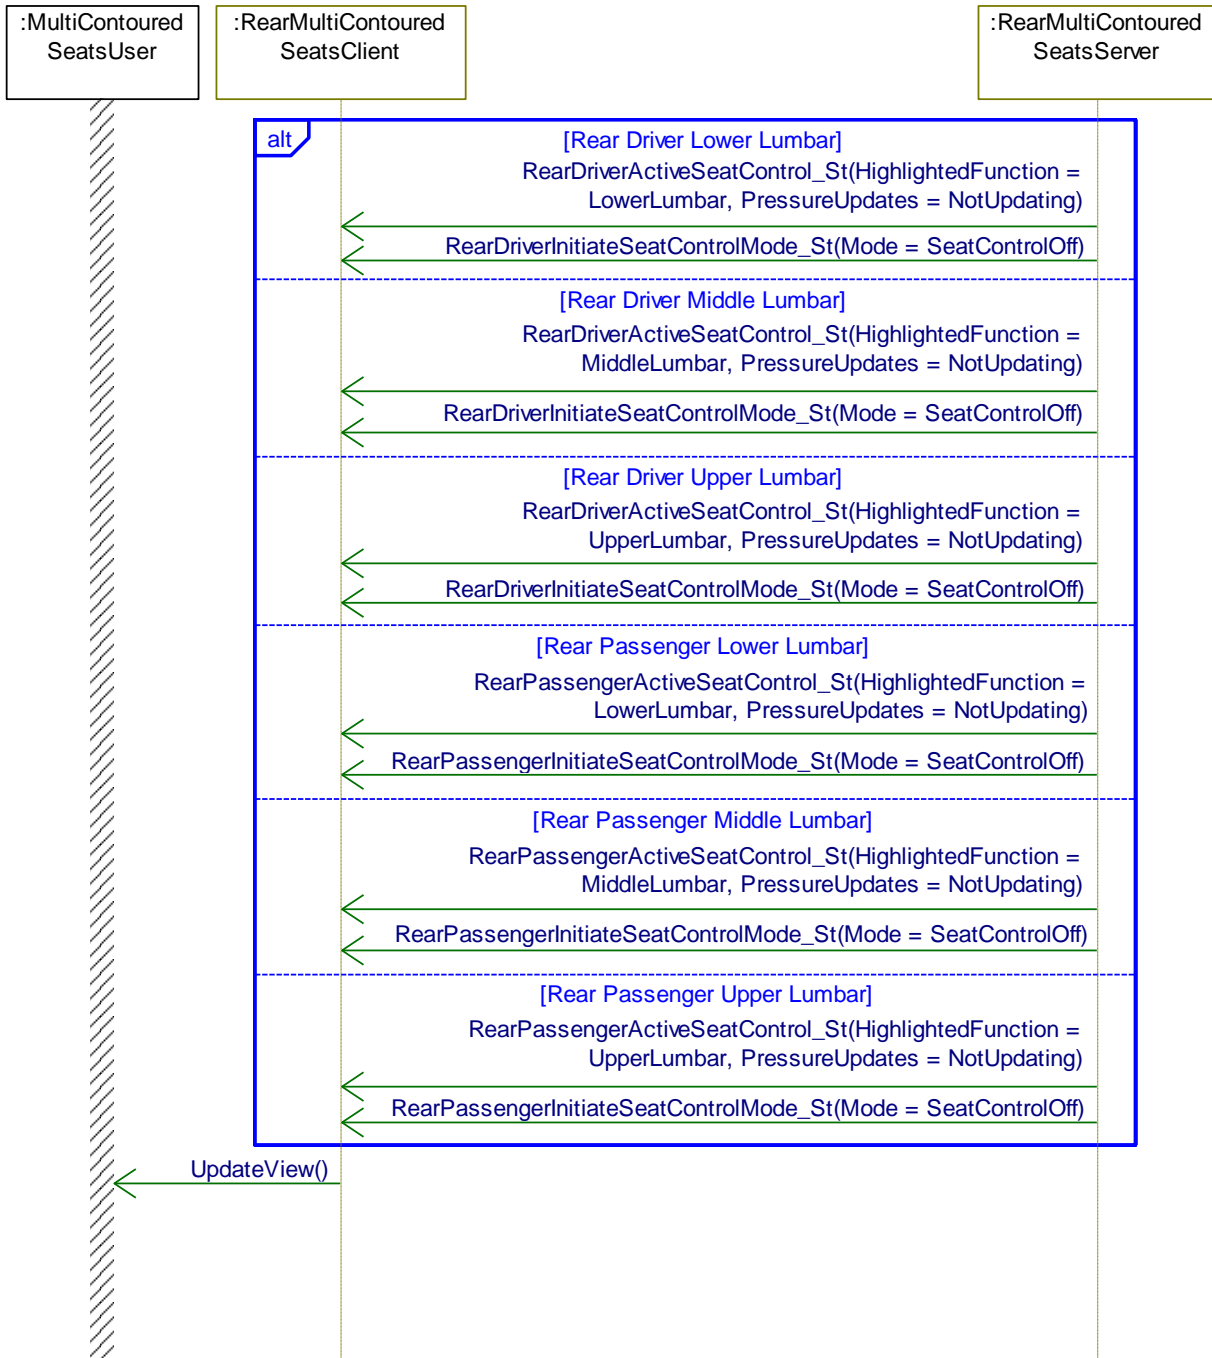Sequence Diagram



2.5 MCSv2-FUN-REQ-237624/A-Set Bolster

2.5.1 Use Cases

2.5.1.1 MCS-UC-REQ-240863/C-Adjust Front Seat Bolster Bladder from HMI

Actors	Vehicle Occupant
Pre-conditions	Powermode Conditions Met
Scenario Description	User Selects Upper or Lower < Adjust Bolster Pressure> via HMI
Post-conditions	HMI indicates (Mode & Intensity)
List of Exception Use Cases	NA
Interfaces	G-HMI & vehicle system
Links to Referenced Use Cases	NA

2.5.1.2 MCS-UC-REQ-021369/D-Adjust Front Seat Bolster Bladder from Seat (TcSE ROIN-293589)


Actors	Vehicle Occupant
Pre-conditions	Powermode Conditions Met
Scenario Description	User Selects Upper or Lower < Adjust Bolster Pressure> via seat module
Post-conditions	HMI indicates (Mode & Intensity)
List of Exception Use Cases	NA
Interfaces	G-HMI & vehicle system
Links to Referenced Use Cases	NA



2.5.2 White Box View


2.5.2.1 MCS-ACT-REQ-021326/A-Set Bolster - Display Initiated (TcSE ROIN-198835-1)

Activity Diagram

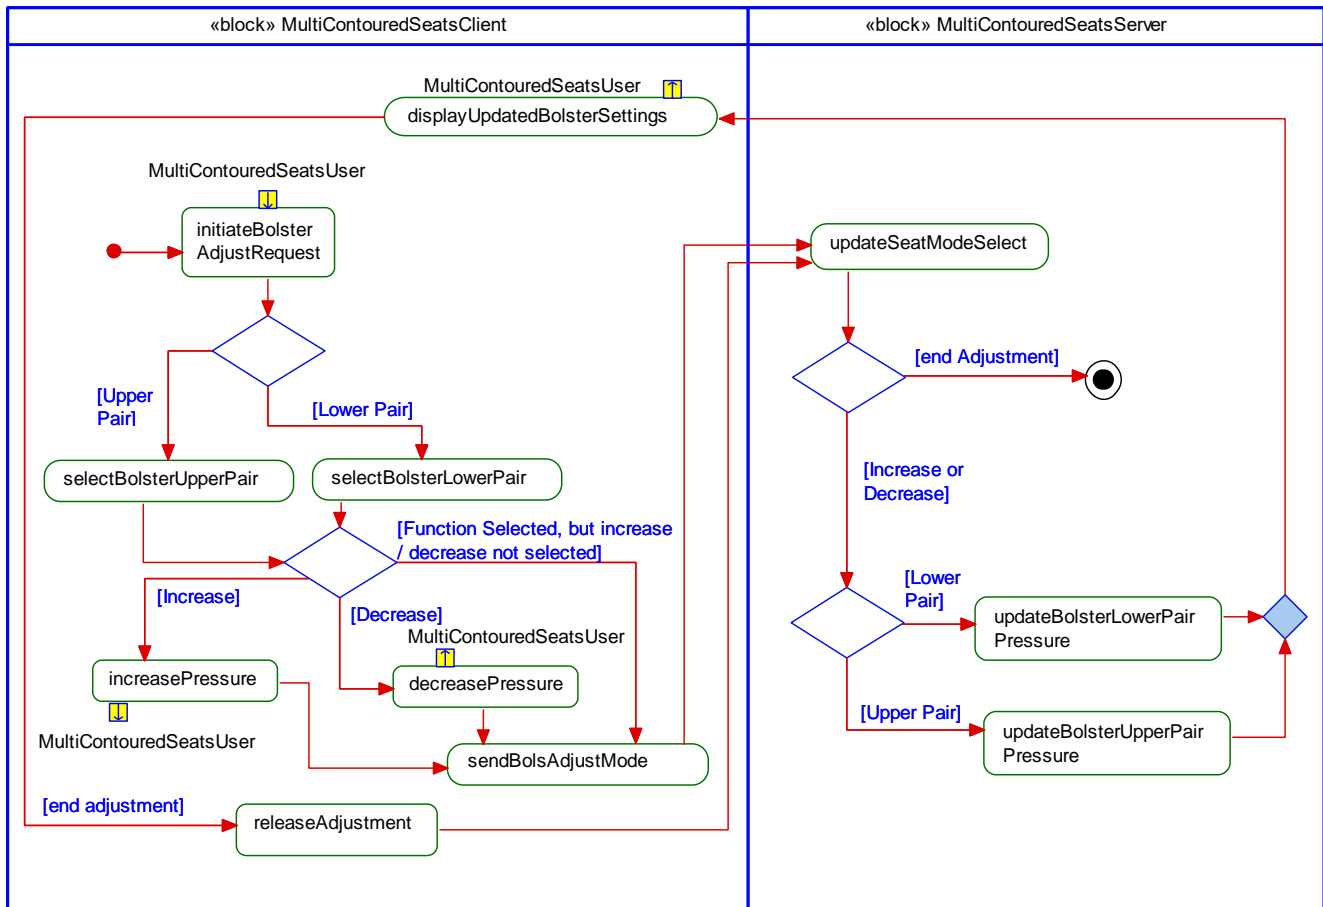

2.5.2.2 MCS-ACT-REQ-250054/A-Set Bolster - Seat Initiated

Activity Diagram

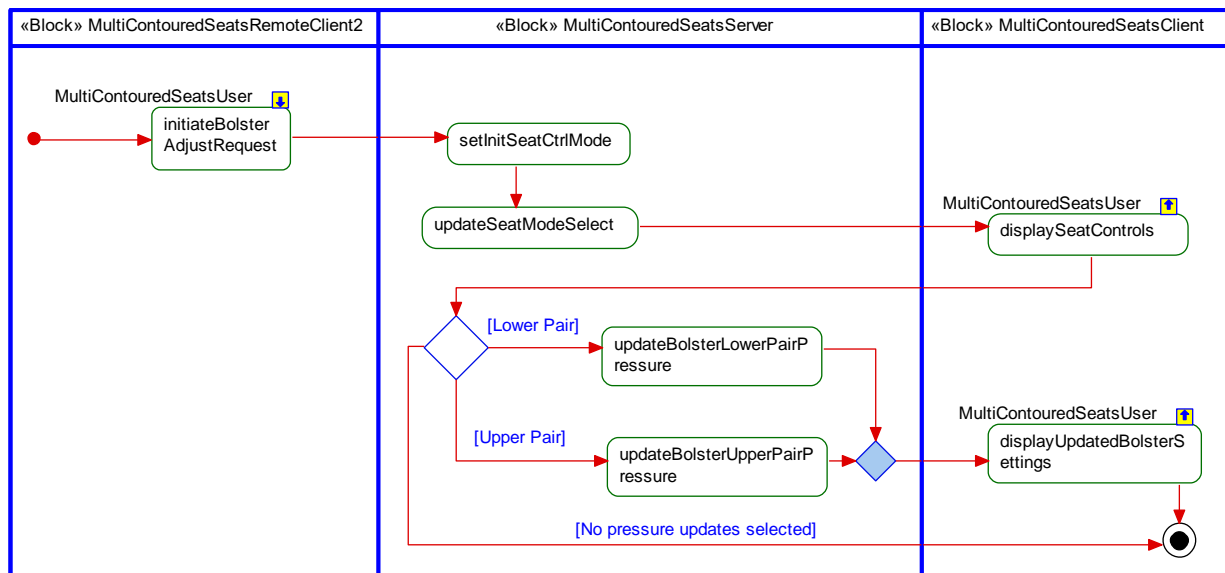

**2.5.2.3 MCS-SD-REQ-021375/D-Increase Bolster Upper Bladders from Touch Screen (TcSE ROIN-199118-1)****Scenarios****Normal Usage**

User <selects increase Bolster Upper Pair of Bladders> via touch screen HMI

Constraints**Pre-condition**


Powermode Conditions Met

Post-condition

HMI indicates {change Actual Pressure Settings as Seat Bladder pressure changes}



Sequence Diagram

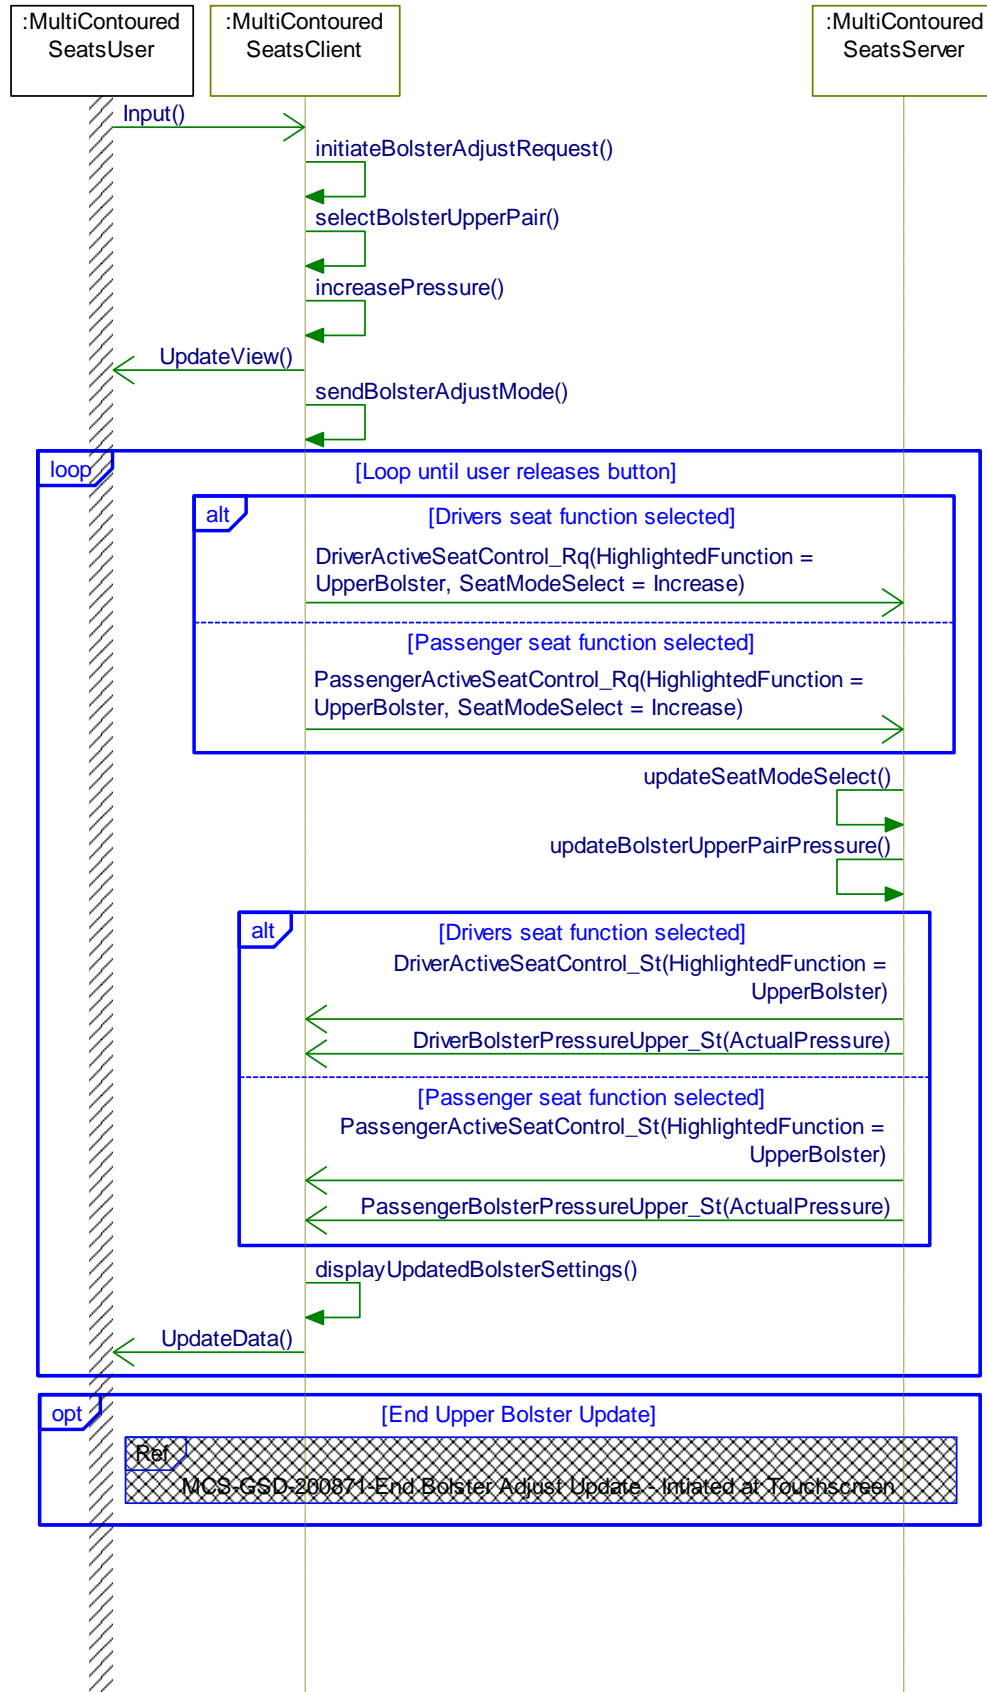

**2.5.2.4 MCS-SD-REQ-021371/D-Increase Bolster Lower Bladders from Touch Screen (TcSE ROIN-199090-1)****Scenarios****Normal Usage**

User <selects increase Bolster Lower Pair of Bladders> via touch screen HMI

Constraints**Pre-condition**


Powermode Conditions Met

Post-condition

HMI indicates {change Actual Pressure Settings as Seat Bladder pressure changes}



Sequence Diagram

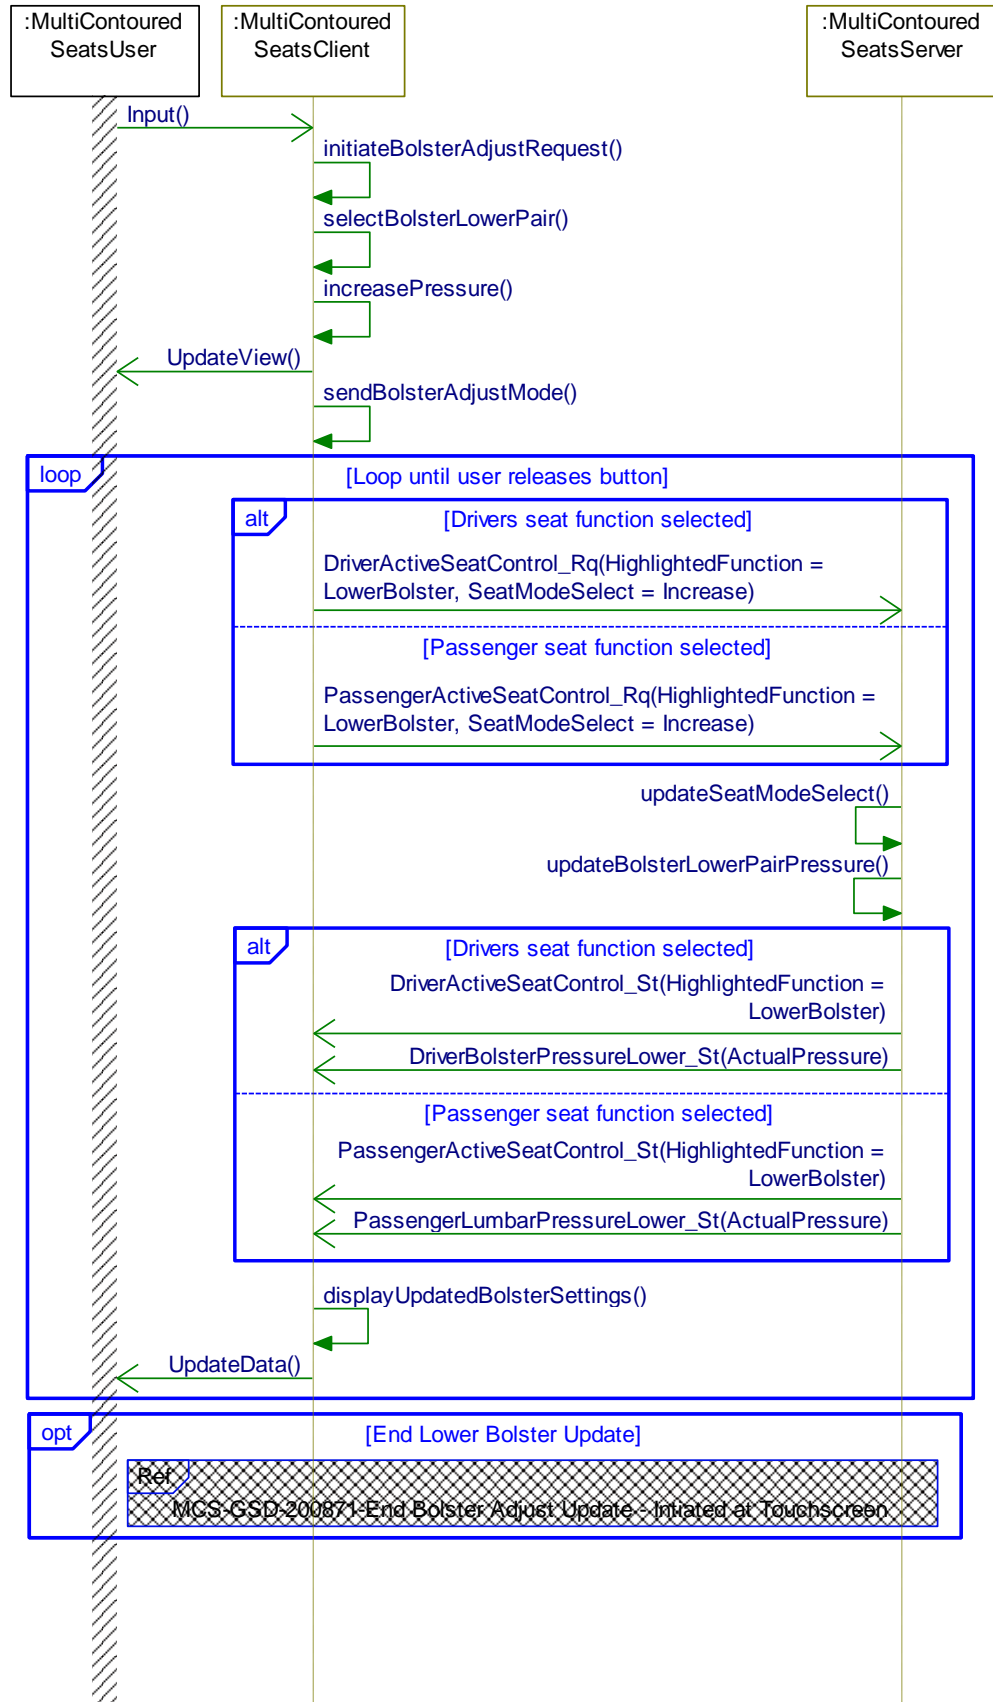

**2.5.2.5 MCS-SD-REQ-021372/D-Decrease Bolster Upper Bladders from Touch Screen (TcSE ROIN-199097-1)****Scenarios****Normal Usage**

User <selects decrease Bolster Upper Pair of Bladders> via touch screen HMI

Constraints**Pre-condition**


Powermode Conditions Met

Post-condition

HMI indicates {change Actual Pressure Settings as Seat Bladder pressure changes}



Sequence Diagram

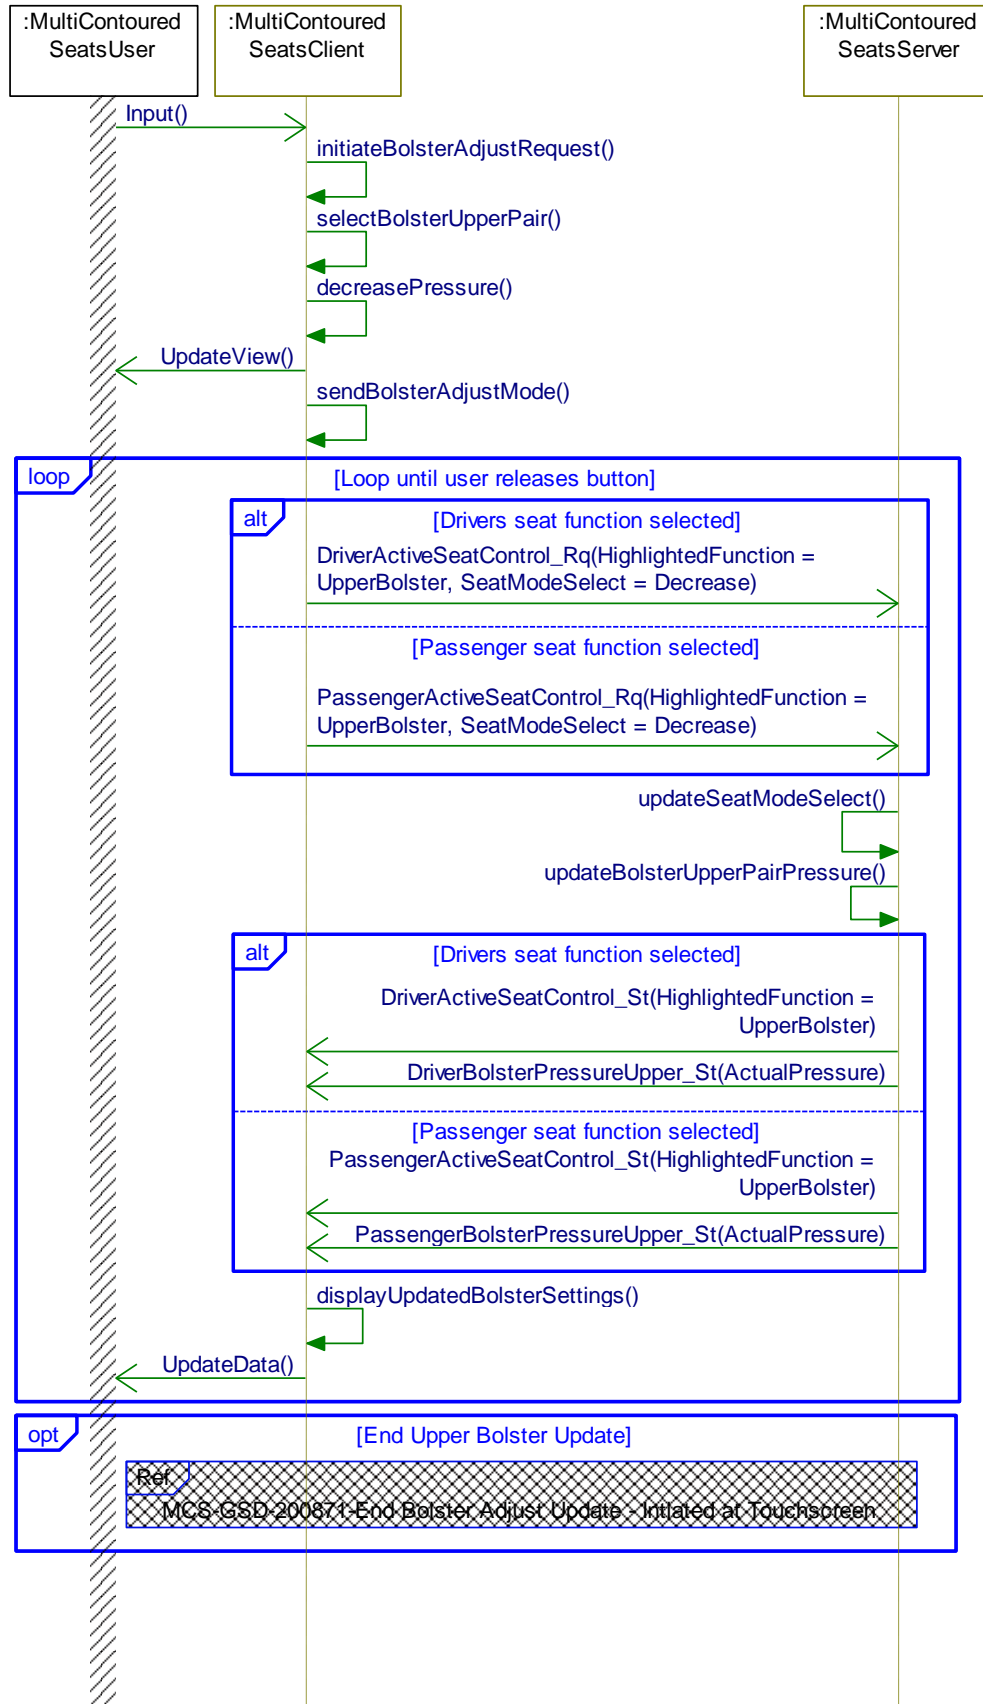

**2.5.2.6 MCS-SD-REQ-021373/D-Decrease Bolster Lower Bladders from Touch Screen (TcSE ROIN-199104-1)****Scenarios****Normal Usage**

User <selects decrease Bolster Lower Pair of Bladders> via touch screen HMI

Constraints**Pre-condition**


Powermode Conditions Met

Post-condition

HMI indicates {change Actual Pressure Settings as Seat Bladder pressure changes}



Sequence Diagram

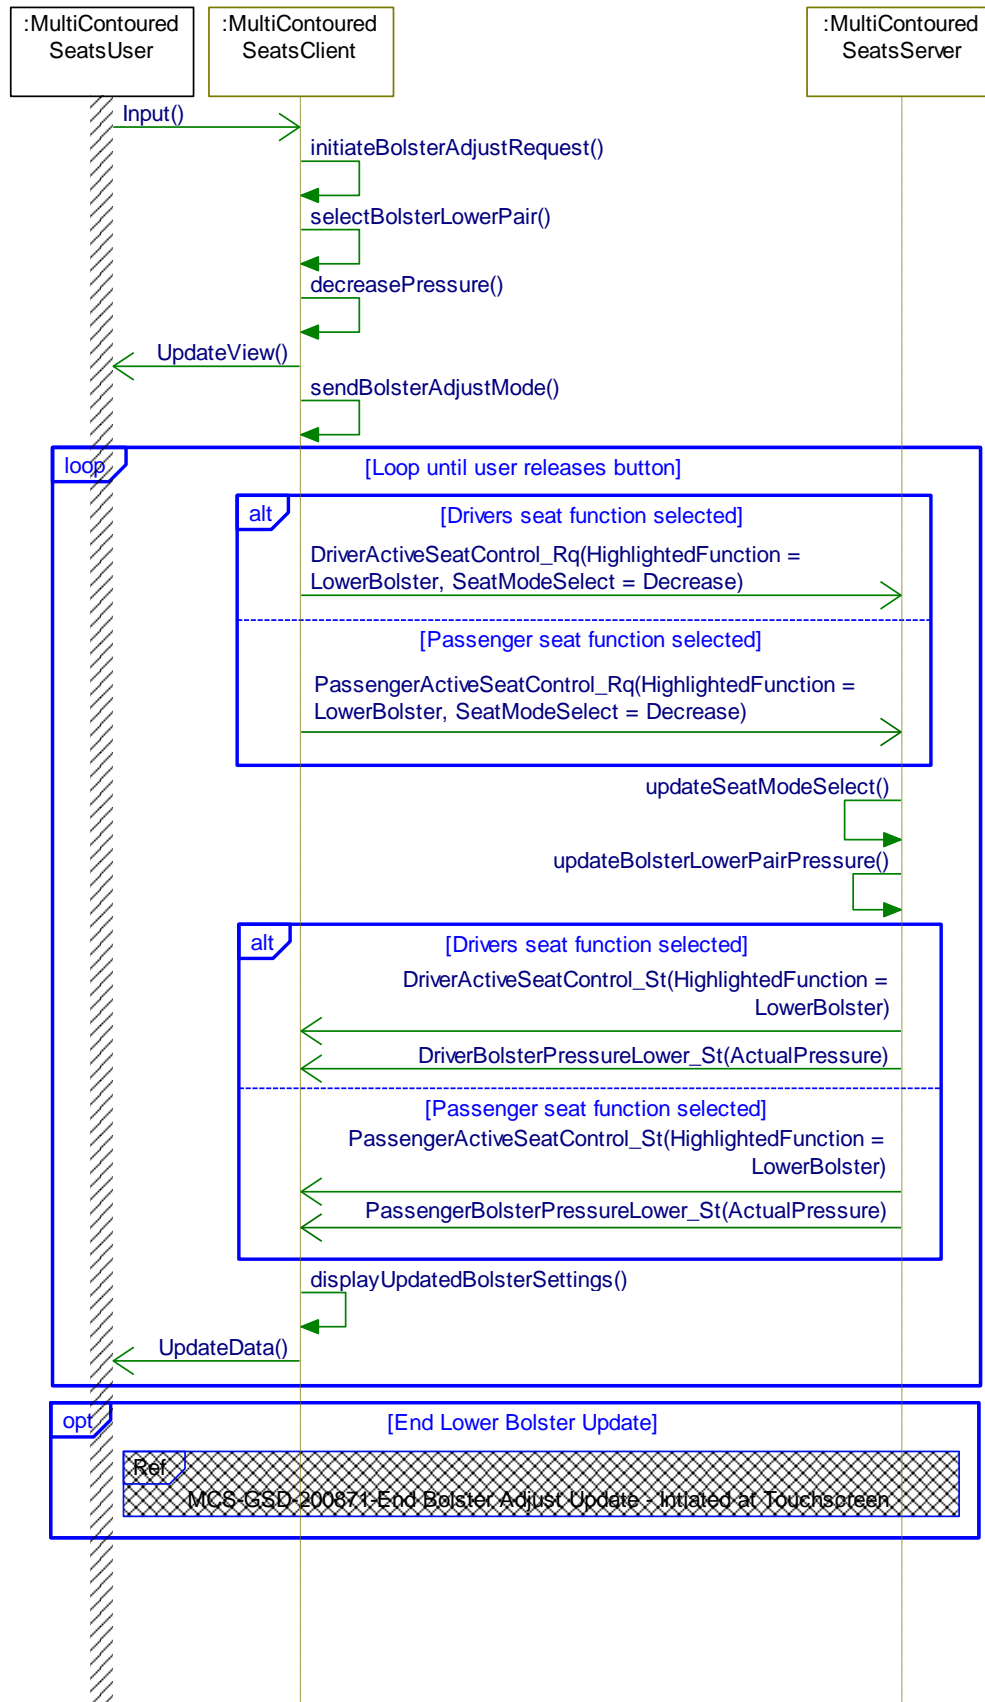

**2.5.2.7 MCS-SD-REQ-021376/C-Select Bolster Upper Bladders at Touch Screen - No pressure updates (TcSE ROIN-200177-1)****Scenarios****Normal Usage**

User <selects Set Bolster Upper Bladders> via touchscreen HMI, but does not make any changes to the actual pressure

Constraints**Pre-condition**


Powermode Conditions Met

Post-condition

HMI indicates {changes to Bolster Adjust Mode}



Sequence Diagram

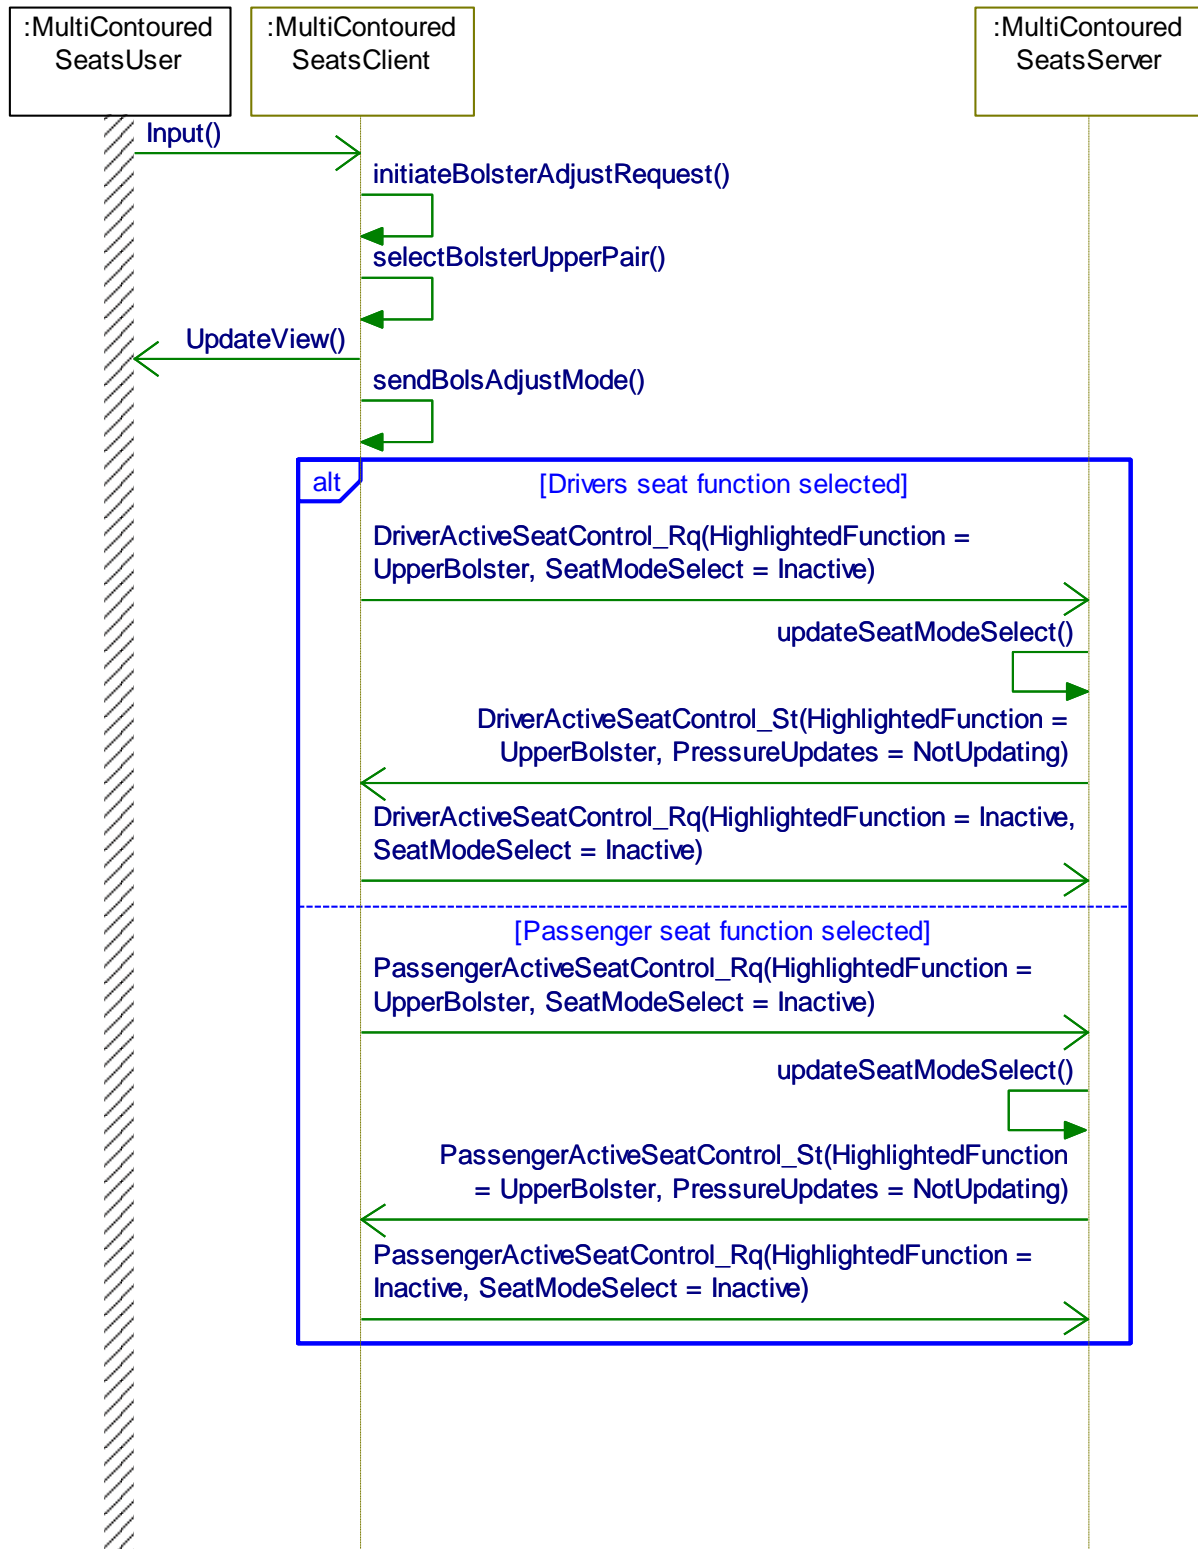

**2.5.2.8 MCS-SD-REQ-021378/C-Select Bolster Lower Bladders at Touch Screen - No pressure updates (TcSE ROIN-200815-1)****Scenarios****Normal Usage**

User <selects Set Bolster Lower Bladders> via touchscreen HMI, but does not make any changes to the actual pressure

Constraints**Pre-condition**


Powermode Conditions Met

Post-condition

HMI indicates {changes to Bolster Adjust Mode}



Sequence Diagram

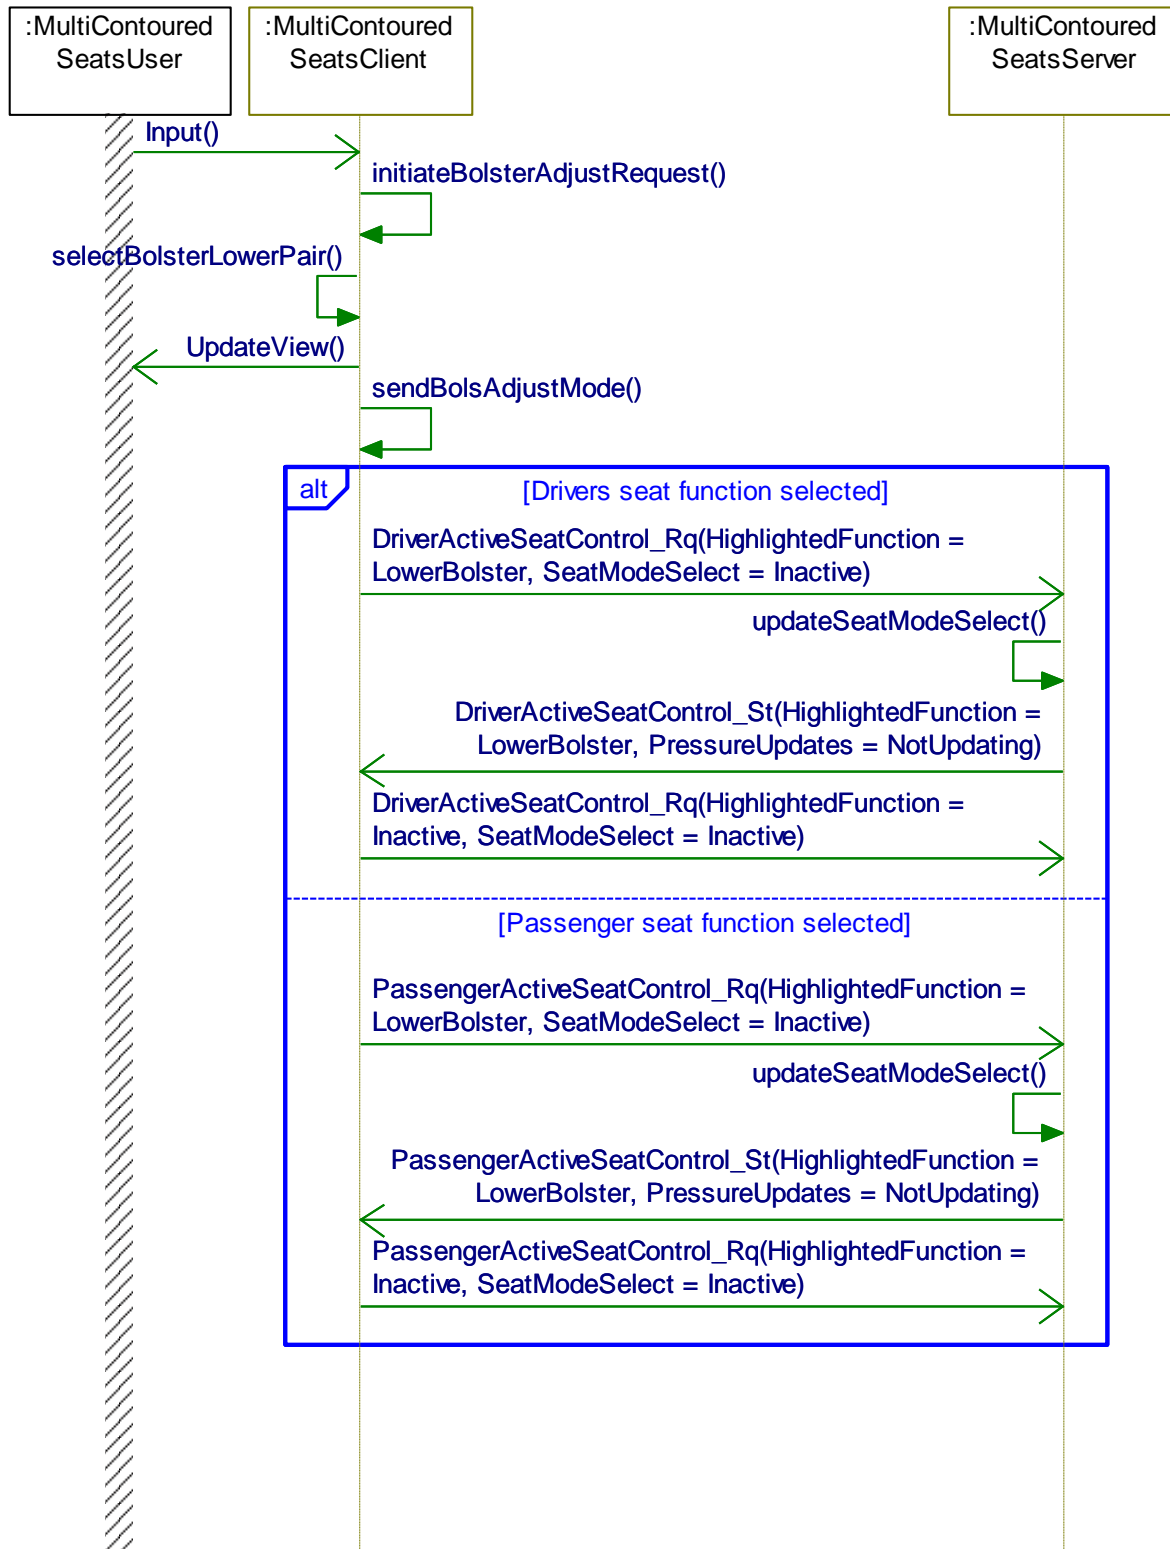

**2.5.2.9 MCS-SD-REQ-250055/C-Initiate Bolster Adjust at Seat - No pressure updates****Scenarios****Normal Usage**

User <selects Set Bolster Lower or Upper Bladders> via seat HMI, but does not make any changes to the actual pressure.

Constraints**Pre-Condition**


Powermode Conditions Met

Post-Condition

HMI indicates {changes to Bolster Adjust Mode}



Sequence Diagram

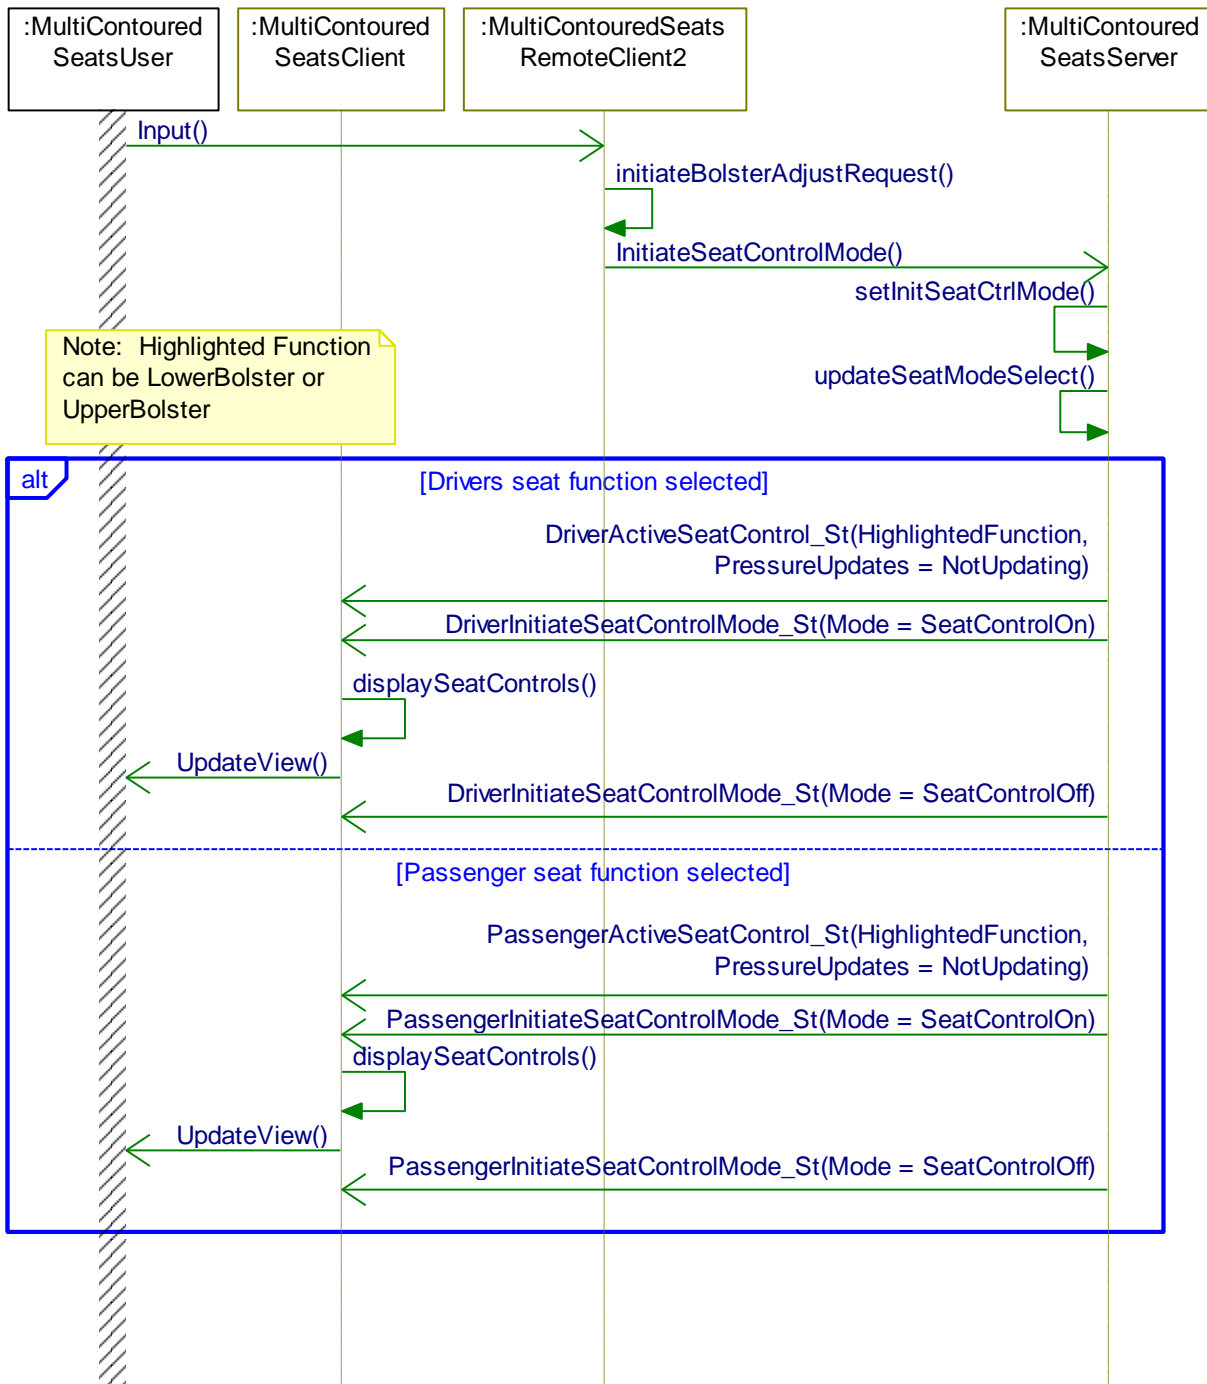

**2.5.2.10 MCS-SD-REQ-250092/C-Set Bolster at Seat****Scenarios****Normal Usage**

User <selects Set Bolster Lower or Upper Pair of Bladders> via seat HMI.

Constraints**Pre-Condition**


Powermode Conditions Met

Post-Condition

HMI indicates {change Actual Pressure Settings as Seat Bladder pressure changes}



Sequence Diagram

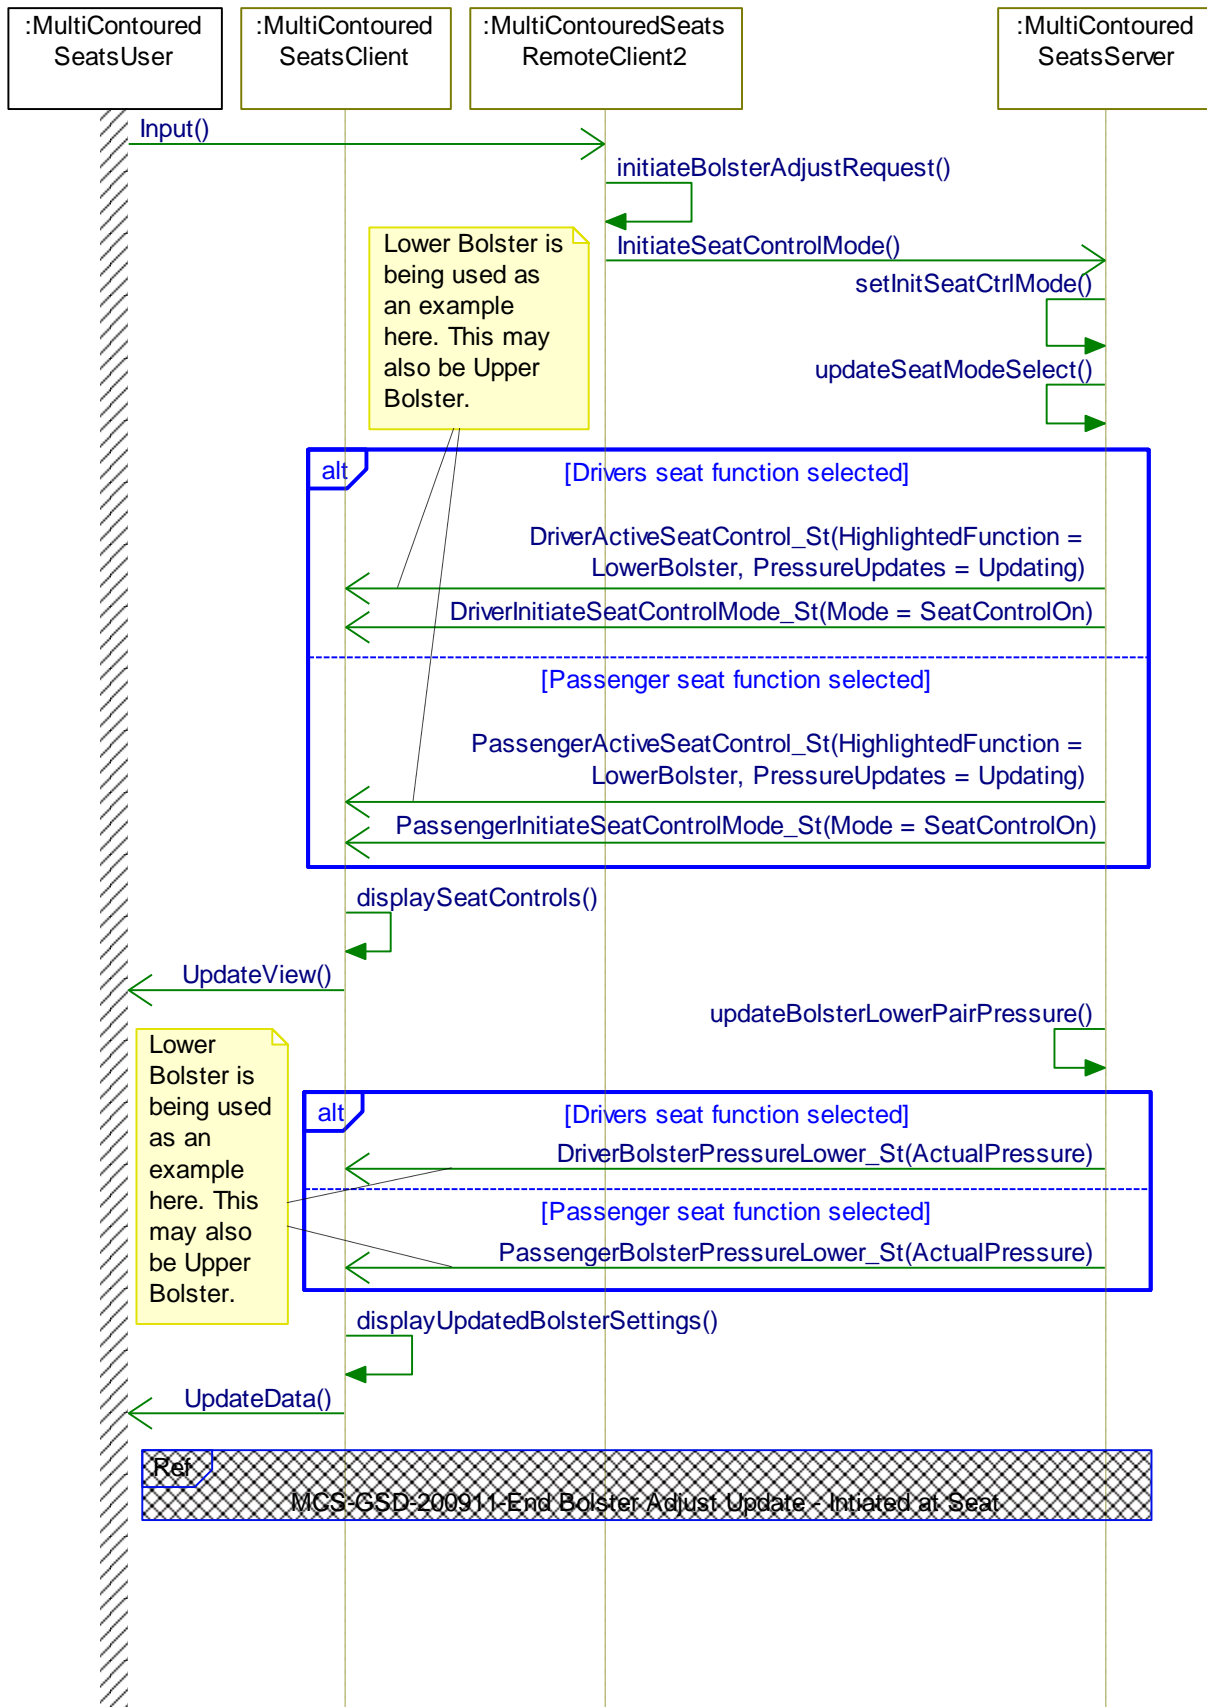

**2.5.2.11 MCS-SD-REQ-021379/A-End Bolster Adjust Update - Initiated at Touchscreen (TcSE ROIN-200871-1)****Scenarios****Normal Usage**

The user ends Bolster Adjust Mode update.

Constraints**Pre-condition**


Bolster Adjust is currently being updated by the user via the touchscreen HMI

Post-condition

Bolster Adjust is no longer being updated by the user via the touchscreen HMI



Sequence Diagram

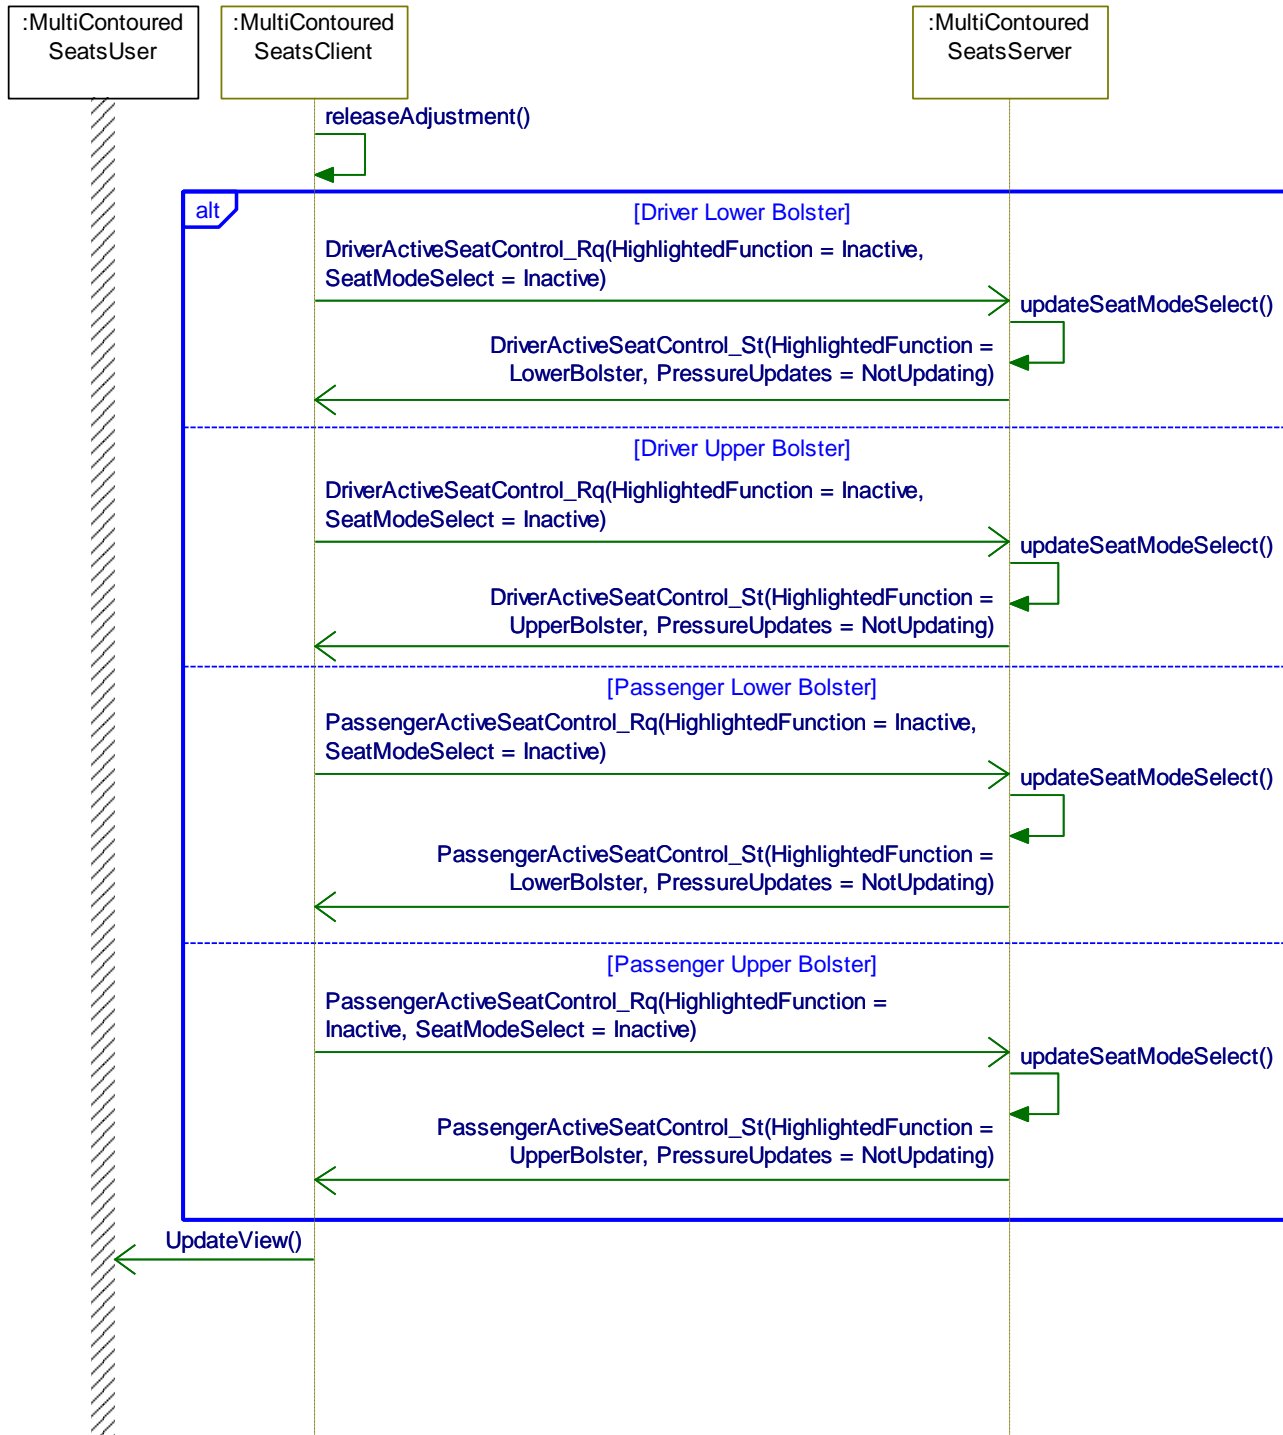

**2.5.2.12 MCS-SD-REQ-021380/A-End Bolster Adjust Update - Initiated at Seat (TcSE ROIN-200911-1)****Scenarios****Normal Usage**


The user ends Bolster Adjust Mode update.

Constraints**Pre-condition**

Bolster Adjust is currently being updated by the user via Seat HMI

Post-condition

Bolster Adjust no longer being updated by the user via Seat HMI.

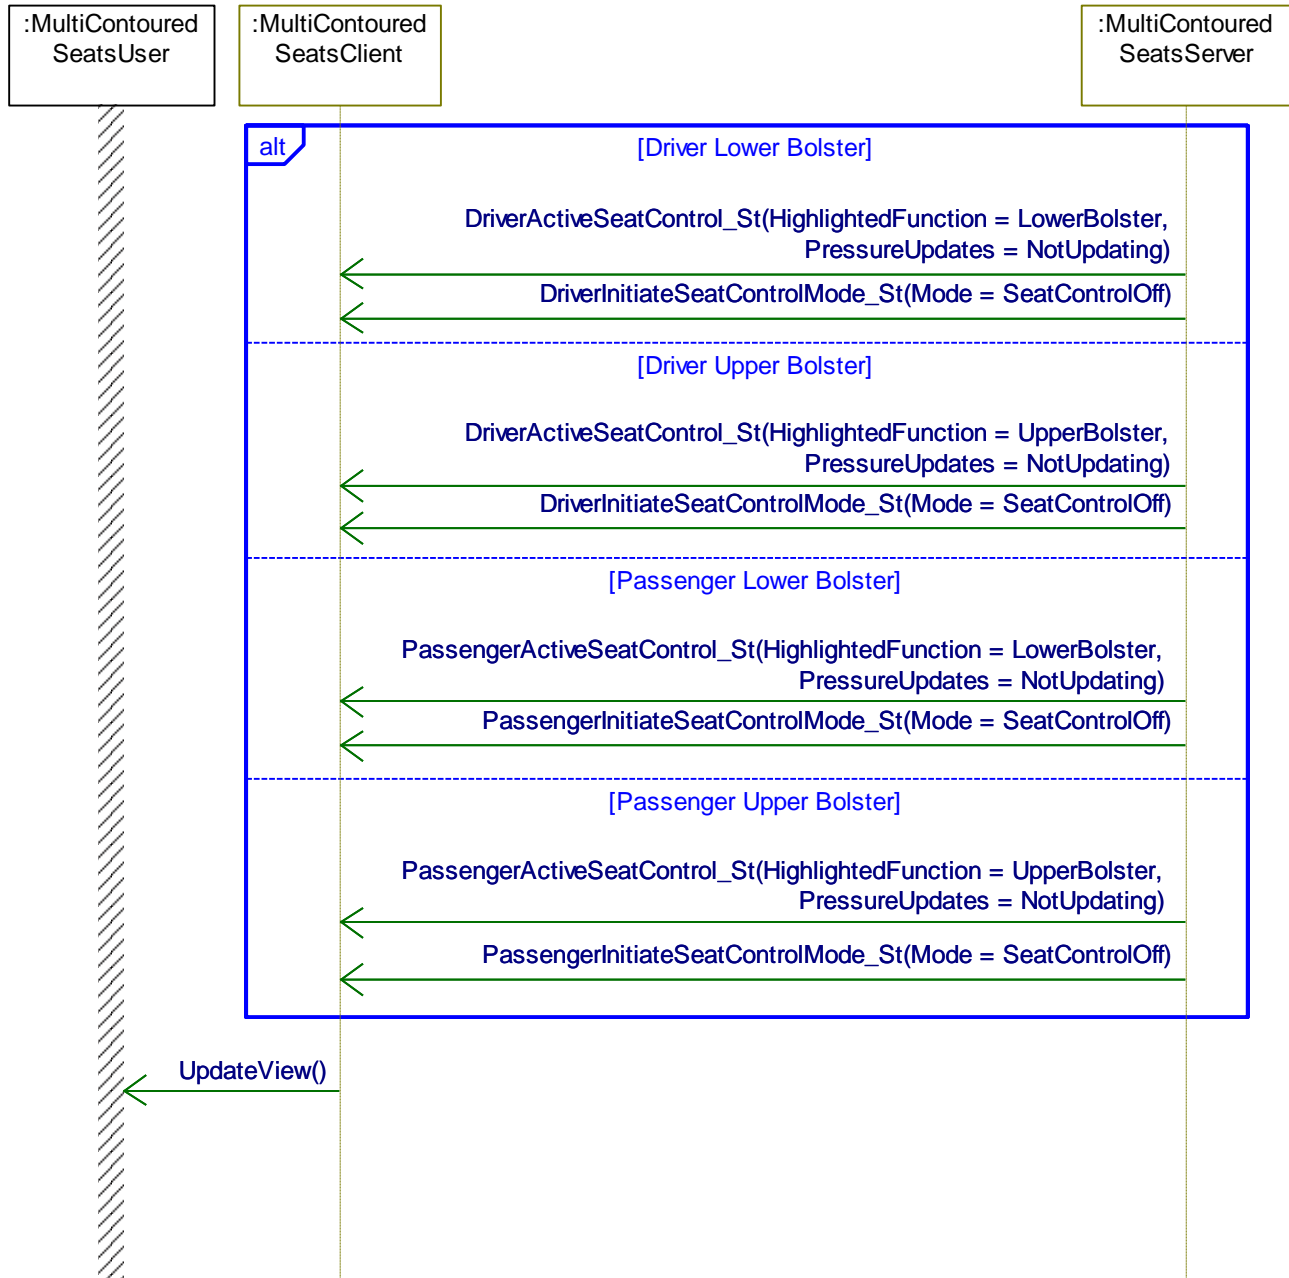Sequence Diagram



2.6 MCS-FUN-REQ-488877/A-First Row Seats – Message Handling

2.6.1 Use Cases

2.6.1.1 MCS-UC-REQ-488957/A-MCS Seat Adjustment from Multi Contoured Seat Remote Client2

Actors	Vehicle Occupant
Pre-conditions	Display is ON
Scenario Description	User selects to increase/decrease an MCS Seat Adjustment (Bolster/Lumbar) via Multi Contoured Seat Remote Client2
Post-conditions	Multi Contoured Seat Client receives update from Multi Contoured Seat Remote Server Multi Contoured Seat Client sends corresponding request to Multi Contoured Seat Server
List of Exception Use Cases	NA
Interfaces	G-HMI & vehicle system
Note	In this usecase, the Multi Contoured Seat Remote Client2 is connected to the Multi Contoured Seat Remote Server, and not the Multi Contoured Seat Server directly, thus the Multi Contoured Seat Client must arbitrate the requests.

2.6.1.2 MCS-UC-REQ-488958/A-MCS Massage Adjustment from Multi Contoured Seat Remote Client2

Actors	Vehicle Occupant
Pre-conditions	Display is ON
Scenario Description	User selects to change MCS Massage pattern or intensity via Multi Contoured Seat Remote Client2
Post-conditions	Multi Contoured Seat Client receives update from Multi Contoured Seat Remote Server Multi Contoured Seat Client sends corresponding request to Multi Contoured Seat Server
List of Exception Use Cases	NA
Interfaces	G-HMI & vehicle system
Note	In this usecase, the Multi Contoured Seat Remote Client2 is connected to the Multi Contoured Seat Remote Server, and not the Multi Contoured Seat Server directly, thus the Multi Contoured Seat Client must arbitrate the requests.

**2.6.1.3 MCS-UC-REQ-488959/A-MCS Message On/Off from Multi Contoured Seat Remote Client2 – Message Screen not active**

Actors	Vehicle Occupant
Pre-conditions	Display is ON Message screen is not the active screen No message pattern is highlighted
Scenario Description	User selects to turn MCS Message On/Off via Multi Contoured Seat Remote Client2 middle button
Post-conditions	Multi Contoured Seat Client receives update from Multi Contoured Seat Remote Server Multi Contoured Seat Client sends corresponding request to Multi Contoured Seat Server Multi Contoured Seat Server uses last active intensity and pattern
List of Exception Use Cases	NA
Interfaces	G-HMI & vehicle system
Note	In this usecase, the Multi Contoured Seat Remote Client2 is connected to the Multi Contoured Seat Remote Server, and not the Multi Contoured Seat Server directly, thus the Multi Contoured Seat Client must arbitrate the requests.

2.6.1.4 MCS-UC-REQ-488960/A-MCS Message On/Off from Multi Contoured Seat Remote Client2 – Message Screen active

Actors	Vehicle Occupant
Pre-conditions	Display is ON Message screen is the active screen A different message pattern is highlighted than last active
Scenario Description	User selects to turn MCS Message On/Off via Multi Contoured Seat Remote Client2 middle button
Post-conditions	Multi Contoured Seat Client receives update from Multi Contoured Seat Remote Server Multi Contoured Seat Client sends corresponding request to Multi Contoured Seat Server, including a message pattern request Multi Contoured Seat Server uses last active intensity
List of Exception Use Cases	NA
Interfaces	G-HMI & vehicle system
Note	In this usecase, the Multi Contoured Seat Remote Client2 is connected to the Multi Contoured Seat Remote Server, and not the Multi Contoured



Seat Server directly, thus the Multi Contoured Seat Client must arbitrate the requests.

2.6.2 Requirements

2.6.2.1 MCS-REQ-488961/A-Translating Seat Adjustment Requests – Driver

Upon reception of SeatSetMenuDriver_St, SeatDeviceSetDriver_St, and SeatDeviceAdjustRow1Driver_St for seat adjustment requests pertaining to MCS, the Multi Contoured Seat Client shall send DriverActiveSeatControl_Rq(HighlightedFunction, SeatModeSelect) to the Multi Contoured Seat Server per the below table:

Input			Output	
SeatSetMenuDriver_St	SeatDeviceSetDriver_St,	SeatDeviceAdjustRow1 Driver_St	DriverActiveSeatControl_Rq (HighlightedFunction)	(SeatModeSelect)
(0x2) Seat_Back_Menu	(0x07) Lower_Lumbar	(0x1) Increase	(0x1) LowerLumbar	(0x2) Increase
(0x2) Seat_Back_Menu	(0x07) Lower_Lumbar	(0x2) Decrease	(0x1) LowerLumbar	(0x3) Decrease
(0x2) Seat_Back_Menu	(0x06) Mid_Lumbar	(0x1) Increase	(0x2) MiddleLumbar	(0x2) Increase
(0x2) Seat_Back_Menu	(0x06) Mid_Lumbar	(0x2) Decrease	(0x2) MiddleLumbar	(0x3) Decrease
(0x2) Seat_Back_Menu	(0x05) Upper_Lumbar	(0x1) Increase	(0x3) UpperLumbar	(0x2) Increase
(0x2) Seat_Back_Menu	(0x05) Upper_Lumbar	(0x2) Decrease	(0x3) UpperLumbar	(0x3) Decrease
(0x2) Seat_Back_Menu	(0x08) Back_Bolsters	(0x1) Increase	(0x5) UpperBolster	(0x2) Increase
(0x2) Seat_Back_Menu	(0x08) Back_Bolsters	(0x2) Decrease	(0x5) UpperBolster	(0x3) Decrease
(0x2) Seat_Back_Menu	(0x09) Cushion_Bolsters	(0x1) Increase	(0x4) LowerBolster	(0x2) Increase
(0x2) Seat_Back_Menu	(0x09) Cushion_Bolsters	(0x2) Decrease	(0x4) LowerBolster	(0x3) Decrease
(0x2) Seat_Back_Menu	(0x09) Cushion_Bolsters	(0x0) Inactive	(0x0) Inactive	(0x0) Inactive

The Multi Contoured Seat Client shall set and continuously send DriverActiveSeatControl_Rq(HighlightedFunction, SeatModeSelect) per the above listed values as long as SeatDeviceAdjustRow1Driver_St remains set to “(0x1) Increase” or “(0x2) Decrease.”

After transmitting the request, the Multi Contoured Seat Client shall send DriverActiveSeatControl_Rq(HighlightedFunction = (0x0) Inactive, SeatModeSelect = (0x0) Inactive).

2.6.2.2 MCS-REQ-488962/A-Translating Seat Adjustment Requests – Passenger

Upon reception of SeatSetMenuPassenger_St, SeatDeviceSetPassenger_St, and SeatDeviceAdjustRow1Passenger_St for seat adjustment requests pertaining to MCS, the Multi Contoured Seat Client shall send PassengerActiveSeatControl_Rq(HighlightedFunction, SeatModeSelect) to the Multi Contoured Seat Server per the below table:

Input			Output	
SeatSetMenuPassenger_St	SeatDeviceSetPassenger_St,	SeatDeviceAdjustRow1 Passenger_St	PassengerActiveSeatControl_Rq (HighlightedFunction)	(SeatModeSelect)
(0x2) Seat_Back_Menu	(0x07) Lower_Lumbar	(0x1) Increase	(0x1) LowerLumbar	(0x2) Increase
(0x2) Seat_Back_Menu	(0x07) Lower_Lumbar	(0x2) Decrease	(0x1) LowerLumbar	(0x3) Decrease
(0x2) Seat_Back_Menu	(0x06) Mid_Lumbar	(0x1) Increase	(0x2) MiddleLumbar	(0x2) Increase
(0x2) Seat_Back_Menu	(0x06) Mid_Lumbar	(0x2) Decrease	(0x2) MiddleLumbar	(0x3) Decrease
(0x2) Seat_Back_Menu	(0x05) Upper_Lumbar	(0x1) Increase	(0x3) UpperLumbar	(0x2) Increase
(0x2) Seat_Back_Menu	(0x05) Upper_Lumbar	(0x2) Decrease	(0x3) UpperLumbar	(0x3) Decrease



(0x2) Seat_Back_Menu	(0x08) Back_Bolsters	(0x1) Increase	(0x5) UpperBolster	(0x2) Increase
(0x2) Seat_Back_Menu	(0x08) Back_Bolsters	(0x2) Decrease	(0x5) UpperBolster	(0x3) Decrease
(0x2) Seat_Back_Menu	(0x09) Cushion_Bolsters	(0x1) Increase	(0x4) LowerBolster	(0x2) Increase
(0x2) Seat_Back_Menu	(0x09) Cushion_Bolsters	(0x2) Decrease	(0x4) LowerBolster	(0x3) Decrease
(0x2) Seat_Back_Menu	(0x09) Cushion_Bolsters	(0x0) Inactive	(0x0) Inactive	(0x0) Inactive

The Multi Contoured Seat Client shall set and continuously send PassengerActiveSeatControl_Rq(HighlightedFunction, SeatModeSelect) per the above listed values as long as SeatDeviceAdjustRow1Passenger_St remains set to "(0x1) Increase" or "(0x2) Decrease."

After transmitting the request, the Multi Contoured Seat Client shall send PassengerActiveSeatControl_Rq(HighlightedFunction = (0x0) Inactive, SeatModeSelect = (0x0) Inactive).

2.6.2.3 MCS-REQ-488963/A-Translating Message On Request – Driver

Upon reception of SeatSetMenuDriver_St, SeatDeviceSetDriver_St, and SeatMessageDriver_St for a Message On request, the Multi Contoured Seat Client shall send DriverActiveSeatControl_Rq(HighlightedFunction, SeatModeSelect) and DriverMessagePattern_Rq to the Multi Contoured Seat Server per the table below:

When MCS Message HMI is not displayed:

Input			Output		
SeatSetMenuDriver_St	SeatDeviceSetDriver_St	SeatMessageDriver_St	DriverActiveSeatControl_Rq		DriverMessagePattern_Rq
			(HighlightedFunction)	(SeatModeSelect)	
(0x1) Message_Menu	(0x00) Inactive	(0x1) Low	(0x7) CushionMessage	(0x0) Inactive	(0x00) Inactive
(0x1) Message_Menu	(0x00) Inactive	(0x2) Medium	(0x7) CushionMessage	(0x0) Inactive	(0x00) Inactive
(0x1) Message_Menu	(0x00) Inactive	(0x3) High	(0x7) CushionMessage	(0x0) Inactive	(0x00) Inactive

- When MCS Message HMI is not displayed, the Multi Contoured Seat Client request to turn On Message shall not include any request to change message pattern or intensity. The Multi Contoured Seat Server shall act on last active values for pattern and intensity in this case.

When MCS Message HMI is displayed:

Input			Output		
SeatSetMenuDriver_St	SeatDeviceSetDriver_St	SeatMessageDriver_St	DriverActiveSeatControl_Rq		DriverMessagePattern_Rq
			(HighlightedFunction)	(SeatModeSelect)	
(0x1) Message_Menu	Pattern 1 - 10	(0x1) Low	(0x7) CushionMessage	(0x0) Inactive	Pattern 1 - 10
(0x1) Message_Menu	Pattern 1 - 10	(0x2) Medium	(0x7) CushionMessage	(0x0) Inactive	Pattern 1 - 10
(0x1) Message_Menu	Pattern 1 - 10	(0x3) High	(0x7) CushionMessage	(0x0) Inactive	Pattern 1 - 10

- When MCS Message HMI is displayed, the Multi Contoured Seat Client request to turn On Message shall include a request to change message pattern if the user had navigated and 'highlighted' another pattern while in the Message Off state. This request shall be sent 100ms after DriverActiveSeatControl_Rq. The Multi Contoured Seat Server shall act on the last active value for intensity only in this case.

The Multi Contoured Seat Client shall send DriverActiveSeatControl_Rq(HighlightedFunction, SeatModeSelect) and DriverMessagePattern_Rq per the above listed values once for each request received via SeatMessageDriver_St (i.e. do not send continual requests while SeatMessageDriver_St is set to any given intensity).

After transmitting the request, the Multi Contoured Seat Client shall send DriverActiveSeatControl_Rq(HighlightedFunction = (0x0) Inactive, SeatModeSelect = (0x0) Inactive), DriverMessagePattern_Rq = (0x00 Inactive).

2.6.2.4 MCS-REQ-488964/A-Translating Message Off Request – Driver

Upon reception of SeatSetMenuDriver_St, SeatDeviceSetDriver_St and SeatMessageDriver_St for a Message Off request, the Multi Contoured Seat Client shall send DriverActiveSeatControl_Rq(HighlightedFunction, SeatModeSelect) to the Multi Contoured Seat Server per the table below:

Input			Output	
SeatSetMenuDriver_St	SeatDeviceSetDriver_St	SeatMessageDriver_St	DriverActiveSeatControl_Rq	
			(HighlightedFunction)	(SeatModeSelect)
(0x1) Message_Menu	*D/C	(0x4) Off	(0x2) MiddleLumbar	(0x0) Inactive



*D/C = Don't Care

The Multi Contoured Seat Client shall send DriverActiveSeatControl_Rq(HighlightedFunction, SeatModeSelect) per the above listed values once for each request received via SeatMessageDriver_St (i.e. do not send continual requests while SeatMessageDriver_St is set to Off).

After transmitting the request, the Multi Contoured Seat Client shall send DriverActiveSeatControl_Rq(HighlightedFunction = (0x0) Inactive, SeatModeSelect = (0x0) Inactive).

2.6.2.5 MCS-REQ-488965/A-Translating Message Pattern Requests – Driver

Upon reception of SeatSetMenuDriver_St and SeatDeviceSetDriver_St for message pattern requests, the Multi Contoured Seat Client shall send DriverActiveSeatControl_Rq(HighlightedFunction, SeatModeSelect) and DriverMessagePattern_Rq to the Multi Contoured Seat Server per the table below:

Input		Output		
SeatSetMenuDriver_St	SeatDeviceSetDriver_St,	DriverActiveSeatControl_Rq (HighlightFunction) (SeatModeSelect)		DriverMessagePattern_Rq
(0x1) Message_Menu	(0x0C) Pattern_1	(0x7) CushionMessage	(0x0) Inactive	(0x1) Pattern 1
(0x1) Message_Menu	(0x0D) Pattern_2	(0x7) CushionMessage	(0x0) Inactive	(0x2) Pattern 2
(0x1) Message_Menu	(0x0E) Pattern_3	(0x7) CushionMessage	(0x0) Inactive	(0x3) Pattern 3
(0x1) Message_Menu	(0x0F) Pattern_4	(0x7) CushionMessage	(0x0) Inactive	(0x4) Pattern 4
(0x1) Message_Menu	(0x10) Pattern_5	(0x7) CushionMessage	(0x0) Inactive	(0x5) Pattern 5
(0x1) Message_Menu	(0x11) Pattern_6	(0x7) CushionMessage	(0x0) Inactive	(0x6) Pattern 6
(0x1) Message_Menu	(0x12) Pattern_7	(0x7) CushionMessage	(0x0) Inactive	(0x7) Pattern 7
(0x1) Message_Menu	(0x13) Pattern_8	(0x7) CushionMessage	(0x0) Inactive	(0x8) Pattern 8
(0x1) Message_Menu	(0x14) Pattern_9	(0x7) CushionMessage	(0x0) Inactive	(0x9) Pattern 9
(0x1) Message_Menu	(0x15) Pattern_10	(0x7) CushionMessage	(0x0) Inactive	(0xA) Pattern 10

The Multi Contoured Seat Client shall send DriverActiveSeatControl_Rq(HighlightedFunction, SeatModeSelect) and DriverMessagePattern_Rq per the above listed values once for each pattern transition received via SeatDeviceSetDriver_St (i.e. do not send continual requests while SeatDeviceSetDriver_St is set to any given pattern).

After transmitting the requests, the Multi Contoured Seat Client shall send DriverActiveSeatControl_Rq(HighlightedFunction = (0x0) Inactive, SeatModeSelect = (0x0) Inactive) and DriverMessagePattern_Rq = (0x0) Null.

2.6.2.6 MCS-REQ-488966/A-Translating Message Intensity Requests – Driver

Upon reception of SeatSetMenuDriver_St, SeatDeviceSetDriver_St, and SeatMessageDriver_St for message intensity requests, the Multi Contoured Seat Client shall send DriverActiveSeatControl_Rq(HighlightedFunction, SeatModeSelect) to the Multi Contoured Seat Server per the table below:

Input			Output	
SeatSetMenuDriver_St	SeatDeviceSetDriver_St	SeatMessageDriver_St	DriverActiveSeatControl_Rq (HighlightFunction) (SeatModeSelect)	
(0x1) Message_Menu	Pattern 1 - 10	(0x1) Low	(0x7) CushionMessage	(0x8) Low_2
(0x1) Message_Menu	Pattern 1 - 10	(0x2) Medium	(0x7) CushionMessage	(0x9) Med_2
(0x1) Message_Menu	Pattern 1 - 10	(0x3) High	(0x7) CushionMessage	(0xA) High_2



(0x1) Massage_Menu	Pattern 1 - 10	(0x4) Off	(0x2) MiddleLumbar	(0x0) Inactive
--------------------	----------------	-----------	--------------------	----------------

The Multi Contoured Seat Client shall send DriverActiveSeatControl_Rq(HighlightedFunction, SeatModeSelect) per the above listed values once for each intensity transition received via SeatMessageDriver_St (i.e. do not send continual requests while SeatMessageDriver_St is set to any given intensity).

After transmitting the request, the Multi Contoured Seat Client shall send DriverActiveSeatControl_Rq(HighlightedFunction = (0x0) Inactive, SeatModeSelect = (0x0) Inactive).

2.6.2.7 MCS-REQ-488967/A-Translating Message Pattern Requests – Passenger

Upon reception of SeatSetMenuPassenger_St and SeatDeviceSetPassenger_St for message pattern requests, the Multi Contoured Seat Client shall send PassengerActiveSeatControl_Rq(HighlightedFunction, SeatModeSelect) and PassengerMessagePattern_Rq to the Multi Contoured Seat Server per the table below:

Input		Output		
SeatSetMenuPassenger_St	SeatDeviceSetPassenger_St	PassengerActiveSeatControl_Rq (HighlightedFunction)	PassengerActiveSeatControl_Rq (SeatModeSelect)	PassengerMessagePattern_Rq
(0x1) Massage_Menu	(0x0C) Pattern_1	(0x7) CushionMassage	(0x0) Inactive	(0x1) Pattern 1
(0x1) Massage_Menu	(0x0D) Pattern_2	(0x7) CushionMassage	(0x0) Inactive	(0x2) Pattern 2
(0x1) Massage_Menu	(0x0E) Pattern_3	(0x7) CushionMassage	(0x0) Inactive	(0x3) Pattern 3
(0x1) Massage_Menu	(0x0F) Pattern_4	(0x7) CushionMassage	(0x0) Inactive	(0x4) Pattern 4
(0x1) Massage_Menu	(0x10) Pattern_5	(0x7) CushionMassage	(0x0) Inactive	(0x5) Pattern 5
(0x1) Massage_Menu	(0x11) Pattern_6	(0x7) CushionMassage	(0x0) Inactive	(0x6) Pattern 6
(0x1) Massage_Menu	(0x12) Pattern_7	(0x7) CushionMassage	(0x0) Inactive	(0x7) Pattern 7
(0x1) Massage_Menu	(0x13) Pattern_8	(0x7) CushionMassage	(0x0) Inactive	(0x8) Pattern 8
(0x1) Massage_Menu	(0x14) Pattern_9	(0x7) CushionMassage	(0x0) Inactive	(0x9) Pattern 9
(0x1) Massage_Menu	(0x15) Pattern_10	(0x7) CushionMassage	(0x0) Inactive	(0xA) Pattern 10

The Multi Contoured Seat Client shall send PassengerActiveSeatControl_Rq(HighlightedFunction, SeatModeSelect) and PassengerMessagePattern_Rq per the above listed values once for each pattern transition received via SeatDeviceSetPassenger_St (i.e. do not send continual requests while SeatDeviceSetPassenger_St is set to any given pattern).

After transmitting the requests, the Multi Contoured Seat Client shall send PassengerActiveSeatControl_Rq(HighlightedFunction = (0x0) Inactive, SeatModeSelect = (0x0) Inactive) and PassengerMessagePattern_Rq = (0x0) Null.

2.6.2.8 MCS-REQ-488968/A-Translating Message Intensity Requests – Passenger

Upon reception of SeatSetMenuPassenger_St, SeatDeviceSetPassenger_St, and SeatMessagePassenger_St for message intensity requests, the Multi Contoured Seat Client shall send PassengerActiveSeatControl_Rq(HighlightedFunction, SeatModeSelect) to the Multi Contoured Seat Server per the table below:

Input			Output	
SeatSetMenuPassenger_St	SeatDeviceSetPassenger_St	SeatMessagePassenger_St	PassengerActiveSeatControl_Rq (HighlightedFunction)	PassengerActiveSeatControl_Rq (SeatModeSelect)
(0x1) Massage_Menu	Pattern 1 - 10	(0x1) Low	(0x7) CushionMassage	(0x8) Low_2
(0x1) Massage_Menu	Pattern 1 - 10	(0x2) Medium	(0x7) CushionMassage	(0x9) Med_2



(0x1) Message_Menu	Pattern 1 - 10	(0x3) High	(0x7) CushionMessage	(0xA) High_2
(0x1) Message_Menu	Pattern 1 - 10	(0x4) Off	(0x2) MiddleLumbar	(0x0) Inactive

The Multi Contoured Seat Client shall send PassengerActiveSeatControl_Rq(HighlightedFunction, SeatModeSelect) per the above listed values once for each intensity transition received via SeatMessagePassenger_St (i.e. do not send continual requests while SeatMessagePassenger_St is set to any given intensity).

After transmitting the request, the Multi Contoured Seat Client shall send PassengerActiveSeatControl_Rq(HighlightedFunction = (0x0) Inactive, SeatModeSelect = (0x0) Inactive).

2.6.2.9 MCS-REQ-488969/A-Translating Message On Request – Passenger

Upon reception of SeatSetMenuPassenger_St, SeatDeviceSetPassenger_St, and SeatMessagePassenger_St for a Message On request, the Multi Contoured Seat Client shall send PassengerActiveSeatControl_Rq(HighlightedFunction, SeatModeSelect) and PassengerMessagePattern_Rq to the Multi Contoured Seat Server per the table below:

When MCS Message HMI is not displayed:

Input			Output		
SeatSetMenu Passenger_St	SeatDeviceSet Passenger_St	SeatMessage Passenger_St	PassengerActiveSeatControl_Rq (HighlightedFunction)	(SeatModeSelect)	PassengerMessage Pattern_Rq
(0x1) Message_Menu	(0x00) Inactive	(0x1) Low	(0x7) CushionMessage	(0x0) Inactive	(0x00) Inactive
(0x1) Message_Menu	(0x00) Inactive	(0x2) Medium	(0x7) CushionMessage	(0x0) Inactive	(0x00) Inactive
(0x1) Message_Menu	(0x00) Inactive	(0x3) High	(0x7) CushionMessage	(0x0) Inactive	(0x00) Inactive

- When MCS Message HMI is not displayed, the Multi Contoured Seat Client request to turn On Message shall not include any request to change message pattern or intensity. The Multi Contoured Seat Server shall act on last active values for pattern and intensity in this case.

When MCS Message HMI is displayed:

Input			Output		
SeatSetMenu Passenger_St	SeatDeviceSet Passenger_St	SeatMessage Passenger_St	PassengerActiveSeatControl_Rq (HighlightedFunction)	(SeatModeSelect)	PassengerMessage Pattern_Rq
(0x1) Message_Menu	Pattern 1 - 10	(0x1) Low	(0x7) CushionMessage	(0x0) Inactive	Pattern 1 - 10
(0x1) Message_Menu	Pattern 1 - 10	(0x2) Medium	(0x7) CushionMessage	(0x0) Inactive	Pattern 1 - 10
(0x1) Message_Menu	Pattern 1 - 10	(0x3) High	(0x7) CushionMessage	(0x0) Inactive	Pattern 1 - 10

- When MCS Message HMI is displayed, the Multi Contoured Seat Client request to turn On Message shall include a request to change message pattern if the user had navigated and 'highlighted' another pattern while in the Message Off state. This request shall be sent 100ms after PassengerActiveSeatControl_Rq. The Multi Contoured Seat Server shall act on the last active value for intensity only in this case.

The Multi Contoured Seat Client shall send PassengerActiveSeatControl_Rq(HighlightedFunction, SeatModeSelect) and PassengerMessagePattern_Rq per the above listed values once for each request received via SeatMessagePassenger_St (i.e. do not send continual requests while SeatMessagePassenger_St is set to any given intensity).

After transmitting the request, the Multi Contoured Seat Client shall send PassengerActiveSeatControl_Rq(HighlightedFunction = (0x0) Inactive, SeatModeSelect = (0x0) Inactive), PassengerMessagePattern_Rq = (0x00 Inactive).

2.6.2.10 MCS-REQ-488970/A-Translating Message Off Request – Passenger

Upon reception of SeatSetMenuPassenger_St, SeatDeviceSetPassenger_St and SeatMessagePassenger_St for a Message Off request, the Multi Contoured Seat Client shall send PassengerActiveSeatControl_Rq(HighlightedFunction, SeatModeSelect) to the Multi Contoured Seat Server per the table below:

Input			Output	
SeatSetMenuPassen ger_St	SeatDeviceSetPassen ger_St	SeatMessagePassen ger_St	PassengerActiveSeatControl_Rq (HighlightedFunction)	(SeatModeSelect)
(0x1) Message_Menu	*D/C	(0x4) Off	(0x2) MiddleLumbar	(0x0) Inactive



*D/C = Don't Care

The Multi Contoured Seat Client shall send PassengerActiveSeatControl_Rq(HighlightedFunction, SeatModeSelect) per the above listed values once for each request received via SeatMessagePassenger_St (i.e. do not send continual requests while SeatMessagePassenger_St is set to Off).

After transmitting the request, the Multi Contoured Seat Client shall send
PassengerActiveSeatControl_Rq(HighlightedFunction = (0x0) Inactive, SeatModeSelect = (0x0) Inactive).



3 Appendix: Reference Documents

Reference #	Document Title
1	Related HMI specification: H74a-Seat Controls Shortcut Key
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	