

MAKER STANDARD ECS-2450B 1.1 X 1

ECS COMPONENTS LIST

ITEM	DESCRIPTION	CONNECTION SIZE
CPC	Control PC	NON PIPE CONNECTION
PDE	Power Distributor Equipment	NON PIPE CONNECTION
ECU	Electro Chamber Unit	450B INLET/OUTLET JIS 10K-250A, DRAIN : 10K-25A 1000B INLET/OUTLET JIS 10K-350A, DRAIN : 10K-25A
PRU	Power Rectifier Unit	INLET/OUTLET SUS TUBE Φ12
EPJ	ECU Power Junction Box	NON PIPE CONNECTION
ESJ	ECU Signal Junction Box	NON PIPE CONNECTION
ANU	Auto Neutralization Unit	INLET/OUTLET SUS TUBE Φ12 (DRAIN SUS316L TUBE Φ12)
TSU-S	TRO Sensor Unit & TSU-S Control Unit	INLET SUS TUBE Φ6 / OUTLET SUS TUBE Φ10
APU	Air Pump Unit	INLET/OUTLET FLANGE JIS 10K-15A (AIR LINE Φ12/Φ10)
FMU	Flow Meter Unit	INLET/OUTLET FLANGE JIS 5K-450A
FTS	F.W Temperature Sensor	INLET/OUTLET FLANGE PT 1/2"
CSU	Conductivity Sensor Unit	INLET/OUTLET FLANGE JIS 5K-50A
GDS	Gas Detection Sensor	NON PIPE CONNECTION
EWU	EM Washing Unit	INLET/OUTLET FLANGE JIS 10K-25A
PS&PI	Pressure Switch & Pressure Indicator	FLANGE JIS 10K-25A
TS&TI	Temperature Switch & Temperature Indicator	FLANGE JIS 10K-40A
T-STR	T-Strainer	INLET/OUTLET FLANGE JIS 5K-550A
(OPTION)	FTU	Fresh water Tank Unit
		INLET/OUTLET FLANGE JIS 5K-40A
		F.W SUPPLY INLET JIS 5K-25A
	HEU	Heat Exchange Unit
		INLET/OUTLET FLANGE JIS 5K-50A
	COOL.S.W.PUMP	INLET/OUTLET FLANGE JIS XX K-XXX A
	PCU	Pump Control Unit
		NON PIPE CONNECTION
	FCV	Flow Control Valve
		INLET/OUTLET FLANGE JIS 5K-125A
	MIXING S.W. PUMP	INLET/OUTLET FLANGE JIS XX K-XXX A



THE DRAWING IS BASED ON THE POS AND MAKER STANDARD.
IF ANY ADDITIONAL EQUIPMENT IS REQUIRED BY SHIPYARD OR SHIP'S OWNER REQUIREMENTS,
THE EXTRA COST CAN BE OCCURED.

SYMBOL

ITEM	DESCRIPTION	ITEM	DESCRIPTION
	MAKER (TECHCROSS) SUPPLY	N.C	TO BE CLOSED ALWAYS EXCEPT MAINTENANCE OF ECU
	BUTTERFLY VALVE		3-WAY COCK VALVE
	REMOTE BUTTERFLY VALVE		STRAINER
	THROTTLING VALVE		ORIFICE
	GLOBE VALVE		LOCKING DEVICE
	CHECK VALVE	=====	INSULATION
	CHECK VALVE WITHOUT HANDLE		
	BALL VALVE		
	DIAPHRAGM VALVE		
	ANGLE VALVE		
	SOLENOID VALVE		
	CROSSING PIPES CONNECTED		
	CROSSING PIPES NOT CONNECTED		
	BRANCH PIPES		
	TEE PIECE (FLANGE END)		
	REDUCER		
	EDUCTOR		
	BLIND FLANGE		
	CLOSED PIPE CONNECTION		
	BOSS WITH BLANK FLANGE		
	PUMP		
	STRAINER		
	Y-STRAINER		
	FILTER		
	SIGNAL		
	SCUPPER		
	PRESS REGULATOR		
	LIMIT SWITCH		
	PUMP MOTOR		
	RECEPTACLE		
	PLUG		
	PRESSURE INDICATOR		
	PRESSURE SWICH		
	LEVEL SWITCH		
	THERMOMETER (TEMPERATURE INDICATOR)		
	TEMPERATURE SWITCH		
N.O	TO BE OPENED ALWAYS EXCEPT MAINTENANCE OF ECU		

NOTE OF P&ID FOR BWTS

1. SYSTEM

- 1) VALVE SIGNAL IS USED TO OPERATE ELECTRO CLEEN SYSTEM.

2. G-2 SAMPLING PORT

- 1) G-2 SAMPLING PORT SHALL BE COMPLIED WITH IMO REGULATION.
- 2) G2 SAMPLING PORT(S) MUST BE PLACED AT HORIZONTAL OR UP-STREAM OF VERTICAL MAIN BALLAST WATER PIPE. IT SHALL NOT BE INSTALLED AT THE DOWN-STREAM OF VERTICAL MAIN BALLAST WATER PIPE.

3. ECU

- 1) ECU OUTLET PIPE SHOULD BE ARRANGED HIGHER THAN ECU IN ORDER TO KEEP FULL WATER INSIDE ECU.
- 2) PS&PI AND TS&TI FOR ECU SHALL BE PROVIDED BY MAKER, BUT THE INSTALLATION WORK SHALL BE CARRIED OUT BY YARD. (IF NECESSARY)
- 3) EXCESSIVE VACUUM MAY BE FOUND IN THE BALLAST PIPES WHEN SHIFTING THE BALLAST WATER DOWNSTREAM FROM AN ELEVATED PLACE, HENCE COUNTERMEASURES SUCH AS INSTALLATION OF VACUUM VALVES SHOULD BE CONSIDERED.

4. TSU

- 1) BETWEEN TSU SAMPLING PORT AND APU TO BE ARRANGED AS SHORT AS POSSIBLE(WITHIN 5M).
- 2) TSU SAMPLING PORT(S) MUST BE PLACED AT HORIZONTAL OR UP-STREAM OF VERTICAL MAIN BALLAST WATER PIPE. IT SHALL NOT BE INSTALLED AT THE DOWN-STREAM OF VERTICAL MAIN BALLAST WATER PIPE.
- 2-1) THE ECUS OUTLET PIPING IS INSTALLED OF VERTICAL DOWNSTREAM WITH LONG DISTANCE, THERE IS A HIGH POSSIBILITY OF VACUUM. TRO SAMPLING PORT SHOULD BE INSTALLED AFTER VERTICAL DOWNSTREAM.
- 3) KEEP MIN' 5D INSTALLATION POSITION DISTANCE BETWEEN TSU PORT AND ANU PORT.
- 4) FLUSHING AND DRAIN NEED TO BE IMPLEMENTED BEFORE USING TRO SENSOR(FOR SPARE)
- 5) THE VALVE OF TSU SAMPLING LINE SHOULD BE ARRANGED NEAR TSU.
- 6) THE MATERIAL FOR PIPE AND VALVE OF TSU SAMPLING LINE SHOULD BE SUS316L.

5. ANU

- 1) BETWEEN ANU INJECTION PORT AND ANU TO BE ARRANGED AS SHORT AS POSSIBLE(WITHIN 10M).
- 1-1) IF ANU DOSING LINE IS FAR(ABT.10M) FROM THE ANU, THE "PREPARATION" BUTTON IN ANU ICON OF HMI SHALL BE CLICKED BY THE CREW TO FILL THE NEUTRALIZING AGENT IN THE DOSING LINE.
- 2) ANU INJECTION PORT(S) MUST BE PLACED AT HORIZONTAL OR UP-STREAM OF VERTICAL MAIN BALLAST WATER PIPE. IT SHALL NOT BE INSTALLED AT THE DOWN-STREAM OF VERTICAL MAIN BALLAST WATER PIPE.
- 3) KEEP MIN' 5D INSTALLATION POSITION DISTANCE BETWEEN TSU PORT AND ANU PORT.
- 4) THE VALVE OF ANU INJECTION PIPE SHOULD BE ARRANGED NEAR ANU.
- 5) IN CASE OF EACH OF THE ANU INJECTION PIPE IS CONNECTED TO ONE, THIS SHOULD BE INCLINED AS SHOWN IN THE DETAIL "D". (IF NECESSARY)
- 6) EXCESSIVE VACUUM MAY BE FOUND IN THE ANU PIPES WHEN SHIFTING THE NEUTRALIZATION REAGENT DOWNSTREAM FROM AN ELEVATED PLACE, HENCE COUNTERMEASURES SUCH AS INSTALLATION OF VACUUM VALVES SHOULD BE CONSIDERED.
- 7) THE MATERIAL FOR PIPE AND VALVE OF ANU DOSING LINE SHOULD BE SUS316L.
- 8) MINIMUM TEMPERATURE OF F.W. TO BE SECURED ABOVE 20℃. IF THE TEMPERATURE OF F.W IS ALWAYS MORE THAN 20℃, THE HOT WATER LINE COULD BE DELETED. IT SHOULD BE ABOVE 20℃, EVEN IN WINTER.

6. EWU

- 1) FRESH WATER SUPPLY LINE AND DRAIN CONNECTION LINE FOR EWU(EM WASHING UNIT) SHOULD BE ARRANGED WITHIN APPROXIMATELY 3 METER AROUND ECU.


- 2) THE USED EM CLEANING WATER CONTAINING CHEMICAL AGENT SHOULD BE STORED IN EWU TANK AND DISCHARGED AT SEA MORE THAN 12 NAUTICAL MILES AND 25M IN DEPTH.

7. GDS

- 1) GDS SHOULD BE INSTALLED ABOVE THE ECU.


8. PRU COOLING MANIFOLD STRAINER

- 1) STRAINER HAVE BEEN INSTALLED TO PREVENT THE BLOCKAGE OF COOLING WATER LINE FROM PRU. CREW SHOULD BE CHECK THE CONDITION ONCE EVERY QUARTER.

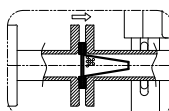

9. COOLING F.W CONDITION FOR PRU

- 1) COOLING S.W TEMPERATURE (INLET) : +32℃
- 2) COOLING F.W TEMPERATURE (INLET) : +36℃
- 3) COOLING F.W PRESSURE DROP : 0.5BAR
- 4) FLOW RATE VOLUME : 0.45m3/h (PER PRU)
- 5) INLET VALVE SHOULD BE PLACED NEAR THE ECU.
- 6) AIR VENT AND VALVE MUST BE INSTALLED AT COOLING WATER PIPE COMMON OUTLET. ("A" POSITION)
AIR VENT AND VALVE ONLY REQUIRED FOR THE VERTICAL TYPE OF ECU (MAKER STANDARD), NOT FOR HORIZONTAL TYPE OF ECU.

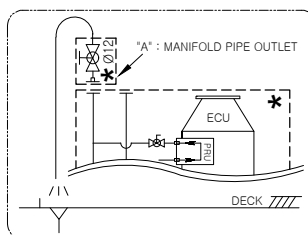

ENGINE ROOM (SAFETY AREA)

SEA CHEST

SIGNAL FOR BWMS

BALLAST PUMP
(2450m³/h x XX mTH)

ONLY ONE(1) BALLAST PUMP SHOULD BE OPERATED DURING OPERATION

OPTION MIXING SOLUTION

TO BLUE WELL (LINE FLUSHING)

TO CENTRAL C.F.W. SYSTEM

FROM CENTRAL C.F.W. SYSTEM

IF CENTRAL COOLING F.W. SYSTEM IS NOT APPLIED, HEU, FTU AND S.W. PUMP SHALL BE APPLIED.

TEMP : MAX. 36 °C

FLOW RATE : MIN. 8.55 m³/h

32A

10K-250A

10K-350A

10K-40A

10K-450B

ECU 450B

NO. 3

NO. 1

NO. 2

NO. 4

NO. 5

NO. 6

NO. 7

NO. 8

NO. 9

NO. 10

NO. 11

NO. 12

NO. 13

NO. 14

NO. 15

NO. 16

NO. 17

NO. 18

NO. 19

NO. 20

NO. 21

NO. 22

NO. 23

NO. 24

NO. 25

NO. 26

NO. 27

NO. 28

NO. 29

NO. 30

NO. 31

NO. 32

NO. 33

NO. 34

NO. 35

NO. 36

NO. 37

NO. 38

NO. 39

NO. 40

NO. 41

NO. 42

NO. 43

NO. 44

NO. 45

NO. 46

NO. 47

NO. 48

NO. 49

NO. 50

NO. 51

NO. 52

NO. 53

NO. 54

NO. 55

NO. 56

NO. 57

NO. 58

NO. 59

NO. 60

NO. 61

NO. 62

NO. 63

NO. 64

NO. 65

NO. 66

NO. 67

NO. 68

NO. 69

NO. 70

NO. 71

NO. 72

NO. 73

NO. 74

NO. 75

NO. 76

NO. 77

NO. 78

NO. 79

NO. 80

NO. 81

NO. 82

NO. 83

NO. 84

NO. 85

NO. 86

NO. 87

NO. 88

NO. 89

NO. 90

NO. 91

NO. 92

NO. 93

NO. 94

NO. 95

NO. 96

NO. 97

NO. 98

NO. 99

NO. 100

NO. 101

NO. 102

NO. 103

NO. 104

NO. 105

NO. 106

NO. 107

NO. 108

NO. 109

NO. 110

NO. 111

NO. 112

NO. 113

NO. 114

NO. 115

NO. 116

NO. 117

NO. 118

NO. 119

NO. 120

NO. 121

NO. 122

NO. 123

NO. 124

NO. 125

NO. 126

NO. 127

NO. 128

NO. 129

NO. 130

NO. 131

NO. 132

NO. 133

NO. 134

NO. 135

NO. 136

NO. 137

NO. 138

NO. 139

NO. 140

NO. 141

NO. 142

NO. 143

NO. 144

NO. 145

NO. 146

NO. 147

NO. 148

NO. 149

NO. 150

NO. 151

NO. 152

NO. 153

NO. 154

NO. 155

NO. 156

NO. 157

NO. 158

NO. 159

NO. 160

NO. 161

NO. 162

NO. 163

NO. 164

NO. 165

NO. 166

NO. 167

NO. 168

NO. 169

NO. 170

NO. 171

NO. 172

NO. 173

NO. 174

NO. 175

NO. 176

NO. 177

NO. 178

NO. 179

NO. 180

NO. 181

NO. 182

NO. 183

NO. 184

NO. 185

NO. 186

NO. 187

NO. 188

NO. 189

NO. 190

NO. 191

NO. 192

NO. 193

NO. 194

NO. 195

NO. 196

NO. 197

NO. 198

NO. 199

NO. 200

NO. 201

NO. 202

NO. 203

NO. 204

NO. 205

NO. 206

NO. 207

NO. 208

NO. 209

NO. 210

NO. 211

NO. 212

NO. 213

NO. 214

NO. 215

NO. 216

NO. 217

NO. 218

NO. 219

NO. 220

NO. 221

NO. 222

NO. 223

NO. 224

NO. 225

NO. 226

NO. 227




NO. 228

NO. 229


NO. 230

NO. 231


ENGINE ROOM (SAFETY AREA)

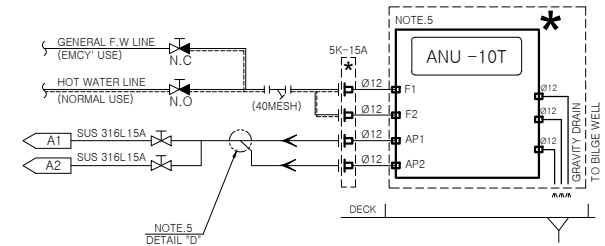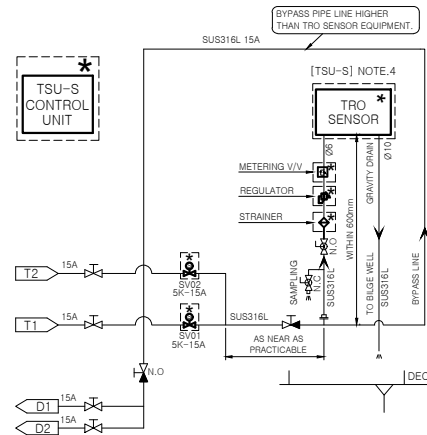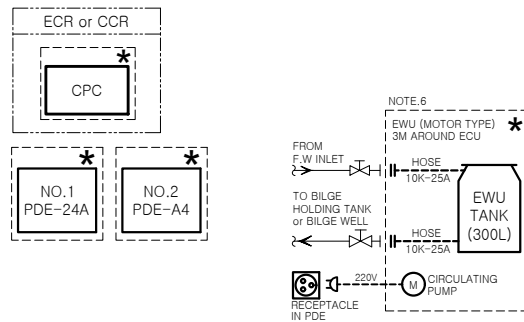

(OPTION) COOLING SYSTEM

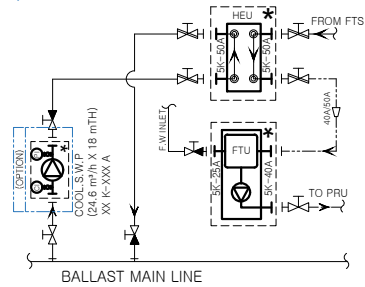

(OPTION) MIXING SOLUTION

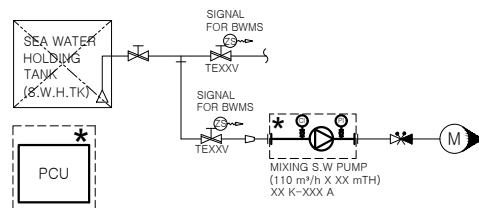

[MIXING OPERATION]

- 1) THE VOLUME OF SEA WATER HOLDING TANK SHALL BE MINIMUM 4.3% OF TOTAL BALLASTING CAPACITY.
[S.W.(34.7 PSU) : 4.3% + F.W.(0 PSU) : 95.7 % = MIXING (1.5 PSU)]
- 2) IF A.P.T.K IS USED FOR MIXING SEA WATER HOLDING TANK,
 - BALLAST WATER CAN BE TREATED ABT KX M3.
 - THIS AMOUNT IS APPROX. XX % OF TOTAL BALLAST VOLUME.
 - IN VIEW OF SUCTION CAPABILITY AT RATED FLOW RATE, THE SUCTION CENTER OF MIXING PUMP SHOULD BE POSITIONED LOWER THAN THE LEVEL OF BOTTOM PLATE OF A.P.T.K.
- 3) IF ONE OF W.B.T.K IS USED FOR MIXING SEA WATER HOLDING TANK,
 - AIR EJECTOR AT MIXING S.W.PUMP SHALL BE ADDITIONALLY APPLIED. (MAKER SCOPE)
 - THE MIXING PUMP SHOULD BE OPERATED CONSIDERING THE VALUE OF NPSH.
 - IF THE SEAWATER LEVEL OF D.B.W.TANK IS LOW, SEA WATER SUCTION WILL BE DIFFICULT AND THE MECHANICAL SEAL OF MIXING PUMP WILL BE DAMAGED.
- 4) WHEN THE MIXING OPERATION, THE SUCTION LINE OF MIXING PUMP SHOULD BE ARRANGED TO BE FULL FILL SEAWATER CONDITION.



P&ID FOR BWTS		
HULL NO.	STANDARD	SHEET
MODEL	ECS2450B 1.1 x 1	2
DWG NO.	TPD024-GA-A001Z-STANDARD	2

