


AT Commands Set

SIM600_ATC_V1.01

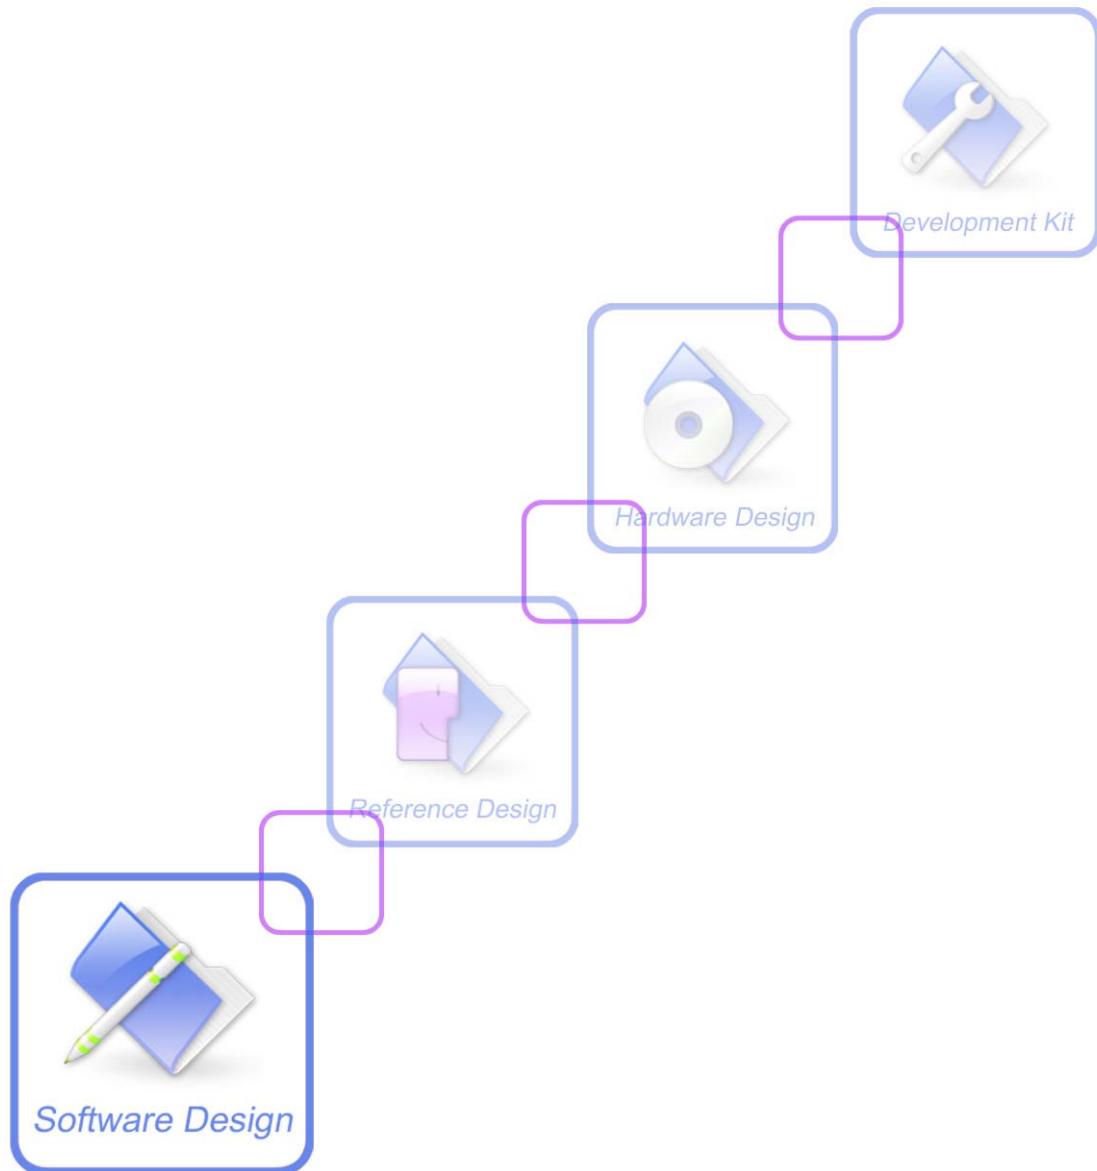

Document Title:	SIM600 AT Commands Set
Version:	1.01
Date:	2006-11-13
Status:	Release
Document Control ID:	SIM600_ATC_V1.01

General Notes

Simcom offers this information as a service to its customers, to support application and engineering efforts that use the products designed by Simcom. The information provided is based upon requirements specifically provided to Simcom by the customers. Simcom has not undertaken any independent search for additional relevant information, including any information that may be in the customer's possession. Furthermore, system validation of this product designed by Simcom within a larger electronic system remains the responsibility of the customer or the customer's system integrator. All specifications supplied herein are subject to change.

Copyright

This document contains proprietary technical information which is the property of SIMCOM Limited., copying of this document and giving it to others and the using or communication of the contents thereof, are forbidden without express authority. Offenders are liable to the payment of damages. All rights reserved in the event of grant of a patent or the registration of a utility model or design. All specification supplied herein are subject to change without notice at any time.

Copyright © SIMCOM Limited. 2006

Version History

Preceding document: “SIM600 AT Interface Description” Version 01.00

Now document: “SIM600 AT Interface Description” Version 01.01

Chapter	Page	What is new

1 Introduction

1.1 Scope of the document

This document presents the AT Command Set for SIMCOM cellular engine SIM600

1.2 Related documents

<http://www.simcom-sh.com>

1.3 Conventions and abbreviations

In this document, the GSM engines are referred to as following term:

- 1 ME (Mobile Equipment);
- 2 MS (Mobile Station);
- 3 TA (Terminal Adapter);
- 4 DCE (Data Communication Equipment) or facsimile DCE(FAX modem, FAX board);

In application, controlling device control the GSM engine by sending AT Command via its serial interface. The controlling device at the other end of the serial line is referred to as following term:

- 1 TE (Terminal Equipment);
- 2 DTE (Data Terminal Equipment) or plainly “the application” which is running on an embedded system;

1.4 AT Command syntax

The AT command set implemented by SIM600 is a combination of GSM07.05, GSM07.07 and ITU-T recommendation V.25ter and the AT commands developed by SIMCOM.

Note: *Only enter AT command through serial port after SIM600 is power on and Unsolicited Result Code “RDY” is received from serial port.*

All these AT commands can be split into three categories syntactically: “**basic**”, “**S parameter**”, and “**extended**”. These are as follows:

1.4.1 Basic syntax

These AT commands have the format of “**AT**<*x*><*n*>”, or “**AT**&<*x*><*n*>”, where “<*x*>” is the command, and “<*n*>” is/are the argument(s) for that command. An example of this is “**ATE**<*n*>”, which tells the DCE whether received characters should be echoed back to the DTE according to the value of “<*n*>”. “<*n*>” is optional and a default will be used if missing.

1.4.2 S parameter syntax

These AT commands have the format of “**ATS**<*n*>=<*m*>”, where “<*n*>” is the index of the S register to set, and “<*m*>” is the value to assign to it. “<*m*>” is optional; if it is missing, then a default value is assigned.

1.4.3 Extended Syntax

These commands can operate in several modes, as following table:

Table 1: Types of AT commands and responses

Test command	AT+<x>=?	The mobile equipment returns the list of parameters and value ranges set with the corresponding Write command or by internal processes.
Read command	AT+<x>?	This command returns the currently set value of the parameter or parameters.
Write command	AT+<x>=<...>	This command sets the user-definable parameter values.
Execution command	AT+<x>	The execution command reads non-variable parameters affected by internal processes in the GSM engine

1.4.4 Combining AT commands on the same command line

You can enter several AT commands on the same line. In this case, you do not need to type the “AT” or “at” prefix before every command. Instead, you only need type “AT” or “at” the beginning of the command line. Please note to use a semicolon as command delimiter.

The command line buffer can accept a maximum of 256 characters. If the characters entered exceeded this number then none of the command will executed and TA will returns “**ERROR**”.

1.4.5 Entering successive AT commands on separate lines

When you need to enter a series of AT commands on separate lines, please note that you need to wait the final response (for example OK, CME error, CMS error) of last AT command you entered before you enter the next AT command.

1.5 Supported character sets

The SIM600 AT command interface defaults to the **GSM** character set. The SIM600 supports the following character sets:

- GSM format
- UCS2
- HEX
- IRA
- PCCP437
- PCDN
- 8859_1

The character set can be set and interrogated using the “**AT+CSCS**” command (GSM 07.07). The character set is defined in GSM specification 07.05.

The character set affects transmission and reception of SMS and SMS Cell Broadcast messages, the entry and display of phone book entries text field and SIM Application Toolkit alpha strings.

1.6 Flow control

Flow control is very important for correct communication between the GSM engine and DTE. For in the case such as a data or fax call, the sending device is transferring data faster than the receiving side is ready to accept. When the receiving buffer reaches its capacity, the receiving device should be capable to cause the sending device to pause until it catches up.

There are basically two approaches to achieve data flow control: software flow control and hardware flow control. SIM600 support both two kinds of flow control.

In Multiplex mode, it is recommended to use the hardware flow control.

1.6.1 Software flow control (XON/XOFF flow control)

Software flow control sends different characters to stop (XOFF, decimal 19) and resume (XON, decimal 17) data flow. It is quite useful in some applications that only use three wires on the serial interface.

The default flow control approach of SIM600 is hardware flow control (RTS/CTS flow control), to enable software flow control in the DTE interface and within GSM engine, type the following AT command:

AT+IFC=1,1

This setting is stored volatile, for use after restart, **AT+IFC=1,1** should be stored to the user profile with **AT&W**.

Ensure that any communications software package (e.g. ProComm Plus, HyperTerminal or WinFax Pro) uses software flow control.

NOTE:

Software Flow control should not be used for data calls where binary data will be transmitted or received (e.g. TCP/IP) as the DTE interface may interpret binary data as flow control characters.

1.6.2 Hardware flow control (RTS/CTS flow control)

Hardware flow control achieves the data flow control by controlling the RTS/CTS line. When the data transfer should be suspended, the CTS line is set inactive until the transfer from the receiving buffer has completed. When the receiving buffer is ok to receive more data, CTS goes active once again.

To achieve hardware flow control, ensure that the RTS/CTS lines are present on your application platform.

2 AT Commands According to V.25TER

These AT command are designed according to the ITU-T (International Telecommunication Union, Telecommunication sector) V.25ter document.

2.1 Overview of AT Commands According to V.25TER

Command	Description
A/	REISSUES THE LAST AT COMMAND GIVEN
ATA	ANSWER AN INCOMING CALL
ATD	MOBILE ORIGINATED CALL TO DIAL A NUMBER
ATD><MEM><N>	ORIGINATE CALL TO PHONE NUMBER IN MEMORY <MEM>
>	
ATD><N>	ORIGINATE CALL TO PHONE NUMBER IN CURRENT MEMORY
ATD><STR>	ORIGINATE CALL TO PHONE NUMBER IN MEMORY WHICH CORRESPONDS TO ALPHANUM FIELD
ATDL	REDIAL LAST TELEPHONE NUMBER USED
ATE	SET COMMAND ECHO MODE
ATH	DISCONNECT EXISTING CONNECTION
ATI	DISPLAY PRODUCT IDENTIFICATION INFORMATION
ATL	SET MONITOR SPEAKER LOUDNESS
ATM	SET MONITOR SPEAKER MODE
+++	SWITCH FROM DATA MODE OR PPP ONLINE MODE TO COMMAND MODE
ATO	SWITCH FROM COMMAND MODE TO DATA MODE
ATP	SELECT PULSE DIALING
ATQ	SET RESULT CODE PRESENTATION MODE
ATS0	SET NUMBER OF RINGS BEFORE AUTOMATICALLY ANSWERING THE CALL
ATS2	SETS ESCAPE CHARACTER
ATS3	SET COMMAND LINE TERMINATION CHARACTER
ATS4	SET RESPONSE FORMATTING CHARACTER
ATS5	SET COMMAND LINE EDITING CHARACTER
ATS6	SET PAUSE BEFORE BLIND DIALLING
ATS7	SET NUMBER OF SECONDS TO WAIT FOR CONNECTION COMPLETION
ATS8	SET NUMBER OF SECONDS TO WAIT WHEN COMMA DIAL MODIFIER USED
ATS10	SET DISCONNECT DELAY AFTER INDICATING THE ABSENCE OF DATA CARRIER
ATT	SELECT TONE DIALLING

SIM600 AT Commands Set

ATV	SET RESULT CODE FORMAT MODE
ATX	SET CONNECT RESULT CODE FORMAT AND MONITOR CALL PROGRESS
ATZ	SET ALL CURRENT PARAMETERS TO USER DEFINED PROFILE
AT&C	SET DCD FUNCTION MODE
AT&D	SET DTR FUNCTION MODE
AT&F	SET ALL CURRENT PARAMETERS TO MANUFACTURER DEFAULTS
AT&V	DISPLAY CURRENT CONFIGURATION
AT&W	STORE CURRENT PARAMETER TO USER DEFINED PROFILE
AT+DR	V.42BIS DATA COMPRESSION REPORTING CONTROL
AT+DS	V.42BIS DATA COMPRESSION CONTROL
AT+GCAP	REQUEST COMPLETE TA CAPABILITIES LIST
AT+GMI	REQUEST MANUFACTURER IDENTIFICATION
AT+GMM	REQUEST TA MODEL IDENTIFICATION
AT+GMR	REQUEST TA REVISION IDENTIFICATION OF SOFTWARE RELEASE
AT+GOI	REQUEST GLOBAL OBJECT IDENTIFICATION
AT+GSN	REQUEST TA SERIAL NUMBER IDENTIFICATION (IMEI)
AT+ICF	SET TE-TA CONTROL CHARACTER FRAMING
AT+IFC	SET TE-TA LOCAL DATA FLOW CONTROL
AT+ILRR	SET TE-TA LOCAL RATE REPORTING MODE
AT+IPR	SET TE-TA FIXED LOCAL RATE

2.2 Detailed Description of AT Commands According to V.25TER

2.2.1 A/ Reissues the last at command given

A/ Reissues the last at command given	
Execute command	Response
A/	Reissues the previous command Note: It does not have to end with terminating character.
	Parameter
Reference	Note
V.25ter	This command does not work when the serial multiplexer is active

2.2.2 ATA Answer an incoming call

ATA Answer an incoming call	
Execute command	Response
ATA	TA sends off-hook to the remote station.

	<p>Note1: Any additional commands on the same command line are ignored.</p> <p>Note2: This command may be aborted generally by receiving a character during execution. The aborting is not possible during some states of connection establishment such as handshaking.</p> <p>Response in case of data call, if successfully connected CONNECT<text> TA switches to data mode.</p> <p>Note: <text> output only if ATX<value> parameter setting with the <value> >0</p> <p>When TA returns to command mode after call release OK</p> <p>Response in case of voice call, if successfully connected OK</p> <p>Response if no connection NO CARRIER</p> <p>Parameter</p>
Reference V.25ter	<p>Note</p> <p>See also ATX</p>

2.2.3 ATD Mobile originated call to dial a number

ATD Mobile originated call to dial a number	
Execute command ATD[<n>][<mgs m>];	<p>Response</p> <p>This command can be used to set up outgoing <i>voice, data or fax calls</i>. It also serves to control <i>supplementary services</i>.</p> <p>Note: This command may be aborted generally by receiving a ATH command or a character during execution. The aborting is not possible during some states of connection establishment such as handshaking.</p> <p>If no dial tone and (parameter setting ATX2 or ATX4) NO DIALTONE</p> <p>If busy and (parameter setting ATX3 or ATX4) BUSY</p> <p>If a connection cannot be established NO CARRIER</p> <p>If connection successful and non-voice call. CONNECT<text> TA switches to data mode.</p> <p>Note: <text> output only if ATX<value> parameter setting with the</p>

	<p><value> >0</p> <p>When TA returns to command mode after call release OK</p> <p>If connection successful and voice call OK</p> <p>Parameter</p> <p><n> string of dialing digits and optionally V.25ter modifiers dialing digits: 0-9, *, #, +, A, B, C Following V.25ter modifiers are ignored: ,(comma), T, P, !, W, @</p> <p>Emergency call:</p> <p><n> Standardized emergency number 112(no SIM needed)</p> <p><mgs> string of GSM modifiers:</p> <p>I Activates CLIR (Disables presentation of own number to called party)</p> <p>i Deactivates CLIR (Enable presentation of own number to called party)</p> <p>G Activates Closed User Group invocation for this call only</p> <p>g Deactivates Closed User Group invocation for this call only</p> <p><;> only required to set up voice call , return to command state</p>
Reference V.25ter	<p>Note</p> <ul style="list-style-type: none"> ● Parameter “I” and “i” only if no *# code is within the dial string ● <n> is default for last number that can be dialed by ATDL ● *# codes sent with ATD are treated as voice calls. Therefore, the command must be terminated with a semicolon “;” ● See ATX command for setting result code and call monitoring parameters. <p>Responses returned after dialing with ATD</p> <ul style="list-style-type: none"> ● For voice call two different responses mode can be determined. TA returns “OK” immediately either after dialing was completed or after the call is established. The setting is controlled by AT+COLP. Factory default is AT+COLP=0, this cause the TA returns “OK” immediately after dialing was completed, otherwise TA will returns “OK”,

“BUSY”, “NO DIAL TONE”, “NO CARRIER”.

Using **ATD** during an active voice call:

- When a user originates a second voice call while there is already an active voice call, the first call will be automatically put on hold.
- The current states of all calls can be easily checked at any time by using the **AT+CLCC** command.

2.2.4 ATD> <mem><n> Originate call to phone number in memory <mem>

ATD><mem><n> Originate call to phone number in memory <mem>

Execute command	Response
ATD><mem><n>	This command can be used to dial a phone number from a specific phonebook.
>[<I>][<G>][;]	Note: This command may be aborted generally by receiving a ATH command or a character during execution. The aborting is not possible during some states of connection establishment such as handshaking.
	If error is related to ME functionality +CME ERROR: <err>
	If no dial tone and (parameter setting ATX2 or ATX4) NO DIALTONE
	If busy and (parameter setting ATX3 or ATX4) BUSY
	If a connection cannot be established NO CARRIER
	If connection successful and non-voice call. CONNECT<text> TA switches to data mode.
	Note: <text> output only if ATX<value> parameter setting with the <value> >0
	When TA returns to command mode after call release OK
	If successfully connected and voice call OK

	<p>Parameter</p> <p><mem> Phonebook</p> <p>“DC” ME dialled calls list</p> <p>“FD” SIM fix dialling-phonebook</p> <p>“LD” SIM dialled calls list</p> <p>“MC” ME missed (unanswered received) calls list</p> <p>“ME” ME phonebook</p> <p>“ON” SIM (or ME) own numbers (MSISDNs) list</p> <p>“RC” ME received calls list</p> <p>“SM” SIM phonebook</p> <p><n> Integer type memory location should be in the range of locations available in the memory used</p> <p><mgs> string of GSM modifiers:</p> <p>I Activates CLIR (Disables presentation of own number to called party)</p> <p>i Deactivates CLIR (Enable presentation of own number to called party)</p> <p>G Activates Closed User Group invocation for this call only</p> <p>g Deactivates Closed User Group invocation for this call only</p> <p><;> only required to set up voice call , return to command state</p>
<p>Reference</p> <p>V.25ter</p>	<p>Note</p> <ul style="list-style-type: none"> ● There is no <mem> for emergency call (“EN”). ● Parameter “I” and “i” only if no *# code is within the dial string ● *# codes sent with ATD are treated as voice calls. Therefore, the command must be terminated with a semicolon “;” ● See ATX command for setting result code and call monitoring parameters. ● For example: The command “ATD>SM7;” is going to dial the phone number stored at location 7 in SIM phone book.

2.2.5 ATD> <n> Originate call to phone number in current memory

ATD><n> Originate call to phone number in current memory

Execute command	Response
ATD><n>[<I>][<G>];]	<p>This command can be used to dial a phone number from current phonebook memory.</p> <p>Note: This command may be aborted generally by receiving a ATH command or a character during execution. The aborting is not possible during some states of connection establishment such as handshaking.</p> <p>If error is related to ME functionality +CME ERROR: <err></p> <p>If no dial tone and (parameter setting ATX2 or ATX4) NO DIALTONE</p> <p>If busy and (parameter setting ATX3 or ATX4) BUSY</p> <p>If a connection cannot be established NO CARRIER</p> <p>If connection successful and non-voice call. CONNECT<text> TA switches to data mode. Note: <text> output only if ATX<value> parameter setting with the <value> >0</p> <p>When TA returns to command mode after call release OK</p> <p>If successfully connected and voice call OK</p>

	<p>Parameter</p> <p><n> Integer type memory location should be in the range of locations available in the memory used</p> <p><mgs> string of GSM modifiers:</p> <p>I Activates CLIR (Disables presentation of own number to called party)</p> <p>i Deactivates CLIR (Enable presentation of own number to called party)</p> <p>G Activates Closed User Group invocation for this call only</p> <p>g Deactivates Closed User Group invocation for this call only</p> <p><;> only required to set up voice call , return to command state</p>
<p>Reference</p> <p>V.25ter</p>	<p>Note</p> <ul style="list-style-type: none"> ● Parameter “I” and “i” only if no *# code is within the dial string ● *# codes sent with ATD are treated as voice calls. Therefore, the command must be terminated with a semicolon “;” ● See ATX command for setting result code and call monitoring parameters.

2.2.6 ATD> <str> Originate call to phone number in memory which corresponds to alphanumeric field

ATD><str> Originate call to phone number in memory which corresponds to alphanumeric field

<p>Execute command</p> <p>ATD><str>[I][G][;]</p>	<p>Response</p> <p>This command make the TA attempts to set up an outgoing call to stored number.</p> <p>All available memories are searched for the entry <str>.</p> <p>Note: This command may be aborted generally by receiving a ATH command or a character during execution. The aborting is not possible during some states of connection establishment such as handshaking.</p> <p>If error is related to ME functionality</p> <p>+CME ERROR: <err></p> <p>If no dial tone and (parameter setting ATX2 or ATX4)</p> <p>NO DIALTONE</p> <p>If busy and (parameter setting ATX3 or ATX4)</p> <p>BUSY</p> <p>If a connection cannot be established</p>
--	--

	<p>NO CARRIER</p> <p>If connection successful and non-voice call. CONNECT<text> TA switches to data mode. Note: <text> output only if ATX<value> parameter setting with the <value> >0</p> <p>When TA returns to command mode after call release OK</p> <p>If successfully connected and voice call OK</p>
Reference V.25ter	<p>Parameter</p> <p><str> string type value("x"), which should equal to an alphanumeric field in at least one phone book entry in the searched memories. str formatted as current TE character set specified by +CSCS.</p> <p><mgs> string of GSM modifiers:</p> <p>I Activates CLIR (Disables presentation of own number to called party)</p> <p>i Deactivates CLIR (Enable presentation of own number to called party)</p> <p>G Activates Closed User Group invocation for this call only</p> <p>g Deactivates Closed User Group invocation for this call only</p> <p><;> only required to set up voice call , return to command state</p> <p>Note</p> <ul style="list-style-type: none"> ● Parameter "I" and "i" only if no *# code is within the dial string ● *# codes sent with ATD are treated as voice calls. Therefore, the command must be terminated with a semicolon ";" ● See ATX command for setting result code and call monitoring parameters.

2.2.7 ATDL Redial last telephone number used

ATDL Redial last telephone number used	
Execute command ATDL	<p>Response</p> <p>This command redials the last voice and data call number used .</p> <p>Note: This command may be aborted generally by receiving a ATH command or a character during execution. The aborting is not possible during some states of connection establishment such as handshaking.</p>

	<p>If error is related to ME functionality +CME ERROR: <err></p> <p>If no dial tone and (parameter setting ATX2 or ATX4) NO DIALTONE</p> <p>If busy and (parameter setting ATX3 or ATX4) BUSY</p> <p>If a connection cannot be established NO CARRIER</p> <p>If connection successful and non-voice call. CONNECT<text> TA switches to data mode. Note: <text> output only if ATX<value> parameter setting with the <value> >0</p> <p>When TA returns to command mode after call release OK</p> <p>If successfully connected and voice call OK</p>
Reference V.25ter	<p>Note</p> <ul style="list-style-type: none"> See ATX command for setting result code and call monitoring parameters.

2.2.8 ATE Set command echo mode

ATE Set command echo mode		
Execute command	Response	
ATE[<value>]	This setting determines whether or not the TA echoes characters received from TE during command state.	
	OK	
	Parameter	
	<value>	0 Echo mode off
		<u>1</u> Echo mode on
Reference	Note	
V.25ter		

2.2.9 ATH Disconnect existing connection

ATH Disconnect existing connection	
Execute command ATH[n]	<p>Response</p> <p>Disconnect existing call by local TE from command line and terminate call</p> <p>OK</p> <p>Note: OK is issued after circuit 109(DCD) is turned off, if it was previously on.</p>
	<p>Parameter</p> <p><n> 0 disconnect from line and terminate call</p>
Reference V.25ter	Note

2.2.10 ATI Display product identification information

ATI Display product identification information	
Execute command ATI	<p>Response</p> <p>TA issues product information text</p> <p>Example:</p> <p>SIMCOM_Ltd SIMCOM_SIM600 Revision:SIM600M32I_V09.0.2B03</p> <p>OK</p>
	Parameter
Reference V.25ter	Note

2.2.11 ATL Set monitor speaker loudness

ATL Set monitor speaker loudness	
Execute command ATL[value]	<p>Response</p> <p>OK</p>
	<p>Parameter</p> <p><value> 0 low speaker volume 1 low speaker volume 2 medium speaker volume 3 high speaker volume</p>
Reference V.25ter	<p>Note</p> <ul style="list-style-type: none"> The two commands ATL and ATM are implemented only for V.25 compatibility reasons and have no effect.

2.2.12 ATM Set monitor speaker mode

ATM Set monitor speaker mode		
Execute command ATM[value]	Response OK	
	Parameter	
	<value>	0 speaker is always off
		1 speaker on until TA inform TE that carrier has been detected
		2 speaker is always on when TA is off-hook
Reference V.25ter	Note	
	● The two commands ATL and ATM are implemented only for V.25 compatibility reasons and have no effect.	

2.2.13 +++ Switch from data mode or PPP online mode to command mode

Switch from data mode or PPP online mode to command mode	
Execute command +++	Response <p>This command is only available during a CSD call or a GPRS connection. The +++ character sequence causes the TA to cancel the data flow over the AT interface and switch to command mode. This allows you to enter AT command while maintaining the data connection to the remote server or, accordingly, the GPRS connection.</p> <p>OK</p> <p>To prevent the +++ escape sequence from being misinterpreted as data, it should comply to following sequence: No characters entered for T1 time (0.5 seconds) “+++” characters entered with no characters in between No characters entered for T1 timer (0.5 seconds) Switch to command mode, otherwise go to step 1.</p> Parameter
Reference V.25ter	Note <ul style="list-style-type: none"> To return from command mode back to data or PPP online mode: Enter ATO.

2.2.14 ATO Switch from command mode to data mode

ATO Switch from command mode to data mode	
Execute command ATO[n]	<p>Response</p> <p>TA resumes the connection and switches back from command mode to data mode.</p> <p>If connection is not successfully resumed</p> <p>NO CARRIER</p> <p>else</p> <p>TA returns to data mode from command mode CONNECT <text> Note: <text> only if parameter setting X>0</p> <p>Parameter</p> <p><n> 0 switch from command mode to data mode</p>
Reference V.25ter	Note

2.2.15 ATP Select pulse dialing

ATP Select pulse dialing	
Execute command ATP	<p>Response</p> <p>OK</p> <p>Parameter</p>
Reference V.25ter	<p>Note</p> <ul style="list-style-type: none"> ● No effect in GSM

2.2.16 ATQ Set result code presentation mode

ATQ Set result code presentation mode	
Execute command ATQ[<n>]	<p>Response</p> <p>This parameter setting determines whether or not the TA transmits any result code to the TE. Information text transmitted in response is not affected by this setting.</p> <p>If <n>=0:</p> <p>OK</p> <p>If <n>=1:</p> <p>(none)</p> <p>Parameter</p> <p><n> 0 TA transmits result code</p> <p> 1 Result codes are suppressed and not transmitted</p>
Reference V.25ter	Note

2.2.17 ATS0 Set number of rings before automatically answering the call

ATS0 Set number of rings before automatically answering the call	
Read command ATS0?	Response <n> OK
Write command ATS0=<n>	Response This parameter setting determines the number of rings before auto-answer. OK Parameter <n> <u>0</u> automatic answering is disable 1-255 enable automatic answering on the ring number specified
Reference V.25ter	Note <ul style="list-style-type: none"> ● If <n> is set too high, the calling party may hang up before the call can be answered automatically.

2.2.18 ATS2 sets escape character

ATS2 sets escape character	
Read command ATS2?	Response <n> OK
Write command ATS2=<n>	Response This parameter setting determines the character recognized by TA to terminate an incoming command line. The TA also returns this character in output. OK Parameter <n> <u>0-43</u> -255 command line termination character
Reference V.25ter	Note <ul style="list-style-type: none"> ● Default 27 = ESC.

2.2.19 ATS3 Set command line termination character

ATS3 Set command line termination character	
Read command ATS3?	Response <n> OK
Write command ATS3=<n>	Response This parameter setting determines the character recognized by TA to terminate an incoming command line. The TA also returns this character in output. OK

	Parameter <n> 0- <u>13</u> -127 command line termination character
Reference V.25ter	Note ● Default 13 = CR.

2.2.20 ATS4 Set response formatting character

ATS4 Set response formatting character	
Read command ATS4?	Response <n> OK
Write command ATS4=[<n>]	Response This parameter setting determines the character generated by the TA for result code and information text. OK
	Parameter <n> 0- <u>10</u> -127 response formatting character
Reference V.25ter	Note ● Default 10 = LF.

2.2.21 ATS5 Set command line editing character

ATS5 Set command line editing character	
Read command ATS5?	Response <n> OK
Write command ATS5=[<n>]	Response This parameter setting determines the character recognized by TA as a request to delete from the command line the immediately preceding character. OK
	Parameter <n> 0- <u>8</u> -127 response formatting character
Reference V.25ter	Note ● Default 8 = Backspace.

2.2.22 ATS6 Set pause before blind dialing

ATS6 Set pause before blind dialing	
Read command ATS6?	Response <n> OK
Write command ATS6=[<n>]	Response OK

	Parameter <n> 0- <u>2</u> -10 number of seconds to wait before blind dialing
Reference V.25ter	Note ● No effect for GSM

2.2.23 ATS7 Set number of seconds to wait for connection completion

ATS7 Set number of seconds to wait for connection completion	
Read command ATS7?	Response <n> OK
Write command ATS7=<n>	Response This parameter setting determines the amount of time to wait for the connection completion in case of answering or originating a call. OK
	Parameter <n> 1- <u>60</u> -255 number of seconds to wait for connection completion
Reference V.25ter	Note ● If called party has specified a high value for ATS0=<n> , call setup may fail. ● The correlation between ATS7 and ATS0 is important Example: Call may fail if ATS70 and ATS0 . ● ATS7 is only applicable to data call.

2.2.24 ATS8 Set number of seconds to wait when comma dial modifier used

ATS8 Set number of seconds to wait when comma dial modifier used	
Read command ATS8?	Response <n> OK
Write command ATS8=<n>	Response OK
	Parameter <n> 0 no pause when comma encountered in dial string 1-255 number of seconds to wait
Reference V.25ter	Note ● No effect for GSM

2.2.25 ATS10 Set disconnect delay after indicating the absence of data carrier

ATS10 Set disconnect delay after indicating the absence of data carrier	
Read command ATS10?	Response <n> OK

2.2.26 ATT Select tone dialing

Execute command ATT	Response OK
	Parameter
Reference V.25ter	Note ● No effect in GSM

ATV Set result code format mode							
Execute command ATV[<value>]	<p>Response</p> <p>This parameter setting determines the contents of the header and trailer transmitted with result codes and information responses.</p> <p>When <value>=0</p> <p>0</p> <p>When <value>=1</p> <p>OK</p>						
	<p>Parameter</p> <table border="0"> <tr> <td style="vertical-align: top;"><value></td> <td style="vertical-align: top;">0</td> <td>Information response: <text><CR><LF> Short result code format: <numeric code><CR></td> </tr> <tr> <td></td> <td style="vertical-align: top;">1</td> <td>Information response: <CR><LF><text><CR><LF> Long result code format: <CR><LF><verbose code><CR><LF></td> </tr> </table> <p>The result codes, their numeric equivalents and brief descriptions of the use of each are listed in the following table.</p>	<value>	0	Information response: <text><CR><LF> Short result code format: <numeric code><CR>		1	Information response: <CR><LF><text><CR><LF> Long result code format: <CR><LF><verbose code><CR><LF>
<value>	0	Information response: <text><CR><LF> Short result code format: <numeric code><CR>					
	1	Information response: <CR><LF><text><CR><LF> Long result code format: <CR><LF><verbose code><CR><LF>					
Reference V.25ter	Note						

ATV1	ATV0	Description
OK	0	Acknowledges execution of a command
CONNECT	1	A connection has been established; the DCE is moving

SIM600 AT Commands Set

		from command state to online data state
RING	2	The DCE has detected an incoming call signal from network
NO CARRIER	3	The connection has been terminated or the attempt to establish a connection failed
ERROR	4	Command not recognized, command line maximum length exceeded, parameter value invalid, or other problem with processing the command line
NO DIALTONE	6	No dial tone detected
BUSY	7	Engaged (busy) signal detected
NO ANSWER	8	"@" (Wait for Quiet Answer) dial modifier was used, but remote ringing followed by five seconds of silence was not detected before expiration of the connection timer (S7)
CONNECT <text>	Manufacturer-specific	Same as CONNECT, but includes manufacturer-specific text that may specify DTE speed, line speed, error control, data compression, or other status

2.2.28 ATX Set CONNECT result code format and monitor call progress

ATX Set CONNECT result code format and monitor call progress

Execute command ATX[<value>]	<p>Response</p> <p>This parameter setting determines whether or not the TA detected the presence of dial tone and busy signal and whether or not TA transmits particular result codes</p> <p>OK</p>															
	<p>Parameter</p> <table><tr><td><value></td><td>0</td><td>CONNECT result code only returned, dial tone and busy detection are both disabled</td></tr><tr><td></td><td>1</td><td>CONNECT<text> result code only returned, dial tone and busy detection are both disabled</td></tr><tr><td></td><td>2</td><td>CONNECT<text> result code returned, dial tone detection is enabled, busy detection is disabled</td></tr><tr><td></td><td>3</td><td>CONNECT<text> result code returned, dial tone detection is disabled, busy detection is enabled</td></tr><tr><td></td><td><u>4</u></td><td>CONNECT<text> result code returned, dial tone and busy detection are both enabled</td></tr></table>	<value>	0	CONNECT result code only returned, dial tone and busy detection are both disabled		1	CONNECT<text> result code only returned, dial tone and busy detection are both disabled		2	CONNECT<text> result code returned, dial tone detection is enabled, busy detection is disabled		3	CONNECT<text> result code returned, dial tone detection is disabled, busy detection is enabled		<u>4</u>	CONNECT<text> result code returned, dial tone and busy detection are both enabled
<value>	0	CONNECT result code only returned, dial tone and busy detection are both disabled														
	1	CONNECT<text> result code only returned, dial tone and busy detection are both disabled														
	2	CONNECT<text> result code returned, dial tone detection is enabled, busy detection is disabled														
	3	CONNECT<text> result code returned, dial tone detection is disabled, busy detection is enabled														
	<u>4</u>	CONNECT<text> result code returned, dial tone and busy detection are both enabled														
Reference V.25ter	Note															

ATZ Set all current parameters to user defined profile

2.2.30 AT&C Set DCD function mode

Execute command AT+C[<value>]	<p>Response</p> <p>This parameter determines how the state of circuit 109(DCD) relates to the detection of received line signal from the distant end.</p> <p>OK</p>						
	<p>Parameter</p> <table> <tr> <td><value></td><td>0</td><td>DCD line is always ON</td></tr> <tr> <td></td><td><u>1</u></td><td>DCD line is ON only in the presence of data carrier</td></tr> </table>	<value>	0	DCD line is always ON		<u>1</u>	DCD line is ON only in the presence of data carrier
<value>	0	DCD line is always ON					
	<u>1</u>	DCD line is ON only in the presence of data carrier					
Reference V.25ter	Note						

AT&D Set DTR function mode										
Execute command AT&D[<value>]	<p>Response</p> <p>This parameter determines how the TA responds when circuit 108/2(DTR) is changed from the ON to the OFF condition during data mode.</p> <p>OK</p> <hr/> <p>Parameter</p> <table> <tr> <td><value></td> <td>0</td> <td>TA ignores status on DTR</td> </tr> <tr> <td></td> <td><u>1</u></td> <td>ON->OFF on DTR: Change to command mode with remaining the connected call</td> </tr> <tr> <td></td> <td>2</td> <td>ON->OFF on DTR: Disconnect call, change to command mode. During state DTR = OFF is auto-answer off.</td> </tr> </table>	<value>	0	TA ignores status on DTR		<u>1</u>	ON->OFF on DTR: Change to command mode with remaining the connected call		2	ON->OFF on DTR: Disconnect call, change to command mode. During state DTR = OFF is auto-answer off.
<value>	0	TA ignores status on DTR								
	<u>1</u>	ON->OFF on DTR: Change to command mode with remaining the connected call								
	2	ON->OFF on DTR: Disconnect call, change to command mode. During state DTR = OFF is auto-answer off.								
Reference V.25ter	Note									

2.2.32 AT&F Set all current parameters to manufacturer defaults

AT&F Set all current parameters to manufacturer defaults	
Execute command AT&F[<value>]	Response TA sets all current parameters to the manufacturer defined profile. OK
	Parameter <value> <u>0</u> set all TA parameters to manufacturer defaults.
Reference V.25ter	Note

2.2.33 AT&V Display current configuration

AT&V Display current configuration	
Execute command AT&V[<n>]	Response TA returns the current parameter setting. <current configurations text> OK
	Parameter <n> <u>0</u> profile number
Reference V.25ter	Note

2.2.34 AT&W Store current parameter to user defined profile

AT&W Store current parameter to user defined profile	
Execute command AT&W[<n>]	Response TA stores the current parameter setting in the user defined profile. OK
	Parameter <n> <u>0</u> profile number to store to
Reference V.25ter	Note <ul style="list-style-type: none"> The user defined profile is stored in non volatile memory.

2.2.35 AT+DR V.42bis data compression reporting control

AT+DR V.42bis data compression reporting control	
Test command AT+DR=?	Response +DR:(list of supported <value>s) OK
	Parameter See set command.

Read command AT+DR?	Response +DR: <value> OK
	Parameter See Write command.
Write command AT+DR=<value>	Response This parameter setting determines whether or not intermediate result code of the current data compressing is reported by TA to TE after a connection establishment. OK
	Parameter <div> <div><value></div> <div> <div>0</div> <div>reporting disabled</div> </div> <div>1</div> <div>reporting enabled</div> </div>
Reference V.25ter	Note <ul style="list-style-type: none"> ● If the <value> is set to 1, then the intermediate result code reported at call set up is: <div> <div>+DR: <type></div> <div> <div><type></div> <div> <div>NONE</div> <div>data compression is not in use</div> </div> <div>V42B</div> <div>Rec. V42bis is in use in both direction</div> </div> <div>V42B RD</div> <div>Rec. V42bis is in use in receive direction only</div> </div> <div>V42B TD</div> <div>Rec. V42bis is in use in transmit direction only</div>

2.2.36 AT+DS V.42bis data compression control

AT+DS V.42bis data compression control	
Test command AT+DS=?	Response +DS:(list of supported <p0>s), (list of supported <n>s), (list of supported <p1>s), (list of supported <p2>s) OK
	Parameter See Write command.
Read command AT+DS?	Response +DS: <p0>,<n>,<p1>,<p2> OK
	Parameter See Write command.
Write command AT+DS=[<p0>,[<n>,[<p1>,[<p2>]]]	Response This parameter setting determines the possible data compression mode by TA at the compression negotiation with the remote TA after a call set up. OK

	Parameter <p0> 0 NONE 1 transmit only 2 receive only 3 both direction, but allow negotiation <n> 0 allow negotiation of p0 down 1 do not allow negotiation of p0 - disconnect on difference <p1> 512-1024 dictionary size <p2> 6-64 maximum string size (default 20)
Reference V.25ter	Note <ul style="list-style-type: none"> ● This command is only for data call; ● GSM transmits the data transparent. The remote TA may support this compression; ● This command must be used in conjunction with command AT+CRLP to enable compression (+CRLP=X,X,X,X,1,X).

2.2.37 AT+GCAP Request complete TA capabilities list

AT+GCAP Request complete TA capabilities list	
Test command AT+GCAP=?	Response OK Parameter
Execute command AT+GCAP	Response TA reports a list of additional capabilities. +GCAP: <name>s OK Parameter <name> e.g.: +CGSM, +FCLASS, +DS +CGSM GSM function is supported +FCLASS FAX function is supported +DS Data compression is supported
Reference V.25ter	Note

2.2.38 AT+GMI Request manufacture identification

AT+GMI Request manufacture identification	
Test command AT+GMI=?	Response OK Parameter

Execute command AT+GMI	TA reports one or more lines of information text which permit the user to identify the manufacturer. SIMCOM_Ltd OK
	Parameter
Reference V.25ter	Note

2.2.39 AT+GMM Request TA model identification

AT+GMM Request TA model identification	
Test command AT+GMM=?	Response OK
	Parameter
Execute command AT+GMM	TA reports one or more lines of information text which permit the user to identify the specific model of device. SIMCOM_SIM600 OK
	Parameter
Reference V.25ter	Note

2.2.40 AT+GMR Request TA revision identification of software release

AT+GMR Request TA revision identification of software release	
Test command AT+GMR=?	Response OK
	Parameter
Execute command AT+GMR	TA reports one or more lines of information text which permit the user to identify the version, revision level or data or other information of the device. Revision: N60_V16.0.4_B02 OK
	Parameter
Reference V.25ter	Note

2.2.41 AT+GOI Request global object identification

AT+GOI Request global object identification	
Test command AT+GOI=?	Response OK
	Parameter
Execute command AT+GOI	Response TA reports one or more lines of information text which permit the user to identify the device, based on the ISO system for registering unique object identifiers. SIM600 OK
	Parameter <Object Id> identifier of device type see X.208, 209 for the format of <Object Id>
Reference V.25ter	Note

2.2.42 AT+GSN Request TA serial number identification(IMEI)

AT+GSN Request TA serial number identification(IMEI)	
Test command AT+GSN=?	Response OK
	Parameter
Execute command AT+GSN	Response TA reports the IMEI(international mobile equipment identifier) number in information text which permit the user to identify the individual ME device. <sn> OK
	Parameter <sn> IMEI of the telephone(International Mobile station Equipment Identity)
Reference V.25ter	Note <ul style="list-style-type: none"> The serial number (IMEI) is varied by individual ME device.

2.2.43 AT+ICF Set TE-TA control character framing

AT+ICF Set TE-TA control character framing	
Test command AT+ICF=?	Response +ICF:(list of supported <format>s), (list of supported <parity>s) OK

	Parameter See Write command.																														
Read command AT+ICF?	Response +ICF: <format>,<parity> OK																														
	Parameter See Write command.																														
Write command AT+ICF=[<format>,<parity>]	Response This parameter setting determines the serial interface character framing format and parity received by TA from TE. OK																														
	Parameter <table><tr><td><format></td><td>1</td><td>8 data 0 parity 2 stop</td></tr><tr><td></td><td>2</td><td>8 data 1 parity 1 stop</td></tr><tr><td></td><td><u>3</u></td><td>8 data 0 parity 1 stop</td></tr><tr><td></td><td>4</td><td>7 data 0 parity 2 stop</td></tr><tr><td></td><td>5</td><td>7 data 1 parity 1 stop</td></tr><tr><td></td><td>6</td><td>7 data 0 parity 1 stop</td></tr><tr><td><parity></td><td>0</td><td>odd</td></tr><tr><td></td><td>1</td><td>even</td></tr><tr><td></td><td>2</td><td>mark (1)</td></tr><tr><td></td><td><u>3</u></td><td>space (0)</td></tr></table>	<format>	1	8 data 0 parity 2 stop		2	8 data 1 parity 1 stop		<u>3</u>	8 data 0 parity 1 stop		4	7 data 0 parity 2 stop		5	7 data 1 parity 1 stop		6	7 data 0 parity 1 stop	<parity>	0	odd		1	even		2	mark (1)		<u>3</u>	space (0)
<format>	1	8 data 0 parity 2 stop																													
	2	8 data 1 parity 1 stop																													
	<u>3</u>	8 data 0 parity 1 stop																													
	4	7 data 0 parity 2 stop																													
	5	7 data 1 parity 1 stop																													
	6	7 data 0 parity 1 stop																													
<parity>	0	odd																													
	1	even																													
	2	mark (1)																													
	<u>3</u>	space (0)																													
Reference V.25ter	Note <ul style="list-style-type: none">● The command is applied for command state;● The <parity> field is ignored if the < format > field specifies no parity.																														

2.2.44 AT+IFC Set TE-TA local data flow control

AT+IFC Set TE-TA local data flow control

Test command AT+IFC=?	Response +IFC:(list of supported <dce_by_dte>s), (list of supported <dte_by_dce>s) OK
	Parameter See Write command.
Read command AT+IFC?	Response +IFC: <dce_by_dte>,<dte_by_dce> OK
	Parameter See Write command.

Write command AT+IFC=[<dce_by_dte>[,<dte_by_dce>]]	Response This parameter setting determines the data flow control on the serial interface for data mode. OK
	Parameter <dce_by_dte> specifies the method will be used by TE at receive of data from TA 0 None 1 XON/XOFF, don't pass characters on to data stack <u>2</u> line 105: Request to send(RTS). 3 XON/XOFF, pass characters on to data stack <dte_by_dce> specifies the method will be used by TA at receive of data from TE 0 None 1 XON/XOFF <u>2</u> line 106: Clear to send(CTS)
Reference V.25ter	Note <ul style="list-style-type: none"> ● This flow control is applied for data mode; ● SIMCOM use the RTS for this method.

2.2.45 AT+ILRR Set TE-TA local rate reporting mode

AT+ILRR Set TE-TA local rate reporting mode	
Test command AT+ILRR=?	Response +ILRR:(list of supported <value>s OK
	Parameter See Write command.
Read command AT+ILRR?	Response +ILRR: <value> OK
	Parameter See Write command.
Write command AT+ILRR=<value>	Response This parameter setting determines whether or not an intermediate result code of local rate is reported at connection establishment. The rate is applied after the final result code of the connection is transmitted to TE. OK

	Parameter <value> <u>0</u> Disables reporting of local port rate 1 Enables reporting of local port rate Intermediate result + ILRR :<rate> Note: It indicates port rate settings on connection. Parameter <rate> port rate setting on call connection in Baud per second 1200 2400 4800 9600 14400 19200 28800 38400 57600 115200 230400 460800
Reference V.250ter	Note Not all platforms have the processor speed to support rates above 115200. Rates above 115200 are only recommended for platforms supporting EDGE and 3G.

2.2.46 AT+IPR Set TE-TA fixed local rate

AT+IPR Set TE-TA fixed local rate	
Test command AT+IPR=?	Response +IPR: (list of supported auto detectable <rate>s),(list of supported fixed-only<rate>s) OK
	Parameter See Write command.
Read command AT+IPR?	Response +IPR: <rate> OK
	Parameter See Write command.

SIM600 AT Commands Set

Write command AT+IPR=<value> >	Response This parameter setting determines the data rate of the TA on the serial interface. The rate of command takes effect following the issuance of any result code associated with the current command line. OK Parameter <rate> Baud-rate per second 1200 2400 4800 9600 14400 19200 28800 38400 57600 115200 230400 460800 921600
Reference V.25ter	Note

3 AT Commands According to GSM07.07

3.1 Overview of AT Command According to GSM07.07

Command	Description
AT+CACM	ACCUMULATED CALL METER(ACM) RESET OR QUERY
AT+CAMM	ACCUMULATED CALL METER MAXIMUM(ACMMAX) SET OR QUERY
AT+CAOC	ADVICE OF CHARGE
AT+CBST	SELECT BEARER SERVICE TYPE
AT+CCFC	CALL FORWARDING NUMBER AND CONDITIONS CONTROL
AT+CCUG	CLOSED USER GROUP CONTROL
AT+CCWA	CALL WAITING CONTROL
AT+CEER	EXTENDED ERROR REPORT
AT*TFDN	SEARCHES THE FIXED DIALING LIST
AT+CGMI	REQUEST MANUFACTURER IDENTIFICATION
AT+CGMM	REQUEST MODEL IDENTIFICATION
AT+CGMR	REQUEST REVISION IDENTIFICATION
AT+CGSN	REQUEST PRODUCT SERIAL NUMBER IDENTIFICATION (IDENTICAL WITH +GSN)
AT+CSCS	SELECT TE CHARACTER SET
AT+CSTA	SELECT TYPE OF ADDRESS
AT+CHLD	CALL HOLD AND MULTIPARTY
AT+CIMI	REQUEST INTERNATIONAL MOBILE SUBSCRIBER IDENTITY
AT+CKPD	KEYPAD CONTROL
AT+CLCC	LIST CURRENT CALLS OF ME
AT+CLCK	FACILITY LOCK
AT+CLIP	CALLING LINE IDENTIFICATION PRESENTATION
AT+CLIR	CALLING LINE IDENTIFICATION RESTRICTION
AT+CMEE	REPORT MOBILE EQUIPMENT ERROR
AT+COLP	CONNECTED LINE IDENTIFICATION PRESENTATION
AT+COPS	OPERATOR SELECTION
AT+CPAS	MOBILE EQUIPMENT ACTIVITY STATUS
AT+CPBF	FIND PHONEBOOK ENTRIES
AT+CPBR	READ CURRENT PHONEBOOK ENTRIES
AT+CPBS	SELECT PHONEBOOK MEMORY STORAGE
AT+CPBW	WRITE PHONEBOOK ENTRY
AT+CPIN	ENTER PIN
AT+CPWD	CHANGE PASSWORD

AT+CR	SERVICE REPORTING CONTROL
AT+CRC	SET CELLULAR RESULT CODES FOR INCOMING CALL INDICATION
AT+CREG	NETWORK REGISTRATION
AT+CRLP	SELECT RADIO LINK PROTOCOL PARAM. FOR ORIG. NON-TRANSP. DATA CALL
AT+CRSM	Restricted SIM access
AT+CSQ	SIGNAL QUALITY REPORT
AT+FCLASS	FAX: SELECT, READ OR TEST SERVICE CLASS
AT+FMI	FAX: REPORT MANUFACTURED ID
AT+FMM	FAX: REPORT MODEL ID
AT+FMR	FAX: REPORT REVISION ID
AT+VTD	TONE DURATION
AT+VTS	DTMF AND TONE GENERATION
AT+CMUX	MULTIPLEXER CONTROL
AT+CNUM	SUBSCRIBER NUMBER
AT+CPOL	PREFERRED OPERATOR LIST
AT+COPN	READ OPERATOR NAMES
AT+CFUN	SET PHONE FUNCTIONALITY
AT+CCLK	CLOCK
AT+CSIM	GENERIC SIM ACCESS
AT+CALM	ALERT SOUND MODE
AT+CRSL	RINGER SOUND LEVEL
AT+CLVL	LOUD SPEAKER VOLUME LEVEL
AT+CMUT	MUTE CONTROL
AT+CPUC	PRICE PER UNIT CURRENCY TABLE
AT+CCWE	CALL METER MAXIMUM EVENT
AT+CBC	BATTERY CHARGE
AT+CUSD	UNSTRUCTURED SUPPLEMENTARY SERVICE DATA
AT+CSSN	SUPPLEMENTARY SERVICES NOTIFICATION

3.2 Detailed Descriptions of AT Command According to GSM07.07

3.2.1 AT+CACM Accumulated Call Meter (ACM) Reset or Query

AT+CACM Accumulated Call Meter (ACM) Reset or Query	
Test command AT+CACM=?	Response OK Parameter
Read command AT+CACM?	Response TA returns the current value of ACM. +CACM: <acm> OK If error is related to ME functionality: +CME ERROR: <err> Parameters <acm> string type; three bytes of the current ACM value in hexa-decimal format (e.g. "00001E" indicates decimal value 30) 000000 - FFFFFFFF
Write command AT+CACM=[<passwd>]	Parameters <passwd> string type: SIM PIN2 Response TA resets the Advice of Charge related accumulated call meter(ACM) value in SIM file EF(ACM). ACM contains the total number of home units for both the current and preceding calls. OK If error is related to ME functionality: +CME ERROR: <err>
Reference GSM 07.07 [13]	Note

3.2.2 AT+CAMM Accumulated call meter maximum(ACMmax) set or query

AT+CAMM Accumulated call meter maximum(ACMmax) set or query	
Test command AT+CAMM=?	Response OK Parameter
Read command AT+ CAMM?	Response TA returns the current value of ACMmax. +CAMM: <acmmmax> OK If error is related to ME functionality: +CME ERROR: <err> Parameters see Write command
Write command	Response

AT+CMM=[<acmmmax>[,<passwd>]]	<p>TA sets the Advice of Charge related accumulated call meter maximum value in SIM file EF(ACMmax). ACMmax contains the maximum number of home units allowed to be consumed by the subscriber.</p> <p>OK</p> <p>If error is related to ME functionality:</p> <p>+CME ERROR: <err></p> <p>Parameters</p> <p><acmmmax> string type; three bytes of the max. ACM value in hexa-decimal format (e.g. "00001E" indicates decimal value 30)</p> <p>000000 disable ACMmax feature</p> <p>000001-FFFFFF</p> <p><passwd> string type</p> <p>SIM PIN2</p>
Reference GSM 07.07 [13]	Note

3.2.3 AT+CAOC Advice of Charge

AT+CAOC Advice of Charge	
Test command AT+CAOC=?	Response +CAOC: list of supported <mode>s OK Parameters see execute command
Read command AT+CAOC?	Response +CAOC: <mode> OK Parameters see execute command
Execute command AT+CAOC=<mode>	Response TA sets the Advice of Charge supplementary service function mode. If error is related to ME functionality: +CME ERROR: <err> If <mode>=0, TA returns the current call meter value +CAOC: <ccm> OK If <mode>=1, TA deactivates the unsolicited reporting of CCM value OK If <mode>=2, TA activates the unsolicited reporting of CCM value OK Parameter <mode> 0 query CCM value 1 deactivate the unsolicited reporting of CCM value 2 activate the unsolicited reporting of CCM value

	<p><ccm> string type; three bytes of the current CCM value in hexa-decimal format (e.g. "00001E" indicates decimal value 30); bytes are similarly coded as ACMmax value in the SIM</p> <p>000000-FFFFFF</p>
Reference GSM 07.07 [13]	Note

3.2.4 AT+CBST Select Bearer Service Type

AT+CBST Select Bearer Service Type	
Test command AT+CBST=?	<p>Response</p> <p>+CBST: (list of supported <speed>s) ,(list of supported <name>s) ,(list of supported <ce>s) OK</p> <p>Parameter</p> <p>see Write command</p>
Read command AT+CBST?	<p>Response</p> <p>+CBST: <speed>,<name>,<ce> OK</p> <p>Parameter</p> <p>see Write command</p>
Set command AT+CBST=[<speed>] [,<name>[,<ce>]])	<p>Response</p> <p>TA selects the bearer service <name> with data rate <speed>, and the connection element <ce> to be used when data calls are originated.</p> <p>OK</p> <p>Parameter</p> <p><speed></p> <p>0 autobauding(not supported)</p> <p>1 300 bps(V.21)</p> <p>2 1200 bps(V.22)</p> <p>3 1200/75 bps(V.23)</p> <p>4 2400 bps(V.22bis)</p> <p>5 2400 bps(V.26ter)</p> <p>6 4800 bps(V.32)</p> <p>7 9600 bps(V.32)</p> <p>12 9600 bps(V.34)</p> <p>14 14400 bps(V.34)</p> <p>34 1200 bps (V.120)</p> <p>36 2400 bps (V.120)</p> <p>38 4800 bps (V.120)</p> <p>39 9600 bps (V.120)</p> <p>43 14400 bps (V.120)</p> <p>48 28800 bps (V.120) 3g-specific</p> <p>51 56000 bps (V.120) 3g-specific</p> <p>65 300 bps (V.110)</p>

	66 1200 bps(V.110 or X.31 flag stuffing) 68 2400 bps(V.110 or X.31 flag stuffing) 70 4800 bps(V.110 or X.31 flag stuffing) 71 9600 bps(V.110 or X.31 flag stuffing) 75 14400 bps(V.110 or X.31 flag stuffing) 116 64000 bps (bit-transparent) 3g-specific 131 32000 bps (multimedia) 3g-specific 134 64000 bps (multimedia) 3g-specific
	<name> <u>0</u> asynchronous modem 1 synchronous modem 3g-specific 2 PAD access (asynchronous) <ce> 0 transparent <u>1</u> non-transparent
Reference 3GPP 27.007	Note GSM 02.02: lists the allowed combinations of the subparameters

3.2.5 AT+CCFC Call Forwarding Number And Conditions Control

AT+CCFC Call Forwarding Number And Conditions Control

Test Command AT+CCFC=?	Response +CCFC: (list of supported <reass>) OK
	Parameters see Write command
Write Command AT+CCFC=<reass>,<mode> [, <number> [, <type> [, <class> [, <subaddr> [, <satype> [, <time>]]]]]]	Response TA controls the call forwarding supplementary service. Registration, erasure, activation, deactivation, and status query are supported. Only ,<reass> and <mode> should be entered with mode (0-2,4) If there is a network error: +CCFC: 0, 0 If command successful (only in connection with <reass> 0 – 3) For registered call forward numbers: +CCFC: <status>, <class1>[, <number>, <type> [, <time>]] [<CR><LF>+CCFC:] OK If no call forward numbers are registered (and therefore all classes are inactive): +CCFC: <status>, <class> OK where <status>=0 and <class>=7 If error is related to ME functionality:

	<p>+CME ERROR: <err></p> <p>Parameters</p> <p><reas></p> <p>0 unconditional</p> <p>1 mobile busy</p> <p>2 no reply</p> <p>3 not reachable</p> <p>4 all call forwarding (0-3)</p> <p>5 all conditional call forwarding (1-3)</p> <p><mode></p> <p>0 disable</p> <p>1 enable</p> <p>2 query status</p> <p>3 registration</p> <p>4 erasure</p> <p><number> string type phone number of forwarding address in format specified by <type></p> <p><type> type of address in integer format; default 145 when dialing string includes international access code character “+”, otherwise 129</p> <p><subaddr> string type subaddress of format specified by <satype></p> <p><satype> type of subaddress in integer; default 128</p> <p><class></p> <ul style="list-style-type: none"> 1 voice 2 data 4 fax 7 all classes <p><time> time, rounded to a multiple of 5 sec.</p> <p>1...20..30</p> <p><status></p> <p>0 not active</p> <p>1 active</p>
Reference GSM07.07	

3.2.6 AT+CCUG Closed User Group control

AT+CCUG Closed User Group control		
Read Command AT+CCUG?	Response	
	+CCUG: <n>,<index>,<info> OK	
	If error is related to ME functionality: +CME ERROR: <err>	
	Parameter	
	see write command	
Test Command AT+CCUG=?	Response	
	OK	
Write Command AT+CCUG=[<n> > [,<index>[,<info> >]]]	TA sets the Closed User Group supplementary service parameters as a default adjustment for all following calls.	
	OK	
	If error is related to ME functionality: +CME ERROR: <err>	
	Parameter	
	<n>	<u>0</u> disable CUG
		1 enable CUG
	<index>	<u>0</u> ...9 CUG index
		10 no index (preferred CUG taken from subscriber data)
	<info>	<u>0</u> no information
		1 suppress OA (Outgoing Access)
		2 suppress preferential CUG
		3 suppress OA and preferential CUG
Reference		

3.2.7 AT+CCWA Call Waiting Control

AT+CCWA Call Waiting Control	
Read Command AT+CCWA?	Response +CCWA: <n> OK
Test Command AT+CCWA=?	Response +CCWA: (list of supported <n>s) OK
Write Command AT+CCWA=[<n> >] [,<mode>[,<class> >]]]	Response TA controls the Call Waiting supplementary service. Activation, deactivation and status query are supported. If there is a network error: +CCWA: 0, 0 If command successful +CCWA:<status>,<class1>[<CR><LF>+CCWA:<status>,<class2>[...]] OK

	<p>Note :<status>=0 should be returned only if service is not active for any <class> ie +CCWA : 0 , 7 will be returned in this case.</p> <p>When mode=2 , all active call waiting classes will be reported. In this mode the command is abortable by pressing any key.</p> <p>If error is related to ME functionality:</p> <p>+CME ERROR: <err></p> <p>Parameter</p> <table><tr><td><n></td><td>0</td><td>disable presentation of an unsolicited result code</td></tr><tr><td></td><td>1</td><td>enable presentation of an unsolicited result code</td></tr><tr><td><mode></td><td>when <mode> parameter not given, network is not interrogated</td><td></td></tr><tr><td></td><td>0</td><td>disable</td></tr><tr><td></td><td>1</td><td>enable</td></tr><tr><td></td><td>2</td><td>query status</td></tr><tr><td><class></td><td>is a sum of integers each representing a class of information</td><td></td></tr><tr><td></td><td>1</td><td>voice (telephony)</td></tr><tr><td></td><td>2</td><td>data (bearer service)</td></tr><tr><td></td><td>4</td><td>fax (teleservice)</td></tr><tr><td></td><td>7</td><td>default(equals to all classes)</td></tr><tr><td><status></td><td>0</td><td>not active</td></tr><tr><td></td><td>1</td><td>enable</td></tr></table>	<n>	0	disable presentation of an unsolicited result code		1	enable presentation of an unsolicited result code	<mode>	when <mode> parameter not given, network is not interrogated			0	disable		1	enable		2	query status	<class>	is a sum of integers each representing a class of information			1	voice (telephony)		2	data (bearer service)		4	fax (teleservice)		7	default(equals to all classes)	<status>	0	not active		1	enable
<n>	0	disable presentation of an unsolicited result code																																						
	1	enable presentation of an unsolicited result code																																						
<mode>	when <mode> parameter not given, network is not interrogated																																							
	0	disable																																						
	1	enable																																						
	2	query status																																						
<class>	is a sum of integers each representing a class of information																																							
	1	voice (telephony)																																						
	2	data (bearer service)																																						
	4	fax (teleservice)																																						
	7	default(equals to all classes)																																						
<status>	0	not active																																						
	1	enable																																						
	<p>Unsolicited result code</p> <p>When the presentation Call Waiting at the TA is enabled (and Call Waiting is enabled) and a terminating call set up has attempted during an established call, an unsolicited result code is returned:</p> <p>+CCWA: <number>,<type>,<class>[,<alpha>]</p>																																							
	<p>Parameter</p> <table><tr><td><number></td><td>string type phone number of calling address in format specified by <type></td></tr><tr><td><type></td><td>type of address octet in integer format; 145 when dialing string includes international access code character “+”, otherwise 129</td></tr><tr><td><alpha></td><td>optional string type alphanumeric representation of <number> corresponding to the entry found in phone book</td></tr></table>	<number>	string type phone number of calling address in format specified by <type>	<type>	type of address octet in integer format; 145 when dialing string includes international access code character “+”, otherwise 129	<alpha>	optional string type alphanumeric representation of <number> corresponding to the entry found in phone book																																	
<number>	string type phone number of calling address in format specified by <type>																																							
<type>	type of address octet in integer format; 145 when dialing string includes international access code character “+”, otherwise 129																																							
<alpha>	optional string type alphanumeric representation of <number> corresponding to the entry found in phone book																																							
Reference																																								
GSM07.07																																								

3.2.8 AT+CEER Extended error report

AT+CEER Extended error report	
Test command	Response
AT+CEER=?	OK
Execute command	Response

SIM600 AT Commands Set

AT+CEER	TA returns an extended report of the reason for the last call release. +CEER: <report> OK Parameters <report> Reason for last call release as number code
Reference GSM 07.07 [13]	Note

3.2.9 AT*TFDN Searches the fixed dialing list

AT*TFDN Searches the fixed dialing list	
Test command AT*TFDN=?	Response *TFDN: 20,(129,145,161,177) OK
Write command AT*TFDN=<address length>,<type of number>	Response OK Parameters < address length > Max address length <type of number> 129 Unknown 145 International number 161 National number 177 Network specifics number
Reference GSM 07.07 [13]	Note

3.2.10 AT+CGMI Request manufacturer identification

AT+CGMI Request manufacturer identification	
Test command AT+CGMI=?	Response OK
Execute command AT+CGMI	Response TA returns manufacturer identification text. <manufacturer> OK Parameters <manufacturer>
Reference GSM 07.07 [13]	Note

3.2.11 AT+CGMM Request model identification

AT+CGMM Request model identification	
Test command AT+CGMM=?	Response OK
Execute command AT+CGMM	Response TA returns product model identification text.

	<model> OK Parameters <model>
Reference GSM 07.07 [13]	Note

3.2.12 AT+CGMR Request revision identification

AT+CGMR Request revision identification	
Test command AT+CGMR=?	Response OK
Execute command AT+CGMR	Response TA returns product software version identification text. <revision> OK Parameters <revision>
Reference GSM 07.07 [13]	Note

3.2.13 AT+CGSN Request product serial number identification (Identical with +GSN)

AT+CGSN Request product serial number identification (Identical with +GSN)	
Test command AT+CGSN=?	Response OK
Execute command AT+CGSN	Response see +GSN <sn> OK Parameters see +GSN
Reference GSM 07.07 [13]	Note

3.2.14 AT+CSCS Select TE Character Set

AT+CSCS Select TE Character Set	
Test command AT+CSCS=?	Response +CSCS: (list of supported <chset>s) Parameters <chset> “GSM” GSM alphabet. “HEX” character strings consist only of hexadecimal numbers from 00 to FF; “IRA” international reference alphabet “PCCP” PC character set Code Page xxx “PCDN” PC Danish/Norwegian character set

	“UCS2” UCS2 alphabet “8859-1” ISO 8859 Latin 1 character set
Read command AT+CSCS?	Response +CSCS: <chset> OK Parameter <chset> see Test command
Write command AT+CSCS=[<chset>]	Response Sets which character set <chset> is used by the TE. The TA can then convert character strings correctly between the TE and ME character sets. Parameter <chset> see Test command
Reference GSM 07.07 [13]	Note

3.2.15 AT+CSTA Select Type of Address

AT+CSTA Select Type of Address	
Test command AT+CSTA=?	Response +CSTA: (129,145, 161,177)
Read command AT+CSTA?	Response +CSTA: <type> OK Parameters <type> Current address type setting.
Write command AT+CSTA=<type>	<type> see Test command
Reference GSM 07.07 [13]	Note The ATD command overrides this setting when a number is dialed. 129 Unknown type(ISDN format number) 161 National number type(ISDN format) 145 International number type(ISDN format) 177 Network specific number(ISDN format)

3.2.16 AT+CHLD Call hold and multiparty

AT+CHLD Call hold and multiparty	
Test Command AT+CHLD=?	Response +CHLD: list of supported <n>s OK

Write Command AT+CHLD=[<n>]	<p>Response</p> <p>TA controls the supplementary services Call Hold, MultiParty and Explicit Call Transfer. Calls can be put on hold, recovered, released, added to conversation, and transferred.</p> <p>Note these supplementary services are only applicable to tele service 11 (Speech: Telephony).</p> <p>OK</p> <p>If error is related to ME functionality: +CME ERROR: <err></p> <p>Parameters</p> <table><tr><td><n></td><td>0</td><td>Terminate all held calls or UDUB (User Determined User Busy) for a waiting call</td></tr><tr><td></td><td>1</td><td>Terminate all active calls (if any) and accept the other call (waiting call or held call)</td></tr><tr><td></td><td>1X</td><td>Terminate the active call number X (X= 1-7)</td></tr><tr><td></td><td>2</td><td>Place all active calls on hold (if any) and accept the other call (waiting call or held call) as the active call</td></tr><tr><td></td><td>2X</td><td>Place all active calls except call X (X= 1-7) on hold</td></tr><tr><td></td><td>3</td><td>Add the held call to the active calls</td></tr></table>	<n>	0	Terminate all held calls or UDUB (User Determined User Busy) for a waiting call		1	Terminate all active calls (if any) and accept the other call (waiting call or held call)		1X	Terminate the active call number X (X= 1-7)		2	Place all active calls on hold (if any) and accept the other call (waiting call or held call) as the active call		2X	Place all active calls except call X (X= 1-7) on hold		3	Add the held call to the active calls
<n>	0	Terminate all held calls or UDUB (User Determined User Busy) for a waiting call																	
	1	Terminate all active calls (if any) and accept the other call (waiting call or held call)																	
	1X	Terminate the active call number X (X= 1-7)																	
	2	Place all active calls on hold (if any) and accept the other call (waiting call or held call) as the active call																	
	2X	Place all active calls except call X (X= 1-7) on hold																	
	3	Add the held call to the active calls																	
Reference																			

3.2.17 AT+CIMI Request international mobile subscriber identity

AT+CIMI Request international mobile subscriber identity	
Test command AT+CIMI=?	<p>Response</p> <p>OK</p> <p>Parameters</p>
Execute command AT+CIMI	<p>Response</p> <p>TA returns <IMSI>for identifying the individual SIM which is attached to ME.</p> <p>+CIMI: <IMSI> OK</p> <p>If error is related to ME functionality: +CME ERROR: <err></p> <p>Parameter</p> <p><IMSI> International Mobile Subscriber Identity (string without double quotes)</p>
Reference GSM 07.07 [13]	

3.2.18 AT+CKPD Keypad Control

AT+CKPD Keypad Control																															
Test command AT+ CKPD=?	Response OK Parameters																														
Execute command AT+CKPD=<keys> > [,<time>[,<pause>]]	<p>Response</p> <p>TA emulates ME keypad by giving each keystroke as a character in a string <keys>. <time>*0.1 seconds is the time to stroke each key and <pause>*0.1 seconds is the length of pause between two strokes.</p> <p>Keystrokes <keys> are emulated.</p> <p>OK</p> <p>If error is related to ME functionality: +CME ERROR: <err></p> <p>Parameters</p> <p><keys> string of characters representing keys as listed in the following table (based on PCCA STD-101 Annex table I-3):</p> <table><tr><td>Char.:</td><td>ASCII-Code:</td><td>Note:</td></tr><tr><td>#</td><td>35</td><td>hash (number sign)</td></tr><tr><td>*</td><td>42</td><td>star (*)</td></tr><tr><td>0... 9</td><td>48... 57</td><td>number keys</td></tr><tr><td>:</td><td>58</td><td>escape character for manufacturer specific keys</td></tr><tr><td>D/d</td><td>68/100</td><td>volume down</td></tr><tr><td>E/e</td><td>69/101</td><td>connection end (END)</td></tr><tr><td>R/r</td><td>82/114</td><td>recall last number (R/RCL/MR)</td></tr><tr><td>S/s</td><td>83/115</td><td>connection start (SEND)</td></tr><tr><td>U/u</td><td>85/117</td><td>volume up</td></tr></table> <p><time> 0...255 seconds (default value is manufacturer specific, but should be so long that a normal ME can handle keystrokes correctly)</p> <p><pause> 0... 25.5 seconds (default value is manufacturer specific, but should be so long that a normal ME can handle keystrokes correctly)</p>	Char.:	ASCII-Code:	Note:	#	35	hash (number sign)	*	42	star (*)	0... 9	48... 57	number keys	:	58	escape character for manufacturer specific keys	D/d	68/100	volume down	E/e	69/101	connection end (END)	R/r	82/114	recall last number (R/RCL/MR)	S/s	83/115	connection start (SEND)	U/u	85/117	volume up
Char.:	ASCII-Code:	Note:																													
#	35	hash (number sign)																													
*	42	star (*)																													
0... 9	48... 57	number keys																													
:	58	escape character for manufacturer specific keys																													
D/d	68/100	volume down																													
E/e	69/101	connection end (END)																													
R/r	82/114	recall last number (R/RCL/MR)																													
S/s	83/115	connection start (SEND)																													
U/u	85/117	volume up																													
Reference GSM 07.07 [13]																															

3.2.19 AT+CLCC List current calls of ME

AT+CLCC List current calls of ME	
Test command AT+CLCC=?	Response OK Parameters

Execute command AT+CLCC	<p>Response</p> <p>TA returns a list of current calls of ME.</p> <p>Note: If command succeeds but no calls are available, no information response is sent to TE.</p> <p>[+CLCC: <id1>,<dir>,<stat>,<mode>,<mpty>[, <number>,<type>[,<alpha>]] [<CR><LF>+CLCC: <id2>,<dir>,<stat>,<mode>,<mpty>[, <number>,<type>[,<alpha>]] [...]]] OK</p> <p>If error is related to ME functionality: +CME ERROR: <err></p> <p>Parameters</p> <p><idx> integer type; call identification number as described in GSM 02.30[19] subclause 4.5.5.1; this number can be used in +CHLD command operations</p> <p><dir> 0 mobile originated (MO) call 1 mobile terminated (MT) call</p> <p><stat> state of the call: 0 active 1 held 2 dialing (MO call) 3 alerting (MO call) 4 incoming (MT call) 5 waiting (MT call)</p> <p><mode> bearer/tele service: 0 voice 1 data 2 fax 9 unknown</p> <p><mpty> 0 call is not one of multiparty (conference) call parties 1 call is one of multiparty (conference) call parties</p> <p><number> string type phone number in format specified by <type></p> <p><type> type of address octet in integer format; 145 when dialing string includes international access code character “+”, otherwise 129</p> <p><alpha> string type alphanumeric representation of <number> corresponding to the entry found in phone book</p>
Reference GSM 07.07 [13][14]	

3.2.20 AT+CLCK Facility lock

AT+CLCK Facility lock	
Test command AT+CLCK=?	<p>Response</p> <p>+CLCK: (list of supported <fac>s)</p> <p>OK</p>
	<p>Parameter</p> <p>see execute command</p>
Execute command AT+CLCK = <fac>, <mode> [,<passwd> [,<class>]]	<p>Response</p> <p>This command is used to lock, unlock or interrogate a ME or a network facility <fac>. Password is normally needed to do such actions. When querying the status of a network service (<mode>=2) the response line for 'not active' case (<status>=0) should be returned only if service is not active for any <class>.</p> <p>If <mode><>2 and command is successful and <fac> is not call barring OK</p> <p>If <mode>=2 and command is successful or <mode><>2 and <fac> is call barring and command is successful</p> <p>+CLCK: <status>[,<class1>[<CR><LF></p> <p>+CLCK: <status>, class2....]] OK</p> <p>Parameter</p> <p><fac> "PS" PH-SIM (lock PHone to SIM card) (ME asks password when other than current SIM card inserted; ME may remember certain amount of previously used cards thus not requiring password when they are inserted)</p> <p> "SC" SIM (lock SIM card) (SIM asks password in ME power-up and when this lock command issued)</p> <p> "AO" BAOC (Barr All Outgoing Calls) (refer GSM02.88[6] clause 1)</p> <p> "OI"BOIC (Barr Outgoing International Calls) (refer GSM02.88[6] clause 1)</p> <p> "OX" BOIC-exHC (Barr Outgoing International Calls except to Home Country) (refer GSM02.88[6] clause 1)</p> <p> "AI"BAIC (Barr All Incoming Calls) (refer GSM02.88[6] clause 2)</p> <p> "IR" BIC-Roam (Barr Incoming Calls when Roaming outside the home country) (refer GSM02.88 [6] clause 2)</p> <p> "AB" All Barring services (refer GSM02.30[19]) (applicable only for <mode>=0)</p> <p> "AG" All out Going barring services (refer GSM02.30[19]) (applicable only for <mode>=0)</p> <p> "AC" All in Coming barring services (refer GSM02.30[19]) (applicable only for <mode>=0)</p> <p> "FD" SIM fixed dialing memory: If the mobile is locked to "FD",</p>

	<p>only the phone numbers stored to the “FD” memory can be dialed</p> <p>“BN” SIM barred memory: If the mobile is locked to “BN”, the phone numbers stored to the “BN” memory can not be dialed</p> <p>“PN” Network Personalisation (refer GSM 02.22[33])</p> <p>“PU” network sUbset Personalisation (refer GSM 02.22[33])</p> <p>“PP” service Provider Personalisation (refer GSM 02.22[33])</p> <p>“PC” Corporate Personalisation (refer GSM 02.22[33])</p> <p><mode> 0 unlock 1 lock 2 query status</p> <p><passwd> password</p> <p><class> 1 voice 2 data 4 fax 7 all classes (default)</p> <p><status> 0 off 1 on</p>
Reference GSM 07.07 [14]	Note

3.2.21 AT+CLIP Calling line identification presentation

AT+CLIP Calling line identification presentation	
Read Command AT+CLIP?	<p>Response</p> <p>+CLIP: <n>, <m></p> <p>OK</p> <p>If error is related to ME functionality:</p> <p>+CME ERROR: <err></p>
	<p>Parameters</p> <p>see write command</p>
Test Command AT+CLIP=?	<p>Response</p> <p>+CLIP: (list of supported <n>s)</p> <p>OK</p>
	<p>Parameters</p> <p>see write command</p>
Write Command AT+CLIP=<n>	<p>Response</p> <p>TA enables or disables the presentation of the CLI at the TE. It has no effect on the execute of the supplementary service CLIP in the network.</p> <p>OK</p> <p>If error is related to ME functionality:</p> <p>+CME ERROR: <err></p>

	<div>Parameters</div> <table><tr><td><n></td><td>0</td><td>suppress unsolicited result codes</td></tr><tr><td></td><td>1</td><td>display unsolicited result codes</td></tr><tr><td><m></td><td>0</td><td>CLIP not provisioned</td></tr><tr><td></td><td>1</td><td>CLIP provisioned</td></tr><tr><td></td><td>2</td><td>unknown</td></tr></table>	<n>	0	suppress unsolicited result codes		1	display unsolicited result codes	<m>	0	CLIP not provisioned		1	CLIP provisioned		2	unknown
<n>	0	suppress unsolicited result codes														
	1	display unsolicited result codes														
<m>	0	CLIP not provisioned														
	1	CLIP provisioned														
	2	unknown														
	<div>Unsolicited result code</div> <p>When the presentation of the CLI at the TE is enabled (and calling subscriber allows), an unsolicited result code is returned after every RING (or +CRING: <type>) at a mobile terminating call.</p> <p>+CLIP: <number>, <type>,””,<alphaId>,<CLI validity></p> <div>Parameter</div> <table><tr><td><number></td><td>string type phone number of calling address in format specified by <type></td></tr><tr><td><type></td><td>type of address octet in integer format; 145 when dialing string includes international access code character “+”, otherwise 129</td></tr><tr><td><alphaId></td><td>string type alphanumeric representation of <number> corresponding to the entry found in phone book</td></tr><tr><td><CLI validity></td><td><table><tr><td>0</td><td>CLI valid</td></tr><tr><td>1</td><td>CLI has been withheld by the originator</td></tr><tr><td>2</td><td>CLI is not available due to interworking problems or limitations of originating network</td></tr></table></td></tr></table>	<number>	string type phone number of calling address in format specified by <type>	<type>	type of address octet in integer format; 145 when dialing string includes international access code character “+”, otherwise 129	<alphaId>	string type alphanumeric representation of <number> corresponding to the entry found in phone book	<CLI validity>	<table><tr><td>0</td><td>CLI valid</td></tr><tr><td>1</td><td>CLI has been withheld by the originator</td></tr><tr><td>2</td><td>CLI is not available due to interworking problems or limitations of originating network</td></tr></table>	0	CLI valid	1	CLI has been withheld by the originator	2	CLI is not available due to interworking problems or limitations of originating network	
<number>	string type phone number of calling address in format specified by <type>															
<type>	type of address octet in integer format; 145 when dialing string includes international access code character “+”, otherwise 129															
<alphaId>	string type alphanumeric representation of <number> corresponding to the entry found in phone book															
<CLI validity>	<table><tr><td>0</td><td>CLI valid</td></tr><tr><td>1</td><td>CLI has been withheld by the originator</td></tr><tr><td>2</td><td>CLI is not available due to interworking problems or limitations of originating network</td></tr></table>	0	CLI valid	1	CLI has been withheld by the originator	2	CLI is not available due to interworking problems or limitations of originating network									
0	CLI valid															
1	CLI has been withheld by the originator															
2	CLI is not available due to interworking problems or limitations of originating network															
Reference																

3.2.22 AT+CLIR Calling Line Identification Restriction

AT+CLIR Calling Line Identification Restriction	
Read Command AT+CLIR?	Response +CLIR: <n>, <m> OK If error is related to ME functionality: +CME ERROR: <err>
	Parameters see write command
Test Command AT+CLIR=?	Response +CLIR: (list of supported <n>s) OK

Write Command AT+CLIR=<n>	Response TA restricts or enables the presentation of the CLI to the called party when originating a call. The command overrides the CLIR subscription (default is restricted or allowed) when temporary mode is provisioned as a default adjustment for all following outgoing calls. This adjustment can be revoked by using the opposite command. OK If error is related to ME functionality: +CME ERROR: <err>
	Parameters <n> (parameter sets the adjustment for outgoing calls): 0 presentation indicator is used according to the subscription of the CLIR service 1 CLIR invocation 2 CLIR suppression <m> (parameter shows the subscriber CLIR service status in the network): 0 CLIR not provisioned 1 CLIR provisioned in permanent mode 2 unknown (e.g. no network, etc.) 3 CLIR temporary mode presentation restricted 4 CLIR temporary mode presentation allowed
Reference	

3.2.23 AT+CMEE Report mobile equipment error

AT+CMEE Report mobile equipment error	
Test command AT+CMEE=?	Response +CMEE: (list of supported <n>s) OK Parameters see Write command
Read command AT+CMEE?	Response +CMEE: <n> OK Parameters see Write command

Write command AT+CMEE=<n>	Response TA disables or enables the use of result code +CME ERROR: <err> as an indication of an error relating to the functionality of the ME. OK
	Parameters <div> <div><n></div> <div> <div>0</div> <div>1</div> <div>2</div> </div> <div> <div>disable result code</div> <div>enable result code and use numeric values</div> <div>enable result code and use verbose values</div> </div> </div>
Reference GSM 07.07 [13]	

3.2.24 AT+COLP Connected Line Identification Presentation

AT+COLP Connected Line Identification Presentation

Read Command AT+COLP?	Response +COLP: <n>,<m> OK If error is related to ME functionality: +CME ERROR: <err>
	Parameters See write command
Test Command AT+COLP=?	Response +COLP: (list of supported <n>s) OK
	Parameters See write command
Write Command AT+COLP=[<n>]	Response TA enables or disables the presentation of the COL(Connected Line) at the TE for a mobile originated call. It has no effect on the execution of the supplementary service COLR in the network. Intermediate result code is returned from TA to TE before any +CR or V.25ter responses. OK

	Parameters <n> (parameter sets/shows the result code presentation status in the TA): 0 disable 1 enable <m> (parameter shows the subscriber COLP service status in the network): 0 COLP not provisioned 1 COLP provisioned 2 unknown (e.g. no network, etc.)
	Intermediate result code When enabled (and called subscriber allows), an intermediate result code is returned before any +CR or V.25ter responses: +COLP:<number>,<type>[,<subaddr>,<satype> [,<alpha>]]
	Parameters <number> string type phone number of format specified by <type> <type> type of address octet in integer format; 145 when dialing string includes international access code character “+”, otherwise 129 <subaddr> string type sub address of format specified by <satype> <satype> type of sub address octet in integer format (refer GSM 04.08 [8] sub clause 10.5.4.8) <alpha> optional string type alphanumeric representation of <number> corresponding to the entry found in phone book
Reference	

3.2.25 AT+COPS Operator selection

AT+COPS Operator selection	
Test command AT+COPS=?	Response TA returns a list of quadruplets, each representing an operator present in the network. Any of the formats may be unavailable and should then be an empty field. The list of operators shall be in order: home network, networks referenced in SIM, and other networks. +COPS: list of supported(<stat>, long alphanumeric <oper>, short alphanumeric <oper>, numeric <oper>)s [,(list of supported <mode>s),(list of supported <format>s)] OK If error is related to ME functionality: +CME ERROR: <err>

	Parameters see Write command																																							
Read command AT+COPS?	Response TA returns the current mode and the currently selected operator. If no operator is selected, <format> and <oper> are omitted. +COPS: <mode>[, <format>[, <oper>]] OK If error is related to ME functionality: +CME ERROR: <err>																																							
	Parameters see Write command																																							
Write command AT+COPS = <mode> [, <format>[, <oper>]]	Response TA forces an attempt to select and register the GSM network operator. If the selected operator is not available, no other operator shall be selected (except <mode>=4). The selected operator name format shall apply to further read commands (+COPS?). OK If error is related to ME functionality: +CME ERROR: <err>																																							
	Parameters <table><tr><td><stat></td><td>0</td><td>unknown</td></tr><tr><td></td><td>1</td><td>operator available</td></tr><tr><td></td><td>2</td><td>operator current</td></tr><tr><td></td><td>3</td><td>operator forbidden</td></tr><tr><td><oper></td><td></td><td>operator in format as per <mode></td></tr><tr><td><mode></td><td>0</td><td>automatic mode; <oper> field is ignored</td></tr><tr><td></td><td>1</td><td>manual operator selection; <oper> field shall be present</td></tr><tr><td></td><td>2</td><td>manual deregister from network</td></tr><tr><td></td><td>3</td><td>set only <format> (for read command +COPS?) – not shown in Read command response</td></tr><tr><td></td><td>4</td><td>manual/automatic selected; if manual selection fails, automatic mode (<mode>=0) is entered</td></tr><tr><td><format></td><td>0</td><td>long format alphanumeric <oper>;can be up to 16 characters long</td></tr><tr><td></td><td>1</td><td>short format alphanumeric <oper></td></tr><tr><td></td><td>2</td><td>numeric <oper>; GSM Location Area Identification number</td></tr></table>	<stat>	0	unknown		1	operator available		2	operator current		3	operator forbidden	<oper>		operator in format as per <mode>	<mode>	0	automatic mode; <oper> field is ignored		1	manual operator selection; <oper> field shall be present		2	manual deregister from network		3	set only <format> (for read command +COPS?) – not shown in Read command response		4	manual/automatic selected; if manual selection fails, automatic mode (<mode>=0) is entered	<format>	0	long format alphanumeric <oper>;can be up to 16 characters long		1	short format alphanumeric <oper>		2	numeric <oper>; GSM Location Area Identification number
<stat>	0	unknown																																						
	1	operator available																																						
	2	operator current																																						
	3	operator forbidden																																						
<oper>		operator in format as per <mode>																																						
<mode>	0	automatic mode; <oper> field is ignored																																						
	1	manual operator selection; <oper> field shall be present																																						
	2	manual deregister from network																																						
	3	set only <format> (for read command +COPS?) – not shown in Read command response																																						
	4	manual/automatic selected; if manual selection fails, automatic mode (<mode>=0) is entered																																						
<format>	0	long format alphanumeric <oper>;can be up to 16 characters long																																						
	1	short format alphanumeric <oper>																																						
	2	numeric <oper>; GSM Location Area Identification number																																						
Reference GSM 07.07 [14]																																								

3.2.26 AT+CPAS Mobile equipment activity status

AT+CPAS Mobile equipment activity status	
Test command AT+CPAS=?	<p>Response</p> <p>+CPAS: (list of supported <pas>s) OK</p>
	<p>Parameters</p> <p>see execute command</p>
Execute command AT+CPAS	<p>Response</p> <p>TA returns the activity status of ME.</p> <p>+CPAS: <pas> OK</p> <p>If error is related to ME functionality:</p> <p>+CME ERROR: <err></p>
	<p>Parameters</p> <p><pas> 0 ready (ME allows commands from TA/TE)</p> <p> 2 unknown (ME is not guaranteed to respond to instructions)</p> <p> 3 ringing (ME is ready for commands from TA/TE, but the ringer is active)</p> <p> 4 call in progress (ME is ready for commands from TA/TE, but a call is in progress)</p>
Reference GSM 07.07 [13]	

3.2.27 AT+CPBF Find phone book entries

AT+CPBF Find phone book entries	
Test command AT+CPBF=?	<p>Response</p> <p>+CPBF: [maximum length of field <nlength>],[maximum length of field <tlength>]</p> <p>OK</p>
	<p>Parameter</p> <p>see execute command</p>
Write Command AT+CPBF=<find text>	<p>Response</p> <p>TA returns phone book entries (from the current phone book memory storage selected with +CPBS) which contain alphanumeric string <findtext>.</p> <p>[+CPBF: <index1>,<number>,<type>,<text>[[...]</p> <p><CR><LF>+CBPF: <index2>,<number>,<type>,<text>]</p> <p>OK</p>

	Parameter <index1>, <index2> integer type values in the range of location numbers of phone book memory <number> string type phone number of format <type> <type> type of address octet in integer format ; 145 when dialling string includes international access code character "+", otherwise 129 <findtext>, <text> string type field of maximum length <length> in current TE character set specified by +CSCS. <nlength> integer type value indicating the maximum length of field <number> <tlength> integer type value indicating the maximum length of field <text>
Reference GSM 07.07 [13]	Note

3.2.28 AT+CPBR Read current phone book entries

AT+CPBR Read current phone book entries

Test command AT+CPBR=?	Response TA returns location range supported by the current storage as a compound value and the maximum lengths of <number> and <text> fields. +CPBR: (list of supported <index>s), <nlength>, <tlength> OK
	Parameter <index> location number <nlength> max. length of phone number <tlength> max. length of text for number
Write command AT+CPBR= <index1> [, <index2>]	Response TA returns phone book entries in location number range <index1>...<index2> from the current phone book memory storage selected with +CPBS. If <index2> is left out, only location <index1> is returned. +CPBR: <index1>, <number>, <type>, <text>[<CR><LF>+CPBR:+CPBR: <index2>, <number>, <type>, <text>] OK

	Parameter <index1> read as of this location number <index2> read to this location number <number> phone number <type> type of number <text> ext for phone number in current TE character set specified by +CSCS.
Reference GSM 07.07 [13]	Note

3.2.29 AT+CPBS Select phone book memory storage

AT+CPBS Select phone book memory storage	
Test command AT+CPBS=?	Response +CPBS: (list of supported <storage>s) OK
	Parameter see Write command
Read command AT+CPBS?	Response +CPBS: <storage>[,<used>,<total>] OK
	Parameter See Write command.
Write command AT+CPBS=<storage>	Response TA selects current phone book memory storage, which is used by other phone book commands. OK

3.2.30 AT+CPBW Write phone book entry

Test command	Response
AT+CPBW=?	TA returns location range supported by the current storage, the maximum

13.11.2006

	<p>Parameter</p> <p><nlength> max. length of phone number</p> <p><tlength> max. length of text for number</p> <p><index> location number</p> <p><number> phone number</p> <p><type> type of number; e.g. 145 when dialing string includes international access code character “+”, otherwise 129</p> <p><text> text for phone number in current TE character set specified by +CSCS.</p> <p>Note: The following characters in <text> must be entered via the escape sequence:</p> <table><tr><td>GSM char.</td><td>Seq. Seq.(hex)</td><td>Note</td></tr><tr><td>\</td><td>\5C 5C 35 43</td><td>(backslash)</td></tr><tr><td>“</td><td>\22 5C 32 32</td><td>(string delimiter)</td></tr><tr><td>BSP</td><td>\08 5C 30 38</td><td>(backspace)</td></tr><tr><td>NULL</td><td>\00 5C 30 30</td><td>(GSM null)</td></tr></table> <p>‘0’ (GSM null) may cause problems for application layer software when reading string lengths.</p>	GSM char.	Seq. Seq.(hex)	Note	\	\5C 5C 35 43	(backslash)	“	\22 5C 32 32	(string delimiter)	BSP	\08 5C 30 38	(backspace)	NULL	\00 5C 30 30	(GSM null)
GSM char.	Seq. Seq.(hex)	Note														
\	\5C 5C 35 43	(backslash)														
“	\22 5C 32 32	(string delimiter)														
BSP	\08 5C 30 38	(backspace)														
NULL	\00 5C 30 30	(GSM null)														
Reference GSM 07.07 [13]	Note															

3.2.31 AT+CPIN Enter PIN

AT+CPIN Enter PIN	
Test command AT+CPIN=?	<p>Response OK</p> <p>Parameter see execute command</p>
Read command AT+CPIN?	<p>Response</p> <p>TA returns an alphanumeric string indicating whether some password is required or not.</p> <p>+CPIN: <code></p> <p>OK</p>

	<p>Parameter</p> <p><code> READY no further entry needed</p> <p>SIM PIN ME is waiting for SIM PIN</p> <p>SIM PUK ME is waiting for SIM PUK</p> <p>PH_SIM PIN ME is waiting for phone to SIM card (antitheft)</p> <p>PH_SIM PUK ME is waiting for SIM PUK (antitheft)</p> <p>SIM PIN2 PIN2, e.g. for editing the FDN book possible only if preceding command was acknowledged with +CME ERROR:17</p> <p>SIM PUK2 possible only if preceding command was acknowledged with error +CME ERROR:18.</p>
<p>Write command</p> <p>AT+CPIN=<pin> [, <new pin>]</p>	<p>Response</p> <p>TA stores a password which is necessary before it can be operated (SIM PIN, SIM PUK, PH-SIM PIN, etc.). If the PIN is to be entered twice, the TA shall automatically repeat the PIN. If no PIN request is pending, no action is taken and an error message, +CME ERROR, is returned to TE.</p> <p>If the PIN required is SIM PUK or SIM PUK2, the second pin is required. This second pin, <newpin>, is used to replace the old pin in the SIM.</p> <p>OK</p> <p>Parameter</p> <p><pin> string type; password</p> <p><new pin> string type; If the PIN required is SIM PUK or SIMPUK2: new password</p>
<p>Reference</p> <p>GSM 07.07 [13]</p>	<p>Note</p>

3.2.32 AT+CPWD Change password

AT+CPWD Change password	
<p>Test command</p> <p>AT+CPWD=?</p>	<p>Response</p> <p>TA returns a list of pairs which present the available facilities and the maximum length of their password.</p> <p>+CPWD: list of supported (<fac>, <pwdlength>)s</p> <p>OK</p> <p>Parameter</p> <p><fac></p> <p>otherwise see execute command, without “FD”</p> <p><pwdlength> integer max. length of password</p>
<p>Write command</p> <p>AT+CPWD = <fac>, [<oldpwd>],</p>	<p>Response</p> <p>TA sets a new password for the facility lock function..</p> <p>OK</p>

	Parameter <fac> “SC” SIM (lock SIM card) (SIM asks password in ME power-up and when this lock command issued) “AO” BAOC (Barr All Outgoing Calls) (refer GSM02.88[6] clause 1) “OI” BOIC (Barr Outgoing International Calls) (refer GSM02.88[6] clause 1) “OX” BOIC-exHC (Barr Outgoing International Calls except to Home Country) (refer GSM02.88[6] clause 1) “AI” BAIC (Barr All Incoming Calls) (refer GSM02.88[6] clause 2) “IR” BIC-Roam (Barr Incoming Calls when Roaming outside the home country) (refer GSM02.88 [6] clause 2) “AB” All Barring services (refer GSM02.30[19]) (applicable only for <mode>=0) “AG” All outGoing barring services (refer GSM02.30[19]) (applicable only for <mode>=0) “AC” All inComing barring services (refer GSM02.30[19]) (applicable only for <mode>=0) "FD" SIM fixed dialing memory feature "BN" SIM barred memory feature “P2” SIM PIN2<oldpwd> password specified for the facility from the user interface or with command. If an old password has not yet been set, <oldpwd> is not to enter. <newpwd> new password
Reference GSM 07.07 [13]	Note

3.2.33 AT+CR Service Reporting Control

AT+CR Service Reporting Control	
Test command AT+CR=?	Response +CR: list of supported <mode>s OK
	Parameters see Write command
Read command AT+CR?	Response +CR: <mode> OK
	Parameters see Write command

<div>Write command</div> <div>AT+CR=<mode></div>	<div>Response</div> <div>TA controls whether or not intermediate result code +CR: <serv> is returned from the TA to the TE at a call set up.</div> <div>OK</div> <div>Parameters</div> <div><div><mode></div><div><div><div>0</div><div>disable</div></div><div>1</div><div>enable</div></div></div>
	<div>Intermediate result code</div> <div>If enabled, an intermediate result code is transmitted at the point during connect negotiation at which the TA has determined which speed and quality of service will be used, before any error control or data compression reports are transmitted, and before any final result code (e.g. CONNECT) is transmitted.</div> <div>+CR:<serv></div> <div>Parameters</div> <div><div><serv></div><div><div>ASYNC</div><div>asynchronous transparent</div></div><div>SYNC</div><div>synchronous transparent</div><div>REL ASYNC</div><div>asynchronous non-transparent</div><div>REL SYNC</div><div>synchronous non-transparent</div></div>
<div>Reference</div> <div>GSM 07.07 [13]</div>	

3.2.34 AT+CRC Set Cellular Result Codes for incoming call indication

AT+CRC Set Cellular Result Codes for incoming call indication	
Test command AT+CRC=?	Response +CRC: list of supported <mode>s OK
	Parameters see Write command
Read command AT+CRC?	Response +CRC: <mode> OK
	Parameters see Write command
Write command AT+CRC=<mode> >	Response TA controls whether or not the extended format of incoming call indication is used. OK
	Parameters <mode> 0 disable extended format 1 enable extended format

	<p>Unsolicited result code</p> <p>When enabled, an incoming call is indicated to the TE with unsolicited result code +CRING: <type> instead of the normal RING.</p> <p>Parameters</p> <table><tr><td><type></td><td>ASYN</td><td>asynchronous transparent</td></tr><tr><td></td><td>SYNC</td><td>synchronous transparent</td></tr><tr><td></td><td>REL ASYN</td><td>asynchronous non-transparent</td></tr><tr><td></td><td>REL SYNC</td><td>synchronous non-transparent</td></tr><tr><td></td><td>FAX</td><td>facsimile</td></tr><tr><td></td><td>VOICE</td><td>voice</td></tr></table>	<type>	ASYN	asynchronous transparent		SYNC	synchronous transparent		REL ASYN	asynchronous non-transparent		REL SYNC	synchronous non-transparent		FAX	facsimile		VOICE	voice
<type>	ASYN	asynchronous transparent																	
	SYNC	synchronous transparent																	
	REL ASYN	asynchronous non-transparent																	
	REL SYNC	synchronous non-transparent																	
	FAX	facsimile																	
	VOICE	voice																	
Reference																			
GSM 07.07 [13]																			

3.2.35 AT+CREG Network registration

AT+CREG Network registration	
Test command AT+CREG=?	<p>Response</p> <p>+CREG: list of supported <n>s OK</p> <p>Parameters</p> <p>see Write command</p>
Read command AT+CREG?	<p>Response</p> <p>TA returns the status of result code presentation and an integer <stat> which shows whether the network has currently indicated the registration of the ME. Location information elements <lac> and <ci> are returned only when <n>=2 and ME is registered in the network.</p> <p>+CREG: <n>,<stat>[,<lac>,<ci>] OK</p> <p>If error is related to ME functionality:</p> <p>+CME ERROR: <err></p>
Write command AT+CREG=[<n>]	<p>Response</p> <p>TA controls the presentation of an unsolicited result code +CREG: <stat> when <n>=1 and there is a change in the ME network registration status.</p> <p>OK</p>

	Parameters <n> 0 disable network registration unsolicited result code 1 enable network registration unsolicited result code +CREG: <stat> 2 enable network registration unsolicited result code with location information <stat> 0 not registered, ME is not currently searching a new operator to register to 1 registered, home network 2 not registered, but ME is currently searching a new operator to register to 3 registration denied 4 unknown 5 registered, roaming < lac > string type; two byte location area code in hexadecimal format < ci > string type; two byte cell ID in hexadecimal format
	Unsolicited result code If <n>=1 and there is a change in the ME network registration status: +CREG: <stat> If <n>=2 and there is a change in the ME network registration status or a change of the network cell: +CREG: <stat>[,<lac>,<ci>] Parameters see write command
Reference	
GSM 07.07 [13]	

3.2.36 AT+CRLP Select Radio Link Protocol param. for orig. non-transp. data call

AT+CRLP Select Radio Link Protocol param. for orig. non-transp. data call

Test command	Response
AT+CRLP=?	TA returns values supported. RLP versions 0 and 1 share the same parameter set. TA returns only one line for this set (where <verx> is not present). +CRLP: (list of supported <iws>s), (list of supported <mws>s), (list of supported <T1>s), (list of supported <N2>s), (list of supported <ver1>s), (list of supported <T4>s) ... OK
	Parameters see Write command

Read command AT+CRLP?	Response TA returns current settings for RLP version. RLP versions 0 and 1 share the same parameter set. TA returns only one line for this set (where <verx> is not present). +CRLP: <iws>,<mws>,<T1>,<N2>,<ver1>,<T4> ... OK
	Parameters see Write command
Write command AT+CRLP=[<iws>,<mws>,<T1>,<N2>,<ver>,<T4>]]]]]	Response TA sets radio link protocol (RLP) parameters used when non-transparent data calls are setup. OK Parameters <iws> 0-61 Interworking window size (IWF to MS) <mws> 0-61 Mobile window size (MS to IWF) <T1> 39-255 acknowledgment timer T1 in 10 ms units] <N2> 1-255 retransmission attempts N2 <verx> 0-1 RLP version number in integer format; when version indication is not present it shall equal 0. Note: Versions 0 and 1 share the same parameter set. <T4> 3-255 re-sequencing period in integer format, in units of 10 ms. This is NOT used for RLP versions 0 and 1.
Reference GSM 07.07 [13]	

3.2.37 AT+CRSM Restricted SIM access

AT+CRSM Restricted SIM access	
Test command AT+CRSM=?	Response OK

Write command AT+CRSM=<command>[,<fileId>[,<P1>,<P2>,<P3>[,<data>]]]	Response +CRSM: <sw1>, <sw2> [,<response>] OK / ERROR / +CME ERROR: <err> Parameter <command> 176 READ BINARY 178 READ RECORD 192 GET RESPONSE 214 UPDATE BINARY 220 UPDATE RECORD 242 STATUS all other values are reserved; refer GSM 11.11. <fileId> integer type; this is the identifier for an elementary data file on SIM. Mandatory for every command except STATUS <P1>,<P2>,<P3> integer type, range 0 - 255 parameters to be passed on by the ME to the SIM; refer GSM 11.11. <data> information which shall be written to the SIM (hexadecimal character format) <sw1>, <sw2> integer type, range 0 - 255 status information from the SIM about the execution of the actual command. These parameters are delivered to the TE in both cases, on successful or failed execution of the command; refer GSM 11.11. <response> response of a successful completion of the command previously issued (hexadecimal character format)
Reference GSM 07.07 GSM 11.11	

3.2.38 AT+CSQ Signal Quality Report

AT+CSQ Signal Quality Report	
Test command AT+CSQ=?	Response +CSQ: (list of supported <rssi>s),(list of supported <ber>s)
Execute command AT+CSQ	Response +CSQ: <rssi>,<ber> +CME ERROR: <err> Execution command returns received signal strength indication <rssi> and channel bit error rate <ber> from the ME. Test command returns values supported by the TA.

	Parameters <rss>: 0 -113 dBm or less 1 -111 dBm 2...30 -109... -53 dBm 31 -51 dBm or greater 99 not known or not detectable <ber> (in percent): 0...7 as RXQUAL values in the table in GSM 05.08 [20] subclause 8.2.4 99 not known or not detectable
Reference GSM 07.07 [13]	Note

3.2.39 AT+FCLASS FAX: select,read or test service class

AT+FCLASS FAX: select,read or teest service class	
Test command AT+FCLASS=?	Response +FCLASS: list of supported <n>s) OK
	Parameter see Write command
Read command AT+ FCLASS?	Response + FCLASS: <n> OK
	Parameter See Write command.
Write command AT+FCLASS= <n>	Response TA sets a particular mode of operation (data, fax). This causes the TA to process information in a manner suitable for that type of information OK
	Parameter <n> 0 data 1 fax class 1 (TIA-578-A)
Reference GSM 07.07 [13]	Note

3.2.40 AT+FMI FAX: report manufactured ID

AT+FMI FAX: report manufactured ID	
Test command AT+ FMI =?	Response OK

	Parameter see set command
Execute command AT+ FMI	Response TA reports one or more lines of information text which permit the user to identify the manufacturer. <manufacturer Id> OK
	Parameter <manufacturer Id>
Reference EIA/TIA-578-D	Note

3.2.41 AT+FMM FAX: report model ID

AT+FMM FAX: report model ID	
Test command AT+ FMM =?	Response OK
	Parameter see set command
Execute command AT+ FMM	Response TA reports one or more lines of information text which permit the user to identify the specific model of device. <model Id> OK
	Parameter <model Id>
Reference EIA/TIA-578-D	Note

3.2.42 AT+FMR AX: report revision ID

AT+FMR FAX: report revision ID	
Test command AT+ FMR =?	Response OK
	Parameter see Write command
Execute command AT+ FMR	Response TA reports one or more lines of information text which permit the user to identify the version, revision level or data or other information of the device. <Revision Id> OK

	Parameter <Revision Id>
Reference EIA/TIA-578-D	Note

3.2.43 AT+VTD Tone duration

AT+VTD Tone duration	
Test command AT+VTD=?	Response +VTD: list of supported <n>s OK
	Parameters see Write command
Read command AT+VTD?	Response +VTD: <n> OK
	Parameters see Write command
Writecommand AT+VTD = <n>	Response This command refers to an integer <n> that defines the length of tones emitted as a result of the +VTS command. This does not affect the D command. OK
	Parameters <n> 1-255 duration of the tone in 1/10 seconds
Reference GSM 07.07 [13]	Note

3.2.44 AT+VTS DTMF and tone generation

AT+VTS DTMF and tone generation	
Test command AT+VTS=?	Response +VTS: list of supported <dtmf>s, list of supported <duration>s OK
	Parameters see Write command
Read command AT+VTS?	Response OK

Write command AT+VTS=<dtmf-string>	Response This command allows the transmission of DTMF tones and arbitrary tones in voice mode. These tones may be used (for example) when announcing the start of a recording period. Note: D is used only for dialing. OK If error is related to ME functionality: +CME ERROR: <err> Note: The command is write only. Parameters <dtmf-string> which has a max length of 20 characters, must be entered between double quotes (“ ”) and consists of combinations of the following separated by commas: 1) <dtmf> A single ASCII characters in the set 0-9,#,*,A-D. This is interpreted as a sequence of DTMF tones whose duration is set by the +VTD command. 2) {<dtmf>, <duration>} This is interpreted as a DTMF tone whose duration is determined by <duration>. <duration> duration of the tone in 1/10 seconds range :1-255
Reference GSM 07.07 [13]	Note

3.2.45 AT+CMUX Multiplexer Control

AT+CMUX Multiplexer Control	
Test command AT+CMUX=?	Response +CMUX: (list of supported <mode>,<subset>,<port_speed>,<N1>,<T1>,<N2>,<T2>,<T3>,<k>) Parameter See Write command
Read Command AT+CMUX?	Response: +CMUX: (mode-1),0,5,127,10,3,30,10,2 OK <i>ERROR</i> Parameter See Write command

Write command AT+CMUX=<mode>[,<subset>[,<port_speed>[,<N1>[,<T1>[,<N2>[,<T2>[,<T3>[,<k>]]]]]]]	Parameters <mode> multiplexer transparency mechanism -1 Multiplexer not active <u>0</u> Standard / Embedded multiplexer 1 Advanced option (GSM 07.10 multiplexer) <subset> the way in which the multiplexer control channel is set up <u>0</u> UIH frames used only <port_speed> transmission rate <u>5</u> 115200bit/s <N1> maximum frame size <u>127</u> <T1> acknowledgement timer in units of ten milliseconds <u>10</u> <N2> maximum number of re-transmissions <u>3</u> <T2> response timer for the multiplexer control channel in units of ten milliseconds <u>30</u> <T3> wake up response timers in seconds <u>10</u> <k> window size, for Advanced operation with Error Recovery options <u>2</u>																		
	Note : 1. Advanced option with Error Recovery options is not supported. 2. The multiplexing transmission rate is according to the current serial baud rate. It is recommended to enable multiplexing protocol under 115200 bit/s baud rate. 3. Multiplexer control channels are listed as follows: <table><tr><th>Channel Number</th><th>Type</th><th>DLCI</th></tr><tr><td>None</td><td>Multiplexer Control</td><td>0</td></tr><tr><td>1</td><td>07.07 and 07.05</td><td>1</td></tr><tr><td>2</td><td>07.07 and 07.05</td><td>2</td></tr><tr><td>3</td><td>07.07 and 07.05</td><td>3</td></tr><tr><td>4</td><td>07.07 and 07.05</td><td>4</td></tr></table>	Channel Number	Type	DLCI	None	Multiplexer Control	0	1	07.07 and 07.05	1	2	07.07 and 07.05	2	3	07.07 and 07.05	3	4	07.07 and 07.05	4
Channel Number	Type	DLCI																	
None	Multiplexer Control	0																	
1	07.07 and 07.05	1																	
2	07.07 and 07.05	2																	
3	07.07 and 07.05	3																	
4	07.07 and 07.05	4																	

3.2.46 AT+CNUM Subscriber Number

AT+CNUM Subscriber Number	
Test command AT+CNUM=?	Response OK

Execute command AT+CNUM	Response +CNUM: [<alpha1>,<number1>,<type1>[,<speed>,<service>[,<itc>]] [<CR><LF>+CNUM: [<alpha2>,<number2>,<type2>[,<speed>,<service>[,<itc>]] [...]] +CME ERROR: <err>
	Parameters <alphax> optional alphanumeric string associated with <numberx>; used character set should be the one selected with command Select TE Character Set +CSCS <numberx> string type phone number of format specified by <typex> <typex> type of address octet in integer format (refer GSM 04.08 [8] subclause 10.5.4.7) <speed> as defined by the +CBST command <service> (service related to the phone number:) 0 asynchronous modem 1 synchronous modem 2 PAD Access (asynchronous) 3 Packet Access (synchronous) 4 Voice 5 Fax <itc> (information transfer capability:) 0 3.1 kHz 1 UDI
Reference GSM 07.07 [13]	Note

3.2.47 AT+CPOL Preferred operator list

AT+CPOL Preferred operator list.	
Test command AT+CPOL=?	Response +CPOL: (list of supported <index>s),(list of supported <format>s)
	Parameters see Write command
Read command AT+CPOL?	Response +CPOL: <index1>,<format>,<oper1> [<CR><LF>+CPOL: <index2>,<format>,<oper2> [...]] +CME ERROR: <err>
	Parameter See Write command

Write command AT+CPOL=[<index>][,<format>[,<oper>]]	Response <i>+CME ERROR: <err></i>
	Parameters <index> integer type: order number of operator in SIM preferred operator list <format> 0 long format alphanumeric <oper> 1 short format alphanumeric <oper> 2 numeric <oper> <oper> string type: <format> indicates whether alphanumeric or numeric format used (see +COPS command)
Reference GSM 07.07 [13]	Note

3.2.48 AT+COPN Read operator names.

AT+COPN Read operator names.	
Test command AT+COPN=?	Response OK
Execute command AT+COPN	Response +COPN: <numeric1>,<alpha1 > [<CR><LF>+COPN: <numeric2>,<alpha2> [...]] +CME ERROR: <err>
	Parameters <numericn> string type: operator in numeric format (see +COPS) <alphan> string type: operator in long alphanumeric format (see +COPS)
Reference GSM 07.07 [13]	Note

3.2.49 AT+CFUN Set phone functionality.

AT+CFUN Set phone functionality.	
Test command AT+CFUN=?	Response +CFUN: (list of supported <fun>s), (list of supported <rst>s) +CME ERROR: <err>
	Parameters see Write command
Read command AT+CFUN?	Response +CFUN: <fun> +CME ERROR: <err>

	Parameter <i>See</i> Write command															
Write command AT+CFUN=<fun>, [<rst>]	Response <i>+CME ERROR: <err></i>															
	Parameters <table><tr><td><fun></td><td>0</td><td>minimum functionality</td></tr><tr><td></td><td>1</td><td>full functionality (Default)</td></tr><tr><td></td><td>4</td><td>disable phone both transmit and receive RF circuits</td></tr></table> <table><tr><td><rst>:</td><td>0</td><td>Set the ME to <fun> power level immediately. This is the default when <rst> is not given.</td></tr><tr><td></td><td>1</td><td>Set the ME to <fun> power level after the ME been reset.</td></tr></table>	<fun>	0	minimum functionality		1	full functionality (Default)		4	disable phone both transmit and receive RF circuits	<rst>:	0	Set the ME to <fun> power level immediately. This is the default when <rst> is not given.		1	Set the ME to <fun> power level after the ME been reset.
<fun>	0	minimum functionality														
	1	full functionality (Default)														
	4	disable phone both transmit and receive RF circuits														
<rst>:	0	Set the ME to <fun> power level immediately. This is the default when <rst> is not given.														
	1	Set the ME to <fun> power level after the ME been reset.														
Reference GSM 07.07 [13]	Note															

3.2.50 AT+CCLK Clock

AT+CCLK Clock			
Test command AT+CCLK=?	Response OK		
	Parameters		
Read command AT+CCLK?	Response +CCLK: <time> +CME ERROR: <err>		
	Parameter <i>See Write command</i>		
Write command AT+CCLK=<time> e>	Response +CME ERROR: <err>		
	Parameters <table> <tr> <td><time></td><td>string type value; format is "yy/MM/dd,hh:mm:ss±zz", where characters indicate year (two last digits), month, day, hour, minutes, seconds and time zone (indicates the difference, expressed in quarters of an hour, between the local time and GMT; range -48...+48). E.g. 6th of May 1994, 22:10:00 GMT+2 hours equals to "94/05/06,22:10:00+08"</td></tr> </table>	<time>	string type value; format is "yy/MM/dd,hh:mm:ss±zz", where characters indicate year (two last digits), month, day, hour, minutes, seconds and time zone (indicates the difference, expressed in quarters of an hour, between the local time and GMT; range -48...+48). E.g. 6th of May 1994, 22:10:00 GMT+2 hours equals to "94/05/06,22:10:00+08"
<time>	string type value; format is "yy/MM/dd,hh:mm:ss±zz", where characters indicate year (two last digits), month, day, hour, minutes, seconds and time zone (indicates the difference, expressed in quarters of an hour, between the local time and GMT; range -48...+48). E.g. 6th of May 1994, 22:10:00 GMT+2 hours equals to "94/05/06,22:10:00+08"		
Reference	Note		

GSM 07.07 [13]

3.2.51 AT+CSIM Generic SIM Access

AT+CSIM Generic SIM Access	
Test command AT+CSIM=?	Response OK
	Parameters
Write command AT+CSIM=<length>,<command>	Response +CSIM: <command>,<response> +CME ERROR: <err>
	Parameters <length> integer type: length of characters sent to the TE in <command> or <response> (i.e. twice the number of octets in the raw data) <command> string type: hex format: GSM 11.11 SIM command sent from the ME to the SIM <response> string type: hex format: GSM 11.11 response from SIM to <command>
Reference GSM 07.07 [13]	Note

3.2.52 AT+CALM Alert Sound Mode

AT+CALM Alert Sound Mode	
Test command AT+CALM=?	Response +CALM: (list of supported <mode>s) +CME ERROR: <err>
	Parameter See Write command
Read command AT+CALM?	Response +CALM: <mode> +CME ERROR: <err>
	Parameter See Write command
Write command AT+CALM=<mode>	Response +CME ERROR: <err>

	Parameters <mode> <u>0</u> normal mode 1 silent mode (all sounds from ME are prevented)
Reference GSM 07.07 [13]	Note

3.2.53 AT+CRSL Ringer Sound Level

AT+CRSL Ringer Sound Level	
Read command AT+CRSL?	Response +CRSL: <level> +CME ERROR: <err>
	Parameter See Write command
Test command AT+CRSL=?	Response +CRSL: (list of supported <level>s) +CME ERROR: <err>
	Parameter See Write command
Write command AT+CRSL=<level>	Response +CME ERROR: <err>
	Parameters <level> integer type value(0-100) with manufacturer specific range (smallest value represents the lowest sound level)
Reference GSM 07.07 [13]	Note Range of <level> is TBD

3.2.54 AT+CLVL Loud speaker volume level

AT+CLVL Loud speaker volume level	
Test command AT+CLVL=?	Response +CLVL: (list of supported <level>s) +CME ERROR: <err>
	Parameters see Write command
Read command AT+CLVL?	Response +CLVL: <level> +CME ERROR: <err>

	Parameter <i>See Write command</i>
Write command AT+CLVL=<level> I>	Response +CME ERROR: <err> Parameters <level> integer type value with manufacturer specific range (smallest value represents the lowest sound level)
Reference GSM 07.07 [13]	Note

3.2.55 AT+CMUT Mute control.

AT+CMUT Mute control.	
Test command AT+CMUT=?	Response +CMUT: (list of supported <n>s) Parameters <i>see Write command</i>
Read command AT+CMUT?	Response +CMUT: <n> +CME ERROR: <err> Parameter <i>See Write command</i>
Write command AT+CMUT=<n>	Response +CME ERROR: <err> Parameters <n> <u>0</u> mute off 1 mute on
Reference GSM 07.07 [13]	Note

3.2.56 AT+CPUC Price Per Unit and Currency Table

AT+CPUC Price Per Unit and Currency Table	
Test command AT+CPUC=?	Response OK Parameters <i>see Write command</i>
Read command AT+CPUC?	Response +CPUC: <currency>,<ppu> +CME ERROR: <err>

	Parameter <i>See Write command</i>
Write command AT+CPUC=<currency>,<ppu>[,<passwd>]	Response +CME ERROR: <err> Parameters <currency> string type; three-character currency code (e.g. “GBP”, “DEM”); character set as specified by command Select TE Character Set +CSCS <ppu> string type; price per unit; dot is used as a decimal separator (e.g. “2.66”) <passwd> string type; SIM PIN2
Reference GSM 07.07 [13]	Note

3.2.57 AT+CCWE Call Meter Maximum Event

AT+CCWE Call Meter Maximum Event	
Test command AT+CCWE=?	Response +CCWE: (list of supported <mode>s) +CME ERROR: <err> Parameters <i>see Write command</i>
Read command AT+CCWE?	Response +CCWE: <mode> +CME ERROR: <err> Parameter <i>See Write command</i>
Write command AT+CCWE=<mode>	Response +CME ERROR: <err> Parameters <mode> <u>0</u> Disable call meter warning event 1 Enable call meter warning event
	Unsolicited result codes supported: +CCWV Shortly before the ACM (Accumulated Call Meter) maximum value is reached, an unsolicited result code +CCWV will be sent, if enabled by this command. The warning is issued approximately when 5 seconds call time remains. It is also issued when starting a call if less than 5 s call time remains.

	Parameters
Reference GSM 07.07 [13]	Note GSM 07.07 specifies 30 seconds, so SIMCOM deviate from the specification.

3.2.58 AT+ CBC Battery charge

AT+ CBC Battery charge	
Test command AT+CBC=?	Response +CBC: (list of supported <bc>s),(list of supported <bcl>s)
	Parameters see Execute command
Read command AT+CBC?	Response +CME ERROR: <err>
	Parameter See Execute command
Execute command AT+CBC	Response +CBC: <bc>, <bcl> +CME ERROR: <err>
	Parameters <bc> charge status 0 ME is not charged 1 ME is charging 2 No battery present, just charger 3 Error or unknown state <bcl> battery connection level 0 battery is exhausted, or ME does not have a battery connected 1...100 battery has 1-100 percent of capacity remaining vent
Reference GSM 07.07 [13]	Note Support for this command will be hardware dependant.

3.2.59 AT+ CUSD Unstructured supplementary service data

AT+ CUSD Unstructured supplementary service data	
Test command AT+CUSD=?	Response +CUSD: <n>
	Parameters see Write command

Read command AT+CUSD?	Response +CUSD:<n>
	Parameter <n>
Write command AT+CUSD=[<n> [,<str>[,<dcs>]]	Response OK ERROR
	Parameters <n> a numeric parameter which indicates control of the unstructured supplementary service data 0 disable the result code presentation in the TA 1 enable the result code presentation in the TA 2 cancel session (not applicable to read command response) <str> string type USSD-string <dcs> Cell Broadcast Data Coding Scheme in integer format (default 0)
Reference GSM 03.38 [25]	Note

3.2.60 AT+ CSSN SUPPLEMENTARY SERVICES NOTIFICATION

AT+ CSSN SUPPLEMENTARY SERVICES NOTIFICATION	
Test command AT+CSSN=?	Response +CSSN: (list of supported <n>s), (list of supported <m>s)
	Parameters see Write command
Read command AT+CSSN?	Response +CSSN:<n>,<m>
	Parameter see Write command
Write command AT+CSSN=[<n>[,<m>]]	Response OK ERROR

	<p>Parameters</p> <p><n> a numeric parameter which indicates whether to show the +CSSI:<code1>[,<index>] result code presentation status after a mobile originated call setup</p> <p>0 disable</p> <p>1 enable</p> <p><m> a numeric parameter which indicates whether to show the +CSSU:<code2> result code presentation status during a mobile terminated call setup or during a call, or when a forward check supplementary service notification is received.</p> <p>0 disable</p> <p>1 enable</p> <p><code1> 0 unconditional call forwarding is active</p> <p>1 some of the conditional call forwarding are active</p> <p>2 call has been forwarded</p> <p>3 call is waiting</p> <p>4 this is a CUG call (also <index> present)</p> <p>5 outgoing calls are barred</p> <p>6 incoming calls are barred</p> <p>7 CLIR suppression rejected</p> <p><index> closed user group index</p> <p><code2> 0 this is a forwarded call</p>
Reference	Note

4 AT Commands According to GSM07.05

The GSM 07.05 commands are for performing SMS and CBS related operations. SIM600 II supports both Text and PDU modes.

4.1 Overview of AT Commands According to GSM07.05

Command	Description
AT+CMGD	DELETE SMS MESSAGE
AT+CMGF	SELECT SMS MESSAGE FORMAT
AT+CMGL	LIST SMS MESSAGES FROM PREFERRED STORE
AT+CMGR	READ SMS MESSAGE
AT+CMGS	SEND SMS MESSAGE
AT+CMGW	WRITE SMS MESSAGE TO MEMORY
AT+CMSS	SEND SMS MESSAGE FROM STORAGE
AT+CMGC	SEND SMS COMMAND
AT+CNMI	NEW SMS MESSAGE INDICATIONS
AT+CPMS	PREFERRED SMS MESSAGE STORAGE
AT+CRES	RESTORE SMS SETTINGS
AT+CSAS	SAVE SMS SETTINGS
AT+CSCA	SMS SERVICE CENTER ADDRESS
AT+CSCB	SELECT CELL BROADCAST SMS MESSAGES
AT+CSDH	SHOW SMS TEXT MODE PARAMETERS
AT+CSMP	SET SMS TEXT MODE PARAMETERS
AT+CSMS	SELECT MESSAGE SERVICE

4.2 Detailed Descriptions of AT Commands According to GSM07.05

4.2.1 AT+CMGD Delete SMS message

AT+CMGD Delete SMS message	
Read Command AT+CMGD=?	Response +CMGD: <Range of SMS on SIM card can be deleted> OK
Write Command AT+CMGD=<index>	Response TA deletes message from preferred message storage <mem1> location <index>. OK If error is related to ME functionality: +CMS ERROR <err>
	Parameters <index> integer type; value in the range of location numbers supported by the associated memory
Reference GSM 07.05	

4.2.2 AT+CMGF Select SMS Message Format

AT+CMGF Select SMS Message Format	
Read Command AT+CMGF?	Response +CMGF: <mode> OK
	Parameters see write command
Test Command AT+CMGF=?	Response +CMGF: list of supported <mode>s OK
Write Command AT+CMGF=[<mode>]	Response TA sets parameter to denote which input and output format of messages to use. OK
	Parameters <div> <div><mode></div> <div> <div>0</div> <div>1</div> </div> <div> <div>PDU mode</div> <div>text mode</div> </div> </div>
Reference GSM 07.05	

4.2.3 AT+CMGL List SMS messages from preferred store

AT+CMGL List SMS messages from preferred store

Test Command AT+CMGL=?	<p>Response</p> <p>+CMGL: list of supported <stat>s</p> <p>OK</p> <p>Parameters</p> <p>see write command</p>
Write Command AT+CMGL=[<stat>],[<n>]	<p>Parameters</p> <p><n> <u>0</u> Change sms status(default)</p> <p> 1 Keep sms status</p> <p>1) If text mode:</p> <p><stat> <u>"REC UNREAD"</u> Received unread messages (default)</p> <p> "REC READ" Received read messages</p> <p> "STO UNSENT" Stored unsent messages</p> <p> "STO SENT" Stored sent messages</p> <p> "ALL" All messages</p> <p>2) If PDU mode:</p> <p><stat> <u>0</u> Received unread messages (default)</p> <p> 1 Received read messages</p> <p> 2 Stored unsent messages</p> <p> 3 Stored sent messages</p> <p> 4 All messages</p> <p>Response</p> <p>TA returns messages with status value <stat> from message storage <mem1> to the TE. . If status of the message is 'received unread', status in the storage changes to 'received read'.</p> <p>1) If text mode (+CMGF=1) and command successful: for SMS-SUBMITs and/or SMS-DELIVERs:</p> <p>+CMGL:</p> <p><index>,<stat>,<oa/da>,[<alpha>],[<scts>],[<tooa/toda>,<length>]<CR><LF><data>[<CR><LF></p> <p>+CMGL:</p> <p><index>,<stat>,<da/oa>,[<alpha>],[<scts>],[<tooa/toda>,<length>]<CR><LF><data>[...]]</p> <p>OK</p> <p>2) If PDU mode (+CMGF=0) and command successful:</p> <p>+CMGL:<index>,<stat>,[<alpha>],<length><CR><LF><pdu><CR><LF></p> <p>+CMGL: <index>,<stat>,[alpha],<length><CR><LF><pdu>[...]]</p> <p>OK</p> <p>3) If error is related to ME functionality:</p>

+CMS ERROR: <err>

Parameters

<alpha>	string type alphanumeric representation of <da> or <oa> corresponding to the entry found in MT phonebook; implementation of this feature is manufacturer specific
<da>	GSM 03.40 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters; type of address given by <toa>
<data>	<p>In the case of SMS: GSM 03.40 TP-User-Data in text mode responses; format:</p> <ul style="list-style-type: none"> -if <dc> indicates that GSM 03.38 default alphabet is used and <fo> indicates that GSM 03.40 TP-User-Data-Header-Indication is not set: ME/TA converts GSM alphabet into current TE character set according to rules of Annex A -if <dc> indicates that 8-bit or UCS2 data coding scheme is used, or <fo> indicates that GSM 03.40 TP-User-Data-Header-Indication is set: ME/TA converts each 8-bit octet into two IRA character long hexadecimal number (e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65)) <p>In the case of CBS: GSM 03.41 CBM Content of Message in text mode responses; format:</p> <ul style="list-style-type: none"> - if <dc> indicates that GSM 03.38 default alphabet is used: ME/TA converts GSM alphabet into current TE character set according to rules of Annex A -if <dc> indicates that 8-bit or UCS2 data coding scheme is used: ME/TA converts each 8-bit octet into two IRA character long hexadecimal number
<length>	integer type value indicating in the text mode (+CMGF=1) the length of the message body <data> (or <cdata>) in characters; or in PDU mode (+CMGF=0), the length of the actual TP data unit in octets (i.e. the RP layer SMSC address octets are not counted in the length)
<index>	integer type; value in the range of location numbers supported by the associated memory
<oa>	GSM 03.40 TP-Originating-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters; type of address given by <toa>
<pdu>	In the case of SMS: GSM 04.11 SC address followed by

	<p>GSM 03.40 TPDU in hexadecimal format: ME/TA converts each octet of TP data unit into two IRA character long hexadecimal number (e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65)). In the case of CBS: GSM 03.41 TPDU in hexadecimal format.</p> <p><scts> GSM 03.40 TP-Service-Center-Time-Stamp in time-string format (refer <dt>)</p> <p><toda> GSM 04.11 TP-Destination-Address Type-of-Address octet in integer format (when first character of <da> is + (IRA 43) default is 145, otherwise default is 129)</p> <p><tooa> GSM 04.11 TP-Originating-Address Type-of-Address octet in integer format (default refer<toda>)</p>
Reference GSM 07.05	

4.2.4 AT+CMGR Read SMS message

AT+CMGR Read SMS message

Test Command AT+CMGR=?	Response OK
Write Command AT+CMGR=<index>	<p>Parameters</p> <p><index> integer type; value in the range of location numbers supported by the associated memory</p> <p>Response</p> <p>TA returns SMS message with location value <index> from message storage <mem1> to the TE. If status of the message is 'received unread', status in the storage changes to 'received read'.</p> <p>1) If text mode (+CMGF=1) and command successful: for SMS-DELIVER: +CMGR:<stat>,<oa>,<[alpha]>,<scts>,<[tooa]>,<fo>,<pid>,<dcs>,<sca>,<tosca>,<length>]<CR><LF><data></p> <p>for SMS-SUBMIT: +CMGR:<stat>,<da>,<[alpha]>,<[toda]>,<fo>,<pid>,<dcs>,<[vp]>,<sca>,<tosca>,<length>]<CR><LF><data></p> <p>2) If PDU mode (+CMGF=0) and command successful: +CMGR: <stat>,<[alpha]>,<length>]<CR><LF><pdu></p> <p>OK</p> <p>3) If error is related to ME functionality: +CMS ERROR: <err></p> <p>Parameters</p> <p><alpha> string type alphanumeric representation of <da> or <oa></p>

	corresponding to the entry found in MT phonebook; implementation of this feature is manufacturer specific
<da>	GSM 03.40 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS); type of address given by <toda>
<data>	<p>In the case of SMS: GSM 03.40 TP-User-Data in text mode responses; format:</p> <p>-if <dc> indicates that GSM 03.38 default alphabet is used and <fo> indicates that GSM 03.40 TP-User-Data-Header-Indication is not set: ME/TA converts GSM alphabet into current TE character set according to rules of Annex A</p> <p>-if <dc> indicates that 8-bit or UCS2 data coding scheme is used, or <fo> indicates that GSM 03.40 TP-User-Data-Header-Indication is set: ME/TA converts each 8-bit octet into two IRA character long hexadecimal number (e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65))</p> <p>In the case of CBS: GSM 03.41 CBM Content of Message in text mode responses; format:</p> <p>- if <dc> indicates that GSM 03.38 default alphabet is used: ME/TA converts GSM alphabet into current TE character set according to rules of Annex A</p> <p>-if <dc> indicates that 8-bit or UCS2 data coding scheme is used: ME/TA converts each 8-bit octet into two IRA character long hexadecimal number</p>
<dc>	depending on the command or result code: GSM 03.38 SMS Data Coding Scheme (default 0), or Cell Broadcast Data Coding Scheme in integer format
<fo>	depending on the command or result code: first octet of GSM 03.40 SMS-DELIVER, SMS-SUBMIT (default 17), SMS-STATUS-REPORT, or SMS-COMMAND (default 2) in integer format
<length>	integer type value indicating in the text mode (+CMGF=1) the length of the message body <data> (or <cdata>) in characters; or in PDU mode (+CMGF=0), the length of the actual TP data unit in octets (i.e. the RP layer SMSC address octets are not counted in the length)
<mid>	GSM 03.41 CBM Message Identifier in integer format
<oa>	GSM 03.40 TP-Originating-Address Address-Value field in

	string format; BCD numbers (or GSM default alphabet characters) are converted characters of the currently selected TE character set (specified by +CSCS);; type of address given by <tooa>
<pdu>	In the case of SMS: GSM 04.11 SC address followed by GSM 03.40 TPDU in hexadecimal format: ME/TA converts each octet of TP data unit into two IRA character long hexadecimal number (e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65)). In the case of CBS: GSM 03.41 TPDU in hexadecimal format.
<sca>	GSM 04.11 RP SC address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS);; type of address given by <tosca>
<scts>	GSM 03.40 TP-Service-Centre-Time-Stamp in time-string format (refer <dt>)
<stat>	0 "REC UNREAD" Received unread messages 1 "REC READ" Received read messages 2 "STO UNSENT" Stored unsent messages 3 "STO SENT" Stored sent messages 4 "ALL" All messages
<toda>	GSM 04.11 TP-Destination-Address Type-of-Address octet in integer format (when first character of <da> is + (IRA 43) default is 145, otherwise default is 129)
<tooa>	GSM 04.11 TP-Originating-Address Type-of-Address octet in integer format (default refer <toda>)
<tosca>	GSM 04.11 RP SC address Type-of-Address octet in integer format (default refer <toda>)
<vp>	depending on SMS-SUBMIT <fo> setting: GSM 03.40 TP-Validity-Period either in integer format (default 167) or in time-string format (refer <dt>)
Reference GSM 07.05	

4.2.5 AT+CMGS Send SMS message

AT+CMGS Send SMS message	
Test Command AT+CMGS=?	Response OK
Write Command 1) If text mode (+CMGF=1):	Parameters <da> GSM 03.40 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM default alphabet

<p>+CMGS=<da>[,< toda>]<CR> text is entered <ctrl-Z/ESC> ESC quits without sending</p> <p>2) If PDU mode (+CMGF=0): +CMGS=<length> ><CR> PDU is given <ctrl-Z/ESC></p>	<p>characters) are converted to characters of the currently selected TE character set (specified by +CSCS);; type of address given by <toda></p> <p><toda> GSM 04.11 TP-Destination-Address Type-of-Address octet in integer format (when first character of <da> is + (IRA 43) default is 145, otherwise default is 129)</p> <p><length> integer type value indicating in the text mode (+CMGF=1) the length of the message body <data> (or <cdata>) in characters; or in PDU mode (+CMGF=0), the length of the actual TP data unit in octets (i.e. the RP layer SMSC address octets are not counted in the length)</p> <p>Response</p> <p>TA transmits SMS message from a TE to the network (SMS-SUBMIT). Message reference value <mr> is returned to the TE on successful message delivery. Value can be used to identify message upon unsolicited delivery status report result code.</p> <p>1) If text mode(+CMGF=1) and sending successful: +CMGS: <mr> OK</p> <p>2) If PDU mode(+CMGF=0) and sending successful: +CMGS: <mr> OK</p> <p>3) If error is related to ME functionality: +CMS ERROR: <err></p> <p>Parameters</p> <p><mr> GSM 03.40 TP-Message-Reference in integer format</p>
<p>Reference GSM 07.05</p>	

4.2.6 AT+CMGW Write SMS message to memory

AT+CMGW Write SMS message to memory	
<p>Test Command AT+CMGW=?</p>	<p>Response OK</p>

SIM600 AT Commands Set

<p>Write Command</p> <p>1) If text mode (+CMGF=1): AT+CMGW=[<oa>,<da>,<tooa><length>]<CR> text is entered <ctrl-Z/ESC> <ESC> quits without sending</p>	<p>Response</p> <p>TA transmits SMS message (either SMS-DELIVER or SMS-SUBMIT) from TE to memory storage <mem2>. Memory location <index> of the stored message is returned. By default message status will be set to 'stored unsent', but parameter <stat> allows also other status values to be given.</p> <p>If writing is successful: +CMGW: <index> OK</p> <p>If error is related to ME functionality: +CMS ERROR: <err></p>
<p>2) If PDU mode (+CMGF=0): AT+CMGW=<length><CR> PDU is given <ctrl-Z/ESC></p>	<p>Parameters</p> <p><oa> GSM 03.40 TP-Originating-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS);; type of address given by <tooa></p> <p><da> GSM 03.40 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS);; type of address given by <toda></p> <p><tooa> GSM 04.11 TP-Originating-Address Type-of-Address octet in integer format (default refer <toda>)</p> <p><toda> GSM 04.11 TP-Destination-Address Type-of-Address octet in integer format (when first character of <da> is + (IRA 43) default is 145, otherwise default is 129)</p> <p><length> integer type value indicating in the text mode (+CMGF=1) the length of the message body <data> (or <cdata>) in characters; or in PDU mode (+CMGF=0), the length of the actual TP data unit in octets (i.e. the RP layer SMSC address octets are not counted in the length)</p> <p><pdu> In the case of SMS: GSM 04.11 SC address followed by GSM 03.40 TPDU in hexadecimal format: ME/TA converts each octet of TP data unit into two IRA character long hexadecimal number (e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65)). In the case of CBS: GSM 03.41 TPDU in hexadecimal format.</p> <p><index> Index of message in selected storage <mem2></p>
<p>Reference</p> <p>GSM 07.05</p>	

4.2.7 AT+CMSS Send SMS message from storage

AT+CMSS Send SMS message from storage	
Test Command AT+CMSS=?	Response OK
Write Command AT+CMSS=<index>[,<da>[,<toda>]]	<p>Response</p> <p>TA sends message with location value <index> from message storage <mem2> to the network (SMS-SUBMIT). If new recipient address <da> is given, it shall be used instead of the one stored with the message. Reference value <mr> is returned to the TE on successful message delivery. Values can be used to identify message upon unsolicited delivery status report result code.</p> <p>1) If text mode(+CMGF=1) and sending successful: +CMGS: <mr> OK</p> <p>2) If PDU mode(+CMGF=0) and sending successful: +CMGS: <mr> OK</p> <p>3) If error is related to ME functionality: +CMS ERROR: <err></p> <p>Parameters</p> <p><index> integer type; value in the range of location numbers supported by the associated memory</p> <p><da> GSM 03.40 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS);; type of address given by <toda></p> <p><toda> GSM 04.11 TP-Destination-Address Type-of-Address octet in integer format (when first character of <da> is + (IRA 43) default is 145, otherwise default is 129)</p> <p><mr> GSM 03.40 TP-Message-Reference in integer format</p>
Reference GSM 07.05	

4.2.8 AT+CMGC Send SMS Command

AT+CMGC Send SMS Command	
Test Command AT+CMGC=?	Response OK
Write Command 1) If text mode	<p>Parameters</p> <p><fo> first octet of GSM 03.40 SMS-COMMAND (default 2) in</p>

SIM600 AT Commands Set

(+CMGF=1): AT+CMGC=<fo>,<ct>[<pid>[,<mn>[,<da>[,<toda>]]]]<CR> text is entered <ctrl-Z/ESC> ESC quits without sending 2) If PDU mode (+CMGF=0): AT+CMGC=<length><CR> PDU is given <ctrl-Z/ESC>	integer format <ct> GSM 03.40 TP-Command-Type in integer format (default 0) <pid> GSM 03.40 TP-Protocol-Identifier in integer format (default 0) <mn> GSM 03.40 TP-Message-Number in integer format <da> GSM 03.40 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS);; type of address given by <toda> <toda> GSM 04.11 TP-Destination-Address Type-of-Address octet in integer format (when first character of <da> is + (IRA 43) default is 145, otherwise default is 129) <length> integer type value indicating in PDU mode (+CMGF=0), the length of the actual TP data unit in octets (i.e. the RP layer SMSC address octets are not counted in the length)
Reference GSM 07.05	Response TA transmits SMS Command message from a TE to the network (SMS-COMMAND). Message reference value <mr> is returned to the TE on successful message delivery. Value can be used to identify message upon unsolicited delivery status report result code. 1) If text mode(+CMGF=1) and sending successful: +CMGC: <mr> OK 2) If PDU mode(+CMGF=0) and sending successful: +CMGC: <mr> OK 3) If error is related to ME functionality: +CMS ERROR: <err> Parameters <mr> GSM 03.40 TP-Message-Reference in integer format

4.2.9 AT+CNMI New SMS message indications

AT+CNMI New SMS message indications	
Test Command AT+CNMI=?	Response +CNMI: (list of supported <mode>s),(list of supported <mt>s),(list of supported <bm>s),(list of supported <ds>s),(list of supported <bfr>s) OK

	Parameters see write command
Read Command AT+CNMI?	Response +CNMI: <mode>,<mt>,<bm>,<ds>,<bfr> OK Parameters see write command
Write Command AT+CNMI=[<mode>,<mt>,<bm>,<ds>,<bfr>]	Response TA selects the procedure for how the receiving of new messages from the network is indicated to the TE when TE is active, e.g. DTR signal is ON. If TE is inactive (e.g. DTR signal is OFF), message receiving should be done as specified in GSM 03.38. OK If error is related to ME functionality: +CMS ERROR: <err> Parameters <div> <div><mode></div> <div> <div>0</div> <div>Buffer unsolicited result codes in the TA. If TA result code buffer is full, indications can be buffered in some other place or the oldest indications may be discarded and replaced with the new received indications.</div> </div> <div>1</div> <div>Discard indication and reject new received message unsolicited result codes when TA-TE link is reserved (e.g. in on-line data mode). Otherwise forward them directly to the TE.</div> <div>2</div> <div>Buffer unsolicited result codes in the TA when TA-TE link is reserved (e.g. in on-line data mode) and flush them to the TE after reservation. Otherwise forward them directly to the TE.</div> <div>3</div> <div>Forward unsolicited result codes directly to the TE. TA-TE link specific inband technique used to embed result codes and data when TA is in on-line data mode.</div> </div> <div> <div><mt></div> <div>(the rules for storing received SMs depend on its data coding scheme (refer GSM 03.38 [2]), preferred memory storage (+CPMS) setting and this value):</div> <div>0</div> <div>No SMS-DELIVER indications are routed to the TE.</div> <div>1</div> <div>If SMS-DELIVER is stored into ME/TA, indication of the memory location is routed to the TE using unsolicited result code: +CMTI: <mem>,<index></div> <div>2</div> <div>SMS-DELIVERs (except class 2) are routed directly to the TE using unsolicited result code: +CMT: [<alpha>],<length><CR><LF><pdu> (PDU mode enabled) or +CMT: <oa>,<alpha>,<scts></div> </div>

		$[, <tooa>, <fo>, <pid>, <dc>, <sca>, <tosca>, <length>] <CR> <LF> <data>$ (text mode enabled; about parameters in italics, refer command Show Text Mode Parameters +CSDH). Class 2 messages result in indication as defined in $<mt>=1$.
	3	Class 3 SMS-DELIVERs are routed directly to TE using unsolicited result codes defined in $<mt>=2$. Messages of other classes result in indication as defined in $<mt>=1$.
	<bm>	(the rules for storing received CBMs depend on its data coding scheme (refer GSM 03.38 [2]), the setting of Select CBM Types (+CSCB) and this value):
	0	No CBM indications are routed to the TE.
	2	New CBMs are routed directly to the TE using unsolicited result code: +CBM: $<length> <CR> <LF> <pdu>$ (PDU mode enabled) or +CBM: $<sn>, <mid>, <dc>, <page>, <pages> <CR> <LF> <data>$ (text mode enabled).
	3	not supported.
	<ds>	0 No SMS-STATUS-REPORTs are routed to the TE.
	1	SMS-STATUS-REPORTs are routed to the TE using unsolicited result code: +CDS: $<length> <CR> <LF> <pdu>$ (PDU mode enabled) or +CDS: $<fo>, <mr>, [<ra>], [<tora>], <scts>, <dt>, <st>$ (text mode enabled)
	<bfr>	0 TA buffer of unsolicited result codes defined within this command is flushed to the TE when $<mode> 1...3$ is entered (OK response shall be given before flushing the codes).

	<p>Unsolicited result code</p> <p>when: <mt>=1</p> <p>+CMTI: <mem>,<index> Indication that new message has been</p> <p>when: <mt>=2</p> <p>If text mode (+CMGF=1):</p> <p>+CMT: <oa>, [<alpha>],<scts> [<tooa>,<fo>,<pid>,<dcsc>,<sca>,<tosca>,<length>]<CR><LF><data> (text mode enabled; about parameters in italics, refer command Show Text Mode Parameters +CSDH)</p> <p>If PDU mode (+CMGF=0):</p> <p>+CMT: [<alpha>],<length><CR><LF><pdu> (PDU mode enabled)</p> <p>when: <bm>=1</p> <p>+CBMI: <mem>,<index></p> <p>when: <bm>=2</p> <p>If text mode (+CMGF=1):</p> <p>+CBM: <sn>,<mid>,<dcsc>,<page>,<pages><CR><LF><data> (text mode enabled)</p> <p>If PDU mode (+CMGF=0):</p> <p>+CBM: <length><CR><LF><pdu> (PDU mode enabled)</p> <p>when: <ds>=1</p> <p>If text mode (+CMGF=1):</p> <p>+CDS: <fo>,<mr>,<ra>,<tora>,<scts>,<dt>,<st> (text mode enabled)</p> <p>If PDU mode (+CMGF=0):</p> <p>+CDS: <length><CR><LF><pdu> (PDU mode enabled)</p>
Reference GSM 07.05	

4.2.10 AT+CPMS Preferred SMS Message Storage

AT+CPMS Preferred SMS Message Storage	
Read Command AT+CPMS?	<p>Response</p> <p>+CPMS:<mem1>,<used1>,<total1>,<mem2>,<used2>,<total2>,<mem3>,<used3>,<total3> OK</p> <p>If error is related to ME functionality:</p> <p>+CMS ERROR</p>
	<p>Parameters</p> <p>see write command</p>

SIM600 AT Commands Set

Test Command AT+CPMS=?	Response +CPMS: (list of supported <mem1>s),(list of supported <mem2>s) ,(list of supported <mem3>s) Parameters see write command
Write Command AT+CPMS= <mem1> [,<mem2> [,<mem3>]]	Response TA selects memory storages <mem1>, <mem2> and <mem3> to be used for reading, writing, etc. +CPMS: <used1>,<total1>,<used2>,<total2>,<used3>,<total3> OK If error is related to ME functionality: +CMS ERROR:<err> Parameters <mem1> Messages to be read and deleted from this memory storage “SM” SIM message storage <mem2> Messages will be written and sent to this memory storage “SM” SIM message storage <mem3> Received messages will be placed in this memory storage if routing to PC is not set (“+CNMI”) “SM” SIM message storage <usedx> Number of messages currently in <memx> <totalx> Number of messages storable in <memx>
Reference GSM 07.05	

4.2.11 AT+CRES Restore SMS settings

AT+CRES Restore SMS settings	
Test Command AT+CRES=?	Response +CRES: list of supported <profile>s OK
Write Command AT+CRES=[<pro file>]	Response TA restores SMS settings for +CMGF, +CNMI, +CSDH from non-volatile memory to active memory. OK If error is related to ME functionality: +CMS ERROR:<err>

	Parameters <profile> <u>0</u> manufacturer specific profile number where setting are to be stored
Reference GSM 07.05	

4.2.12 AT+CSAS Save SMS settings

AT+CSAS Save SMS settings	
Test Command AT+CSAS=?	Response +CSAS: list of supported <profile>s OK
Write Command AT+CSAS=[<profile>]	Response TA saves current message service settings for +CMGF, +CNMI, +CSDH, to a non-volatile memory. OK If error is related to ME functionality: +CMS ERROR:<err>
	Parameters <profile> <u>0</u> manufacturer specific profile number where settings are to be stored
Reference GSM 07.05	

4.2.13 AT+CSCA SMS Service Center Address

AT+CSCA SMS Service Center Address	
Read Command AT+CSCA?	Response +CSCA: <sca>,<tosca> OK
	Parameters see write command
Test Command AT+CSCA=?	Response OK
Write Command AT+CSCA = <sca>[,<tosca>]	Response TA updates the SMSC address, through which mobile originated SMs are transmitted. In text mode, setting is used by send and write commands. In PDU mode, setting is used by the same commands, but only when the length of the SMSC address coded into <pdu> parameter equals zero. Note: The command writes the parameters in NON-VOLATILE memory. OK
	Parameters

	<p><sca> GSM 04.11 RP SC address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS);; type of address given by <tosca></p> <p><tosca> Service center address format GSM 04.11 RP SC address Type-of-Address octet in integer format (default refer <today>)</p>
Reference GSM 07.05	

4.2.14 AT+CSCB Select cell broadcast SMS messages

AT+CSCB Select cell broadcast SMS messages	
Read Command AT+CSCB?	<p>Response +CSCB: <mode>,<mids>,<dcss> OK</p> <p>Parameters see write command</p>
Test Command AT+CSCB=?	<p>Response +CSCB: list of supported <mode>s OK</p> <p>Parameters see write command</p>
Write Command AT+CSCB= [<mode>[,mids>[, <dcss>]]]	<p>Response TA selects which types of CBMs are to be received by the ME. Note: The command writes the parameters in NON-VOLATILE memory. OK</p> <p>Parameters</p> <p><mode> 0 message types specified in <mids> and <dcss> are accepted 1 message types specified in <mids> and <dcss> are not accepted</p> <p><mids> string type; all different possible combinations of CBM message identifiers (refer <mid>) (default is empty string); e.g. "0,1,5,320-478,922".</p> <p><dcss> string type; all different possible combinations of CBM data coding schemes (refer <dc>) (default is empty string); e.g. "0-3,5".</p>
Reference GSM 07.05	

4.2.15 AT+CSDH Show SMS text mode parameters

AT+CSDH Show SMS text mode parameters	
Read Command AT+CSDH?	Response +CSDH: <show> OK Parameters see write command
Test Command AT+CSDH=?	Response +CSDH: list of supported <show>s OK Parameters see write command
Write Command AT+CSDH=<show>	Response TA determines whether detailed header information is shown in text mode result codes. OK Parameters <div style="display: flex; align-items: flex-start;"> <div style="flex: 1;"> <p><show></p> <p>0</p> <p>1</p> </div> <div style="flex: 2;"> <p>do not show header values defined in commands +CSCA and +CSMP (<sca>, <tosca>, <fo>, <vp>, <pid> and <dcs>) nor <length>, <toda> or <tooa> in +CMT, +CMGL, +CMGR result codes in text mode</p> <p>show the values in result codes</p> </div> </div>
Reference GSM 07.05	

4.2.16 AT+CSMP Set SMS text mode parameters

AT+CSMP Set SMS text mode parameters	
Read Command AT+CSMP?	Response +CSMP: <fo>,<vp>,<pid>,<dcs> OK Parameters see write command
Test Command AT+CSMP=?	Response +CSMP: (list of supported <fo>s),(list of supported <vp>s) OK Parameters see write command

SIM600 AT Commands Set

<p>Write Command</p> <p>AT+CSMP=[<fo>[<vp>[,pid>[,<dc>]]]]</p>	<p>Response</p> <p>TA selects values for additional parameters needed when SM is sent to the network or placed in a storage when text mode is selected (+CMGF=1). It is possible to set the validity period starting from when the SM is received by the SMSC (<vp> is in range 0... 255) or define the absolute time of the validity period termination (<vp> is a string).</p> <p>Note: The command writes the parameters in NON-VOLATILE memory.</p> <p>OK</p> <p>Parameters</p> <p><fo> depending on the command or result code: first octet of GSM 03.40 SMS-DELIVER, SMS-SUBMIT (default 17), SMS-STATUS-REPORT, or SMS-COMMAND (default 2) in integer format</p> <p><vp> depending on SMS-SUBMIT <fo> setting: GSM 03.40 TP-Validity-Period either in integer format (default 167) or in time-string format (refer <dt>)</p> <p><pid> GSM 03.40 TP-Protocol-Identifier in integer format.</p> <p><dc> GSM 03.38 SMS Data Coding Scheme in Integer format.</p>
<p>Reference</p> <p>GSM 07.05</p>	

4.2.17 AT+CSMS Select Message Service

AT+CSMS Select Message Service	
<p>Read Command</p> <p>AT+CSMS?</p>	<p>Response</p> <p>+CSMS: <service>,<mt>,<mo>,<bm></p> <p>OK</p> <p>Parameters</p> <p>see write command</p>
<p>Test Command</p> <p>AT+CSMS=?</p>	<p>Response</p> <p>+CSMS: list of supported <service>s</p> <p>OK</p> <p>Parameters</p> <p>see write command</p>
<p>Write Command</p> <p>AT+CSMS= <service></p>	<p>Response</p> <p>+CSMS: <mt>,<mo>,<bm> OK</p> <p>If error is related to ME functionality:</p> <p>+CMS ERROR: <err></p>

	Parameters
	<p><service> <u>0</u> GSM 03.40 and 03.41 (the syntax of SMS AT commands is compatible with GSM 07.05 Phase 2 version 4.7.0; Phase 2+ features which do not require new command syntax may be supported (e.g. correct routing of messages with new Phase 2+ data coding schemes))</p> <p>128 SMS PDU mode - TPDU only used for sending/receiving SMSs.</p>
	<p><mt> Mobile Terminated Messages:</p> <p>0 Type not supported</p> <p>1 Type supported</p>
	<p><mo> Mobile Originated Messages:</p> <p>0 Type not supported</p> <p>1 Type supported</p>
	<p><bm> Broadcast Type Messages:</p> <p>0 Type not supported</p> <p>1 Type supported</p>
Reference	
GSM 07.05	

5 AT Commands for GPRS Support

5.1 Overview of AT Commands for GPRS Support

Command	Description
AT+CGATT	ATTACH OR DETACH FROM GPRS SERVICE
AT+CGDCONT	DEFINE PDP CONTEXT
AT+CGQMIN	QUALITY OF SERVICE PROFILE (MINIMUM ACCEPTABLE)
AT+CGQREQ	QUALITY OF SERVICE PROFILE (REQUESTED)
AT+CGACT	PDP CONTEXT ACTIVATION OR DEACTIVATE
AT+CGDATA	ENTER DATA STATE
AT+CGPADDR	SHOW PDP ADDRESS
AT+CGCLASS	GPRS MOBILE STATION CLASS
AT+CGEREP	CONTROL UNSOLICITED GPRS EVENT REPORTING
AT+CGREG	NETWORK REGISTRATION STATUS
AT+CGSMS	SELECT SERVICE FOR MO SMS MESSAGES
AT*TCOUNT	GPRS PACKET COUNTERS

5.2 Detailed Descriptions of AT Commands for GPRS Support

5.2.1 AT+CGATT Attach or detach from GPRS service

AT+CGATT Attach or detach from GPRS service	
Test command AT+CGATT=?	Response +CGATT: (list of supported <state>s) Parameter See Write command
Read command AT+CGATT?	Response +CGATT:<state1>,<state2> Parameter <state1> indicates the state of GPRS attachment 0 – detached 1 – attached <state2> indicates the state of EDGE attachment 0 – detached 1 – attached
Write command AT+CGATT=[<state>]	Response OK ERROR Parameter <state> indicates the state of GPRS attachment 0 – detached

	1 – attached Other values are reserved and will result in an ERROR response to the execution command.
Reference GSM07.07	Note

5.2.2 AT+CGDCONT Define PDP context

AT+CGDCONT Define PDP context	
Test command AT+CGDCONT =?	Response +CGDCONT: (range of supported <cid>s), <PDP_type>, <APN>, <PDP_addr>, (list of supported <data_comp>s), <list of supported <head_comp>s) [<CR><LF>+CGDCONT: (range of supported <cid>s), <PDP_type>, <APN>, <PDP_addr>, (list of supported <data_comp>s), <list of supported <head_comp>s)] Parameter See Write command
Read command AT+CGDCONT ?	Response +CGDCONT: <cid>, <PDP_type>, <APN>, <PDP_addr>, <data_comp>, <head_comp> [<CR><LF> +CGDCONT: <cid>, <PDP_type>, <APN>, <PDP_addr>, <data_comp>, <head_comp> [...]] Parameter See Write command
Write command AT+CGDCONT = [<cid>[, <PDP_type>[, <APN>[, <PDP_addr>[, <data_comp>[, <head_comp>]]]]]]	Response OK ERROR Parameter <cid> (PDP Context Identifier) a numeric parameter which specifies a particular PDP context definition. The parameter is local to the TE-MT interface and is used in other PDP context-related commands. The range of permitted values (minimum value=1) is returned by the test form of the command. <PDP_type> (Packet Data Protocol type) a string parameter which specifies the type of packet data protocol X25 ITU-T/CCITT X.25 layer 3 IP Internet Protocol (IETF STD 5) OSPF Internet Hosted Octet Stream Protocol PPP Point to Point Protocol (IETF STD 51)

	<p><APN> (Access Point Name) a string parameter which is a logical name that is used to select the GGSN or the external packet data network. If the value is null or omitted, then the subscription value will be requested.</p> <p><PDP_addr> a string parameter that identifies the MT in the address space applicable to the PDP. If the value is null or omitted, then a value may be provided by the TE during the PDP startup procedure or, failing that, a dynamic address will be requested. The read form of the command will continue to return the null string even if an address has been allocated during the PDP startup procedure. The allocated address may be read using the +CGPADDR command.</p> <p><d_comp> a numeric parameter that controls PDP data compression 0 – off (default if value is omitted) 1 – on Other values are reserved</p> <p><h_comp> a numeric parameter that controls PDP head compression 0 – off (default if value is omitted) 1 – on Other values are reserved</p> <p>Note: At present only one data compression algorithm (V.42bis) is provided in SDCP. If and when other algorithms become available, a command will be provided to select one or more of these.</p>
Reference GSM07.07	Note

5.2.3 AT+CGQMIN Quality of service profile (minimum acceptable)

AT+CGQMIN Quality of service profile (minimum acceptable)	
Test command AT+CGQMIN=?	<p>Response</p> <p>+CGQMIN: <PDP_type>,(list of supported <precedence>s),(list of supported <delay>s),(list of supported <reliability>s),<list of supported <peak>s),(list of supported <mean>s)</p> <p>[<CR><LF>+CGQMIN:<PDP_type>,(list of supported <precedence>s),(list of supported <delay>s),(list of supported <reliability>s),<list of supported <peak>s),(list of supported <mean>s)</p> <p>[...]]</p> <p>Parameter</p> <p>See Write command</p>
Read command AT+CGQMIN?	<p>Response</p> <p>+CGQMIN:<cid>,<precedence>,<delay>,<reliability>,<peak>,<mean></p> <p>[<CR><LF>+CGQMIN:<cid>,<precedence>,<delay>,<reliability>,<peak>,<mean></p>

	[...] Parameter See Write command
Write command AT+CGQMIN=[<state>]	Response OK ERROR Parameter <cid> a numeric parameter which specifies a particular PDP context definition (see +CGDCONT command) The following parameter are defined in GSM 03.60 <precedence> a numeric parameter which specifies the precedence class <delay> a numeric parameter which specifies the delay class <reliability> a numeric parameter which specifies the reliability class <peak> a numeric parameter which specifies the peak throughput class <mean> a numeric parameter which specifies the mean throughput class
Reference GSM07.07	Note

5.2.4 AT+CGQREQ Quality of service profile (requested)

AT+CGQREQ Quality of service profile (requested)	
Test command AT+CGQREQ=?	Response +CGQREQ: <PDP_type>,(list of supported <precedence>s),(list of supported <delay>s),(list of supported <reliability>s),<list of supported <peak>s),(list of supported <mean>s) [<CR><LF>+CGQREQ:<PDP_type>,(list of supported <precedence>s),(list of supported <delay>s),(list of supported <reliability>s),<list of supported <peak>s),(list of supported <mean>s) [...]] Parameter See Write command
Read command AT+CGQREQ?	Response +CGQREQ:<cid>,<precedence>,<delay>,<reliability>,<peak>,<mean> [<CR><LF>+CGQMIN:<cid>,<precedence>,<delay>,<reliability>,<peak>,<mean> [...]] Parameter See Write command
Write command AT+CGQREQ=[Response OK

<cid>[,<precedence>[,<delay>[,<reliability>[,<peak>[,<mean>]]]]]]	ERROR Parameter <cid> a numeric parameter which specifies a particular PDP context definition (see +CGDCONT command) The following parameter are defined in GSM 03.60 <precedence> a numeric parameter which specifies the precedence class <delay> a numeric parameter which specifies the delay class <reliability> a numeric parameter which specifies the reliability class <peak> a numeric parameter which specifies the peak throughput class <mean> a numeric parameter which specifies the mean throughput class
Reference GSM07.07	Note

5.2.5 AT+CGACT PDP context activate or deactivate

AT+CGACT PDP context activate or deactivate	
Test command AT+CGACT=?	Response +CGACT: (list of supported <state>s) Parameter See Write command
Read command AT+CGACT?	Response +CGATT:<cid>,<state> [<CR><LF>+CGACT:<cid>,<state> [...]] Parameter See Write command
Write command AT+CGACT=[<state>[,<cid>[,<cid>[,...]]]]	Response OK NO CARRIER ERROR Parameter <state> indicates the state of PDP context activation 0 – deactivated 1 – activated Other values are reserved and will result in an ERROR response to the execution command. <cid> a numeric parameter which specifies a particular PDP context definition (see +CGDCONT command)
Reference GSM07.07	Note If context is deactivated successfully, NO CARRIER is returned

5.2.6 AT+CGDATA Enter data state

AT+CGDATA Enter Data State e	
Test command AT+CGDATA=?	Response +CGDATA: (list of supported <L2P>s) Parameter See Write command
Write command AT+CGDATA=[<L2P>[,<cid>[,<cid>[,...]]]]	Response OK ERROR Parameter <L2P> a string parameter that indicates the layer 2 protocol to be used between the TE and MT: PPP – Point to Point protocol for a PDP such as IP Other values are not supported and will result in an ERROR response to the execution command. <cid> a numeric parameter which specifies a particular PDP context definition (see +CGDCONT command)
Reference GSM07.07	Note The command does not fully implement the CGDATA command as specified in GSM 07.07. The command will not enter data state once the PDP context has been activated and will simply generate the result code “OK” if the context has been successfully activated.

5.2.7 AT+CGPADDR Show PDP address

AT+CGPADDR Show PDP address	
Test command AT+CGPADDR=?	Response +CGPADDR: OK
Write command AT+CGPADDR=[<cid>[,<cid>[,...]]]	Response +CGPADDR: <cid>,<PDP_addr> [<CR><LF>+CGPADDR:<cid>,<PDP_addr>[...]] ERROR Parameter <cid> a numeric parameter which specifies a particular PDP context definition (see +CGDCONT command) If no <cid> is specified, the addresses for all defined contexts are returned. <PDP_addr> a string that identifies the MT in the address space applicable to the PDP. The address may be static or dynamic. For a static address, it will be the one set by the +CGDCONT command when the context was defined. For a dynamic address it will be the one assigned during the last

	PDP context activation that used the context definition referred to by <cid>. <PDP_ address> is omitted if none is available.
Reference GSM07.07	Note This command dictates the behavior of PPP in the ME but not that of any other GPRS-enabled foreground layer, eg browser.

5.2.8 AT+CGCLASS GPRS mobile station class

AT+CGCLASS GPRS mobile station class	
Test command AT+CGCLASS=?	Response +CGCLASS: (list of supported <class>s) Parameter See Write command
Read command AT+CGCLASS?	Response +CGCLASS: <class> Parameter See Write command
Write command AT+CGCLASS=<class>	Response OK ERROR Parameter <class> a string parameter which indicates the GPRS mobile class (in descending order of functionality) A class A (highest) B class B CG class C in GPRS only mode CC class C in circuit switched only mode (lowest)
Reference GSM07.07	Note Class A is not supported by the SIMCOM GPRS solution.

5.2.9 AT+CGEREP Control unsolicited GPRS event reporting

AT+CGEREP Control unsolicited GPRS event reporting	
Test command AT+CGEREP=?	Response +CGEREP: (list of supported <modes>s) Parameter See Write command
Read command AT+CGEREP?	Response +CGEREP:<mode> Parameter See Write command
Write command	Response

AT+CGEREP=<mode>	OK ERROR Parameter <mode> 0 buffer unsolicited result codes in the MT; if MT result code buffer is full, the oldest ones can be discarded. No codes are forwarded to the TE. 1 discard unsolicited result codes when MT-TE link is reserved (e.g. in on-line data mode); otherwise forward them directly to the TE Unsolicited Result Codes supported: +CGEV: NW DEACT <PDP_type>, <PDP_addr>[,<cid>] +CGEV: ME DEACT <PDP_type>, <PDP_addr>[,<cid>] +CGEV: NW DETACH +CGEV: ME CLASS <class> parameter <PDP_type> Packet Data Protocol type (see +CGDCONT command) <PDP_addr> Packet Data Protocol address (see +CGDCONT command) <cid> Context Id (see +CGDCONT command) <class> GPRS mobile class (see +CGCLASS command)
Reference GSM07.07	Note

5.2.10 AT+CGREG Network registration status

AT+CGREG Network registration status	
Test command AT+CGREG=?	Response +CGREG: (list of supported <n>s) Parameter See Write command
Read command AT+CGREG?	Response +CGREG:<n>,<stat>[,<lac>,<ci>] +CME ERROR:<err> Parameter See Write command
Write command AT+CGREG=[<n>]	Response OK ERROR Parameter <n> 0 disable network registration unsolicited result code 1 enable network registration unsolicited result code +CGREG:<stat> 2 enable network registration and location information

	unsolicited result code +CGREG: <stat>[,<lac>,<ci>] <stat> 0 not registered, ME is not currently searching a new operator to register to 1 registered <lac> string type; two byte location area code in hexadecimal format (e.g. "00C3" equals 195 in decimal) <ci> string type; two bytes cell ID in hexadecimal format
Reference GSM07.07	Note For parameter stat, options 0 and 1 supported only.

5.2.11 AT+CGSMS Select service for MO SMS messages

AT+CGSMS Select service for MO SMS messages	
Test command AT+CGSMS=?	Response +CGSMS: (list of currently available <service>s) Parameter See Write command
Read command AT+CGSMS?	Response +CGSMS:<service> Parameter See Write command
Write command AT+CGSMS=[<service>]	Response OK ERROR Parameter <service> a numeric parameter which indicates the service or service preference to be used 0 GPRS 1 circuit switched 2 GPRS preferred (use circuit switched if GPRS not available) 3 circuit switched preferred (use GPRS if circuit switched not available)
Reference GSM07.07	Note The circuit switched service route is the default method

5.2.12 AT*TGCOUNT GPRS packet counters

AT*TGCOUNT GPRS packet counters	
Test command AT*TGCOUNT=?	Response *TGCOUNT: (list of supported <actions>s),(list of supported <cid>s),(list of supported <period>s)

	Parameter See Write command
Read command AT*TGCOUNT?	Response *TGCOUNT: OK
Write command AT*TGCOUNT =<action>,<cid>[,<period>]	Response OK ERROR Parameter <action> indicates the action to be performed 0 – reset counter for specified <cid> 1 – read counter for specified <cid> 2 – start reporting counter periodically for specified <cid> defined by <period>. Counter is also reported on context deactivation. 3 – report counter on context deactivation for specified <cid> 4 – stop reporting counter on specified <cid> <cid> a numeric parameter which specifies a particular PDP context definition (see +CGDCONT command) <period> period for periodic packet counter reporting in seconds Unsolicited Result Once a counter has been setup for a <cid> the counter will be displayed as Following either periodically or when the context has been deactivated: <uc> a numeric 32 parameter which indicates the number of compressed bytes transferred in the uplink direction displayed in decimal format <uu> a numeric 32 bit parameter which indicates the number of uncompressed bytes transferred in the uplink direction displayed in decimal format <un> a numeric 32 bit parameter which indicate the number of N-PDUs (i.e. IP packets) transferred in the uplink direction displayed in decimal format <dc> a numeric 32 bit parameter which indicates the number of compressed bytes transferred in the downlink direction displayed in decimal format <dn> a numeric 32 bit parameter which indicates the number of N-PDUs (i.e IP packets) transferred in the downlink direction displayed in decimal format Note that the current counter values will be displayed immediately this command is entered for any action (i.e. even stopping the counter display will generate the above unsolicited result code for the cancelled <cid>)
Reference	Note

GSM07.07

This command displays byte and IP packet counters for GPRS contexts. It is proprietary to SIMCOM.

If counters are displayed periodically, they will only be displayed if:

- there is a separate multiplexer channel for unsolicited result codes, or
- the user switches to command mode using the “+++” escape sequence

6 AT Commands for SIM Application Toolkit

This section defines the AT Commands implemented in SIM600 for the control of the SIM Application Toolkit protocol, as per specification GSM 11.14 . The table in section 6.1 lists the AT commands supported – these are SIMCOM proprietary commands as no formal specification currently exists defining STK functionality via an AT interface. The parameters supported by each AT command for the different proactive commands are given in the subsections which follow the main table.

The protocol defined below provides a generic mechanism for the exchange of information between the ME and the application for a typical proactive SIM command.

How to use SIM600 STK AT interface please see document SIM600_STK_USER_GUIDE.DOC

6.1 Overview of Commands, Responses and Result codes

The following tables outline the AT commands, responses and unsolicited result codes applicable for control of the SIM Application Toolkit protocol via the AT command interface.

Notation	Description
*TSTC:	Unsolicited result code issued by the CI Task to the application to indicate either: <ul style="list-style-type: none"> there is no STK application available on the SIM there is a proactive SIM command to retrieve and action end of the current proactive command session – used if the user wishes to terminate the current proactive SIM session.
*TSTGC=...	AT command to Get Command parameters for a proactive SIM command from the CI Task. This will be sent from the application after unsolicited result code +STC: <cmdId> informs it the SIM has issued a proactive SIM command to be performed.
*TSTCR=...	AT command to provide Command Response parameters for a previously executed proactive SIM command. Its purpose is to relay response data to the lower layers of the SIMCOM protocol stack to allow the Terminal Response SIM command (see [10]) to be returned to the SIM for the current proactive command.
*TSTPD=...	AT command to provide Profile Download parameters to the CI Task. This contains information relating to the SIM Application Toolkit capabilities of the application, and is used by the SIMAT task to limit its SAT instruction set accordingly. Any application plugging into the serial port should send this command or it will be assumed that the application has no SAT support and will therefore never receive any SAT related information.
*TSTMS=...	AT Command for selecting a menu option. On power-up the SIM will send the Set-Up-Menu proactive indication. The accessory should load and display the menu structure. This AT command should be used to inform SIM600 of the item selected from the list.
*TSTEVE=...	This command is used to inform the MS that an MMI specific event has occurred.
TSTRT=...	AT command for setting the automatic response timer used by the CI Task to issue the Terminal Response (no user response) to a proactive command which has not been processed. The default response time is ten seconds, but it is recommended this is increased when performing SIM Toolkit FTA.
*TSTTONE=...	AT command for playing SIM Toolkit Tones in both idle and dedicated mode. This command should be used in conjunction with the Play Tone proactive command.

6.2 Definition of Unsolicited Result Codes

Not all proactive commands are required to be visible to the application. For example, the proactive commands More Time and Provide Local Information are transparent and therefore do not require an unsolicited result code to be sent to the user. The commands, which are relevant for user interaction in one form or another, are listed in the following tables.

The output generated for strings is controlled by the +CMGF AT command. The factory default for string output is PDU mode where strings are output in HEX. The tables below illustrate the alternative mechanism of TEXT output; this is obtained by using the +CMGF AT command with a parameter of one.

6.2.1 *TSTC Command

***TSTC** Informs the application of the type of proactive SIM command data awaiting retrieval.

Result Code: *TSTC: <cmdId>	Parameters <cmdId> Hexadecimal format of Type of Command . Unique identifier for the current SIM Toolkit proactive command issued by the SIM - The following values are supported: '10' Get Acknowledgement For Set Up Call command '15' Launch Browser command '20' Play Tone command '21' Display Text command '22' Get Inkey command '23' Get Input command '24' Select Item command '25' Set Up Menu command '28' Set Up Idle Mode Text command '40' Open Channel command '14' Send DTMF command '05' Set Up Event List command '81' End of proactive session
Reference	Note The special case is +STC: 0 that is issued when there is no STK application accessible on the SIM.

The following tables in this section detail the information that is distributed to the application for proactive indications using unsolicited result codes. The information applicable to the proactive command is sent to the application using the *TSTUD (SIM Toolkit Unsolicited Data) results code.

6.2.2 Send SM

Command data for Send Short Message unsolicited proactive command

Result Code *TSTUD: 13 [,<alphaId>[,<iconId>,<dispMode>]]	Parameters 13 hex notation: Command Type value. See Section 6.2 for values. <alphaId> string format: using either SMS default alphabet or UCS2 alpha field coding ‘0’ : Special case indicating SIM provided a null alphaId and user should not be informed of SMS transaction. If alphaId field is not present it is up to the ME to decide whether to inform the user or not. <iconId> Numeric tag for the icon to be displayed – corresponds to the index in the Image file on the SIM 0 No icon 1..255 Icon tag <dispMode> integer: denotes use of associated icon 0 display icon only (replaces any text string or alphaId) display with alphaId or text string
Reference	Note

6.2.3 Send SS

Command data for Send SS unsolicited proactive command

Result Code *TSTUD: 11 [,<alphaId>[,<iconId>,<dispMode>]]	Parameters 11 hex notation: Command Type value. See Section 6.2 for values. <alphaId> string format: using either SMS default alphabet or UCS2 alpha field coding to inform user of current transaction. ‘0’ : Special case indicating SIM provided a null alphaId and user should not be informed of SS transaction. If alphaId field is not present it is up to the ME to decide whether to inform the user or not. <iconId> Numeric tag for the icon to be displayed – corresponds to the index in the Image file on the SIM 0 No icon 1..255 Icon tag <dispMode> integer: denotes use of associated icon 0 display icon only (replaces any text string or alphaId) 1 display with alphaId or text string
---	---

Reference	Note
-----------	------

6.2.4 Send USSD

Command data for Send USSD unsolicited proactive command

Result Code *TSTUD: 12[,<alphaId>[,<iconId>,<dispMode>]]	Parameters 12 hex notation: Command Type value. See Section 6.2 for values. <alphaId> string format: using either SMS default alphabet or UCS2 alpha field coding to inform user of current transaction. '0' : Special case indicating SIM provided a null alphaId and user should not be informed of USSD transaction. If alphaId field is not present it is up to the ME to decide whether to inform the user or not. <iconId> Numeric tag for the icon to be displayed – corresponds to the index in the Image file on the SIM 0 No icon 1..255 Icon tag <dispMode> integer: denotes use of associated icon 0 display icon only (replaces any text string or alphaId) 1 display with alphaId or text string
Reference	Note

6.2.5 Set Up Call

Command data for Set Up Call unsolicited proactive command

Result Code *TSTUD: 10,<alphaId>,<dialstring>,<cps>[,<iconId>,<dispMode>]	Parameters 10 hex notation: Command Type value. See Section 6.2 for values. <alphaId> string format: using either SMS default alphabet or UCS2 alpha field coding <dialstring> string format: using either SMS default alphabet or UCS2 alpha field coding <cps> string format: using either SMS default alphabet or UCS2 alpha field coding <iconId> Numeric tag for the icon to be displayed – corresponds to the index in the Image file on the SIM 0 No icon 1..255 Icon tag <dispMode> integer: denotes use of associated icon 0 display icon only (replaces any text string or alphaId) 1 display with alphaId or text string
--	---

Reference	Note
-----------	------

6.2.6 Close Channel

Command data for Close Channel proactive command

Result Code *TSTUD: 41 [,<alphaId>[,<iconId>,<dispMode>]]	Parameters 41 hex notation: Command Type value. See Section 6.2 for values. <alphaId> string format: using either SMS default alphabet or UCS2 alpha field coding to inform user of current transaction. ‘0’ : Special case indicating SIM provided a null alphaId and the user should not be informed of the current transaction. If alphaId field is not present it is up to the ME to decide whether or not to inform the user. <iconId> Numeric tag for the icon to be displayed – corresponds to the index in the Image file on the SIM 0 No icon 1..255 Icon tag <dispMode> integer: denotes use of associated icon 0 display icon only (replaces any text string or alphaId) 1 display with alphaId or text string
---	--

Reference	Note
-----------	------

6.2.7 Receive Data

Command data for Receive Data proactive command

Result Code *TSTUD: 42 ,<length>[,<alphaId>[,<iconId>,<dispMode>]]	Parameters 42 hex notation: Command Type value. See Section 6.2 for values. <length> integer type: number of bytes requested in command <alphaId> string format: using either SMS default alphabet or UCS2 alpha field coding to inform user of current transaction. ‘0’ : Special case indicating SIM provided a null alphaId and the user should not be informed of the current transaction. If alphaId field is not present it is up to the ME to decide whether or not to inform the user. <iconId> Numeric tag for the icon to be displayed – corresponds to the index in the Image file on the SIM 0 No icon 1..255 Icon tag <dispMode> integer: denotes use of associated icon 0 display icon only (replaces any text string or alphaId)
--	---

	1 display with alphaId or text string
Reference	Note

6.2.8 Send Data

Command data for Send Data proactive command

Result Code *TSTUD: 43,<length>,<data>[,<alphaId>[,<iconId>,<dispMode>]]	Parameters 43 hex notation: Command Type value. See Section 6.2 for values. <length> integer type: number of bytes of data transmitted <data> string type: channel data – coded as 8bit data. This appears in BCD notation with two TE characters representing one byte of actual data. <alphaId> string format: using either SMS default alphabet or UCS2 alpha field coding to inform user of current transaction. ‘0’ : Special case indicating SIM provided a null alphaId and the user should not be informed of the current transaction. If alphaId field is not present it is up to the ME to decide whether or not to inform the user. <iconId> Numeric tag for the icon to be displayed – corresponds to the index in the Image file on the SIM 0 No icon 1..255 Icon tag <dispMode> integer: denotes use of associated icon 0 display icon only (replaces any text string or alphaId) 1 display with alphaId or text string
Reference	Note

6.2.9 Language Notification

Command data for Language Notification proactive command

Result Code *TSTUD: 35[,<language>]	Parameters 35 hex notation: Command Type value. See Section 6.2 for values. <language> language code: coded as pair of alphanumeric characters, as given in ISO 639 [12].
Reference	Note The language parameter is optional. Its inclusion in the result code indicates a specific language notification. Omission from the result code indicates a non-specific language notification, which cancels a previous specific language notification

6.2.10 Run AT

Command data for Run AT Command proactive command	
Result Code *TSTUD: 34[,<alphaId>[,<iconId>,<dispMode>]]	Parameters 34 hex notation: Command Type value. See Section 6.2 for values. <alphaId> string format: using either SMS default alphabet or UCS2 alpha field coding to inform user of current transaction. '0' : Special case indicating SIM provided a null alphaId and the user should not be informed of the current transaction. If alphaId field is not present it is up to the ME to decide whether or not to inform the user. <iconId> Numeric tag for the icon to be displayed – corresponds to the index in the Image file on the SIM. 0 No icon 1..255 Icon tag <dispMode> integer: denotes use of associated icon 0 display icon only (replaces any text string or alphaId) 1 display with alphaId or text string
Reference	Note

6.2.11 Refresh

Command data for Refresh proactive command	
Result Code *TSTUD: 01,<refMode>[,<numFiles>,<fileList>]	Parameters 01 hex notation: Command Type value. See Section 6.2 for values. <refMode> hex notation: command Qualifier information giving the type of Refresh to be performed. 00 SIM Initialisation and Full File Change Notification 01 File Change Notification 02 SIM Initialisation and File Change Notification 03 SIM Initialisation 04 SIM Reset <numFiles> integer: gives number of Files in the list <fileList> string type, hex notation: gives the full paths for the SIM files, each file being delimited by commas within the string
Reference	Note For <refMode> values '01' and '02' file list data must be provided by the SIM. For all other <refMode> values any included file list information will be ignored. If the optional <fileList> parameter is not present in the result code, we assume that <refMode>s '01' and '02' cannot occur.

6.3 ME Initialisation Procedure

On powering up the ME the SIM's Phase file (EF 0x6FAE) is read. If this indicates the SIM is of Phase 2+ or greater the ME sends a Terminal Profile command (see [3]) to the SIM to inform it of the SIM Application Toolkit capabilities of the ME. The SIM then limits its instruction set based on this profile. This terminal profile data is configurable and resides in an application layer configuration file for ease of customisation. On sending the Profile Download command The SIM will respond with signals that will provide the ME with information on whether the SIM has a SIM Toolkit application present.

If on completing ME initialisation the stack determines that the SIM has no STK capability an unsolicited result code *TSTC: 0 will be issued to indicate to the user that there is no SIM toolkit availability during the current session.

However, if STK information is available for use by the ME/application then the lower layers of the SIMCom Protocol Stack are informed and the first proactive command to be sent from the SIM to the user will be the Set Up Menu command to allow the available STK menu to be added to the ME's own menu structure (i.e. unsolicited result code *TSTC: 25 will be issued by the CI Task after it has received this proactive command from the SIMAT task.

6.4 Definition of AT Commands

This section details the AT commands for driving an STK application on the SIM.

6.4.1 AT*TSTGC SIM Toolkit Get Command parameters

Get proactive Command parameters	
Write Command AT*TSTGC=<cmdId>	Response *TSTGC: <cmdId>,<data>
	Parameter <cmdId> hex notation: Command Type value See Section 6.2 for values. <data> proactive command specific data, dependent on <cmdId>
Reference	

The <data> information varies between proactive SIM commands, according to the type of command issued by the SIM, as given by <cmdId>. This reflects the useful part of the proactive command from a user's perspective. The result codes returned to the application on a command by command basis are outlined in the following subsections:

6.4.1.1 Display Text

Command data for Display Text proactive command	
Result Code *TSTGC: 21,<dcs>,<text>,<priority>,<clear>,<iconId>,<dis>	Parameters 21 hex notation: Command Type value. See Section 6.2 for values. <dcs> integer: data coding scheme used for <text>. The schemes used are as per GSM 03.38 for SMS

pMode>[,<response>]]	<div> <div>0 7bit GSM default alphabet (packed)</div> <div>4 8bit data</div> <div>8 UCS2 alphabet</div> </div> <div> <div><text> string format: text string in <dc> format</div> <div><priority> integer: display priority information <div>0 Normal priority</div> <div>1 High priority</div> </div> </div> <div> <div><clear> integer: mode of clearing message <div>0 Clear after delay</div> <div>1 User clears message</div> </div> <div><iconId> Numeric tag for the icon to be displayed – corresponds to the index in the Image file on the SIM <div>0 No icon</div> <div>1..255 Icon tag</div> </div> <div> <div><dispMode> integer: denotes use of associated icon <div>0 Display icon only (replaces any text string or alphaId)</div> <div>1 Display with alpha Id or text string</div> </div> <div><response> 0 normal response expected <div>1 immediate response expected.</div> </div> </div></div>
Reference	Note

6.4.1.2 Get Inkey

Command data for Get Inkey proactive command

Result Code	Parameters
*TSTGC: 22,<dc>,<text>,<response>,<helpInfo>[,<iconId>,<dispMode>]	<div> <div>22 hex notation: Command Type value.</div> <div>See Section 6.2 for values.</div> </div> <div> <div><dc> integer: data coding scheme used for <text> <div>The schemes used are as per GSM 03.38 for SMS</div> <div>0 7bit GSM default alphabet (packed)</div> <div>4 8bit data</div> <div>8 UCS2 alphabet</div> </div> <div><text> string format: text string in <dc> format</div> <div><response> integer: expected response character format. <div>0 Digits (0-9, *, # and +) only</div> <div>1 SMS default alphabet</div> <div>2 UCS2 alphabet</div> <div>3 Yes/No response only</div> </div> <div> <div><helpInfo> 0 no help information available <div>1 help information available</div> </div> <div><iconId> Numeric tag for the icon to be displayed – corresponds to the index in the Image file on</div> </div></div>

	the SIM 0 No icon 1..255 Icon tag <dispMode> integer: denotes use of associated icon 0 display icon only (replaces any text string or alphaId) 1 display with alpha Id or text string
Reference	Note Entry of the Digits only response is the same regardless of alphabet set – coding of this response is performed within the SIMCOM Protocol Stack when creating the Terminal Response

6.4.1.3 Get Input

Command data for Get Input proactive command

Result Code	Parameters
*TSTGC: 23,<dc>,<text>,<response>,<echo>,<helpInfo>,<minLgth>,<maxLgth>[,<dc>,<default>[,<iconId>,<dispMode>]]	23 hex notation: Command Type value. See Section 6.2 for values. <dc> integer: data coding scheme used for <text> or <default>. The schemes used are as per GSM 03.38 for SMS. 0 7bit GSM default alphabet (packed) 4 8bit data 8 UCS2 alphabet <text> string format: text string in <dc> format <response> integer: expected response characters and their format. 1 Digits (0-9, *, # and +) only from SMS default alphabet (unpacked) 2 Digits (0-9, *, # and +) only from SMS default alphabet (packed) 3 Digits from UCS2 alphabet 4 SMS default alphabet (unpacked) 5 SMS default alphabet (packed) 6 UCS2 alphabet <echo> 0 echo input to display 1 no echo allowed (see Note) <helpInfo> 0 no help information available 1 help information available <minLgth> Integer: minimum length of expected response, in range 0..255 0 indicates no minimum length requirement <maxLgth> Integer: maximum length of expected response, in range 1..255 255 indicates no maximum length requirement <default> Integer type The <default> parameter is a single byte between 1 and 255. It shows the default/selected item within the

	<p><iconId> Numeric tag for the icon to be displayed –corresponds to the index in the Image file on the SIM (see [10])</p> <p>0 No icon</p> <p>1..255 Icon tag</p> <p><dispMode> integer: denotes use of associated icon</p> <p>0 display icon only (replaces any text string or alphaId)</p> <p>1 display with alpha Id or text string</p>
Reference	<p>Note</p> <p>Actual input string may not be displayed in this case but can alternatively be masked to indicate key entry using characters from the set (0-9, * and #).</p> <p>If <minLgth> and <maxLgth> are equal, the response string is to be of fixed length.</p>

6.4.1.4 Play Tone

Command data for Play Tone proactive command																							
<p>Result Code</p> <p>*TSTGC:</p> <p>20[,<alphaId>[,<tone>[,<duration>]]]</p>	<p>Parameters</p> <p>20 hex notation: Command Type value.</p> <p>See Section 6.2 for values.</p> <p><alphaId> string format: using either SMS default alphabet or UCS2 alpha field coding</p> <p><tone> integer: identifies requested tone type.</p> <p>SST denotes a Standard Supervisory Tone, MPT denotes an ME Proprietary Tone.</p> <table border="0"> <tr><td>1</td><td>Dial (SST)</td></tr> <tr><td>2</td><td>Called subscriber busy (SST)</td></tr> <tr><td>3</td><td>Congestion (SST)</td></tr> <tr><td>4</td><td>Radio Path acknowledge (SST)</td></tr> <tr><td>5</td><td>Radio path not available / Call dropped (SST)</td></tr> <tr><td>6</td><td>Error / Special information (SST)</td></tr> <tr><td>7</td><td>Call waiting (SST)</td></tr> <tr><td>8</td><td>Ringing Tone (SST)</td></tr> <tr><td>16</td><td>General Beep (MPT)</td></tr> <tr><td>17</td><td>Positive ack (MPT)</td></tr> <tr><td>18</td><td>Negative ack or Error (MPT)</td></tr> </table> <p><duration> integer: duration of the tone to be played, given in milliseconds.</p>	1	Dial (SST)	2	Called subscriber busy (SST)	3	Congestion (SST)	4	Radio Path acknowledge (SST)	5	Radio path not available / Call dropped (SST)	6	Error / Special information (SST)	7	Call waiting (SST)	8	Ringing Tone (SST)	16	General Beep (MPT)	17	Positive ack (MPT)	18	Negative ack or Error (MPT)
1	Dial (SST)																						
2	Called subscriber busy (SST)																						
3	Congestion (SST)																						
4	Radio Path acknowledge (SST)																						
5	Radio path not available / Call dropped (SST)																						
6	Error / Special information (SST)																						
7	Call waiting (SST)																						
8	Ringing Tone (SST)																						
16	General Beep (MPT)																						
17	Positive ack (MPT)																						
18	Negative ack or Error (MPT)																						
Reference	<p>Note</p> <p>If no tone is specified the ME shall default to the General Beep SST.</p> <p>If no duration is specified the ME default of 500ms is chosen.</p>																						

6.4.1.5 Set Up Menu

Command data for Set Up Menu proactive command
--

Result Code *TSTGC: 25,<numItems>,<selection>,<helpInfo>,<removeMenu><alphaId>[,<iconId>,<dispMode>]<CR><LF> *TSTGC: <itemId>,<itemText>[,<iconId>,<dispMode>,<nai>]<CR><LF> [*TSTGC: <itemId>,<itemText>[,<iconId>,<dispMode>,<nai>]<CR><LF> [...]]]	Parameters 25 hex notation: Command Type value. See Section 6.2 for values. <numItems> integer: indicates the number of items accessible in the menu structure. 0 is a special case, indicating the existing menu is to be removed from the ME's menu structure. <selection> integer: gives preferred user selection method 0 no selection preference 1 soft key selection preferred <helpInfo> 0 no help information available 1 help information available <removeMenu> 0 do not remove the current menu 1 remove the current menu <alphaId> string format: using either SMS default alphabet or UCS2 alpha field coding <iconId> Numeric tag for the icon to be displayed – corresponds to the index in the Image file on the SIM 0 No icon 1..255 Icon tag <dispMode> integer: denotes use of associated icon 0 display icon only (replaces any text string or alphaId) 1 display with alpha Id or text string <itemId> integer: denotes the identifier of the item <itemText> string format: using either SMS default alphabet or UCS2 alpha field coding <nai> hex notation: next action indicator – this takes one of the allowed values from the Command Type (see section 5.2) range, as specified in [9], section 13.4
Reference	Note

6.4.1.6 Select Item

Command data for Select Item proactive command

Result Code *TSTGC: 24,<numItems>,<selection>,<helpInfo>,<alphaId>[,<iconId>,<dispMode>]<CR><LF> *TSTGC:	Parameters 24 hex notation: Command Type value. See Section 6.2 for values. <numItems> integer: indicates the number of items accessible in the menu structure. 0 is a special case, indicating the existing menu is to be removed from the ME's menu structure. <selection> integer: gives preferred user selection method 0 no selection preference
--	--

<itemId>,<itemText>[,<iconId>,<dispMode>,<nai>]><CR><LF> [*TSTGC: <itemId>,<itemText>[,<iconId>,<dispMode>,<nai>]><CR><LF> [...]]]	1 soft key selection preferred <helpInfo> 0 no help information available 1 help information available <alphaId> string format: using either SMS default alphabet or UCS2 alpha field coding <iconId> Numeric tag for the icon to be displayed – corresponds to the index in the Image file on the SIM 0 No icon 1..255 Icon tag <dispMode> integer: denotes use of associated icon 0 display icon only (replaces any text string or alphaId) 2 display with alpha Id or text string <itemId> integer: denotes the identifier of the item <itemText> string format: using either SMS default alphabet or UCS2 alpha field coding <nai> hex notation: next action indicator – this takes one of the allowed values from the Command Type (see section 6.2) range
Reference	Note

6.4.1.7 Get Acknowledgement For Set Up Call

Command data for Set Up Call proactive command

Result Code *TSTGC: 10,<alphaId>[,<iconId>,<dispMode>]	Parameters 10 hex notation: Command Type value. See Section 6.2 for values. <alphaId> string format: using either SMS default alphabet or UCS2 alpha field coding <iconId> Numeric tag for the icon to be displayed – corresponds to the index in the Image file on the SIM 0 No icon 1..255 Icon tag <dispMode> integer: denotes use of associated icon 0 display icon only (replaces any text string or alphaId) 1 display with alphaId or text string
Reference	Note

6.4.1.8 Set Up Idle Mode Text

Command data for Set Up Idle Mode Text proactive command

Result Code *TSTGC: 28,<dcs>,<text>[,	Parameters 28 hex notation: Command Type value. See Section 6.2 for values.
--	---

<iconId>,<dispMode>]	<p><dc> integer: data coding scheme used for <text>. The schemes used are as per GSM 03.38 for SMS.</p> <p>0 7bit GSM default alphabet (packed)</p> <p>4 8bit data</p> <p>8 UCS2 alphabet</p> <p><text> string format: text string in <dc> format See Note below.</p> <p><iconId> Numeric tag for the icon to be displayed – corresponds to the index in the Image file on the SIM</p> <p>0 No icon</p> <p>1..255 Icon tag</p> <p><dispMode> integer: denotes use of associated icon</p> <p>0 display icon only (replaces any text string or alphaId)</p> <p>1 display with alphaId or text string</p>
Reference	<p>Note</p> <p>If the text string given in the result code is Null (i.e. zero length and set as "" in the result code) it implies the existing Idle Mode Text is to be removed.</p>

6.4.1.9 Send DTMF

Command data for Send DTMF proactive command

<p>Result Code</p> <p>*TSTGC:</p> <p>14[,<alphaId>[,<iconId>,<dispMode>]]</p>	<p>Parameters</p> <p>14 hex notation: Command Type value. See Section 6.2 for values.</p> <p><alphaId> string format: using either SMS default alphabet or UCS2 alpha field coding to inform user of current transaction.</p> <p>'0' : Special case indicating SIM provided a null alphaId and the user should not be informed of the current transaction.</p> <p>If alphaId field is not present it is up to the ME to decide whether or not to inform the user.</p> <p><iconId> Numeric tag for the icon to be displayed – corresponds to the index in the Image file on the SIM</p> <p>0 No icon</p> <p>1..255 Icon tag</p> <p><dispMode> integer: denotes use of associated icon</p> <p>0 display icon only (replaces any text string or alphaId)</p> <p>1 display with alphaId or text string</p>
Reference	Note

6.4.1.10 Launch Browser

Command data for Launch Browser proactive command

Result Code	Parameters
*TSTGC: 15,<comQual>,<url>,<browserId>,<bearer>,<numFiles>,<provFiles>,<dcsc>,<gateway>,<alphaId>,<iconId>,<dispMode>]]]]]]	15 hex notation: Command Type value. See Section 6.2 for values. <comQual> hex notation: command qualifier information from Command Details Data Object: 00 launch browser without making connection, if not already launched 01 launch browser making connection, if not already launched 02 use existing browser 03 close existing browser, launch new browser, making a connection 04 close existing browser, launch new browser, using secure session <url> string format: 8bit data using GSM default 7bit alphabet. Special case: <url>="" – Null value, so use default URL <browserId> hex notation: Browser Id to use. Available values: '00' Use default browser <bearer> hex notation: list of allowed bearers in priority order. Possible values: '00' SMS '01' CSD '02' USSD '03' GPRS <numFiles> integer: denotes the number of provisioning files given <provFiles> string type, hex notation file ids: List of Provisioning File Reference ids. Full Paths are given, delimited within the string by a comma <dcsc> integer: data coding scheme used for <text>. The schemes used are as per GSM 03.38 for SMS. 0 7bit GSM default alphabet (packed) 4 8bit data 8 UCS2 alphabet <gateway> string format: text string in <dcsc> format <alphaId> string format: using either SMS default alphabet or UCS2 alpha field coding <iconId> Numeric tag for the icon to be displayed – corresponds to the index in the Image file on the SIM 0 No icon

	1..255 Icon tag <dispMode> integer: denotes use of associated icon 0 display icon only (replaces any text string or alphaId) 1 display with alphaId or text string
Reference	Note

6.4.1.11 Open Channel

Command data for Open Channel proactive command

Result Code *TSTGC: 40[,<alphaId>[,<iconId>,<dispMode>]]	Parameters 40 hex notation: Command Type value. See Section 6.2 for values. <alphaId> string format: using either SMS default alphabet or UCS2 alpha field coding to inform user of current transaction. '0': Special case indicating SIM provided a null alphaId and the user should not be informed of the current transaction. If alphaId field is not present it is up to the ME to decide whether or not to inform the user. <iconId> Numeric tag for the icon to be displayed – corresponds to the index in the Image file on the SIM 0 No icon 1..255 Icon tag <dispMode> integer: denotes use of associated icon 0 display icon only (replaces any text string or alphaId) 1 display with alphaId or text string
Reference	Note

6.4.1.12 Set Up Event List

Command data for Set Up Event List proactive command

Result Code *TSTGC: 05,<eventList>	Parameters 05 hex notation: Command Type value. See Section 6.2 for values. <eventList> hex: denotes applicable event identifiers. 05 User activity event 06 Idle Screen Available event 08 Language Selection event 09 Browser termination event FF Remove existing event list
--	---

Reference	<p>Note</p> <p><eventList> value of FF used to remove existing list of events as value 0 can be confused with event MT Call value.</p> <p>This command causes the application to send a GSM 11.14 [9] ENVELOPE (EVENT DOWNLOAD) command to the SIM.</p>
-----------	---

6.4.2 AT*TSTCR SIM Toolkit Command Response

Once a proactive command has been processed by the application a response needs to be sent to the SIM in the form of a TERMINAL RESPONSE command. It is therefore only a requirement for the application to issue command *TSTCR for those proactive commands it already retrieved via the +STGC AT command. The general format is shown below:

AT*TSTCR SIM Toolkit Command Response data	
Write Command AT*TSTCR=<cmdId>,<result>[,<data>]	<p>Response +CME ERROR: <err></p> <p>Parameter</p> <p><cmdId> hex notation: Command Type value</p> <p><result> hex notation: dependent on the command type – see following sections for each proactive command supported. The values given in the result field for each set of proactive command response parameters the setting of the general result parameter returned to the SIMAT task in the next phase of signaling for building the Terminal Response command.</p> <p><data> additional data provided for certain commands, as required for the Terminal Response returned to the SIM after processing a proactive SIM command</p>
Reference	

For the above AT Command, the data contained within the <data> field varies depending on the current proactive SIM command being processed. The result data available for each of the proactive commands processed by the application is described in the following subsections:

6.4.2.1 Display Text

Command response for Display Text proactive command							
Write Command *TSTCR!,<result> >	<p>Parameters</p> <p>21 hex notation: Command Type value. See Section 6.2 for values.</p> <p><result> integer: possible values:</p> <table> <tr> <td>0</td><td>Message displayed OK</td></tr> <tr> <td>1</td><td>Terminate proactive session</td></tr> <tr> <td>2</td><td>User cleared message</td></tr> </table>	0	Message displayed OK	1	Terminate proactive session	2	User cleared message
0	Message displayed OK						
1	Terminate proactive session						
2	User cleared message						

	3	Screen is busy
	4	Backward move requested
	5	No response from user
Reference	Note	

6.4.2.2 Get Inkey

Command response for Get Inkey proactive command

Write Command *TSTCR",<result>[,<dc>,<text>]	Parameters 22 hex notation: Command Type value. See Section 6.2 for values. <result> integer: possible values: 0 Data entered OK 1 Terminate proactive session 2 Help information requested 3 Backward move requested 4 No response from user <dc> integer: data coding scheme used for <text>. The schemes used are as per GSM 03.38 for SMS. 0 7bit GSM default alphabet (packed) 4 8bit data 8 UCS2 alphabet <text> string format: text string in <dc> format Special cases are: "00" Negative response entered "01" Positive response entered
Reference	Note The <dc> and <text> information must be provided for <result>=0 as the SIM expects the input to be provided in a Text String Data Object in the Terminal Response SIM command when data has been input.

6.4.2.3 Get Input

Command response for Get Input proactive command

Write Command *TSTCR#,<result>[,<dc>,<text>]	Parameters 23 hex notation: Command Type value. See Section 6.2 for values. <result> integer: possible values: 0 Data entered OK 1 Terminate proactive session 2 Help information requested 3 Backward move requested
--	--

	<p>4 No response from user</p> <p><dc> integer: data coding scheme used for <text>. The schemes used are as per GSM 03.38 for SMS .</p> <p>0 7bit GSM default alphabet (packed)</p> <p>4 8bit data</p> <p>8 UCS2 alphabet</p> <p><text> string format: text string in <dc> format</p>
Reference	<p>Note</p> <p>If the <dc> is present but <text> is an empty string this indicates a null text string data object must be sent to the SIM. This is caused by the user making an ‘empty’ input.</p>

6.4.2.4 Play Tone

Command response for Play Tone proactive command

Write Command *TSTCR,<result> >	<p>Parameters</p> <p>20 Hex notation: Command Type value. See section 6.2 for values.</p> <p><result> integer: possible values:</p> <p>0 Command performed OK</p> <p>1 Terminate proactive session</p> <p>2 Tone not played</p> <p>3 Specified tone not supported</p>
Reference	Note

6.4.2.5 Set Up Menu

Command response for Set Up Menu proactive command

Write Command *TSTCR%,<result>	<p>Parameters</p> <p>25 hex notation: Command Type value. See Section 6.2 for values.</p> <p><result> integer: possible values:</p> <p>0 Menu successfully added/removed</p> <p>1 User chosen menu item</p> <p>2 Help information requested</p> <p>3 Problem with menu operation</p>
Reference	Note

6.4.2.6 Select Item

Command response for Select Item proactive command

Write Command	Parameters
---------------	------------

SIM600 AT Commands Set

*TSTCR\$,<result>[,<itemId>]	24 hex notation: Command Type value. See Section 6.2 for values. <result> integer: possible values: <div style="margin-left: 40px;"> 0 Item Selected OK 1 Terminate proactive session 2 Help information requested 3 Backward move requested 4 No response given </div> <itemId> integer: denotes identifier of item selected
Reference	Note

6.4.2.7 Get Acknowledgement For Set Up Call

Command response for Set Up Call proactive command	
Write Command *TSTCR†,<result> It>	Parameters 10 hex notation: Command Type value. See Section 6.2 for values. <result> integer: possible values: <div style="margin-left: 40px;"> 0 user accepted call (conf phase only) 1 user rejected call (conf phase only) 2 user cleared call (any phase) </div>
Reference	Note

6.4.2.8 Set Up Idle Mode Text

Command response for Set Up Idle Mode Text proactive command	
Write Command *TSTCR(<result> >	Parameters 28 hex notation: Command Type value. See Section 6.2 for values. <result> integer: possible values: <div style="margin-left: 40px;"> 0 Text successfully added/removed 1 Problem performing command </div>
Reference	Note

6.4.2.9 Send DTMF

Command response for Send DTMF proactive command	
Write Command *TSTCR‡,<result> It>	Parameters 13 hex notation: Command Type value. See Section 6.2 for values. <result> integer: possible values:

	0	DTMF not accepted
	1	DTMF required.
Reference	Note	

6.4.2.10 Launch Browser

Command response for Launch Browser proactive command

Write Command *TSTCR¹,<result> It>	Parameters 15 hex notation: Command Type value. See Section 6.2 for values. <result> integer: possible values: 0 Command performed successfully 1 Command performed – partial comp 2 Command performed – missing info 3 User rejected launch 4 Error – no specific cause given 5 Bearer unavailable 6 Browser unavailable 7 ME cannot process command 8 Network cannot process command 9 Command beyond MEs capabilities.
Reference	Note

6.4.2.11 Open Channel

Command response for Open Channel proactive command

Write Command *TSTCR@,<result> It>	Parameters 40 hex notation: Command Type value. See Section 6.2 for values. <result> integer: possible values: 0 Channel not accepted 1 Channel required.
Reference	Note

6.4.2.12 Set Up Event List

Command response for Set Up Event List proactive command

Write Command *TSTCR ,<result> It>	Parameters 05 hex notation: Command Type value. See Section 6.2 for values.
---	--

	<result> integer: possible values: Command performed successfully Cannot perform command.
Reference	Note

6.4.3 AT*TSTPD SIM Toolkit Profile Download

When an application is plugged into the serial port the command interpreter needs to have knowledge of its SAT capabilities to enable it to route all SAT related signalling to that application if required. If this command is not received it will be assumed that any attached application has no SAT capability and will therefore not send any related signals to it. If the SIM has reported that it does not have any proactive capability then an TSTC: 0 unsolicited response will be sent to the application.

AT*TSTPD SIM Toolkit Command Response data	
Write Command AT*TSTPD=<length>,<data>	Response OK +CME ERROR: <err> *TSTC: 0
	Parameter <length> Integer Determines the number of bytes of <data> used for the Profile Download data from the application. <data> List Of Hex Values, two digits each: Hexadecimal representation of the Terminal Profile data
Reference	Note Some octets are optional in the profile, hence the inclusion of a length parameter. For example, the following command sets all the bits in octets 3 and 4: AT*TSTPD=4,0000FFFF.

6.4.4 AT*TSDEV SIM Toolkit Event Command

The application can inform the MS of defined MMI events using this command.

AT*TSDEV SIM Toolkit Event Command	
Test Command AT*TSDEV=?	Response *TSDEV: (supported <event> list) +CME ERROR: <err>
Write Command *TSDEV=<event>	Response +CME ERROR: <err>

SIM600 AT Commands Set

>,<language>	Parameter <event> hex two digits: 05 User Activity Event 06 Idle Screen Event 08 Language Selection Event FF Clear Current Event List <language> string type up to two characters
Reference	Note The <language> parameter is applicable only to Language Selection Event. For example the language can be set by: AT*TSSTEV ,”11”

6.4.5 AT*TSSTMS SIM Toolkit Main Menu Selection Command

The application may set up its main menu on receipt of the Set Up Menu SIM Toolkit event. The application can select an item from the menu by sending this AT command to the MS.

AT*TSSTMS SIM Toolkit Menu Selection Command	
Test Command AT*TSSTMS=?	Response *TSSTMS: (range of available <item>s),<0-1> +CME ERROR: <err>
Write Command *TSSTMS=<item> >[,<help>]	Response +CME ERROR: <err> Parameter <item> numeric type, giving unique identifier of menu item <help> numeric type
Reference	Note For example, AT+STMS=2,1 will select item 2 from the main menu with help.

6.4.6 AT*TSSTRT SIM Toolkit Response Timer Command

When a proactive command is received from the SIM an automatic response timer is started. If this timer expires before the application has provided a suitable response via the *TSSTCR command, a Terminal Response is sent to the SIM containing a result of No User Response. This AT command allows the automatic response timeout period to be configured by the application at run-time, thus giving it extended time to respond to certain proactive commands (e.g. the Get Input command may request a long input string to be entered as part of the associated test case). The default setting for the response timer is ten seconds, and the maximum duration available is one hour.

AT*TSSTRT SIM Toolkit Response Timer Command	
Read Command AT*TSSTRT?	Response: *TSSTRT: <duration> +CME ERROR: <err>

SIM600 AT Commands Set

	Parameter See Write command
Test Command AT*TSTRT=?	Response *TSTRT: (list of supported <duration>s) +CME ERROR: <err>
Write Command AT*TSTRT=<duration>	Response +CME ERROR: <err>
	Parameter <duration> numeric type. Minimum = 1s, maximum = 3600s
Reference	Note Default setting is ten seconds

6.4.7 AT*TSTTONE SIM Toolkit Tone Command

The application may request a tone to play after receiving the Play Tone proactive command. The application either starts playing the tone with the requested tone Id, or stops playing the current tone depending on the <mode> parameter. Tones may be played in either idle or dedicated mode.

On completion of the current tone, unsolicited result code *STTONE: 0 will be issued by the CI Task. However, if <mode>=0 is used to terminate the tone before it has completed playing there will be no unsolicited result code but only a result code of OK generated by the CI Task.

AT*TSTTONE SIM Toolkit PLAY TONE COMMAND

Test Command AT*TSTTONE=?	Response *TSTTONE: (list of supported <mode>s),(list of supported <tone>s),<list of supported <duration>s> +CME ERROR: <err>
Write Command AT*TSTTONE=	Response +CME ERROR: <err>

SIM600 AT Commands Set

<mode>[,<tone> [,<duration>]]	<p>Parameter</p> <p><mode> 0 Stop playing tone 1 Start playing tone</p> <p><tone> numeric type</p> <p> 1 Dial Tone 2 Called Subscriber Busy 3 Congestion 4 Radio Path Acknowledge 5 Radio Path Not Available / Call Dropped 6 Error / Special information 7 Call Waiting Tone 8 Ringing Tone 16 General Beep 17 Positive Acknowledgement Tone 18 Negative Acknowledgement or Error Tone</p> <p><duration> numeric type, in milliseconds. Max requested value = 255*60*1000 = 15300000ms (supported range = 0- 15300000)</p>
Reference	<p>Note</p> <p>The default <tone>, if none entered, is General Beep.</p> <p>The default <duration>, if none entered, is 500ms.</p>

6.4.8 AT+HSTK Terminate All STK action

AT+HSTK Terminate All STK action	
Execute Command AT+HSTK	Response OK
Reference	<p>Note:</p> <p>All STK action will be terminated after execute this command</p>

7 AT Commands Special for SIMCOM

7.1 Overview

Command	Description
AT+SPIC	Times remain to input SIM PIN/PUK
AT+CSCLK	CONFIGURE SLOW CLOCK
AT+CHFA	SWAP THE AUDIO CHANNELS

7.2 Detailed Descriptions of Commands

7.2.1 AT+SPIC Times remain to input SIM PIN/PUK

AT+SPIC	Times remain to input SIM PIN/PUK
Execute Command AT+SPIC	<p>Response</p> <p>Times remain to input SIM PIN</p> <p>+SPIC: <chv1>,<chv2>,<puk1>,<puk2> OK</p> <p>Parameters</p> <p><chv1>: Times remain to input chv1</p> <p><chv2>:Times remain to input chv2</p> <p><puk1>: Times remain to input puk1</p> <p><puk2>: Times remain to input puk2</p>
Reference	

7.2.2 AT+CSCLK Configure Slow Clock

AT+ CSCLK	Configure Slow Clock
Read Command AT+ CSCLK?	<p>Response</p> <p>+CSCLK: <n></p> <p>Parameters</p> <p>See write command.</p>
Test Command AT+ CSCLK=?	<p>Response</p> <p>+CSCLK: (0,1)</p> <p>Parameters</p> <p>See write command.</p>
Write Command AT+ CSCLK =<n>	<p>Response</p> <p>OK</p> <p>ERROR</p>

	Parameters <n> 0 – disable slow clock 1 – enable slow clock
Reference	NOTE

7.2.3 AT+CHFA Swap the audio channels

AT+ CHFA Swap the audio channels	
Read Command AT+ CHFA?	Response + CHFA: <n>
	Parameters See write command.
Test Command AT+ CHFA=?	Response +CHFA: (0 = NORMAL_AUDIO, 1 = AUX_AUDIO)
	Parameters See write command.
Write Command AT+CHFA=<n>	Response OK +CME ERROR: <err>
	Parameters <n> 0 – Normal audio channel(default) 1 – Aux audio channel
Reference	NOTE This command swaps the audio channels between the normal channel and the aux channel.

8 Other AT Command

8.1 Overview

Command	Description
AT*TLTS	GET LOCAL TIMESTAMP
AT*TEXTHS	EXTERNAL HEADSET JACK CONTROL
AT*TEXTBUT	HEADSET BUTTON STATUS REPORTING
AT*TSMINS	SIM INSERTED STATUS REPORTING
AT*TLDTMF	LOCAL DTMF TONE GENERATION
AT*TDRIND	CS Call Or GPRS PDP CONTEXT TERMINATION INDICATION
AT*TDTX	Configures discontinuous data transmission
AT*TSPN	GET SERVICE PROVIDER NAME FROM SIM
AT+CBAND	GET AND SET MOBILE OPERATION BAND
AT*THF	CONFIGURES HANDS FREE OPERATION
AT*TUNSOL	Extra URC indication
AT*TSQF	Define Filter for *TSQN notifications
AT*TBCF	Define Filter for *TBCN notifications
AT+CMOD	Define alternating mode
AT*TALS	Configure Auxiliary Line Service
AT*TCOLR	Connected line identification restriction

8.2 Detailed Descriptions of Commands

8.2.1 AT*TLTS Get local timestamp

AT*TLTS Get local timestamp	
Test command AT*TLTS=?	Response *TLTS: (the format of timestamp)
	Parameters see Execution command
	Parameter See Execution command
Execution command	Response *TLTS:(timestamp)

AT*TLTS	Parameters <timestamp> a string parameter which indicates the local timestamp. The format of timestamp is “yy/MM/dd,hh:mm:ss+/-zz” yy: year MM: month dd: day hh: hour mm: minute ss: second zz: time zone
Reference	Note

8.2.2 AT*TEXTHS External headset jack control

AT+CEXTHS External headset jack control	
Test command AT*TEXTHS=?	Response *TEXTHS: <mode> Parameters see Write command
Read command AT*TEXTHS?	Response *TEXTHS:<mode>,<headset attach> Parameter see Write command
Write command AT*TEXTHS=<mode>	Response OK ERROR Unsolicited result code: *TEXTHS:<mode>,<headset attach> Parameters <mode> a numeric parameter which indicates whether an unsolicited event code (indicating whether the headset has been attached/detatched) should be sent to the terminal. 0 not send unsolicited event code 1 send unsolicited event code <headset attach> a numeric parameter which indicates whether a headset has been attached or not 0 not attached 1 attached
Reference	Note

Support for this command will be hardware dependant.

8.2.3 AT*TEXTBUT Headset button status reporting

AT*TEXTBUT Headset button status reporting	
Test command AT*TEXTBUT=?	Response *TEXTBUT: <mode>
	Parameters See Write command
Read command AT*TEXTBUT?	Response *TEXTBUT:<mode>,<headset button press>
	Parameter see Write command
Write command AT*TEXTBUT=<mode>	Response OK ERROR
	Unsolicited result code: *TEXTBUT:<mode>,<headset button press>
	Parameters <div> <div><mode></div> <div>a numeric parameter which indicates whether an unsolicited event code (indicating whether the headset button has been pressed) should be sent to the terminal.</div> <div>0 not send unsolicited event code</div> <div>1 send unsolicited event code</div> </div> <div> <div><headset attach></div> <div>a numeric parameter which indicates whether a headset button has been pressed or not</div> <div>0 not pressed</div> <div>1 pressed</div> </div>
Reference	Note Support for this command will be hardware dependant.

8.2.4 AT *TSIMINS SIM inserted status reporting

AT *TSIMINS SIM inserted status reporting	
Test command AT*TSIMINS=?	Response *TSIMINS: (list of supported <n>s)
	Parameters see Write command

Read command AT*TSIMINS?	Response *TSIMINS:<n>,< inserted> Unsolicited result code: *TSIMINS: <inserted>
	Parameter <n> 0 Disable unsolicited result code 1 Enable unsolicited result code <inserted> 0 SIM change inserted to removed 1 SIM change removed to inserted
Write command AT*TSIMINS=<n> >	Response OK ERROR
	Parameters <n> 0 disable 1 enable
Reference	Note

8.2.5 AT*TLDTMF Local DTMF tone generation

AT*TLDTMF Local DTMF tone generation	
Write command AT*TLDTMF=[<n>[,<dtmf string>]]	Response OK ERROR
	Parameters <n> Duration of all DTMF tones in <dtmf-string> in 1/10 seconds <dtmf-string> a string parameter which has a max length of 20 chars of form <dtmf>, separated by commas. <dtmf> A single ASCII chars in the set 0-9,#,*,A-D.
Test command AT*TLDTMF=?	Response *TLDTMF: (1-n), (dtmf string) OK
Excution command AT*TLDTMF	Response OK Aborts any DTMF tone currently being generated and any DTMF tone sequence.
Reference	Note

8.2.6 AT*TDRIND CS call or GPRS PDP context termination indication

AT*TDRIND CS call or GPRS PDP context termination indication	
Read command AT*TDRIND?	<p>Response</p> <p>*TDRIND: <n></p> <p>Unsolicited result code:</p> <p>*TDRIND: <channel></p> <p>Parameters</p> <p><n> 0 Unsolicited result code disabled 1 Unsolicited result code enabled</p> <p><channel> 0 CS voice 1 CS Data/Fax 2 GPRS (PPP)</p>
Set command AT*TDRIND=<n> >	<p>Response</p> <p>Parameter</p> <p><n> 0 Disable unsolicited result code 1 Enable unsolicited result code</p>
Reference	<p>Note</p> <p>This unsolicited result code is useful for use with Class B operation and the software Multiplexer.</p> <p>The unsolicited result code will be sent after the “NO CARRIER” result code</p>

8.2.7 AT*TDTX Configures discontinuous data transmission

AT*TDTX Configures discontinuous data transmission	
Test command AT*TDTX=?	<p>Response</p> <p>*TDTX: (list of supported <n>s)</p> <p>Parameters</p> <p>See Write command</p>
Read command AT*TDTX?	<p>Response</p> <p>*TDTX:<n></p> <p>Parameter</p> <p>see Write command</p>

Write command AT*TDTX=<n>	Response OK ERROR
	Parameters <n> 0 disable 1 enable
Reference	Note

8.2.8 AT*TSPN Get Service Provider Name from SIM

AT*TSPN Get Service Provider Name from SIM

Read Command AT*TSPN?	Response: *TSPN: <spn>,<display mode> +CME ERROR: <err>
	Parameters <spn> string type; service provider name on SIM <display mode> 0 – don't display PLMN. Already registered on PLMN 1 – display PLMN
Reference	Note CME errors possible if SIM not inserted or PIN not entered.

8.2.9 AT+CBAND Get and Set Mobile Operation Band

AT+CBAND Get and Set Mobile Operation Band

Read Command AT+CBAND?	Response +CBAND: [<op_band_status>,<op_band>] [<CR><LF>+CBAND: <op_band_status>,<op_band>] [...] +CME ERROR: <err>
	Parameter See Write Command
Test Command AT+CBAND=?	Response +CBAND: (list of supported <op_band>s)
	Parameter See Write Command
Write Command AT+CBAND=<op_band>	Response +CME ERROR: <err>
	Parameters

	<p><op_band> String type:</p> <p>PGSM_MODE EGSM_MODE DCS_MODE PGSM_DCS_MODE EGSM_DCS_MODE PCS_MODE PGSM_PCS_MODE EGSM_PCS_MODE GSM850_MODE GSM850_PCS_MODE GSM850_DCS_MODE</p> <p><op_band_status> Integer type:</p> <p>0: Operation band available for selection 1: Operation band selected</p>
Reference	<p>Note:</p> <p>Radio settings following updates are stored in non-volatile memory.</p>

8.2.10 AT*THF CONFIGURES HANDS FREE OPERATION

AT*THF CONFIGURES HANDS FREE OPERATION	
<p>Read Command</p> <p>AT*THF?</p>	<p>Response</p> <p>*THF: <ind>,<state></p> <p>Unsolicited result code:</p> <p>*THF: <state></p> <p>Parameters</p> <p>See write command.</p>
<p>Test Command</p> <p>AT*THF=?</p>	<p>Response</p> <p>*THF: (0-1),(0-1)</p>
<p>Write Command</p> <p>AT*THF=<ind>,<state></p>	<p>Response</p> <p>+CME ERROR: <err></p> <p>Parameters</p> <p><ind> 0 Unsolicited result code disabled 1 Unsolicited result code enabled (non-volatile)</p> <p><state> 0 Hands free operation disabled 1 Hands free operation enabled (volatile)</p>
Reference	

8.2.11 AT*TUNSOL Extra URC indication

AT*TUNSOL	Extra URC indication
Test Command AT*TUNSOL=?	Response *TUNSOL: (list of supported <ind>s) OK
Write Command AT*TUNSOL=<ind>,<mode>	Response +CME ERROR: <err> Parameters <ind> values currently reserved by the present document: “SQ” Signal Quality Displays signal strength and channel bit error rate (similar to AT+CSQ) in form *TSQN: <rsi>,<ber> when values change. “FN” Forbidden Networks Available Only When returning to a non-registered state this indicates whether all the available PLMNs are forbidden. “MW” SMS Message Waiting On receiving an SMS (as indicated by the +CMTI indication) the SMS is decoded and checked to see if it contains one or more of the message waiting indications (i.e. voicemail, email, fax etc). If so, an unsolicited indication is shown in the form for each message type: +CMWT: <store>,<index>,<voice>,<fax>,<email>,<other> Where <store> is the message store containing the SM, index is the message index and <voice>,<email>,<fax>,<other> contain the number of waiting messages (with ‘0’ defined as clear indication,non-zero for one or more waiting messages) or blank for not specified in this message. “SM” Additional SMS Information Displays additional information about SMS events in the form of Unsolicited messages of the following format +TSMSINFO: <CMS error info> “UR” Unsolicited Result Code Produces an unsolicited indication following particular call state transitions. *TGURC: <event> Where <event> describes the current call state: <event> 0 Active call terminated, at least one held call remaining 1 Attempt to make an Mobile Originated call 2 Mobile Originated Call has failed for some reason 3 Mobile Originated call is ringing 4 Mobile Terminated call is queued (Call waiting 5 Mobile Originated call now connected 6 Mobile Originated or Mobile Terminated call has isconnected

	<p>7 Mobile Originated or Mobile Terminated call hung up</p> <p>“BC” Battery Charge</p> <p>Displays battery connection status and battery charge level (similar to AT+CBC) in form *TBCN: <bcs>,<bcl> when values change.</p> <p>“BM” Displays band mode (similar to AT+CBAND) in form +CBAND:<band> when value changes.</p> <p><mode></p> <ul style="list-style-type: none"> 0 unlock 1 lock 2 query
Reference	

8.2.12 AT*TSQF Define Filter for *TSQN notifications

AT*TSQF Define Filter for *TSQN notifications	
Test Command AT*TSQF=?	Response *TSQF: (0-30),(0,50-1000),(0-32)
Read Command AT*TSQF?	Response *TSQF:<interval>,<window>,<minchange>
Write Command AT*TSQF=<interval>,<window>,<min change>	<p>Parameters</p> <p><interval> The minimum time in seconds which must elapse between *TSQN notifications.</p> <p><window> The number of milliseconds over which the signal quality should be averaged. A value of 0 indicates no averaging.</p> <p><min change> The minimum number of levels by which the signal quality level must have changed before a signal quality notification is generated.</p>
Reference	<p>Note</p> <p>All references to signal level apply to the first argument to the *TSQN</p>

8.2.13 AT*TBCF Define Filter for *TBCN notifications

AT*TBCF Define Filter for *TBCN notifications	
Test Command AT*TBCF=?	Response *TBCF: (0-100)
Read Command AT*TBCF?	Response *TBCF: <min change>
Write Command AT*TBCF=<min change>	<p>Parameters</p> <p><min change> The minimum number of percentage points by which the battery power level must have changed before a battery charge notification (*TBCN) is generated.</p>

Reference	
-----------	--

8.2.14 AT+CMOD Define alternating mode

AT+CMOD Define alternating mode	
Test Command AT+CMOD=?	Response +CMOD: (0)
Read Command AT+CMOD?	Response +CMOD: < mode >
Write Command AT+CMOD=< mode>	Parameters <mode> Alternating mode calls, but only single mode is supported, now.
Reference	

8.2.15 AT*TALS Configure Auxiliary Line Service

AT*TALS Configure Auxiliary Line Service	
Read Command AT*TALS?	Response *TALS: <use-aux>
Test Command AT*TALS=?	Response *TALS: (0-1)
Write Command AT*TALS= <use-aux>	Response OK Parameters <use-aux> Numeric Type: 0 Line 1 (default) 1 Line 2 (auxiliary)
Reference	

8.2.16 AT*TCOLR Connected line identification restriction

AT*TCOLR Connected line identification restriction	
Read Command AT*TCOLR?	Response *TCOLR: <n> +CME ERROR: <err> Parameter <n> 0: COLR not provisioned 1: COLR provisioned
Reference	

9 Supported unsolicited result codes

9.1 Summary of CME ERROR Codes

Final result code +CME ERROR: <err> indicates an error related to mobile equipment or network. The operation is similar to ERROR result code. None of the following commands in the same command line is executed. Neither ERROR nor OK result code shall be returned.

<err> values used by common messaging commands:

Code of <err>	Meaning
0	phone failure
1	no connection to phone
2	phone-adaptor link reserved
3	operation not allowed
4	operation not supported
5	PH-SIM PIN required
6	PH-FSIM PIN required
7	PH-FSIM PUK required
10	SIM not inserted
11	SIM PIN required
12	SIM PUK required
13	SIM failure
14	SIM busy
15	SIM wrong
16	incorrect password
17	SIM PIN2 required
18	SIM PUK2 required
20	memory full
21	invalid index
22	not found
23	memory failure
24	text string too long
25	invalid characters in text string
26	dial string too long
27	invalid characters in dial string
30	no network service
31	network timeout
32	network not allowed - emergency calls only
40	network personalisation PIN required
41	network personalisation PUK required
42	network subset personalisation PIN required
43	network subset personalisation PUK required
44	service provider personalisation PIN required

SIM600 AT Commands Set

45	service provider personalisation PUK required
46	corporate personalisation PIN required
47	corporate personalisation PUK required
100	unknown
103	illegal MS
106	illegal ME
107	gprs services not allowed
111	plmn not allowed
112	location area not allowed
113	roaming not allowed in this location area
132	service option not supported
133	requested service option not subscribed
134	service option temporarily out of order
148	unspecified gprs error
149	PDP authentication failure
150	invalid mobile class
577	GPRS - activation rejected by GGSN
578	PRS - unspecified activation rejection
579	GPRS - bad code or protocol rejection
580	GPRS - can't modify address
581	GPRS - CHAP close
582	GPRS - profile (cid) currently unavailable
583	GPRS - a profile (cid) is currently active
584	GPRS - combined services not allowed
585	GPRS - conditional IE error
586	GPRS - context activation rejected
587	GPRS - duplicate TI received
588	GPRS - feature not supported
589	GPRS - service not available
590	GPRS - unknown IE from network
591	GPRS - implicitly detached
592	GPRS - insufficient resources
593	GPRS - invalid activation state (0-1)
594	GPRS - invalid address length
595	GPRS - invalid character in address string
596	GPRS - invalid cid value
597	GPRS - invalid dialstring length
598	GPRS - mode value not in range
599	GPRS - invalid MAND information
600	GPRS - SMS service preference out of range
601	GPRS - invalid TI value
602	GPRS - IPCP negotiation timeout

SIM600 AT Commands Set

603	GPRS - LCP negotiation timeout
604	GPRS - LLC error
605	GPRS - LLC or SNDCP failure
606	GPRS - lower layer failure
607	GPRS - missing or unknown APN
608	GPRS - mobile not ready
609	GPRS - MS identity not in network
610	GPRS - MSC temporarily not reachable
611	GPRS - message incompatible with state
612	GPRS - message type incompatible with state
613	GPRS - unknown message from network
614	GPRS - NCP close
615	GPRS - network failure
616	PRS - no echo reply
617	GPRS - no free NSAPIs
618	GPRS - processing of multiple cids not supported
619	GPRS - no PDP context activated
620	GPRS - normal termination
621	GPRS - NSAPI already used
622	GPRS - address element out of range
623	GPRS - PAP close
624	GPRS - PDP context w/o TFT already activated
625	GPRS - pdp type not supported
626	GPRS - peer refuses our ACCM
627	GPRS - peer refuses our IP address
628	GPRS - peer refuses our MRU
629	GPRS - peer rerequested CHAP
630	GPRS - profile (cid) not defined
631	GPRS - unspecified protocol error
632	GPRS - QOS not accepted
633	GPRS - QOS validation fail
634	GPRS - reactivation required
635	GPRS - regular deactivation
636	GPRS - semantic error in TFT operation
637	GPRS - semantic errors in packet filter
638	GPRS - semantically incorrect message
639	GPRS - service type not yet available
640	GPRS - syntactical error in TFT operation
641	GPRS - syntactical errors in packet filter
642	PRS - too many RXJs
643	GPRS - unknown PDP address or type
644	GPRS - unknown PDP context

SIM600 AT Commands Set

645	GPRS - user authorisation failed
646	GPRS - QOS invalid parameter
673	audio manager not ready
674	audio format cannot be configured
705	sim toolkit menu has not been configured
706	sim toolkit already in use
707	sim toolkit not enabled
737	+CSCS type not supported
738	CSCS type not found
741	must include <format> with <oper>
742	incorrect <oper> format
743	<oper> length too long
744	SIM full
745	unable to change PLMN list
746	network operator not recognized
749	invalid command length
750	invalid input string
753	missing required cmd parameter
754	invalid SIM command
755	invalid File Id
756	missing required P1/2/3 parameter
757	invalid P1/2/3 parameter
758	missing required command data
759	invalid characters in command data
765	invalid input value
766	unsupported value or mode
767	operation failed
768	multiplexer already active
769	unable to get control of required module
770	SIM invalid - network reject
771	call setup in progress
772	SIM powered down

9.2 Summary of CMS ERROR Codes

Final result code +CMS ERROR: <err> indicates an error related to mobile equipment or network. The operation is similar to ERROR result code. None of the following commands in the same command line is executed. Neither ERROR nor OK result code shall be returned.

<err> values used by common messaging commands:

Code of <err>	Meaning
300	ME failure
301	SMS ME reserved

SIM600 AT Commands Set

302	operation not allowed
303	operation not supported
304	invalid PDU mode
305	invalid text mode
310	SIM not inserted
311	SIM pin necessary
312	PH SIM pin necessary
313	SIM failure
314	SIM busy
315	SIM wrong
316	SIM PUK required
317	SIM PIN2 required
318	SIM PUK2 required
320	memory failure
321	invalid memory index
322	memory full
330	SMSC address unknown
331	no network
332	network timeout
500	unknown
512	SIM not ready
513	unread records on SIM
514	CB error unknown
515	PS busy
517	SM BL not ready
528	Invalid (non-hex) chars in PDU
529	Incorrect PDU length
530	Invalid MTI
531	Invalid (non-hex) chars in address
532	Invalid address (no digits read)
533	Incorrect PDU length (UDL)
534	Incorrect SCA length
536	Invalid First Octet (should be 2 or 34)
537	Invalid Command Type
538	SRR bit not set
539	SRR bit set
540	Invalid User Data Header IE

Contact us:

Shanghai SIMCom Ltd.

Add: SIM Technology Building, No. 700, Yishan Road, Shanghai, P. R. China 200233

Tel: +86 21 5427 8900

Fax: +86 21 5427 6035

URL: www.sim.com