

**Partner: GE Interlogix**  
**Model: NX-8E**  
**Device Type: Security**



## GENERAL INFORMATION

<b>SIMPLWINDOWS NAME:</b>	GE Interlogix Networx Set User Information v4.1
<b>CATEGORY:</b>	Security
<b>VERSION:</b>	4.1
<b>SUMMARY:</b>	This module allows user information to be changed.
<b>GENERAL NOTES:</b>	This module allows a master user to added users. It also allows the master user to view and change the user information for a user.
<b>CRESTRON HARDWARE REQUIRED:</b>	CNXCOM, CNX-COM2, ST-COM, C2COMI, C2COM2/3
<b>SETUP OF CRESTRON HARDWARE:</b>	RS232 Baud: 9600 Parity: None Data Bits: 8 Stop Bits: 1
<b>VENDOR FIRMWARE:</b>	NX-8E AE71/6/29/05

**Partner: GE Interlogix**  
**Model: NX-8E**  
**Device Type: Security**



## VENDOR SETUP:


The NX-8E has the NX-584 built onto the main board. You must enter programming mode and enable the NX-584 by setting Location 207 to "1". Location 23 enables and disables function globally. For instance, if Location 23 Segment 1 Bit 1 is enabled, the STAY function will be enabled on the NX-8E keypads. The STAY function will be enabled on the Crestron system if Location 23 Segment 1 Bit 1 and Location 211 Segment 4 Bit 7 are enabled. If Location 23 Segment 1 Bit 1 is disabled, the STAY function will be disabled for both the NX-8E keypads and the Crestron system, no matter what Location 211 Segment 4 Bit 7 is set to.

The following locations need to be set as listed below.

Location	Setting
23	Segment 1 bits 1, 5, 6 & 7 enabled. All others disabled.
23	Segment 2 bit 4 enabled. All others disabled.
23	Segments 3, 4 & 5 all bits disabled.
207	"1" for NX-584 Enabled.
208	"2" for 9600 Baud.
209	Bit 1 set to "1" for LED On ASCII.
210	Segment 1 All disabled.
210	Segment 2 All disabled.
211	Segment 1 bits 4, 6 & 7 enabled. All others disabled.
211	Segment 2 bits 1 & 3 enabled. All others disabled.
211	Segment 3 bits 3, 5 & 7 enabled. All others disabled.
211	Segment 4 bits 5, 7 & 8 enabled. All others disabled.

## CABLE DIAGRAM:

CNSP-124

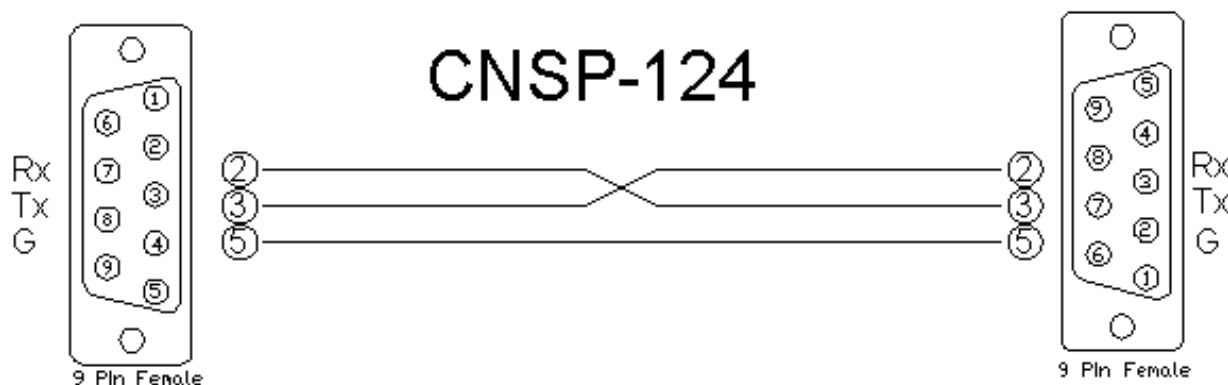

**Partner: GE Interlogix**  
**Model: NX-8E**  
**Device Type: Security**


**CONTROL:**

<b>Master_PIN_Key_*</b>	D	Pulse to enter the master users passcode.
<b>User_Number_Key_*</b>	D	Pulse to enter the user number you wish to add or change.
<b>New_User_PIN_Key_*</b>	D	Pulse to enter the new user passcode.
<b>Set_New_User_PIN</b>	D	Pulse to send the new user PIN to the NX-8E.
<b>Authority_*</b>	D	Pulse to enable or disable the things that you want the user to be able to do.
<b>Authorized_Partition_*</b>	D	Pulse to enable or disable the user for the different partitions.
<b>Set_User_Authorities</b>	D	Pulse to send the changed authorities.
<b>Get_User_Information</b>	D	Pulse to request the information for the user number entered.
<b>From_Processor_Module\$</b>	S	Serial signal to be routed from the GE Interlogix Networx Processor Module v4.1.

**PARAMETER:**

<b>Digits In User PassCode</b>	P	Select the number of digits to use in the user passcode.
--------------------------------	---	--

**FEEDBACK:**

<b>Master_PIN_Masked\$</b>	S	Serial signal indicating the masked master passcode.
<b>Timed_Out</b>	D	Pulses high to indicate that the time limit has expired. When the time limit expires, the master passcode and user number must be reentered. The time out is 30 seconds.
<b>User_Number\$</b>	S	Serial signal indicating the user number entered.
<b>New_User_PIN\$</b>	S	Serial signal indicating the new user passcode. THIS IS NOT MASKED.
<b>Authority_*_Fb</b>	D	High to indicate the authorizations that the user has or will be given.
<b>Authorized_Partition_*_Fb</b>	D	High to indicate the partitions that the user has authority in.
<b>To_Processor_Module\$</b>	S	Serial signal to be routed to the GE Interlogix Networx Processor Module v4.1.

**Partner: GE Interlogix**  
**Model: NX-8E**  
**Device Type: Security**

**TESTING:****OPS USED FOR TESTING:**

PRO2: 3.137  
CNMSX-Pro: 5.14.02x

**SIMPL WINDOWS USED FOR TESTING:**

2.10.32

**SAMPLE PROGRAM:**

GE Interlogix Networx v4.1 Demo

**REVISION HISTORY:**

2.0 – 7/27/2005 – Changed several modules. The processor module has been changed so that it does not poll the NX-8E. This allows the commands to be sent to the NX-8E more promptly. The Partition and Zone modules have been changed to provide more feedback. All SIMPL+ modules have been changed to use volatile memory instead of non-volatile memory.

3.0 – 9/22/2005 – Changed several modules. The processor module has been changed so that it does poll. This allows us to control all communications between the Crestron and the NX-8E. The zone bypass modules and the zone name modules have been changed to allow the zone number to be entered as a decimal. This will allow the module to be copied and pasted using the auto increment function.

4.0 – 5/17/2006 – Fixed the GE Interlogix Networx Processor Module v4.0 module. It had a user function that had the same name as a new built in function in the Simpl+ file.

4.1 – 1/27/2009 – Fixed an issue with the GE Interlogix Networx Processor Module v4.1 that caused errors in the processor module. Also fixed a labeling issue with the cable diagram in the help file.