

Raspberry Pi Setup

Change History

Version	Author	Date	Description
0.1	Adrian Gfeller	22.05.2017	Initial Draft
1.0	Walter Rothlin	20.07.2017	Updated
1.1	Benjamin Raison	22.09.2017	Fixed erros, formatting, replaced apt-get with apt where possible, added "Installing Apache"
1.2	Walter Rothlin	23.09.2017	Updated example to python 3
1.3	Benjamin Raison	28.09.2017	Added Perl CGI + example, added instructions on sensor input errors
1.4	Benjamin Raison	09.10.2017	Added section on discovering the IP address & Pi Plates
1.5	Walter Rothlin		Set-UP WiFi an BSU
1.6	Walter Rothlin	29.11.2017	Web-Server Config
1.7	Walter Rothlin	14.06.2019	CGI Config
1.8	Walter Rothlin	06.03.2021	Added Remote-Access


Contents

Change History	1
Download OS for Raspberry.....	3
Write Image to SD-Card.....	4
First startup	4
Boot & Login	4
Changing the Keyboard Layout.....	5
Changing the Password.....	6
Connecting to internet	7
Via Desktop.....	7
Via cable	8
Via Wi-Fi (via Command line)	10
Via BZU Wi-Fi.....	10
Wi-Fi set-up using desktop	11
Updating the System	12
Enable On-Board-Screen	12
Enable SSH	12
Save the Image of the Raspberry Pi.....	13
Remote-Access	14
Google VNC	14
Remote Desktop with Xming and Putty	15
ssh using PuTTY	16
nppFTP plugin for Notepad++	16
SFTP via FileZilla	17
Pi Plates	18
Addressing the boards	18
Further documentation	18
Installing Apache	19
Enable CGI	19
Enable Sense-Hat and PiPlates for CGI calls	20
Change Web-Server to run the scripts as user pi (not mandatory)	20
Perl example	21
Troubleshooting.....	21

Download OS for Raspberry

In this guide, *Raspbian* will be used which is a Linux distribution based on Debian and targeted at Raspberry Pi. Raspbian comes in two versions: DESKTOP and LITE.

Download the latest *Raspbian Jessie Lite* from <https://www.raspberrypi.org/downloads/raspbian/> (20.7.2017)

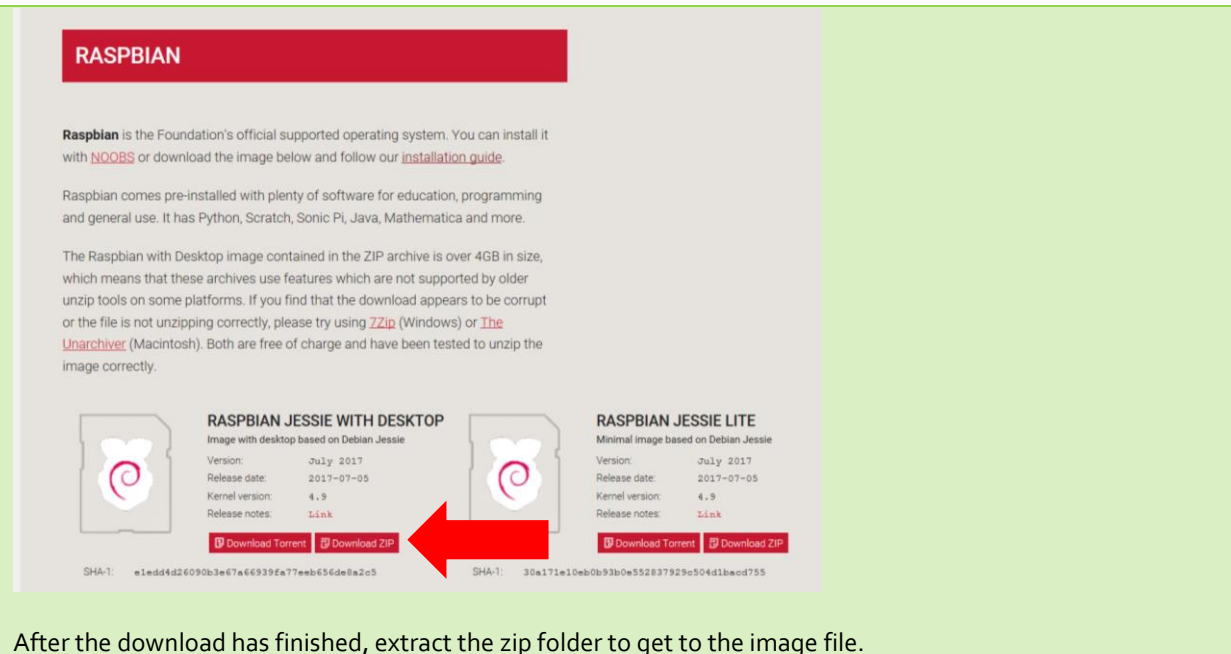

RASPBIAN

Raspbian is the Foundation's official supported operating system. You can install it with [NOOBS](#) or download the image below and follow our [installation guide](#).

Raspbian comes pre-installed with plenty of software for education, programming and general use. It has Python, Scratch, Sonic Pi, Java, Mathematica and more.

The Raspbian with Desktop image contained in the ZIP archive is over 4GB in size, which means that these archives use features which are not supported by older unzip tools on some platforms. If you find that the download appears to be corrupt or the file is not unzipping correctly, please try using [7Zip](#) (Windows) or [The Unarchiver](#) (Macintosh). Both are free of charge and have been tested to unzip the image correctly.

RASPBIAN JESSIE WITH DESKTOP	RASPBIAN JESSIE LITE
Image with desktop based on Debian Jessie	Minimal image based on Debian Jessie
Version: July 2017	Version: July 2017
Release date: 2017-07-05	Release date: 2017-07-05
Kernel version: 4.9	Kernel version: 4.9
Release notes: Link	Release notes: Link
Download Torrent Download ZIP	Download Torrent Download ZIP
SHA-1: e1edd4d26090b3e67a66939fa77eeb656de9a2c5	SHA-1: 30a171e10eb0b93b0e552837929e504d1baed755

After the download has finished, extract the zip folder to get to the image file.

Write Image to SD-Card

The following information is extracted from

<https://www.raspberrypi.org/documentation/installation/installing-images/README.md> and <https://www.raspberrypi.org/documentation/installation/installing-images/README.md> which is linked on the download page.

Install Win32DiskImager from <https://sourceforge.net/projects/win32diskimager/> (20.07.2017)


Insert the SD Card into the PC (Via integrated card reader or an adapter)

If you have to format it use FAT32.

Run Win32DiskImager.exe and finish the installation.

Run the program and set the Image to the previously extracted .img file and select the drive letter. Be careful with selecting this letter as you can lose data when you're choosing the wrong one.

Then click on Write

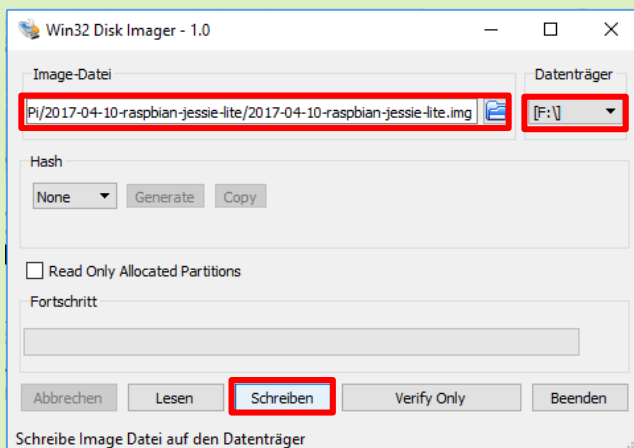

The SD Card is now ready to be inserted into the Raspberry Pi

First startup

Boot & Login

Insert the SD-Card into the Raspberry Pi, plug in an HDMI Cable and provide it with power over a MicroUSB cable.

You'll be logged in automatically and will be presented with the desktop.

Don't connect to internet yet!!! Your Pi is totally unsecured at the moment.

The first and most important step is to change at least the password because the whole world knows it at this moment and as soon as you're connected to the internet, everyone is able to get access to your Raspberry Pi. But before that step, we need to make sure that our keyboard layout is matching our keyboard. Otherwise you'll enter your password wrong and can't log in when the layout changes.

In case you're not automatically logged in:


raspberrypi login (username): **pi**

Password: **raspberry** (type "z" instead of "y" because of UK keyboard layout)


Changing the Keyboard Layout

Run raspi-config by opening the *Start Menu* and then *Preferences > Raspberry Pi Configuration*

Navigate to the *Localisation* Tab and click on *Set Keyboard...*

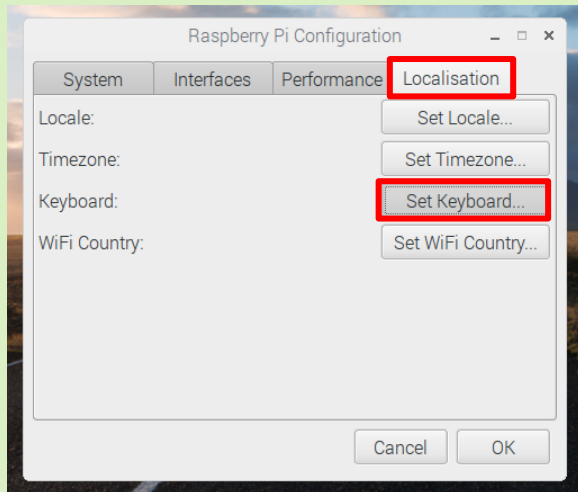


Another Window should pop-up. Select *Switzerland* and *German (Switzerland)* / whatever is matching the keyboard layout. Then click *OK*. After this the layout has already changed.

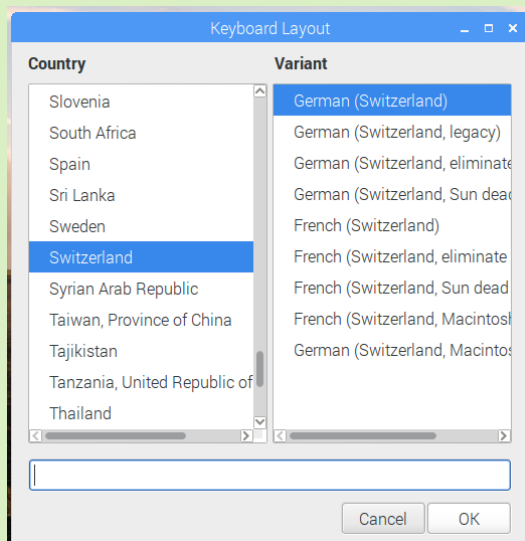


Changing the Password

Again, in the Raspberry Pi Configuration, activate the *System* Tab and click on the *Change Passwor...* button:

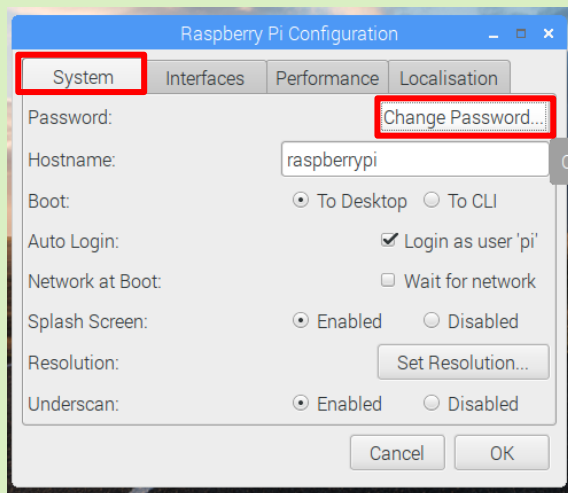


As *Current password* enter **raspberry** then assign a new one; two times to confirm. Then click on *OK*.

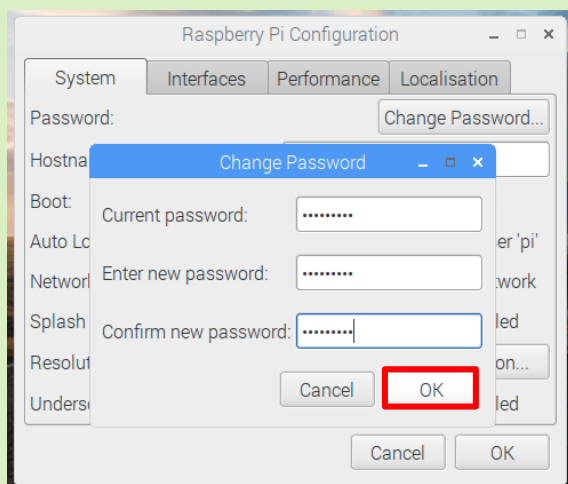

Connecting to internet

Via Desktop

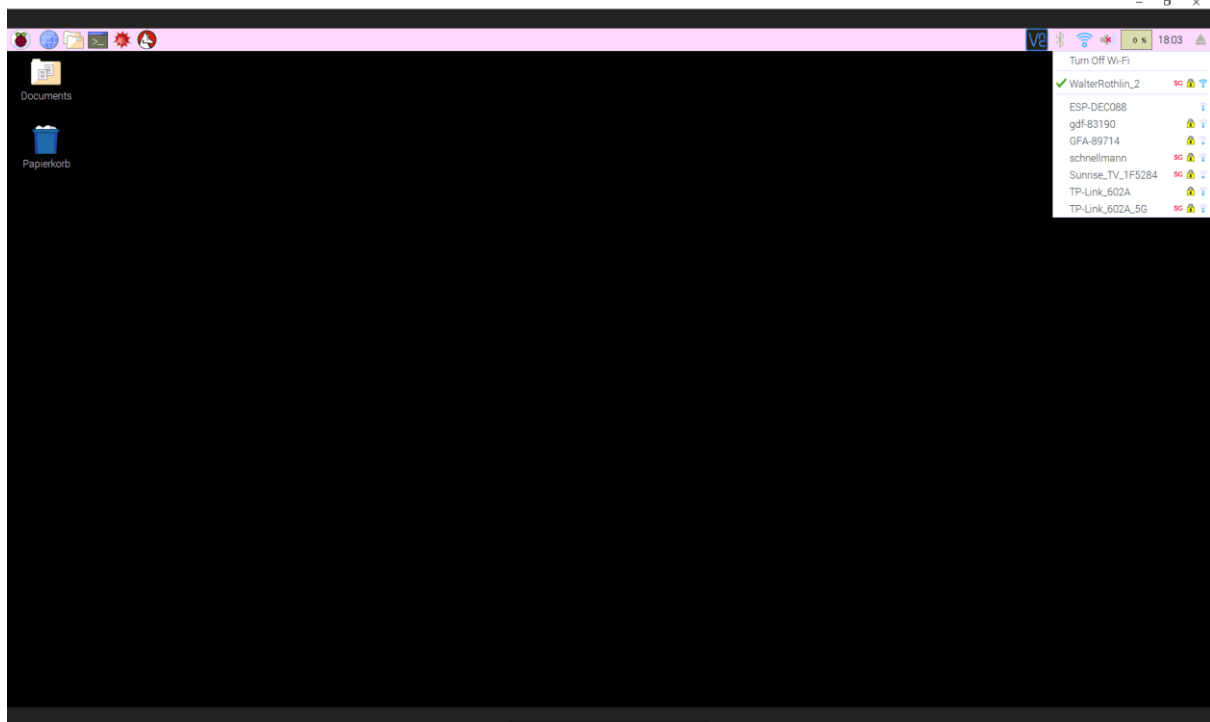


Via cable


This is easy: Just plug the cable into the Pi and the router will assign an IP address to the Pi.

Should you be unable to access the internet, do the following (on Windows):


Navigate to the control panel and open "Network Connections"

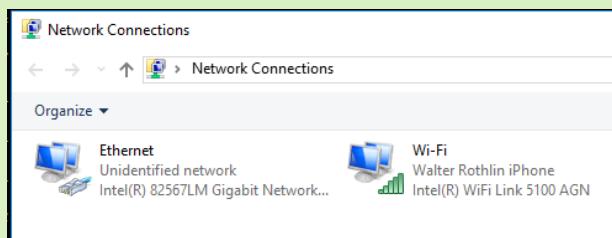

Select the network you already have an internet connection on and open the properties.

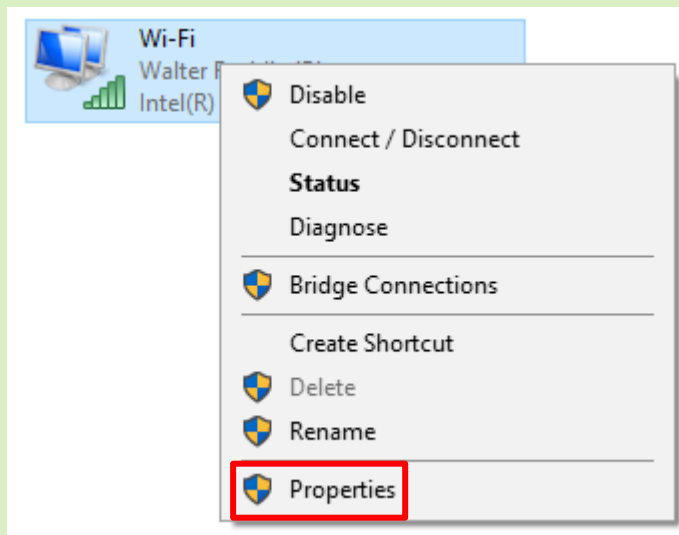

Then, open the "Sharing" tab and check both boxes, then OK.

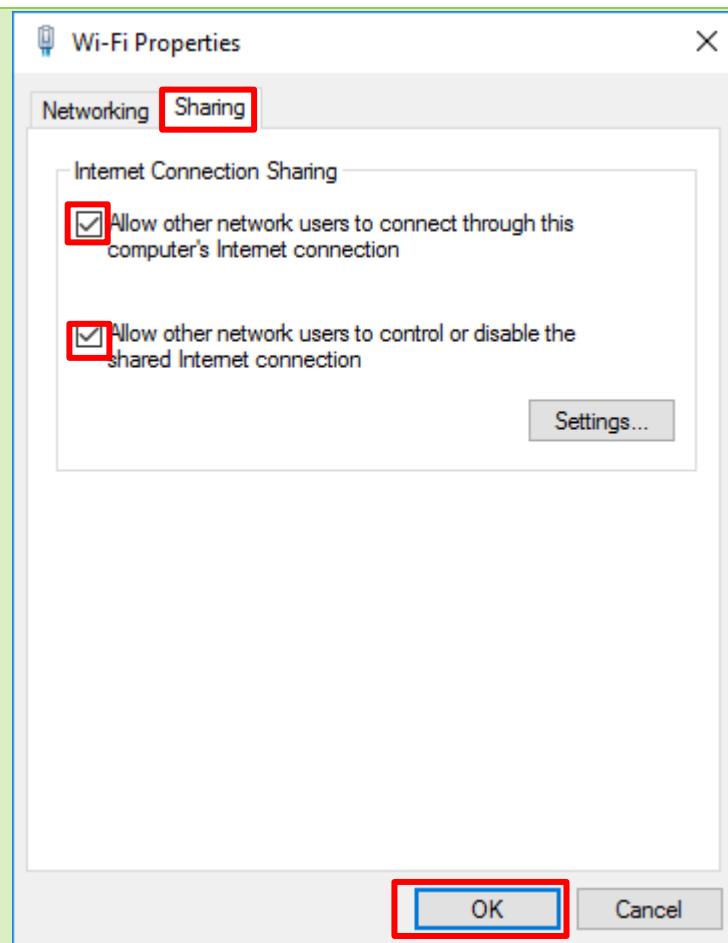

Then restart the Raspberry Pi.

If you don't know the IP address of the Raspberry Pi, run the following command on the host computer:

```
C:\Users\admin>arp -a
```

Interface: 172.20.10.3 --- 0x3	Internet Address	Physical Address	Type
	172.20.10.1	ee-78-5f-e2-43-64	dynamic
	172.20.10.15	ff-ff-ff-ff-ff-ff	static
	224.0.0.22	01-00-5e-00-00-16	static
	224.0.0.252	01-00-5e-00-00-fc	static
	239.255.255.250	01-00-5e-7f-ff-fa	static
	255.255.255.255	ff-ff-ff-ff-ff-ff	static

Interface: 192.168.137.1 --- 0x7	Internet Address	Physical Address	Type
	192.168.137.6	b8-27-eb-86-bf-67	static
	192.168.137.44	b8-27-eb-86-bf-67	static
	192.168.137.160	b8-27-eb-86-bf-67	static
	192.168.137.203	b8-27-eb-86-bf-67	static
	192.168.137.249	b8-27-eb-86-bf-67	static
	192.168.137.255	ff-ff-ff-ff-ff-ff	static
	224.0.0.22	01-00-5e-00-00-16	static
	224.0.0.252	01-00-5e-00-00-fc	static
	239.255.255.250	01-00-5e-7f-ff-fa	static
	255.255.255.255	ff-ff-ff-ff-ff-ff	static

Then try all IP addresses where the "Physical Address" starts with **b8-27-eb**. One of them will be the Raspberry Pi.

Via Wi-Fi (via Command line)

Raspberry 3 Model B has on board WIFI otherwise plug in a WIFI dongle into a USB port of the pi.

```
sudo nano /etc/wpa_supplicant/wpa_supplicant.conf
network={
    ssid="Walter Rothlin iPhone"
    psk="testingPassword"
}
```

Detail description under:

<https://www.raspberrypi.org/documentation/configuration/wireless/wireless-cli.md>

```
sudo iwlist wlan0 scan      # this command will list all available networks
```

Via BZU Wi-Fi

1. In der datei: /etc/wpa_supplicant/wpa_supplicant.conf folgendes einfügen (benutzername und passwort auf ihres abändern!)

a. Mit `sudo nano /etc/wpa_supplicant/wpa_supplicant.conf`

```
2. network={
    ssid="BZU"
    proto=RSN
    key_mgmt=WPA-EAP
    pairwise=CCMP
    auth_alg=OPEN
    eap=PEAP
    identity="vorname.nachname"
    password="ihrbzupasswort"
    phase2="auth=MSCHAPV2"
}
```

3. Dann führen sie noch folgende 3 Befehle aus:

- a. `root@raspberrypi:~# wpa_cli reconfigure` // lädt die Konfigurationsdatei neu
- b. `root@raspberrypi:~# sudo ifconfig wlan0 up` // setzt das wlan0 device auf aktiv
- c. `root@raspberrypi:~# ifconfig wlan0` // hier sollten sie nun eine IP Adresse sehen

Damit das ganze automatisch funktioniert, ändern sie die folgende Zeile in /etc/network/interfaces:

```
iface wlan0 inet manual
auf:
iface wlan0 inet dhcp
```

Wi-Fi set-up using desktop

Raspberry 3 Model B has on board WIFI otherwise plug in a WIFI dongle into a USB port of the pi.

```
sudo nano /etc/wpa_supplicant/wpa_supplicant.conf
network={
    ssid="Walter Rothlin iPhone"
    psk="testingPassword"
}
```

Detail description under:

<https://www.raspberrypi.org/documentation/configuration/wireless/wireless-cli.md>

```
sudo iwlist wlan0 scan      # this command will list all available networks
```

Updating the System

First thing after connecting to the internet, is to update all the software and performing possible kernel-updates. This will ensure, that known bugs or security holes are fixed.

This is done with these two apt-get commands:

```
sudo apt update    # list all the modules which will be upgraded (doesn't perform an change on the system)
```

```
sudo apt upgrade
```

The `sudo apt autoremove` command can be issued to remove unnecessary package files.

Enable On-Board-Screen

Information extracted from the **Tontec MZ61581** setup guide.

Open `/boot/config.txt`

```
sudo nano /boot/config.txt
```

And add these lines to the bottom

```
dtparam=spi=on
dtoverlay=mz61581
```

Then save and reboot

Here we will change the default output display from HDMI to Tontec Screen

```
sudo nano /usr/share/X11/xorg.conf.d/99-fbturbo.conf
```

Change

Option "fbdev" "/dev/fbo"

To

```
Option "fbdev" "/dev/fb1"
```

If you want to switch back to the HDMI display, just change it back to **fbo**

Enable SSH

Open up the Raspberry Pi Config again and navigate to the *Interfaces* Tab.

There activate the SSH service.

Save the Image of the Raspberry Pi




Create a new file with an *.img* extension somewhere on your PC.
Eject the SD-Card from your Raspberry Pi and plug it into your computer.

Open up Win32DiskImager and for the image file select the empty one you've created before. Select the correct drive letter where the SD-Card is mounted and then click on *Read / Lesen*.

Remote-Access


Google VNC

Run google-Chrome and start VNC

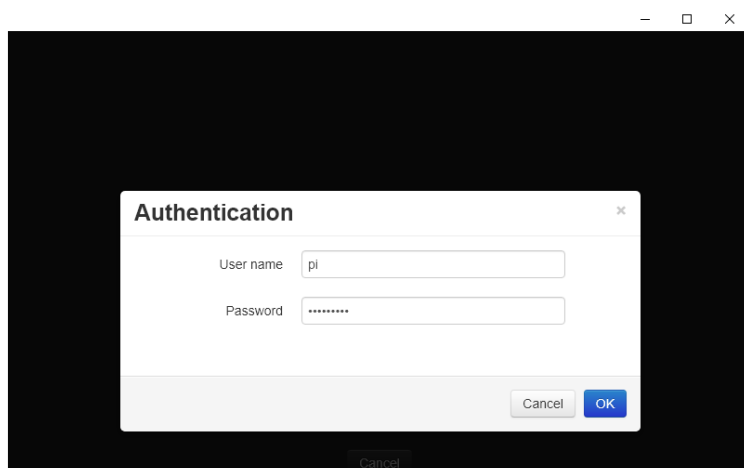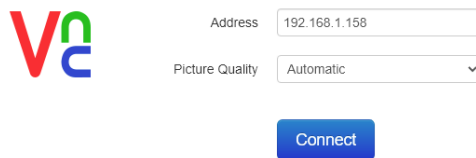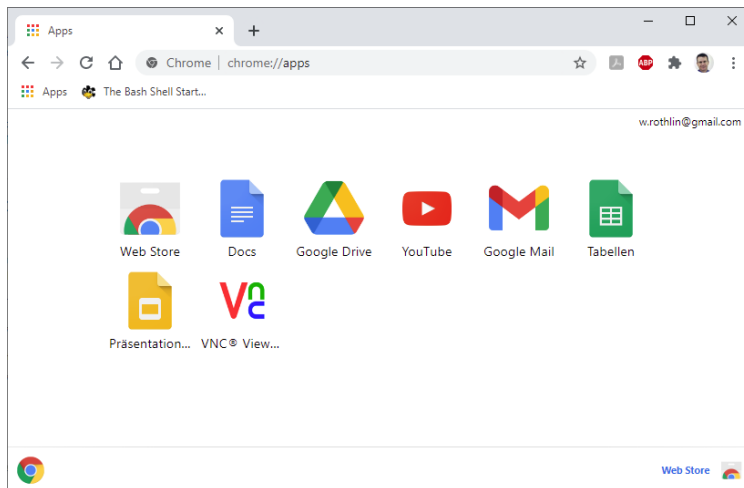


Remote Desktop with Xming and Putty

1. Download and Install Xming <https://sourceforge.net/projects/xming/>
2. Execute XLaunch
3. Choose "Fullscreen"

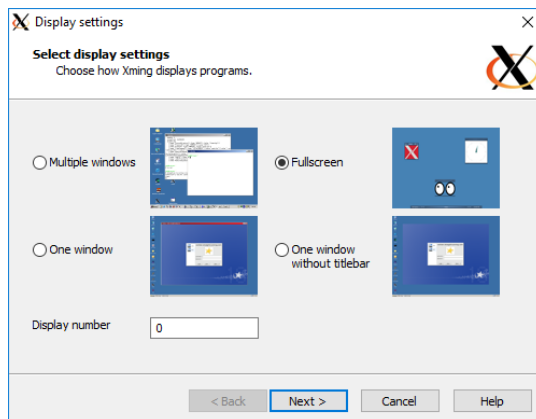


4. Press Enter multiple times until the window closes
A new window should open in fullscreen
5. Tab out and go to Putty
6. Load your connection (not open!)
7. Go to **Connection** -> **SSH** -> **X11**, enable X11 forwarding and set X display location to "localhost:0"

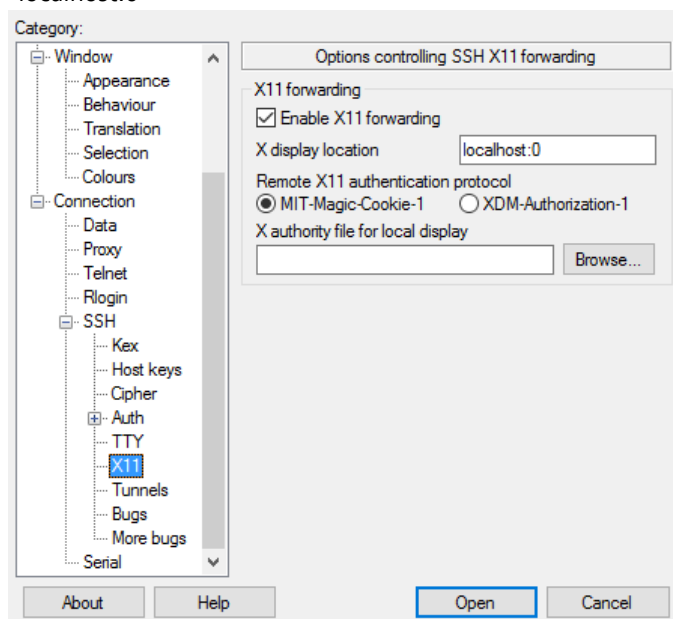


8. Save your connection
9. Open your connection
10. In the terminal, type "**startlxde**" and press Enter
11. After a short while, it should switch to Xming and start displaying the desktop.

ssh using PuTTY

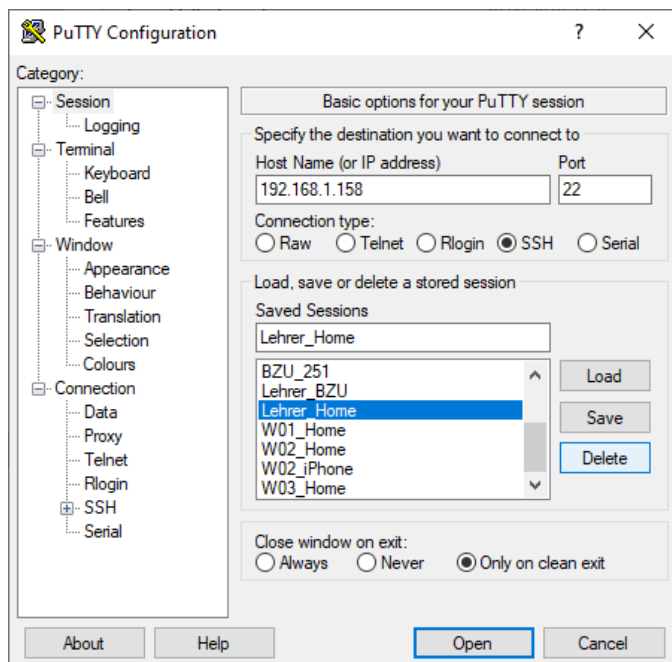

nppFTP plugin for Notepad++

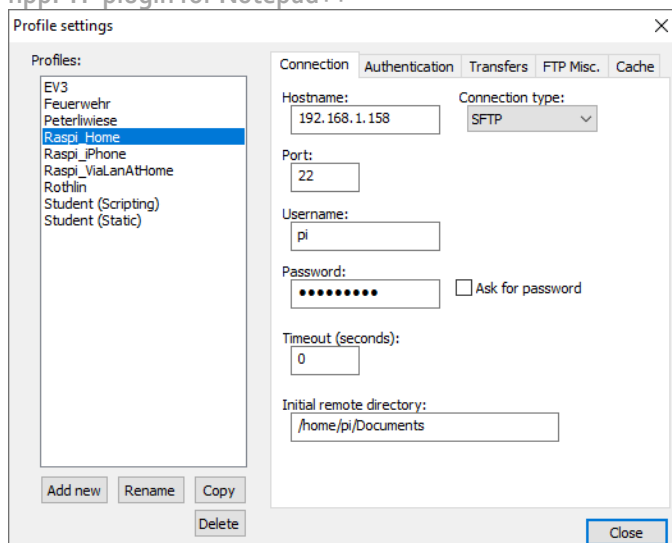

SFTP via FileZilla

FileZilla interface showing SFTP connection details and file listings.

Host: 192.168.1.158 **Username:** pi **Password:** **Port:** 22 **Quickconnect**

Status: Connecting to 192.168.1.158...
Status: Using username "pi".
Status: Connected to 192.168.1.158
Status: Retrieving directory listing...
Status: Listing directory /home/pi
Status: Directory listing of "/home/pi" successful

Local site: Hosted\Python_WaltisExamples\Libraries\

Remote site: /home/pi

Local site files:

- ..
- waltisLibrary.py
- Class_Kreis Sektor.py
- LogTest.py
- Class_WR_Logfile.py
- Class_4_20mA_Sensor.py
- Class_SymCrypterEncrypter.py
- Class_Ringbuffer.py
- waltisLibrary_Sense_HAT.py
- Class_StromSensorLEM.py
- Class_Energiemessung.py
- Class_KaelteMacherMaschine.py

24 files and 2 directories. Total size: 115'896 bytes

Remote site files:

- ..
- .cache
- .config
- .gconf
- .gnome
- .gnome2
- .gnome2_private
- .gnupg
- .local
- .nano
- .pki
- .ssh

9 files and 28 directories. Total size: 33'142 bytes

Server/Local file	Direction	Remote file	Size	Priority	Status
Queued files Failed transfers Successful transfers					

Queue: empty

Pi Plates

Run **sudo raspi-config** and enable **SPI** under **Advanced**

Then reboot and run one of the following commands:

```
sudo pip install pi-plates #Python < 3
sudo pip3 install pi-plates #Python >= 3
```


You can now use your Pi Plates.

Should your program complain about missing libraries, install them with **pip(3)** or **apt**.

Example programs can be found in `~/Documents/PythonExamples/Code_o6...`

Addressing the boards

Each plate in the stack must have a unique address. The address is set as seen in the image below. The address is only read at boot time, so you have to restart the Raspberry Pi to change the address of a plate.

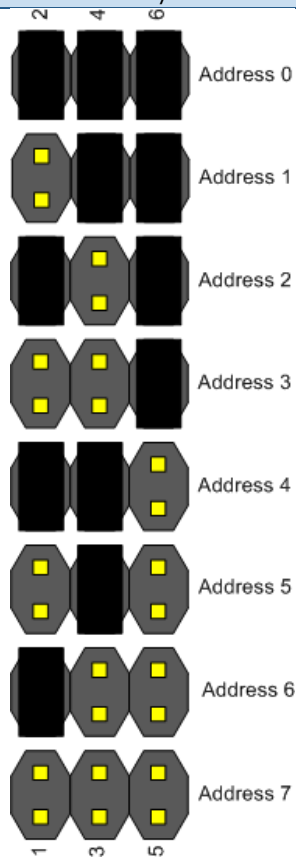

Further documentation

For complete documentations, refer to <http://pi-plates.com/documentation>

Installing Apache

This will guide you in setting up a running webserver able to show both HTML pages and run Python scripts

Run the following command to install the webserver:

```
sudo apt install apache2
```

Enter the IP of your Raspberry Pi into a web browser to see if it works.

Enable CGI

Create a cgi-directory:

```
sudo mkdir /var/www/cgi-bin/
```

Create file /var/www/cgi-bin/test.py with the following content:

```
#!/usr/bin/python3

print("Content-Type: text/html")
print()
print("Hello World!")
```

The empty line is important. It separates the headers from the body.

Change apache config:

```
sudo nano /etc/apache2/apache2.conf
```

Add the following at the end of the config-file:

```
AddHandler cgi-script .cgi .py .pl
```

Then, look for something like this:

```
<Directory /var/www>
    Options Indexes FollowSymlinks
```

and add the following block:

```
ScriptAlias /cgi-bin/ "/var/www/cgi-bin/"
<Directory /var/www/cgi-bin>
    Options Indexes FollowSymLinks ExecCGI
    AllowOverride None
    Require all granted
</Directory>
```

Save and exit the file. Then, run the following commands:

```
sudo a2enmod cgi
sudo service apache2 restart
```

Open [you-ip-here]/cgi-bin/test.py in your web browser.

Check log-file for Errors:

```
sudo tail -f /var/log/apache2/error.log
```

Enable Sense-Hat and PiPlates for CGI calls

Execute the following commands as **root**:

```
# Add apache to input group
sudo adduser www-data input
sudo adduser www-data kmem
sudo adduser www-data spi
sudo adduser www-data i2c
sudo adduser www-data gpio
```

If the sense HAT gives a “permission denied” error, run the following command to copy the sense hat config file to the apache home directory:

```
sudo mkdir /var/www/.config
sudo cp -r /home/pi/.config/sense_hat /var/www/.config
```

Now restart the Raspberry Pi. After that, your script should be able to read sensor data over the webserver.

Change Web-Server to run the scripts as user pi (not mandatory)

(instead of www-data):

```
sudo nano /etc/apache2/envvars
```

Replace `www-data` by `pi` (twice)

Change Document-Root: `/etc/apache2/sites-available/000-default.conf` and change DocumentRoot from `/var/www/html` to whatever you like

Perl example

The following is a perl script that outputs the request headers.

If you have not setup python yet, do that first.

Create `/var/www/html/test.pl` and enter the following:

```
#!/usr/bin/perl
use strict;
use warnings;
use CGI;

my $q = CGI->new;
my %headers = map {$_ => $q->http($_)} $q->http();

print $q->header('text/plain');
print "Got the following headers:\n";
for my $header (keys %headers) {
    print "$header: $headers{$header}\n";
}
```

Open `[your-ip-here]/test.pl` in a web browser.

Troubleshooting

For anything to do with the webserver, error logs can be found at `/var/log/apache2/error.log`

Complete the following steps if you need to use **sense_hat**:

Execute the following commands as root:

```
# Copy configuration
cp /root/.config/sense_hat_RTIMULib.ini var/www/.config/sense_hat/RTIMULib.ini

# Create udev rules to allow access
touch /etc/udev/rules.d/99-i2c.rules
```

Into the file you created, paste the following:

```
KERNEL=="i2c-[0-7]",MODE=="0666"
```

```
sudo mkdir /var/www/.config
sudo cp -r /home/pi/.config/sense_hat /var/www/.config
```

Now restart the Raspberry Pi. After that, your script should be able to read sensor data over the webserver.

