

RALINK TECHNOLOGY, CORP.

RALINK RT2860 LINUX STATION RELEASE NOTES & USER'S GUIDE

RALINK RT2800 PCI/MINIPCI/CARDBUS/PCIE WIRELESS CARD

Copyright © 2006, 2007, 2008, 2009, 2010
Ralink Technology, Corp.

All Rights Reserved.

This document is property of Ralink Technology Corporation. Transmittal, receipt, or possession of this document does not express, license, or imply any rights to use, sell, design, or manufacture from this information or the software documented herein. No reproduction, publication, or disclosure of this information, in whole or in part, shall be allowed, unless the prior written consent of Ralink Technology Corporation is obtained.

NOTE: THIS DOCUMENT CONTAINS SENSITIVE INFORMATION AND HAS RESTRICTED DISTRIBUTION.

**for stevej@cradlepoint.com
And Company Use Only**

Proprietary Notice and Liability Disclaimer

The confidential Information, technology or any Intellectual Property embodied therein, including without limitation, specifications, product features, data, source code, object code, computer programs, drawings, schematics, know-how, notes, models, reports, contracts, schedules and samples, constitute the Proprietary Information of Ralink (hereinafter "Proprietary Information")

All the Proprietary Information is provided "AS IS". No Warranty of any kind, whether express or implied, is given hereunder with regards to any Proprietary Information or the use, performance or function thereof. Ralink hereby disclaims any warranties, including but not limited warranties of non-infringement, merchantability, completeness, accuracy, fitness for any particular purpose, functionality and any warranty related to course of performance or dealing of Proprietary Information. In no event shall Ralink be liable for any special, indirect or consequential damages associated with or arising from use of the Proprietary Information in any way, including any loss of use, data or profits.

Ralink retains all right, title or interest in any Proprietary Information or any Intellectual Property embodied therein. The Proprietary Information shall not in whole or in part be reversed, decompiled or disassembled, nor reproduced or sublicensed or disclosed to any third party without Ralink's prior written consent.

Ralink reserves the right, at its own discretion, to update or revise the Proprietary Information from time to time, of which Ralink is not obligated to inform or send notice. Please check back if you have any question. Information or items marked as "not yet supported" shall not be relied on, nor taken as any warranty or permission of use.

Ralink Technology Corporation (Taiwan)

5F, No.36, Tai-Yuen Street,
ChuPei City
HsinChu Hsien 302, Taiwan, ROC
Tel +886-3-560-0868
Fax +886-3-560-0818

Sales Taiwan: Sales@ralinktech.com.tw
Technical Support Taiwan: FAE@ralinktech.com.tw

<http://www.ralinktech.com/>

Contents

1	VERSION HISTORY	6			
1.1	VERSION 2.3.0.0	6	3.2.33	HT_BW	22
1.2	VERSION 2.2.0.0	6	3.2.34	HT_AutoBA	22
1.3	VERSION 2.1.0.0	6	3.2.35	HT_AMSDU	23
1.4	VERSION 1.8.0.0	7	3.2.36	HT_BAWinSize	23
1.5	VERSION 1.7.0.0	7	3.2.37	HT_Gl	23
1.6	VERSION 1.6.0.0	8	3.2.38	HT_MCS	23
1.7	VERSION 1.5.0.0	8	3.2.39	HT_MIMOPSMODE	23
1.8	VERSION 1.4.0.0	8	3.2.40	HT_BADecline=Value	23
1.9	VERSION 1.3.0.0	9	3.2.41	TdlsCapable=value	24
1.10	VERSION 1.2.1.0	9	3.3	MORE INFORMATION	24
1.11	VERSION 1.2.0.0	9	4	WIRELESS TOOLS	25
1.12	VERSION 1.1.0.0	9	4.1	IWPRIV USAGE	25
1.13	VERSION 1.0.0.0	10	4.1.1	DriverVersion	25
2	README	11	4.1.2	CountryRegion	25
3	CONFIGURATION	13	4.1.3	CountryRegionABand	26
3.1	CONFIGURATION FILE : RT2860STA.DAT	13	4.1.4	SSID	26
3.2	USAGE	15	4.1.5	WirelessMode	26
3.2.1	CountryRegion	15	4.1.6	TxBurst:	27
3.2.2	CountryRegionForABand	16	4.1.7	PktAggregate:	27
3.2.3	CountryCode	16	4.1.8	TxPreamble:	28
3.2.4	SSID	17	4.1.9	TxPower:	28
3.2.5	WirelessMode	17	4.1.10	Channel	28
3.2.6	Channel	17	4.1.11	BGProtection:	28
3.2.7	BGProtection	17	4.1.12	RTSThreshold:	28
3.2.8	TxPreamble	18	4.1.13	FragThreshold:	29
3.2.9	RTSThreshold	18	4.1.14	NetworkType:	29
3.2.10	FragThreshold	18	4.1.15	AuthMode:	29
3.2.11	TxBurst	18	4.1.16	EncrypType:	29
3.2.12	PktAggregate	18	4.1.17	DefaultKeyID:	30
3.2.13	NetworkType	18	4.1.18	Key1	30
3.2.14	AuthMode	19	4.1.19	Key2	30
3.2.15	EncrypType	19	4.1.20	Key3	30
3.2.16	DefaultKeyID	19	4.1.21	Key4	31
3.2.17	WEP KeyType	19	4.1.22	WPAPSK	31
3.2.18	WEP Hex Key	20	4.1.23	WmmCapable	31
3.2.19	WEP Key String	20	4.1.24	IEEE80211H	31
3.2.20	WPAPSK	20	4.1.25	PSMode	32
3.2.21	WmmCapable	20	4.1.26	ResetCounter	32
3.2.22	IEEE80211H	20	4.1.27	Debug	32
3.2.23	PSMode	21	4.1.28	CarrierDetect	33
3.2.24	AutoRoaming	21	4.1.29	HtRdg	33
3.2.25	RoamThreshold	21	4.1.30	HtExtcha	33
3.2.26	TGnWiFiTest	21	4.1.31	HtOpMode	33
3.2.27	WirelessEvent	21	4.1.32	HtMpduDensity	33
3.2.28	CarrierDetect	21	4.1.33	HtBw	34
3.2.29	HT_RDG	22	4.1.34	HtAutoBa	34
3.2.30	HT_EXTCHA	22	4.1.35	HtAmsdu	34
3.2.31	HT_OpMode	22	4.1.36	HtBaWinSize	34
3.2.32	HT_MpduDensity	22	4.1.37	HtGi	35
			4.1.38	HtMcs	35

4.1.39	HtProtect.....	35	4.4	IWLIST.....	44
4.1.40	HtMimoPs	35	4.5	IWCONFIG.....	44
4.1.41	FixedTxMode.....	36	5	WPS – WI-FI PROTECTED SETUP	46
4.1.42	LongRetry.....	36	5.1	IWPRIV USAGE.....	46
4.1.43	ShortRetry.....	36	5.1.1	wsc_conf_mode	47
4.1.44	HtBaDecline=Value	37	5.1.2	wsc_mode	47
4.1.45	HtDisallowTKIP=Value.....	37	5.1.3	wsc_pin	47
4.1.46	wsc_ap_band=Value.....	37	5.1.4	wsc_ssid	47
4.1.47	BeaconLostTime=Value.....	37	5.1.5	wsc_start.....	48
4.1.48	AutoRoaming=Value	38	5.1.6	wsc_stop.....	48
4.1.49	SiteSurvey=Value	38	5.1.7	wsc_gen_pincode.....	48
4.1.50	TdlsCapable =Value.....	38	5.1.8	wsc_cred_count	48
4.1.51	TdlsSetup=Value	38	5.1.9	wsc_cred_ssid.....	48
4.2	IWPRIV SHOW USAGE	38	5.1.10	wsc_cred_auth	49
4.2.1	SSID	39	5.1.11	wsc_cred_encr.....	49
4.2.2	WirelessMode	39	5.1.12	wsc_cred_keyidx	50
4.2.3	TxBurst	39	5.1.13	wsc_cred_key.....	50
4.2.4	TxPreamble	39	5.1.14	wsc_cred_mac.....	51
4.2.5	TxPower	39	5.1.15	wsc_conn_by_idx	51
4.2.6	Channel	39	5.1.16	wsc_auto_conn	51
4.2.7	BGProtection	39	5.2	WPS STA AS AN ENROLLEE OR REGISTRAR	51
4.2.8	RTSThreshold	39	5.2.1	Enrollee Mode	52
4.2.9	FragThreshold	39	5.2.2	Registrar Mode.....	53
4.2.10	HtBw	39	5.3	WPS IOCTL USAGE.....	55
4.2.11	HtMcs.....	40	5.3.1	iwpriv commands without argument	55
4.2.12	HtGi.....	40	5.3.2	iwpriv commands with one INT	55
4.2.13	HtOpMode	40	5.3.3	iwpriv commands with string	56
4.2.14	HtExtcha.....	40	5.4	WPS IOCTL SAMPLE PROGRAM	57
4.2.15	HtMpduDensity.....	40	6	ATE TEST COMMAND FORMAT	62
4.2.16	HtBaWinSize	40	6.1	IWPRIV RAO SET [PARAMETERS]=[VAL]	63
4.2.17	HtRdg	40	6.1.1	ATE	63
4.2.18	HtAmsdu	40	6.1.2	ATEDA.....	63
4.2.19	HtAutoBa	40	6.1.3	ATESA	63
4.2.20	CountryRegion	40	6.1.4	ATEBSSID	64
4.2.21	CountryRegionABand.....	40	6.1.5	ATECHANNEL.....	64
4.2.22	CountryCode	41	6.1.6	ATETXPOW0	64
4.2.23	PktAggregate	41	6.1.7	ATETXPOW1	64
4.2.24	WmmCapable	41	6.1.8	ATETXFREQOFFSET.....	64
4.2.25	IEEE80211H.....	41	6.1.9	ATETXLEN	64
4.2.26	NetworkType.....	41	6.1.10	ATETXCNT.....	65
4.2.27	AuthMode.....	41	6.1.11	ATETXMODE (Refer to TxMode).....	65
4.2.28	EncrypType.....	41	6.1.12	ATETXBW (Refer to TxMode).....	65
4.2.29	DefaultKeyID	41	6.1.13	ATETXGI (Refer to TxMode).....	65
4.2.30	Key1	41	6.1.14	ATETXMCS (Refer to TxMode).....	65
4.2.31	Key2	41	6.1.15	ATETXANT	66
4.2.32	Key3	41	6.1.16	ATERXANT	66
4.2.33	Key4	42	6.1.17	ATERXFER	66
4.2.34	WPAPSK	42	6.1.18	ATESHOW.....	66
4.3	IWPRIV EXAMPLES	42	6.1.19	ATEHELP	67
4.3.1	Infrastructure.....	42	6.1.20	ResetCounter.....	67
4.3.2	Ad-Hoc	43	6.1.21	ATERRF	67
4.3.3	Get site survey.....	44			
4.3.4	Get Statistics	44			
4.3.5	ANY SSID	44			

6.1.22	ATEWRF1	67	7.2.1	Set Data, Parameters is Same as iwpriv	80
6.1.23	ATEWRF2	67	7.2.2	Get Data, Parameters is the same as iwpriv	81
6.1.24	ATEWRF3	68	7.2.3	Set Raw Data with Flags.....	81
6.1.25	ATEWRF4	68	7.2.4	Get Raw Data with Flags.....	85
6.2	TX MODE, MCS, BW AND GI SELECTION TABLE	68	7.2.5	Set Raw Data with Flags.....	90
6.3	EXAMPLES.....	69	8	IOCTL HOW TO	92
6.3.1	Check EVM & Power.....	69	8.1	GET DATA	92
6.3.2	Check Carrier.....	70	8.1.1	GET IPv4 and MAC apping table:..	92
6.3.3	Check spectrum mask	70	8.1.2	GET IPv6 and MAC mapping table:	92
6.3.4	Frequency offset tuning	70	8.1.3	GET station connection status:....	92
6.3.5	Rx	71	8.1.4	GET station statistics information:	93
6.3.6	Show all ate parameters	71	8.1.5	GET AP list table:	93
6.3.7	Online help	72	8.1.6	GET scan table:.....	93
6.3.8	Display Rx Packet Count and RSSI	72	8.1.7	GET station's MAC:.....	94
6.4	IWPRIV RAO BBP [PARAMETERS]=[VALUE]	73	8.1.8	GET station connection status:....	94
6.4.1	BBPID	73	8.1.9	GET AP's BSSID	94
6.4.2	BBPID=Value	73	8.1.10	GET SSID	95
6.5	IWPRIV RAO MAC [PARAMETERS]=[VAL]	74	8.1.11	GET station's last TX related information:	95
6.5.1	MAC_OFFSET	74	8.1.12	GET station's last RX related information:	95
6.5.2	MAC_OFFSET=Value	74	8.1.13	GET station's wireless mode:.....	96
6.6	IWPRIV RAO E2P [PARAMETERS]=[VAL]	74	8.1.14	GET Bss type:.....	97
6.6.1	E2P_ADDR.....	74	8.1.15	GET Authentication Mode:	97
6.6.2	E2P_ADDR=Value	74	8.1.16	GET Encryption Type:	98
6.7	EXAMPLE	75	8.1.17	GET RSSI 0 (unit: db).....	99
6.7.1	Hardware access.....	75	8.1.18	GET RSSI 1 (unit: db).....	100
6.7.2	Statistic counter operation	75	8.1.19	GET RSSI 2 (unit: db).....	100
6.7.3	Suggestion:	75	8.1.20	GET Driver wireless extension version	100
6.8	ATED	75	8.2	HOW TO DISPLAY RATE, BW:.....	100
6.8.1	Introduction	75	8.3	SET DATA FOR N MODE.....	103
6.8.2	Environment setup	76	8.3.1	SET HT mode:	103
6.8.3	How to use ated for ATE purpose.	76			
7	IOCTL.....	77			
7.1	PARAMETERS FOR IWCONFIG.....	77			
7.2	PARAMETERS FOR IWPRIV	80			

1 VERSION HISTORY

1.1 Version 2.3.0.0

1. Support PSP XLINK in ad-hoc mode.
2. Add CFG80211 iw utility other commands support (supports Linux 2.6.32).
3. Fix issue: The start address of HeaderBuf must be aligned by 4.
4. Fix issue: rt2860_interrupt() issues in fedora core 7.
5. WMM ACM: see history of acm_comm.c.
6. Fix issue in 64bit CPU:
7. Support WpaSupplicant(v0.6.9) WPS
8. Fix WPS issue: Check SelectRegistrar is TRUE or FALSE
9. Fix WPS issue: Some AP (ex. Buffalo WZR-AG300NH) would change SSID to another SSID after push WPS PBC button.
10. Fix statistics issue: It happened in big-endian platform, tx count would be zero.
11. Support WiFi Draft_3.0 11n test items.
12. Support Linux Kernel 2.6.31/2.6.32.
13. Support Ad-hoc WPS2PSK/AES
14. Separate three kernel modules - util module, driver module, netif module.

1.2 Version 2.2.0.0

1. Fixed issue of showing the wrong statistics value
2. Fixed problem of showing the wrong SNR in wireless extension scan list
3. Fixed WPA2PSK failed with some AP if the key length is not zero in pairwise_msg_2 and pairwise_msg_4
4. Add HAS_STATS_COUNT compile option
5. Support TDLS
6. Support Client WDS
7. Support WMM ACM (Pass Wi-Fi Test Plan v0.30)
8. Support the MAC assignment from configuration file(.dat)
9. Fixed STA cannot do WPS with AP when auth mode of STA is shared
10. Support SKU

1.3 Version 2.1.0.0

1. New generation schema for multiple OS porting
2. Fixed Ad-hoc ping failed in noisy environment. (Probe Response has too many retry packet then cause "not enough space in MgmtRing")
3. Fixed WPA (2) PSK issue when group cipher of AP is WEP40 or WEP104.

4. Modified iwpriv ra0 get_site_survey:
In scan list result: Security shows "NONE" when AP is OPEN/NONE,
shows "WEP" when AP is OPEN/WEP or SHARED/WEP,
shows "WPAPSK (WPA2PSK)/TKIP (AES)" when AP is WPAPSK (WPA2PSK)/TKIP (AES)
shows "WPA (WPA2)/TKIP (AES)" when AP is WPA (WPA2)/TKIP (AES)
5. Fixed WPS failed with D-Link DIR-628 in 5GHz.
6. Support kthread.
7. Add New A band channel list region 15 contains the whole channels in the A band region 4 and the new CE channel 167,169,171,173
8. Add New IEEE802.11r functionality.
9. Fixed WPA2-Enterprise failed when AP reboot or turn off then turn on.
10. Fixed STA cannot connect to 11B only AP when the setting of is PHY_11GN.

1.4 Version 1.8.0.0

1. Fixed compile error when CARRIER_DETECTION_SUPPORT is enabled.
2. Add "iwpriv ra0 set CarrierDetect=0(or 1)"
3. Add new WSC hardware push button function
4. Add Ad-Hoc to support N rate.
5. Migrate Mesh supporting to Draft-2.0.
6. Support WAPI functionality
7. Fixed suspend/resume error when ra0 down, ra0 up.
8. Support Linux Kernel 2.6.27
9. Fixed WPS failed when AP is not in scan table or AP's channel changing after user sets "iwpriv ra0 wsc_start"
10. Fixed DLS A-MPDU established failed.

1.5 Version 1.7.0.0

1. Support SIOCSIWGENIE, SIOCGIWGENIE, SIOCSIWMLME, SIOCGIWENCODEEXT, and SIOCSIWPMKSA.
2. Support IWEVGENIE in iwlist ra0 scan.
3. Support DLS
4. Fixed connection failed with Range Maximizer - 515 AP (Marvell Chip) when security is WPAPSK/TKIP.
5. Fixed length error of RSN/SSN IE for WpaSupplicant.
6. Fixed WPAPSK rekey problem when A-MSDU is enabled.
7. Fixed NetworkManager cannot detect ra0 when ra0 is not up.
8. Add IEEE802.11d Client Mode: None, Flexible, Strict.

9. Add Station N only mode. (Only connects to N-AP)
10. Add Global country domain(ch1-11:active scan, ch12-14 passive scan)
11. Enhance PCIe advance power saving
12. Modified iwpriv ra0 get_site_survey: When security of AP is OPEN/WEP or SHARED/WEP, show UNKNOWN/WEP in scan list.
13. When the secondary channel of AP exceeds the country region's range, station will auto fallback to 20MHz. i.e. need both control and secondary channel are both in country region's channel list.
14. Fixed crash in LinkDown when there are >64 APs exists.

1.6 Version 1.6.0.0

1. Fixed issue of Radar Channel flag building with HAS_EXT_BUILD_CHANNEL_LIST=n.
2. Fixed issue of Adhoc-STA would create in radar channel.
3. Support Mesh
4. Support Linux Kernel 2.6.24
5. Support SNMP
6. Support Debug Diagnose
7. Add Makefile.NonLoadableModule for non-loadable module
8. Add two ioctl commands to change Tx long/short retry limit.
9. Fixed WPS STA is hard to do WPS process with Broadcom WPS AP Proxy and Marvell WPS External Registrar.

1.7 Version 1.5.0.0

1. New code base - RT28xx.
2. Add BaSmartHardTransmit mechanism.
3. Support Linux Kernel 2.6 suspend and resume.
4. Support extended channel list.
5. Add "iwconfig rate" setting for legacy rate.
6. Add make install/uninstall to Makefile.
7. Fixed issue of showing SNR1 information.
8. ATE: Add command "iwpriv ra0 set ATELDE2P=1" to overwrite all EEPROM contents from a .bin file.
9. Change IRQ LOCK to SEM LOCK
10. Support Non-GPL MD5
11. Fixed one Ethernet convert porting issue on RT28xx.
12. Fixed extended channel list checking issue on RT28xx.

1.8 Version 1.4.0.0

1. Fixed Legacy Wi-Fi WMM S06 fail.

2. Fixed WPAPSK failed when 2860 STA Aggregation is enabled and connects with 2860 N/Aggregation AP.
3. Fixed "iwconfig ra0 essid"
4. Send DIS-ASSOC request to AP when ra0 down.
5. Support 5-GHz band ATE.
6. Fixed fixed rate issue in N mode and fixed rate ioctl.
7. Add Legacy Power Saving Mode.
8. Fixed W52 with Activity scan issue in ABG_MIXED and ABGN_MIXED mode.
9. Fixed ping failed with Broadcom N AP when AP is GF enabled and STA is auto rate.
10. Support custom wireless event.
11. Modify rate adaptation for fast ramp-up tuning.

1.9 Version 1.3.0.0

1. Support Monitor Mode with WireShark.(Usage: iwconfig ra0 mode monitor)
2. Update Rate Adaptation Algorithm.
3. Add ATE function (also QA supported).
4. Support IPv6 Ethernet Convert Mechanism.
5. Support NetworkManager, wpa_supplicant by using wext.
6. Fixed Auto Rate Select issue.(When RT2860 Linux STA links up with N-AP then change to link up with legacy-AP)
7. Fixed Fast-Roaming Fail Issue.

1.10 Version 1.2.1.0

1. Fixed segmentation fault when size of iwpriv ra0 get_site_survey result exceeded 4096.
2. Add MAT related iwpriv commands.
3. Add AP's wireless mode info to iwpriv ra0 get_site_survey
4. Modify bitrate info in iwlist ra0 scan.

1.11 Version 1.2.0.0

1. Update NicConfig2 default value.
2. Modify STA to retrieve the MCS of AP (from Beacon) and save to StaActive structure.
3. Add WPS re-generate PIN command: iwpriv ra0 wsc_gen_pincode.
4. Do NOT re-build M-messages in WPS state machine timeout timer function.
5. Fixed compile error in non-DBG mode.

1.12 Version 1.1.0.0

1. Fixed WI-FI test item 5.2.2.9 #S7, STA will fail to authenticate when AP set fragmentation to 500.
2. Fixed iwpriv security setting issue.

3. Re-organize the Rx data path.
4. Update Tx Power mechanism.
5. Support WPS In-band (EAP) & Out-Of-band (UPnP) Enrollee mode and In-band (EAP) Registrar mode.
6. Add WPS related iwpriv commands
7. Support Big-Endian.

1.13 Version 1.0.0.0

1. Chariot Throughput ok
2. Driver security support: Open/Shared WEP, WPA-PSK, WPA2-PSK, WPA-NONE.
3. Support 32/64-bit OS
4. Support A-MPDU and A-MSDU

2 README

Model Name

RT2860 WLAN Linux Driver

Driver Name

Kernel 2.4.x: rt2860.o

Kernel 2.6.x: rt2860.ko

Supporting Kernel

Linux kernel 2.4 and 2.6 series.

Tested in Redhat 7.3 or later.

Description

This is a Linux device driver for Ralink RT2860 ABGN WLAN Card.

Contents

Makefile: Makefile

*.c: c files

*.h: header files

Features

This driver implements basic IEEE802.11.

Infrastructure and Ad-Hoc mode with open or shared or WPA-PSK or WPA2-PSK authentication method.

NONE, WEP, TKIP and AES encryption.

Build Instructions

- 1> \$tar -xvzf yyyy_mmdd_RT2860_Linux_STA_x.x.x.x.tgz
go to "./yyyy_mmdd_RT2860_Linux_STA_x.x.x.x" directory.

2> In Makefile

- set the "MODE = STA" in Makefile
- choose the TARGET to Linux by set "TARGET = LINUX"
- define the Linux kernel source include file path LINUX_SRC modify to meet your need.

3> In os/linux/config.mk

define the GCC and LD of the target machine.

define the compiler flags CFLAGS.

modify to meet your needs.

**** Build for being controlled by NetworkManager**

Please set 'HAS_WPA_SUPPLICANT=y' and 'HAS_NATIVE_WPA_SUPPLICANT_SUPPORT=y'.

**** Build for being controlled by WpaSupplicant with Ralink Driver**

Please set 'HAS_WPA_SUPPLICANT=y' and 'HAS_NATIVE_WPA_SUPPLICANT_SUPPORT=n'.

4> compile driver source code

\$make

5> \$cp RT2860STA.dat /etc/Wireless/RT2860STA/RT2860STA.dat

!!!check if it is a binary file before loading!!!

6> load driver

#[kernel 2.4]

Insert sequence: rtutil3562sta.o, rt3562sta.o, rtnet3562sta.o

\$/sbin/insmod rt2860sta.o

\$/sbin/ifconfig ra0 inet YOUR_IP up

#[kernel 2.6]

Insert sequence: rtutil3562sta.ko, rt3562sta.ko, rtnet3562sta.ko

\$/sbin/insmod rt2860sta.ko

\$/sbin/ifconfig ra0 inet YOUR_IP up

7> unload driver

Remove sequence: rtnet3562sta.ko, rt3562sta.ko, rtutil3562sta.ko

\$/sbin/ifconfig ra0 down

\$/sbin/rmmod rt2860sta

3 CONFIGURATION

RT2860 driver can be configured via following interfaces, i.e.

1. configuration file
2. "iwconfig" command
3. "iwpriv" command

NOTE:

- modify configuration file "RT2860STA.dat" in /etc/Wireless/RT2860STA/RT2860STA.dat.
- iwconfig/iwpriv comes with kernel.
- iwpriv usage, please refer to below sections for details.

3.1 Configuration File : RT2860STA.dat

Copy this file to /etc/Wireless/RT2860STA/RT2860STA.dat

This file is a binary file and will be read on loading rt.o module.

#

Use "vi -b RT2860STA.dat" to modify settings according to your need.

#

1.) set NetworkType to

"Adhoc" for using Adhoc-mode,

otherwise using Infrastructure

2.) set Channel to

"0" for auto-select on Infrastructure mode

3.) set SSID for connecting to your Access-point.

4.) AuthMode can be

"WEPAUTO",

"OPEN",

"SHARED",

"WPAPSK",

"WPA2PSK",

"WPANONE"

5.) EncrypType can be

"NONE",

"WEP",

"TKIP",

"AES"



for more information refer to the Readme file.

#

#The word of "Default" must not be removed

Default

CountryRegion=5

CountryRegionABand=7

CountryCode=

SSID=Dennis2860AP

NetworkType=Infra

WirelessMode=9

Channel=0

BasicRate=15

BeaconPeriod=100

TxPower=100

BGProtection=0

TxPreamble=0

RTSThreshold=2347

FragThreshold=2346

TxBurst=1

PktAggregate=0

WmmCapable=0

AckPolicy=0;0;0;0

AuthMode=OPEN

EncrypType=NONE

WPAPSK=

DefaultKeyID=1

Key1Type=0

Key1Str=

Key2Type=0

Key2Str=

Key3Type=0

Key3Str=

Key4Type=0

Key4Str=

PSMode=CAM

AutoRoaming=0

RoamThreshold=70

HT_RDG=1
HT_EXTCHA=0
HT_OpMode=1
HT_MpduDensity=4
HT_BW=1
HT_AutoBA=1
HT_AMSDU=0
HT_BAWinSize=64
HT_GI=1
HT_MCS=33
HT_MIMOPSMODE=3
IEEE80211H=0
TGnWifiTest=0
WirelessEvent=0
CarrierDetect=0

Note:

WMM parameters

WmmCapable ; Set it as 1 to turn on WMM Qos support
AckPolicy1~4 ; Ack policy which support normal Ack or no Ack
; (AC_BK, AC_BE, AC_VI, AC_VO)

All WMM parameters do not support iwpriv command but 'WmmCapable', please store all parameter to RT2860STA.dat, and restart driver.

3.2 Usage

Syntax is 'Param'='Value' and describes below.

SectionNumber Parameter

Value:

...
...
...

3.2.1 CountryRegion

Value:

Region	Channels
0	1-11
1	1-13
2	10-11
3	10-13
4	14
5	1-14
6	3-9
7	5-13

3.2.2 CountryRegionForABand

Value:

Region	Channels
0	36, 40, 44, 48, 52, 56, 60, 64, 149, 153, 157, 161, 165
1	36, 40, 44, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140
2	36, 40, 44, 48, 52, 56, 60, 64
3	52, 56, 60, 64, 149, 153, 157, 161
4	149, 153, 157, 161, 165
5	149, 153, 157, 161
6	36, 40, 44, 48
7	36, 40, 44, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140, 149, 153, 157, 161, 165
8	52, 56, 60, 64
9	36, 40, 44, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 132, 136, 140, 149, 153, 157, 161, 165
10	36, 40, 44, 48, 149, 153, 157, 161, 165
11	36, 40, 44, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 120, 149, 153, 157, 161

3.2.3 CountryCode

Value:

AG, AR, AW, AU, AT, BS, BB, BM, BR, BE, BG, CA, KY, CL, CN, CO, CR, CY, CZ, DK, DO, EC, SV, FI, FR, DE, GR, GU, GT, HT, HN, HK, HU, IS, IN, ID, IE, IL, IT, JP, JO, LV, LI, LT, LU, MY, MT, MA, MX, NL, NZ, NO, PE, PT, PL, RO, RU, SA, CS, SG, SK, SI, ZA, KR, ES, SE, CH, TW, TR, GB, UA, AE, US, VE

NOTE:

"" : Using default setting.

2.4 G - channels 1 ~ 11

5G - channels 52 ~ 64, 100 ~ 140, 149 ~ 165

3.2.4 SSID

Value:

0~z, 1~32 ASCII characters.

3.2.5 WirelessMode

Value:

0: legacy 11b/g mixed

1: legacy 11B only

2: legacy 11A only // Not support in RflicType=1(id=RFIC_5225)
 // and RflicType=2(id=RFIC_5325)

3: legacy 11a/b/g mixed // Not support in RflicType=1(id=RFIC_5225)
 // and RflicType=2(id=RFIC_5325)

4: legacy 11G only

5: 11ABGN mixed

6: 11N only

7: 11GN mixed

8: 11AN mixed

9: 11BGN mixed

10: 11AGN mixed

3.2.6 Channel

Value:

This value depends on the CountryRegion or CountryRegionForABand setting.

3.2.7 BGProtection

Value:

- 0: Auto
- 1: Always on
- 2: Always off

3.2.8 TxPreamble

Value:

- 0: Preamble Long
- 1: Preamble Short
- 2: Auto

3.2.9 RTSThreshold

Value:

1 ~ 2347

3.2.10 FragThreshold

Value:

256 ~ 2346

3.2.11 TxBurst

Value:

- 0: Disable
- 1: Enable

3.2.12 PktAggregate

Value:

- 0: Disable
- 1: Enable

3.2.13 NetworkType

Value:

Infra: infrastructure mode

Adhoc: adhoc mode

3.2.14 AuthMode

Value:

OPEN: For open system

SHARED: For shared key system

WEPAUTO: Auto switch between OPEN and SHARED

WPAPSK: For WPA pre-shared key (Infra)

WPA2PSK: For WPA2 pre-shared key (Infra)

WPANONE: For WPA pre-shared key (Adhoc)

WPA:

WPA2:

3.2.15 EncryptType

Value:

NONE: For AuthMode=OPEN

WEP: For AuthMode=OPEN or AuthMode=SHARED

TKIP: For AuthMode=WPAPSK or WPA2PSK

AES: For AuthMode=WPAPSK or WPA2PSK

3.2.16 DefaultKeyID

Value:

1 ~ 4

3.2.17 WEP KeyType

Key1Type=value

Key2Type=value

Key3Type=value

Key4Type=value

Value:

0: hexadecimal type

1: ASCII type

(usage: reading profile only)

3.2.18 WEP Hex Key

Key1=value

Key2=value

Key3=value

Key4=value

Value:

10 or 26 hexadecimal characters e.g. 012345678

5 or 13 ASCII characters e.g. passwd

(usage : "iwpriv" only)

3.2.19 WEP Key String

Key1Str=value

Key2Str=value

Key3Str=value

Key4Str=value

Value:

10 or 26 characters (key type=0)

5 or 13 characters (key type=1)

(usage : reading profile only)

3.2.20 WPAPSK

Value:

8 ~ 63 ASCII or

64 HEX characters

3.2.21 WmmCapable

Value:

0: Disable WMM

1: Enable WMM

3.2.22 IEEE80211H

Enable IEEE802.11h support

Value:

0: Disable

1: Enable

3.2.23 PSMode

Value:

CAM Constantly Awake Mode

Max_PSP Max Power Savings

Fast_PSP Power Save Mode

3.2.24 AutoRoaming

Value:

0: Disabled

1: Enabled

3.2.25 RoamThreshold

Value:

0 ~ 255

3.2.26 TGnWiFiTest

Value:

0: Disabled

1: Enabled

3.2.27 WirelessEvent

Value:

0: Disabled

1: Enabled

3.2.28 CarrierDetect

Value:

0: Disabled

1: Enabled

3.2.29 HT_RDG

Value:

0: Disabled

1: Enabled

3.2.30 HT_EXTCHA

Value:

0: Below

1: Above

3.2.31 HT_OpMode

Value:

0: HT mixed format

1: HT greenfield format

3.2.32 HT_MpduDensity

Value:

0 ~ 7

3.2.33 HT_BW

Value:

0: 20MHz

1: 40MHz

3.2.34 HT_AutoBA

Value:

0: Disabled

1: Enabled

3.2.35 HT_AMSDU

Value:

0: Disabled

1: Enabled

3.2.36 HT_BAWinSize

Value:

1 ~ 64

3.2.37 HT_GI

Value:

0: long GI

1: short GI

3.2.38 HT_MCS

Value:

0 ~ 15

33: auto

3.2.39 HT_MIMOPSMODE

Value:

0: Static SM Power Save Mode

2: Reserved

1: Dynamic SM Power Save Mode

3: SM enabled

(not yet fully supported)

3.2.40 HT_BADecline=Value

Reject BA request from AP

Value:

0: Disabled

1: Enabled

3.2.41 TdlsCapable=value

Enable/disable TDLS capable

Value:

0 : disable

1 : enable

3.3 MORE INFORMATION

If you want for rt2860 driver to auto-load at boot time:

- A) choose ra0 for first RT2860 WLAN card, ra1 for second RT2860 WLAN card, etc.
- B) create(edit) 'ifcfg-ra0' file in /etc/sysconfig/network-scripts/,
edit(or add the line) in /etc/modules.conf:
alias ra0 rt2860sta
- C) edit(create) the file /etc/sysconfig/network-scripts/ifcfg-ra0
DEVICE='ra0'
ONBOOT='yes'

NOTE:

if you use dhcp, add this line too.

BOOTPROTO='dhcp'

- D) To ease the Default Gateway setting,
add the line
GATEWAY=x.x.x.x
in /etc/sysconfig/network

4 WIRELESS TOOLS

4.1 Iwpriv Usage

This is detailed explanation of each parameter for iwpriv.

Before reading this document, make sure you already read README.

`iwpriv ra0 set [parameters]=[Value]`

NOTE:

Execute one iwpriv/set command simultaneously.

4.1.1 DriverVersion

Check driver version by issue iwpriv set command.

Range: Any value

Value:

0

4.1.2 CountryRegion

Set country region.

Range:

0 ~ 7

Value:

Region	Channels
0	1-11
1	1-13
2	10-11
3	10-13
4	14
5	1-14
6	3-9
7	5-13

4.1.3 CountryRegionABand

Set country region for A band.

Range:

{0~10}

Value:

Region	Channels
0	36, 40, 44, 48, 52, 56, 60, 64, 149, 153, 157, 161, 165
1	36, 40, 44, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140
2	36, 40, 44, 48, 52, 56, 60, 64
3	52, 56, 60, 64, 149, 153, 157, 161
4	149, 153, 157, 161, 165
5	149, 153, 157, 161
6	36, 40, 44, 48
7	36, 40, 44, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140, 149, 153, 157, 161, 165
8	52, 56, 60, 64
9	36, 40, 44, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 132, 136, 140, 149, 153, 157, 161, 165
10	36, 40, 44, 48, 149, 153, 157, 161, 165
11	36, 40, 44, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 120, 149, 153, 157, 161

4.1.4 SSID

Set AP SSID

Range:

{0 ~ z, 1 ~ 32 ASCII characters}

Value:

4.1.5 WirelessMode

Set Wireless Mode

Range:

{0 ~ 10}

Value:

- 0: legacy 11b/g mixed
- 1: legacy 11B only
- 2: legacy 11A only
- 3: legacy 11a/b/g mixed
- 4: legacy 11G only
- 5: 11ABGN mixed
- 6: 11N only
- 7: 11GN mixed
- 8: 11AN mixed
- 9: 11BGN mixed
- 10: 11AGN mixed

4.1.6 TxBurst:

Set TxBurst Enable or Disable

Range:

{0,1}

Value:

- 0: Disable,
- 1: Enable

4.1.7 PktAggregate:

Set Tx Aggregate Enable or Disable

Range:

{0,1}

Value:

- 0: Disable,
- 1: Enable

4.1.8 TxPreamble:

Set TxPreamble

Range:

{0~2}

Value:

0: Preamble Long

1: Preamble Short

2: Auto

4.1.9 TxPower:

Set Tx power in percentage

Range:

{0 ~ 100}

Value:

4.1.10 Channel

Set Channel, depends on CountryRegion or CountryRegionABand

4.1.11 BGProtection:

Set 11B/11G Protection

Range:

{0~2}

Value:

0: Auto,

1: Always on

2: Always off

4.1.12 RTSThreshold:

Set RTS Threshold

Range:

 $\{1 \sim 2347\}$

Value:

4.1.13 FragThreshold:

Set Fragment Threshold

Range:

{256 ~ 2346}

Value:

4.1.14 NetworkType:

Set Network type

Range:

{Infra, Adhoc}

Value:

4.1.15 AuthMode:

Set Authentication Mode

Range:

{OPEN, SHARED, WEPAUTO, WPAPSK, WPA2PSK, WPAWPA2PSK}

Value:

4.1.16 EncrypType:

Set Encryption Type

Range:

{NONE, WEP, TKIP, AES}

Value:

4.1.17 DefaultKeyID:

Set Default Key ID

Range:

{1 ~ 4}

Value:

4.1.18 Key1

Set Key1 String

Range:

5 ASCII characters or 10 hex number, or
13 ASCII characters or 26 hex numbers

Value:

4.1.19 Key2

Set Key2 String

Range:

5 ASCII characters or 10 hex number or
13 ASCII characters or 26 hex numbers

Value:

4.1.20 Key3

Set Key3 String

Range:

5 ASCII characters or 10 hex number or

13 ASCII characters or 26 hex numbers

Value:

4.1.21 Key4

Set Key4 String

Range:

5 ASCII characters or 10 hex number or
13 ASCII characters or 26 hex numbers

Value:

4.1.22 WPAPSK

WPA Pre-Shared Key

Range:

8~63 ASCII or 64 hex characters

Value:

4.1.23 WmmCapable

Set WMM Capable

Range:

0, 1

Value:

0: Disable WMM,
1: Enable WMM

4.1.24 IEEE80211H

Enable IEEE802.11h support

Range:

0, 1

Value:

0: Disable

1: Enable

4.1.25 PSMode

Set Power Saving Mode

Range:

{CAM, MAX_PSP, FAST_PSP}

Value:

4.1.26 ResetCounter

Reset statistics counter

Range:

Any value

Value:

0

4.1.27 Debug

Set on debug level

Range:

{0 ~ 5}

Value:

0: OFF no debug message display
1: ERROR display error message
2: WARN display warning message
3: TRACE display trace message, usually used.

- | | |
|---------|----------------------------|
| 4: INFO | display informatic message |
| 5: LOUD | display all message |

4.1.28 CarrierDetect

Value:

- 0: Disabled
- 1: Enabled

4.1.29 HtRdg

Enable HT Reverse Direction Grant.

Value:

- 0: Disabled
- 1: Enabled

4.1.30 HtExtcha

To locate the 40MHz channel in combination with the control.

Value:

- 0: Below
- 1: Above

4.1.31 HtOpMode

Change HT operation mode.

Value:

- 0: HT mixed format
- 1: HT greenfield format

4.1.32 HtMpduDensity

Minimum separation of MPDUs in an A-MPDU. (based on 802.11n D2.0)

Value:

0 ~ 7

0: no restriction

1: 1/4 μ s

2: 1/2 μ s

3: 1 μ s

4: 2 μ s

5: 4 μ s

6: 8 μ s

7: 16 μ s

4.1.33 HtBw

Support channel width.

Value:

0: 20MHz

1: 40MHz

4.1.34 HtAutoBa

Enable auto block acknowledgment (Block Ack).

Value:

0: Disabled

1: Enabled

4.1.35 HtAmsdu

Enable aggregation of multiple MSDUs in one MPDU.

Value:

0: Disabled

1: Enabled

4.1.36 HtBaWinSize

Set BA WinSize.

Value:

1 ~ 64

4.1.37 HtGi

Support Short/Long GI.

Value:

0: long GI

1: short GI

4.1.38 HtMcs

MCS rate selection.

Value:

0 ~ 15

33: auto

4.1.39 HtProtect

Enable HT protection for legacy device.

Value:

0: Disable

1: Enable

4.1.40 HtMimoPs

MIMO power save mode selection. (based on 802.11n D2.0)

Value:

0: Static SM (Spatial Multiplexing) Power Save Mode

1: Dynamic SM Power Save Mode

2: Reserved

3: SM enabled

(not fully support yet)

4.1.41 FixedTxMode

Set Fixed Tx Mode for fixed rate setting

Value:

Mode= CCK

MCS = 0	=> 1Mbps
MCS= 1	=> 2Mbps
MCS= 2	=> 5.5 Mbps
MCS= 3	=> 11 Mbps

Mode = OFDM

MCS = 0	=> 6Mbps
MCS= 1	=> 9Mbps
MCS= 2	=> 12Mbps
MCS= 3	=> 18Mbps
MCS= 4	=> 24Mbps
MCS= 5	=> 36Mbps
MCS= 6	=> 48Mbps
MCS= 7	=> 54Mbps

4.1.42 LongRetry

Usage:

iwpriv ra0 set LongRetry=value

Value:

0 ~ 255

4.1.43 ShortRetry

Usage:

iwpriv ra0 set ShortRetry=value

Value:

0 ~ 255

4.1.44 HtBaDecline=Value

Reject BA request from AP

Value:

0: Disabled

1: Enabled

4.1.45 HtDisallowTKIP=Value

When cipher is WEP or TKIP, STA would connect to 11N AP with legacy rate

Enable/Disable N rate with 11N AP when cipher is WEP or TKIP

Default setting is disable

Value:

0: False

1: True

4.1.46 wsc_ap_band=Value

Setting prefer band to do WPS with dual band WPS AP

Default value is auto (2)

Value:

0 : prefer 2.4G

1 : prefer 5G

2 : auto

4.1.47 BeaconLostTime=Value

Change Beacon Lost Time

Default value is 4 seconds

Value:

1 ~ 60 seconds

4.1.48 AutoRoaming=Value

Enable/Disable auto roaming mechanism

Default setting is disable.

Value:

0: Disabled

1: Enabled

4.1.49 SiteSurvey=Value

Scan with specific SSID after Link Up

Value:

0~z, 1~32 ASCII characters

4.1.50 TdlsCapable =Value

Enable/disable TDLS capable

Value:

0 : disable

1 : enable

Example : iwpriv ra0 set TdlsCapable=0

4.1.51 TdlsSetup=Value

Manually add TDLS link

Value: MAC address

Example: iwpriv ra0 set TdlsSetup=00:11:22:33:44:55

4.2 Iwpriv SHOW Usage

This is the status of each parameter for "iwpriv ra0 show".

iwpriv **ra0** show [parameters]

from 4.2.35~4.2.38

iwpriv **mesh0** show [parameters]

4.2.1 SSID

Show AP SSID

4.2.2 WirelessMode

Show Wireless Mode

4.2.3 TxBurst

Show TxBurst

4.2.4 TxPreamble

Show TxPreamble

4.2.5 TxPower

Show TxPower

4.2.6 Channel

Show Channel

4.2.7 BGProtection

Show BGProtection

4.2.8 RTSThreshold

Show RTSThreshold

4.2.9 FragThreshold

Show FragThreshold

4.2.10 HtBw

Show HtBw

4.2.11 HtMcs

Show HtMcs

4.2.12 HtGi

Show HtGi

4.2.13 HtOpMode

Show HtOpMode

4.2.14 HtExtcha

Show HtExtcha

4.2.15 HtMpduDensity

Show HtMpduDensity

4.2.16 HtBaWinSize

Show HtBaWinSize

4.2.17 HtRdg

Show HtRdg

4.2.18 HtAmsdu

Show HtAmsdu

4.2.19 HtAutoBa

Show HtAutoBa

4.2.20 CountryRegion

Show CountryRegion

4.2.21 CountryRegionABand

Show CountryRegionABand

4.2.22 CountryCode

Show CountryCode

4.2.23 PktAggregate

Show PktAggregate

4.2.24 WmmCapable

Show WmmCapable

4.2.25 IEEE80211H

Show IEEE80211H

4.2.26 NetworkType

Show NetworkType

4.2.27 AuthMode

Show AuthMode

4.2.28 EncrypType

Show EncrypType

4.2.29 DefaultKeyID

Show DefaultKeyID

4.2.30 Key1

Show Key1

4.2.31 Key2

Show Key2

4.2.32 Key3

Show Key3

4.2.33 Key4

Show Key4

4.2.34 WPAPSK

Show WPAPSK

4.3 Iwpriv Examples

4.3.1 Infrastructure

4.3.1.1 OPEN/NONE

Config STA to link with AP which is OPEN/NONE (Authentication/Encryption)

1. iwpriv ra0 set NetworkType=Infra
2. iwpriv ra0 set AuthMode=OPEN
3. iwpriv ra0 set EncrypType=NONE
4. iwpriv ra0 set SSID="AP's SSID"

4.3.1.2 SHARED/WEP

Config STA to link with AP which is SHARED/WEP (Authentication/Encryption)

1. iwpriv ra0 set NetworkType=Infra
2. iwpriv ra0 set AuthMode=SHARED
3. iwpriv ra0 set EncrypType=WEP
4. iwpriv ra0 set DefaultKeyID=1
5. iwpriv ra0 set Key1="AP's wep key"
6. iwpriv ra0 set SSID="AP's SSID"

4.3.1.3 WPAPSK/TKIP

Config STA to link with AP which is WPAPSK/TKIP (Authentication/Encryption)

1. iwpriv ra0 set NetworkType=Infra
2. iwpriv ra0 set AuthMode=WPAPSK
3. iwpriv ra0 set EncrypType=TKIP
4. iwpriv ra0 set SSID="AP's SSID"

5. iwpriv ra0 set WPAPSK="AP's wpa-preshared key"
6. iwpriv ra0 set SSID="AP's SSID"

4.3.1.4 WPAPSK/AES

Config STA to link with AP which is WPAPSK/AES (Authentication/Encryption)

1. iwpriv ra0 set NetworkType=Infra
2. iwpriv ra0 set AuthMode=WPAPSK
3. iwpriv ra0 set EncrypType=AES
4. iwpriv ra0 set SSID="AP's SSID"
5. iwpriv ra0 set WPAPSK="AP's wpa-preshared key"
6. iwpriv ra0 set SSID="AP's SSID"

4.3.1.5 WPA2PSK/TKIP

Config STA to link with AP which is WPA2PSK/TKIP(Authentication/Encryption)

1. iwpriv ra0 set NetworkType=Infra
2. iwpriv ra0 set AuthMode=WPA2PSK
3. iwpriv ra0 set EncrypType=TKIP
4. iwpriv ra0 set SSID="AP's SSID"
5. iwpriv ra0 set WPAPSK=12345678
6. iwpriv ra0 set SSID="AP's SSID"

4.3.2 Ad-Hoc

4.3.2.1 OPEN/NONE

Config STA to create/link as adhoc mode, which is OPEN/NONE(Authentication/Encryption)

1. iwpriv ra0 set NetworkType=Adhoc
2. iwpriv ra0 set AuthMode=OPEN
3. iwpriv ra0 set EncrypType=NONE
4. iwpriv ra0 set SSID="Adhoc's SSID"

4.3.2.2 WPANONE/TKIP

Config STA to create/link as adhoc mode, which is WPANONE/TKIP(Authentication/Encryption)

1. iwpriv ra0 set NetworkType=Adhoc

2. `iwpriv ra0 set AuthMode=WPAONE`
3. `iwpriv ra0 set EncrypType=TKIP`
4. `iwpriv ra0 set SSID="AP's SSID"`
5. `iwpriv ra0 set WPAPSK=12345678`
6. `iwpriv ra0 set SSID="AP's SSID"`

4.3.3 Get site survey

Usage:

```
iwpriv ra0 get_site_survey
```

4.3.4 Get Statistics

Usage:

```
iwpriv ra0 stat ;read statistic counter
iwpriv ra0 set ResetCounter=0;reset statistic counter
```

4.3.5 ANY SSID

Link with an AP which is the largest strength, set ANY SSID (ssidLen=0)

Usage:

```
iwconfig ra0 essid ""
or,
iwpriv ra0 set SSID=""
```

4.4 iwlist

This is detailed explanation of each parameter for iwlist.

```
iwlist ra0 scanning ; list the results after scanning(manual rescan)
```

4.5 iwconfig

The following are our support in standard configuration – iwconfig

1. `iwconfig ra0 essid {NN|on|off}` ;set essid
2. `iwconfig ra0 mode {managed|ad-hoc|...}` ;set wireless mode
3. `iwconfig ra0 freq N.NNNN[k|M|G]` ;set frequency

4. iwconfig ra0 channel N ;set channel
5. iwconfig ra0 ap {N|off|auto} ;set AP address
6. iwconfig ra0 nick N ;set nickname
7. iwconfig ra0 rate {N|auto|fixed} ;set rate
8. iwconfig ra0 rts {N|auto|fixed|off} ;set RTS threshold
9. iwconfig ra0 frag {N|auto|fixed|off} ;set Fragment threshold
10. iwconfig ra0 enc {NNNN-NNNN|off} ;set encryption type
11. iwconfig ra0 power {period N|timeout N} ;set power management modes

NOTE:

Please refer to the main page of 'iwconfig', 'iwlist' and 'iwpriv' for wireless extension usage.


5 WPS – WI-FI PROTECTED SETUP

Simple Config Architectural Overview

This section presents a high-level description of the Simple Config architecture. Much of the material is taken directly from the Simple Config specification.

Figure 1 depicts the major components and their interfaces as defined by Wi-Fi Simple Config Spec. There are three logical components involved: the Registrar, the access point (AP), and the Enrollee.

- ◆ The **Enrollee** is a device seeking to join a WLAN domain. Once an Enrollee obtains a valid credential, it becomes a member.
- ◆ A **Registrar** is an entity with the authority to issue and revoke domain credentials. A registrar can be integrated into an AP.
- ◆ The **AP** can be either a WLAN AP or a wireless router.

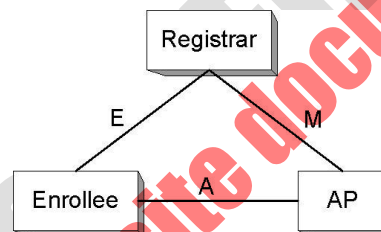

Components and Interfaces

Registration initiation is ordinarily accomplished by a user action such as powering up the Enrollee and, optionally, running a setup wizard on the Registrar (PC).

5.1 Iwpriv Usage

This is detailed explanation of each iwpriv parameter.

Before reading this document, make sure you already read README.

`iwpriv ra0 [commands]=[Value]`

NOTE:

Wireless extension private handlers.

5.1.1 wsc_conf_mode

Set WPS conf mode.

Range:

{0, 1, 2}

Value:

0: WPS Disabled

1: Enrollee

2: Registrar

5.1.2 wsc_mode

Set WPS mode, PIN or PBC.

Range:

{1, 2}

Value:

1: PIN

2: PBC

5.1.3 wsc_pin

Set the enrollee's PIN Code.

Range:

{00000000 ~ 99999999}

Value:

5.1.4 wsc_ssid

Set WPS AP SSID.

Range:

{0~z, 1~32 ASCII characters}

Value:

5.1.5 wsc_start

Trigger RT2860 STA driver to do WPS process.

Range:

NULL

Value:

5.1.6 wsc_stop

Stop WPS process.

Range:

NULL

Value:

5.1.7 wsc_gen_pincode

Generate new PIN code.

Range:

NULL

Value:

5.1.8 wsc_cred_count

Set count of WPS credential.

Range:

{1 ~ 8}

Value:

5.1.9 wsc_cred_ssid

Set SSID into credential [idx].

Range:

{"idx ssid_str"}

Value:

idx: 0 ~ 7

ssid_str: 0~z, 1~32 ASCII characters

e.g.

```
iwpriv ra0 wsc_cred_ssid "0 wps_ap1"
```

5.1.10 wsc_cred_auth

Set AuthMode into credential [idx].

Range:

{"idx auth_str"}

Value:

idx: 0 ~ 7

auth_str: OPEN, WPAPSK, WPA2PSK, SHARED, WPA, WPA2

e.g.

```
iwpriv ra0 wsc_cred_auth "0 WPAPSK"
```

5.1.11 wsc_cred_encr

Set EncryptType into credential [idx].

Range:

{"idx encr_str"}

Value:

idx: 0 ~ 7

encr_str: NONE, WEP, TKIP, AES

e.g.

```
iwpriv ra0 wsc_cred_encr "0 TKIP"
```

5.1.12 wsc_cred_keyIdx

Set Key Index into credential [idx].

Range:

{"idx key_index"}

Value:

idx: 0 ~ 7

key_index: 1 ~ 4

e.g.

```
iwpriv ra0 wsc_cred_keyIdx "0 1"
```

5.1.13 wsc_cred_key

Set Key into credential [idx].

Range:

{"idx key"}

Value:

idx: 0 ~ 7

key: ASCII string (wep_key_len(=5,13), passphrase_len(=8~63))

OR

Hex string (wep_key_len(=10,26), passphrase_len(=64))

e.g.

```
iwpriv ra0 wsc_cred_key "0 12345678" ;; Passphrase
```

```
iwpriv ra0 wsc_cred_key "0 abcd" ;; WEP Key
```

5.1.14 wsc_cred_mac

Set AP's MAC into credential[idx].

Range:

{ "idx mac_str" }

Value:

idx: 0 ~ 7

mac_str: xx:xx:xx:xx:xx:xx

e.g.

iwpriv ra0 wsc_cred_mac "0 00:11:22:33:44:55"

5.1.15 wsc_conn_by_idx

Connect AP by credential index.

Range:

{ 0 ~ 7 }

Value:

idx: 0 ~ 7

5.1.16 wsc_auto_conn

Set driver to re-connecting to AP or not after registration.

Range:

{ 0, 1 }

Value:

0: Disabled, driver won't re-connect to AP with new configurations.

1: Enabled, driver will re-connect to AP with new configurations.

5.2 WPS STA as an Enrollee or Registrar

Build WPS function. Please set 'HAS_WSC=y'.

5.2.1 Enrollee Mode

5.2.1.1 PIN mode:

Running Scenarios (case 'a' and 'b')

- A) Adding an Enrollee to AP+Registrar (EAP)
[AP+Registrar]<---EAP--->[Enrollee Client]
- B) Adding an Enrollee with external Registrar (UPnP/EAP)
[External Registrar]<---UPnP--->[AP_Proxy]<---EAP--->[Enrollee Client]

NOTE:

'EAP' indicates to use wireless medium and 'UPnP' indicates to use wired or wireless medium.

- (i) [Registrar] or [AP+Registrar]
Enter the Enrollee Pin Code on the Registrar and start WPS on the Registrar.

NOTE:

How to get the Enrollee Pin Code? Use 'iwpriv ra0 stat' on the Enrollee.

- (ii) [RT2860 Linux WPS STA]

```
iwpriv ra0 wsc_conf_mode 1           ;; Enrollee  
iwpriv ra0 wsc_mode 1                 ;; PIN  
iwpriv ra0 wsc_ssid "AP's SSID"  
iwpriv ra0 wsc_start
```
- (iii) If the registration is successful, the Enrollee will be re-configured with the new parameters, and will connect to the AP with these new parameters.

5.2.1.2 PBC mode:

Running Scenarios (case 'a' only)

- a. Adding an Enrollee to AP+Registrar (EAP)
[AP+Registrar]<----EAP-->[Client]
- (i) [AP+Registrar]

Start PBC on the Registrar.

- (ii) [RT2860 Linux WPS STA]
iwpriv ra0 wsc_conf_mode 1 ;; Enrollee
iwpriv ra0 wsc_mode 2 ;; PBC
iwpriv ra0 wsc_start
- (iii) If the registration is successful, the Enrollee will be re-configured with the new parameters, and will connect to the AP with these new parameters.

5.2.2 Registrar Mode

5.2.2.1 PIN mode:

Running Scenarios (case 'a' and 'b')

- a. Configure the un-configured AP
[Unconfigured AP]<---EAP--->[Registrar]
- b. Configure the configured AP
Configured AP]<---EAP--->[Registrar]
- (i) [AP]
Start PIN on the Enrollee WPS AP.
- (ii) [RT2860 Linux WPS STA]
iwpriv ra0 wsc_conf_mode 2 ;; Registrar
iwpriv ra0 wsc_mode 1 ;; PIN
iwpriv ra0 wsc_pin xxxxxxxx ;; AP's PIN Code
iwpriv ra0 wsc_ssid "AP's SSID"
iwpriv ra0 wsc_start
- (iii) If the registration is successful;

in case 'a':

The Registrar will be re-configured with the new parameters, and will connect to the AP with these new parameters;

in case 'b':

The Registrar will be re-configured with AP's configurations, and will connect to the AP with these new parameters.

5.2.2.2 PBC mode:

Running Scenarios (case 'a' and 'b')

- a. Configure the un-configured AP
[Unconfigured AP]<----EAP---->[Registrar]
- b. Configure the configured AP
Configured AP]<----EAP---->[Registrar]

(i) [AP]

Start PBC on the Enrollee WPS AP.

(ii) [RT2860 Linux WPS STA]

```
iwpriv ra0 wsc_conf_mode 2           ;; Registrar
iwpriv ra0 wsc_mode 2                 ;; PBC
iwpriv ra0 wsc_start
```

(iii) If the registration is successful;
in case 'a':

The Registrar will be re-configured with the new parameters, and will connect to the AP with these new parameters;

in case 'b':

The Registrar will be re-configured with AP's configurations, and will connect to the AP with these new parameters.

5.3 WPS IOCTL Usage

Detail parameters and arguments; please refer to above section for detail.

5.3.1 iwpriv commands without argument

1. iwpriv ra0 wsc_start
2. iwpriv ra0 wsc_stop
3. iwpriv ra0 wsc_gen_pincode

e.g.

```
memset(&lwreq, 0, sizeof(lwreq));  
sprintf(lwreq.ifr_name, "ra0", 3);  
lwreq.u.mode = WSC_STOP;
```

```
/* Perform the private ioctl */  
if(ioctl(skfd, RTPRIV_IOCTL_SET_WSC_PROFILE_U32_ITEM, &lwreq) < 0)  
{  
    fprintf(stderr, "Interface doesn't accept private ioctl...\n");  
    return -1;  
}
```

5.3.2 iwpriv commands with one INT argument

1. iwpriv ra0 wsc_cred_count 1
2. iwpriv ra0 wsc_conn_by_idx 1
3. iwpriv ra0 wsc_auto_conn 1
4. iwpriv ra0 wsc_conf_mode 1
5. iwpriv ra0 wsc_mode 1
6. iwpriv ra0 wsc_pin 12345678

e.g.

```
memset(&lwreq, 0, sizeof(lwreq));  
lwreq.u.data.length = 1;  
cred_count = 1;  
((int *) buffer)[i] = (int) cred_count;  
offset = sizeof(int);
```

```
sprintf(lwreq.ifr_name, "ra0", 3);  
lwreq.u.mode = WSC_CREDENTIAL_COUNT;  
memcpy(lwreq.u.name + offset, buffer, IFNAMSIZ - offset);  
  
/* Perform the private ioctl */  
if(ioctl(skfd, RTPRIV_IOCTL_SET_WSC_PROFILE_U32_ITEM, &lwreq) < 0)  
{  
    fprintf(stderr, "Interface doesn't accept private ioctl...\n");  
    return -1;  
}
```

5.3.3 iwpriv commands with string argument

1. iwpriv ra0 wsc_ssid "0 xxxxx"
2. iwpriv ra0 wsc_cred_ssid "0 xxxxx"
3. iwpriv ra0 wsc_cred_auth "0 WPAESK"
4. iwpriv ra0 wsc_cred_encr "0 TKIP"
5. iwpriv ra0 wsc_cred_keyidx "0 1"
6. iwpriv ra0 wsc_cred_key "0 12345"
7. iwpriv ra0 wsc_cred_mac "0 00:11:22:33:44:55"

e.g.

```
memset(&lwreq, 0, sizeof(lwreq));  
memset(buffer, 0, 2048);  
sprintf(lwreq.ifr_name, "ra0", 3);  
sprintf(buffer, "0 wps_ssid_1");  
lwreq.u.data.length = strlen(buffer) + 1;  
lwreq.u.data.pointer = (caddr_t) buffer;  
lwreq.u.data.flags = WSC_CREDENTIAL_SSID;  
  
/* Perform the private ioctl */  
if(ioctl(skfd, RTPRIV_IOCTL_SET_WSC_PROFILE_STRING_ITEM, &lwreq) < 0)  
{  
    fprintf(stderr, "Interface doesn't accept private ioctl...\n");  
    return -1;  
}
```

5.4 WPS IOCTL Sample Program

```
#include <stdio.h>

#include <stdlib.h>

#include <string.h>

#include <assert.h>

#include <netinet/in.h> /* for sockaddr_in */

#include <fcntl.h>

#include <time.h>

#include <sys/times.h>

#include <unistd.h>

#include <sys/socket.h> /* for connect and socket*/

#include <sys/stat.h>

#include <err.h>

#include <errno.h>

#include <asm/types.h>

#include </usr/include/linux/wireless.h>

#include <sys/ioctl.h>

#define IFNAMSIZ 16

#define RTPRIV_IOCTL_SET_WSC_PROFILE_U32_ITEM (SIOCWFIRSTPRIV + 0x14)

#define RTPRIV_IOCTL_SET_WSC_PROFILE_STRING_ITEM (SIOCWFIRSTPRIV + 0x16)

enum {
```

```
WSC_CREDENTIAL_COUNT = 1,  
  
WSC_CREDENTIAL_SSID = 2,  
  
WSC_CREDENTIAL_AUTH_MODE = 3,  
  
WSC_CREDENTIAL_ENCR_TYPE = 4,  
  
WSC_CREDENTIAL_KEY_INDEX = 5,  
  
WSC_CREDENTIAL_KEY = 6,  
  
WSC_CREDENTIAL_MAC = 7,  
  
WSC_SET_DRIVER_CONNECT_BY_CREDENTIAL_IDX = 8,  
  
WSC_SET_DRIVER_AUTO_CONNECT = 9,  
  
WSC_SET_CONF_MODE = 10, // Enrollee or Registrar  
  
WSC_SET_MODE = 11,    // PIN or PBC  
  
WSC_SET_PIN = 12,  
  
WSC_SET_SSID = 13,  
  
WSC_START = 14,  
  
WSC_STOP = 15,  
  
WSC_GEN_PIN_CODE = 16,  
  
};
```

```
int main()
```

```
{
```

```
    struct iwreq lwreq;
```

```
    char    buffer[2048] = {0};
```

```
    int     cred_count;
```

```
    int     offset = 0;        /* Space for sub-ioctl index */
```

```
int      skfd, i = 0;          /* generic raw socket desc. */
```

```
skfd = socket(AF_INET, SOCK_DGRAM, 0);
```

```
if (skfd < 0)
```

```
    return -1;
```

```
////////// WSC_STOP //////////
```

```
memset(&lwreq, 0, sizeof(lwreq));
```

```
sprintf(lwreq.ifr_name, "ra0", 3);
```

```
lwreq.u.mode = WSC_STOP;
```

```
/* Perform the private ioctl */
```

```
if(ioctl(skfd, RTPRIV_IOCTL_SET_WSC_PROFILE_U32_ITEM, &lwreq) < 0)
```

```
{
```

```
    fprintf(stderr, "Interface doesn't accept private ioctl...\n");
```

```
    return -1;
```

```
}
```

```
//////////
```

```
////////// WSC_CREDENTIAL_COUNT //////////
```

```
memset(&lwreq, 0, sizeof(lwreq));
```

```
lwreq.u.data.length = 1;
```

```
cred_count = 1;
```

```
((int *) buffer)[i] = (int) cred_count;
```

```
offset = sizeof(int);

sprintf(lwreq.ifr_name, "ra0", 3);

lwreq.u.mode = WSC_CREDENTIAL_COUNT;

memcpy(lwreq.u.name + offset, buffer, IFNAMSIZ - offset);

/* Perform the private ioctl */

if(ioctl(skfd, RTPRIV_IOCTL_SET_WSC_PROFILE_U32_ITEM, &lwreq) < 0)

{

    fprintf(stderr, "Interface doesn't accept private ioctl...\n");

    return -1;

}

////////////////////////////////////

//////// WSC_CREDENTIAL_SSID //////////

memset(&lwreq, 0, sizeof(lwreq));

memset(buffer, 0, 2048);

sprintf(lwreq.ifr_name, "ra0", 3);

sprintf(buffer, "0 wps_ssid_1");

lwreq.u.data.length = strlen(buffer) + 1;

lwreq.u.data.pointer = (caddr_t) buffer;

lwreq.u.data.flags = WSC_CREDENTIAL_SSID;

/* Perform the private ioctl */
```



```
if(ioctl(skfd, RTPRIV_IOCTL_SET_WSC_PROFILE_STRING_ITEM, &lwreq) < 0)

{

    fprintf(stderr, "Interface doesn't accept private ioctl...\n");

    return -1;

}

////////////////////////////////////

close(skfd);

return 0;


}
```

6 ATE TEST COMMAND FORMAT

IMPORTANT

IF YOU ARE NOT FAMILIAR WITH HARDWARE, IT IS RECOMMENDED NOT TO MODIFY HARDWARE DEFAULT VALUE.

Ralink ATE Operation Flow

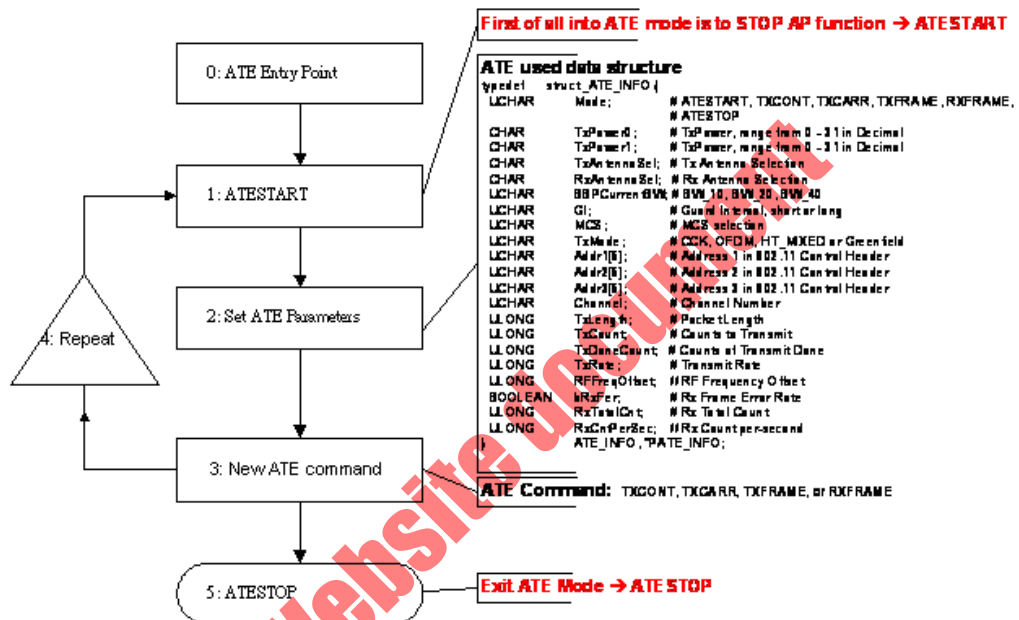

Note:

1. Channel setting would take effect on next ATE command.
2. TxPower would take effect after frame transmit start.
TxPower can be changed dynamically on any ATE command operating.
3. Any ATE parameters have to be included into ATE_INFO structure.
4. Enter ATE mode by set ATE command "ATESTART".
 - a. Abort all TX rings
 - b. AsicDisableSync → Stop Beacon.
 - c. Stop REKEYTimer
 - d. Stop CounterMeasureTimer
 - e. MacTableReset
5. Use TXCONT to check transmit power mask.
6. Use TXCARR to check frequency lock (under 25ppm).

6.1 iwpriv ra0 set [parameters]=[val]

Syntax:	Example
Section# parameters	11.1.5 ATECHANNEL
Explanation	Set ATE channel.
Value:	Value:
0: ...	1:
1: ...	2:
..::

6.1.1 ATE

Set ATE actions.

Value:

ATESTART - Stop AP & ATE function.

ATESTOP - Start AP function.

TXCONT - Start AP continuous TX, for power mask.

TXCARR - Start AP carrier test, for frequency calibration.

TXFRAME - Transmit frame, for EVM.

RXFRAME - Continuous RX, for PER/FER.

6.1.2 ATEDA

Set ATE frame header addr1.

Value:

XX:XX:XX:XX:XX:XX ; hex

6.1.3 ATESA

Set ATE frame header addr2.

Value:

XX:XX:XX:XX:XX:XX ; hex

6.1.4 ATEBSSID

Set ATE frame header addr3.

Value:

xx:xx:xx:xx:xx:xx ; hex

6.1.5 ATECHANNEL

Set ATE Channel, decimal.

Value:

802.11b/g: 1 ~ 14 depends on CountryRegion setting

6.1.6 ATETXPOW0

Set ATE Tx power for Antenna 1.

Value:

0 ~ 31 ; 5-bits only, decimal

6.1.7 ATETXPOW1

Set ATE Tx power for Antenna 2.

Value:

0 ~ 31 ; 5-bits only, decimal

6.1.8 ATETXFREQOFFSET

Set ATE RF frequency offset.

Value:

0 ~ 63 ; unit: 2KHz, decimal

6.1.9 ATETXLEN

Set ATE frame length.

Value:

24 ~ 1500 ; decimal

6.1.10 ATETXCNT

Set ATE frame Tx count.

Value:

1 ~ ; 32-bit, decimal

6.1.11 ATETXMODE (Refer to [TxMode](#))

Set ATE Tx Mode.

Value:

0: CCK	802.11b
1: OFDM	802.11g
2: HT_MIX	802.11b/g/n
3: Green Field	802.11n

6.1.12 ATETXBW (Refer to [TxMode](#))

Set ATE Tx Bandwidth.

Value:

0: 20MHz
1: 40MHz

6.1.13 ATETXGI (Refer to [TxMode](#))

Set ATE Tx Guard Interval.

Value:

0: Long
1: Short

6.1.14 ATETXMCS (Refer to [TxMode](#))

Set ATE Tx MCS type.

Value:

0 ~ 15

6.1.15 ATETXANT

Set ATE TX antenna.

Value:

0: All

1: Antenna one

2: Antenna two

6.1.16 ATERXANT

Set ATE RX antenna.

Value:

0: All

1: Antenna one

2: Antenna two

3: Antenna three

6.1.17 ATERXFER

Set ATE to periodic show up RxCount (per-second) and RxTotalCount.

Value:

0: Disable counter show up

1: Enable counter show up

6.1.18 ATESHOW

Show all parameters of ATE.

Value:

1

6.1.19 ATEHELP

List all commands of ATE.

Value:

1

6.1.20 ResetCounter

Reset statistic counter.

Value:

0

6.1.21 ATERRF

Read all of the RF registers.

Value:

1

6.1.22 ATEWRF1

Write the RF register 1.

Value:

xxxxxxx ;32-bit, hex

6.1.23 ATEWRF2

Write the RF register 2.

Value:

xxxxxxx ;32-bit, hex

6.1.24 ATEWRF3

Write the RF register 3.

Value:

xxxxxxx ;32-bit, hex

6.1.25 ATEWRF4

Write the RF register 4.

Value:

xxxxxxx ;32-bit, hex

6.2 Tx Mode, MCS, BW and GI Selection Table

MODE = 0, Legacy CCK	
MCS = 0	Long Preamble CCK 1Mbps
MCS = 1	Long Preamble CCK 2Mbps
MCS = 2	Long Preamble CCK 5.5Mbps
MCS = 3	Long Preamble CCK 11Mbps
MCS = 8	Short Preamble CCK 1Mbps, * illegal rate
MCS = 9	Short Preamble CCK 2Mbps
MCS = 10	Short Preamble 5.5Mbps
MCS = 11	Short Preamble 11Mbps
Notes:	
Other MCS codes are reserved in legacy CCK mode.	
BW, SGI and STBC are reserved in legacy CCK mode.	
MODE = 1, Legacy OFDM	
MCS = 0	6Mbps
MCS = 1	9Mbps
MCS = 2	12Mbps
MCS = 3	18Mbps
MCS = 4	24Mbps
MCS = 5	36Mbps
MCS = 6	48Mbps
MCS = 7	54Mbps
Notes:	
Other MCS code in legacy CCK mode is reserved.	
When BW = 1, duplicate legacy OFDM is sent.	
SGI, STBC are reserved in legacy OFDM mode.	
MODE = 2, HT Mixed Mode	
MODE = 3, HT Greenfield	
MCS = 0 (1S)	(BW=0, SGI=0) 6.5Mbps
MCS = 1	(BW=0, SGI=0) 13Mbps
MCS = 2	(BW=0, SGI=0) 19.5Mbps
MCS = 3	(BW=0, SGI=0) 26Mbps

MCS = 4	(BW=0, SGI=0) 39Mbps
MCS = 5	(BW=0, SGI=0) 52Mbps
MCS = 6	(BW=0, SGI=0) 58.5Mbps
MCS = 7	(BW=0, SGI=0) 65Mbps
MCS = 8 (2S)	(BW=0, SGI=0) 13Mbps
MCS = 9	(BW=0, SGI=0) 26Mbps
MCS = 10	(BW=0, SGI=0) 39Mbps
MCS = 11	(BW=0, SGI=0) 52Mbps
MCS = 12	(BW=0, SGI=0) 78Mbps
MCS = 13	(BW=0, SGI=0) 104Mbps
MCS = 14	(BW=0, SGI=0) 117Mbps
MCS = 15	(BW=0, SGI=0) 130Mbps
MCS = 32	(BW=1, SGI=0) HT duplicate 6Mbps

Notes:

When BW=1, PHY_RATE = PHY_RATE * 2

When SGI=1, PHY_RATE = PHY_RATE * 10/9

The effects of BW and SGI are accumulative.

When MCS=0~7(1S, One Tx Stream), STBC option is supported. SGI option is supported. BW option is supported.

When MCS=8~15(2S, Two Tx Stream), STBC option is NOT supported. SGI option is supported. BW option is supported.

When MCS=32, only SGI option is supported. BW and STBC option are not supported. (BW=1, STBC=0)

Other MCS code in HT mode is reserved.

When STBC is supported. Only STBC = 1 is allowed. STBC will extend the transmission range but will not increase transmission rate.

6.3 Examples

6.3.1 Check EVM & Power

```
iwpriv ra0 set ATE=ATESTART
iwpriv ra0 set ATEDA=00:11:22:33:44:55
iwpriv ra0 set ATESA=00:aa:bb:cc:dd:ee
iwpriv ra0 set ATEBSSID=00:11:22:33:44:55
iwpriv ra0 set ATECHANNEL=1          ; set Channel
iwpriv ra0 set ATETXMODE=1          ; set TX-Mode.
iwpriv ra0 set ATETXMCS=7           ; set MCS type.
iwpriv ra0 set ATETXBW=0            ; set Bandwidth
iwpriv ra0 set ATETXGI=0            ; set Long GI.
iwpriv ra0 set ATETXLEN=1024        ; set packet length.
iwpriv ra0 set ATETXPOW0=18
iwpriv ra0 set ATETXPOW1=18
iwpriv ra0 set ATETXCNT=100000
iwpriv ra0 set ATETXFRAME
...
iwpriv ra0 set ATETXPOW0=19
```

```
...  
iwpriv ra0 set ATETXPOW0=20  
...  
iwpriv ra0 set ATE=ATESTART
```

6.3.2 Check Carrier

```
iwpriv ra0 set ATE=ATESTART  
iwpriv ra0 set ATECHANNEL=1           ; set Channel  
iwpriv ra0 set ATETXMODE=1           ; set TX-Mode.  
iwpriv ra0 set ATETXMCS=7            ; set MCS type.  
iwpriv ra0 set ATETXBW=0             ; set Bandwidth  
iwpriv ra0 set ATETXCNT=200          ; Tx frame count(decimal)  
iwpriv ra0 set ATE=TXFRAME           ; Start Tx Frame(inform BBP to change, modulation mode)  
iwpriv ra0 set ATE=TXCARR            ; Start Tx carrier, Measure carrier with instrument  
iwpriv ra0 set ATETXPOW0=05  
iwpriv ra0 set ATETXPOW1=05  
iwpriv ra0 set ATETXFREQOFFSET=19  
iwpriv ra0 set ATE=ATESTART
```

6.3.3 Check spectrum mask

```
iwpriv ra0 set ATE=ATESTART  
iwpriv ra0 set ATECHANNEL=1           ; set Channel  
iwpriv ra0 set ATETXMODE=1           ; set TX-Mode.  
iwpriv ra0 set ATETXMCS=7            ; set MCS type.  
iwpriv ra0 set ATETXBW=0             ; set Bandwidth  
iwpriv ra0 set ATETXCNT=200          ; Tx frame count(decimal)  
iwpriv ra0 set ATE=TXFRAME           ; Start Tx Frame(inform BBP to change, modulation mode)  
iwpriv ra0 set ATE=TXCONT            ; Start continuous TX, Measure spectrum mask with instrument  
iwpriv ra0 set ATETXPOW0=5  
iwpriv ra0 set ATETXPOW1=5  
iwpriv ra0 set ATE=ATESTART
```

6.3.4 Frequency offset tuning

```
iwpriv ra0 set ATE=ATESTART  
iwpriv ra0 set ATECHANNEL=1           ; set Channel  
iwpriv ra0 set ATETXMODE=1           ; set TX-Mode.  
iwpriv ra0 set ATETXMCS=7            ; set MCS type.
```

```
iwpriv ra0 set ATETXCNT=200 ; Tx frame count(decimal)
iwpriv ra0 set ATETXFREQOFFSET=0 ; Set frequency offset 0(decimal)
iwpriv ra0 set ATE=TXFRAME ; Start Tx Frame
iwpriv ra0 set ATE=TXCARR ; Start Tx carrier, Measure carrier frequency with instrument
iwpriv ra0 set ATETXFREQOFFSET=10 ; Dynamic turning frequency offset, 10(decimal)
iwpriv ra0 set ATETXFREQOFFSET=20 ; Dynamic turning frequency offset, 20(decimal)
iwpriv ra0 set ATE=ATESTART ; Stop, Store the tuning result to EEPROM
```

6.3.5 Rx

```
iwpriv ra0 set ATE=ATESTART
iwpriv ra0 set ATECHANNEL=1 ; set Channel
iwpriv ra0 set ResetCounter=0 ; Reset statistic counter
iwpriv ra0 set ATETXMODE=1 ; set TX-Mode.
iwpriv ra0 set ATETXMCS=7 ; set MCS type.
iwpriv ra0 set ATETXBW=0 ; set Bandwidth
iwpriv ra0 set ATE=RXFRAME ; Start Rx,
iwpriv ra0 set ATERXFER=1 ; show RxCnt and RSSI/per-antenna, Transmit test packets
iwpriv ra0 set ATE=ATESTART ; Stop
iwpriv ra0 stat ; get statistics counter
iwpriv ra0 set ATERXFER=1
iwpriv ra0 set ATERXANT=1

iwpriv ra0 set ATE=ATESTART
iwpriv ra0 set ATERXANT=0
iwpriv ra0 set ATE=RXFRAME
```

6.3.6 Show all ate parameters

```
iwpriv ra0 set ATESHOW=1
```

```
Mode=4
TxPower0=0
TxPower1=0
TxAntennaSel=0
RxAntennaSel=0
BBPCurrentBW=0
GI=0
MCS=7
```

TxMode=1
Addr1=00:11:22:aa:bb:cc
Addr2=00:11:22:aa:bb:cc
Addr3=00:11:22:aa:bb:cc
Channel=1
TxLength=1024
TxCount=40000
TxRate=11
RFFreqOffset=0

6.3.7 Online help

iwpriv ra0 set ATEHELP=1

ATE=ATESTART, ATESTOP, TXCONT, TXCARR, TXFRAME, RXFRAME

ATEDA

ATESA

ATEBSSID

ATECHANNEL, range:0~14

ATETXPOW0, set power level of antenna 1.

ATETXPOW1, set power level of antenna 2.

ATETXANT, set TX antenna. 0:all, 1:antenna one, 2:antenna two.

ATERXANT, set RX antenna.0:all, 1:antenna one, 2:antenna tow, 3:antenna three.

ATETFREQOFFSET, set frequency offset, range 0~63

ATETXBW, set BandWidth, 0:20MHz, 1:40MHz.

ATETXLEN, set Frame length, range 24~1500

ATETXCNT, set how many frame going to transmit.

ATETXRATE, set rate, reference to rate table.

ATETXMCS, set MCS, reference to rate table.

ATETXMODE, set Mode 0:CCK, 1:OFDM, 2:HT-Mix, 3:GreenField, reference to rate table.

ATETXGI, set GI interval, 0:Long, 1:Short

ATERXFER, 0:disable Rx Frame error rate. 1:enable Rx Frame error rate.

ATESHOW, display all parameters of ATE.

ATEHELP, online help.

6.3.8 Display Rx Packet Count and RSSI

iwpriv ra0 set ATE=RXFRAME → Start Rx

iwpriv ra0 set ATERXANT=0 → Enable All Three Rx Antennas

iwpriv ra0 set ATERXFER=1 → Enable Rx Frame Error Rate: RxCnt/RxTotal

MlmePeriodicExec: Rx packet cnt = 2/4

MlmePeriodicExec: Rx AvgRssi0=-88, AvgRssi1=-80, AvgRssi2=-91

MlmePeriodicExec: Rx packet cnt = 2/6

MlmePeriodicExec: Rx AvgRssi0=-86, AvgRssi1=-77, AvgRssi2=-89...

...

iwpriv ra0 set ATE=RXFRAME → Start Rx

iwpriv ra0 set ATERXANT=1 → Enable Three Rx Antenna-1

iwpriv ra0 set ATERXFER=1 → Enable Rx Frame Error Rate: RxCnt/RxTotal

MlmePeriodicExec: Rx packet cnt = 0/7

MlmePeriodicExec: Rx AvgRssi=-87

MlmePeriodicExec: Rx packet cnt = 7/14

MlmePeriodicExec: Rx AvgRssi=-90

...

...

6.4 iwpriv ra0 bbp [parameters]=[Value]

Read/Write BBP register by ID number.

6.4.1 BBPID

Read BBP register, BBPID only, no "=" symbol.

BBPID:

0 ~ xx ; decimal, 8-bit

6.4.2 BBPID=Value

Write BBP register.

BBPID:

0 ~ xx ; decimal, 8-bit

Value:

00 ~ FF ; hexadecimal, 8-bit

6.5 iwpriv ra0 mac [parameters]=[val]

Read/Write MAC register by offset.

6.5.1 MAC_OFFSET

Read MAC register, MAC_OFFSET only, no "=" symbol.

MAC_OFFSET:

0000 ~ FFFF ; hexadecimal, 16-bit

6.5.2 MAC_OFFSET=Value

Write MAC register.

MAC_OFFSET:

0000 ~ FFFF ; hexadecimal, 16-bit

Value:

0000 ~ FFFF ; hexadecimal, 32-bit

6.6 iwpriv ra0 e2p [parameters]=[val]

Read/Write EEPROM content by address.

6.6.1 EEP_ADDR

Read EEPROM content, EEP_ADDR only, no "=" symbol.

EEP_ADDR:

00 ~ FF ; hexadecimal, 16-bit alignment (0, 2, 4, 6, 8, A, C, ...)

6.6.2 EEP_ADDR=Value

Write EEPROM content.

EEP_ADDR:

00 ~ FF ; hexadecimal, 16-bit alignment (0, 2, 4, 6, 8, A, C, ...)

Value:

0000 ~ FFFF ; hexadecimal, 16-bit

6.7 Example

6.7.1 Hardware access

```
iwpriv ra0 bbp 0          # read BBP register 0
iwpriv ra0 bbp 0=12       # write BBP register 0 as 0x12
iwpriv ra0 mac 0          # read MAC register 0
iwpriv ra0 mac 0=1234abcd # write MAC register 0 as 0x1234abcd
iwpriv ra0 e2p 0          # read E2PROM 0
iwpriv ra0 e2p c=12ab     # write E2PROM 0xc as 0x12ab
```

6.7.2 Statistic counter operation

```
iwpriv ra0 stat          # read statistic counter
iwpriv ra0 set ResetCounter=0 # reset statistic counter
```

6.7.3 Suggestion:

1. To turn on ATE functionality, you have to add compile flag "RALINK_ATE" to Makefile
2. Before doing ATE testing, please stop AP function
3. If you want to test another ATE action, prefer to stop AP & ATE function
4. All ATE function settings will lose efficacy after reboot.
5. Before hardware register access, please reference hardware spec.

Note.

In ATE mode, the channel must set via "ATECHANNEL"

6.8 ated

ated - user space ATE agent program for RT2860 Linux driver, Ralink Tech. Corp.

RT2860 ATE daemon - ated, which comes with RT2860 Linux driver.

Information about the relationship between the Linux driver, Windows QA GUI and RT2860 ATE daemon is shown here.

In addition, this will teach you how to use this ATE daemon.

6.8.1 Introduction

The ated is an optional user space component for RT2860 Linux driver.

When ated starts, AP enters ATE mode (i.e. ATESTART) immediately.

It behaves as a proxy between Windows QA GUI and RT2860 Linux driver when ATE process proceeds.

And ated will be killed automatically when Windows QA GUI is closed.

You can kill it manually, too (for example, type '\$killall ated').

RT2860 Linux driver will leave ATE mode either ated is killed or QA GUI is closed.

6.8.2 Environment setup

1. Connect the platform you want to test directly with a Windows host by ether network line.
2. In the Windows host, run WinPcap_4_0.exe for the QA GUI.

6.8.3 How to use ated for ATE purpose

1. First you should set both "HAS_ATE=y" and "HAS_2860_QA=y" in the file `~/Module/os/linux/config.mk` and compile the driver.
2. Modify the Makefile according to our target "PLATFORM".
3. Change the path of "CROSS_COMPILE" if needed.
4. Remove "-I\$(INCLUDE)" about in line 39 if your target "PLATFORM" is not "PC".
5. Then type 'make' command to compile the source code of the daemon.
6. After the driver interface "ra0" has started up, attach both of "ra0" and the Ethernet interface to the bridge interface "br0".
7. Manually start ated, type '\$ated -bbrX -iraX'. (For further usage of options, type \$ated -h)
8. In the Windows host, run RT2860QA_ATE.exe.
9. Select the wired network adapter.
10. Choose 2860_ATE, and then press OK.

Note:

The names of WLAN interface (default is "ra0") and Bridge interface (default is "br0") must be specified manually (for example: '\$ated -b br1 -ira2') if your WLAN interface or Bridge interface is not "ra0" or "br0" respectively!

7 IOCTL

7.1 Parameters for iwconfig

Access	Description	ID	Parameters
Get	BSSID, MAC Address	SIOCGIFHWADDR	wrq->u.name, (length = 6)
	WLAN Name	SIOCGIWNAME	wrq->u.name = "RT2860 Wireless", length = strlen(wrq->u.name)
	SSID	SIOCGIWESSID	erq = &wrq->u.essid; if(OPSTATUS_TEST_FLAG(pAd,fop_STATUS_MEDIA_STATE_CONNECTED)) { erq->flags=1; erq->length = pAd-> CommonCfg.SsidLen; Status = copy_to_user(erq->pointer, pAd-> CommonCfg.Ssid, erq->length); } else { erq->flags=0; erq->length=0; }
	Channel / Frequency (Hz)	SIOCGIWFREQ	wrq->u.freq.m = pAd-> CommonCfg.Channel; wrq->u.freq.e = 0; wrq->u.freq.i = 0;
	Node name/nickname	SIOCGIWNICKN	erq = &wrq->u.nickname; erq->length = strlen(pAd-> CommonCfg.Nickname); Status = copy_to_user(erq->pointer, pAd->nickname, erq->length);
	Bit Rate (bps)	SIOCGIWRATE	wrq->u.bitrate.value = RateIdTo500Kbps[pAd-> CommonCfg.TxRate] * 500000; wrq->u.bitrate.disabled = 0;
	RTS/CTS threshold	SIOCGIWRTS	wrq->u.rts.value = (INT) pAd-> CommonCfg.RtsThreshold; wrq->u.rts.disabled = (wrq->u.rts.value == MAX_RTS_THRESHOLD); wrq->u.rts.fixed = 1;
	Fragmentation threshold (bytes)	SIOCGIWFRAG	wrq->u.frag.value = (INT) pAd-> CommonCfg.FragmentThreshold; wrq->u.frag.disabled = (wrq->u.frag.value >= MAX_FRAG_THRESHOLD); wrq->u.frag.fixed = 1;
	Encoding token & mode	SIOCGIWENCODE	index = (wrq->u.encoding.flags & IW_ENCODE_INDEX) - 1; if ((index < 0) (index >= NR_WEP_KEYS)) index = pAd-> CommonCfg.DefaultKeyId; // Default key for tx (shared key) if (pAd-> CommonCfg.AuthMode == Ndis802_11AuthModeOpen) wrq->u.encoding.flags = IW_ENCODE_OPEN; else if (pAd-> CommonCfg.AuthMode == Ndis802_11AuthModeShared) wrq->u.encoding.flags = IW_ENCODE_RESTRICTED; if (pAd-> CommonCfg.WepStatus == Ndis802_11WEPDisabled) wrq->u.encoding.flags = IW_ENCODE_DISABLED; else { if(wrq->u.encoding.pointer) { wrq->u.encoding.length = pAd->SharedKey[index].KeyLen; Status = copy_to_user(wrq->u.encoding.pointer, pAd->SharedKey[index].Key, pAd->SharedKey[index].KeyLen); wrq->u.encoding.flags = (index + 1); } }
	AP's MAC address	SIOCGIWAP	wrq->u.ap_addr.sa_family = ARPHRD_ETHER; memcpy(wrq->u.ap_addr.sa_data, &pAd-> CommonCfg.Bssid, ETH_ALEN);
	Operation Mode	SIOCGIWMODE	if (ADHOC_ON(pAd)) {

			<pre> BssType = Ndis802_11IBSS; wrq->u.mode = IW_MODE_ADHOC; } else if (INFRA_ON(pAd)) { BssType = Ndis802_11Infrastructure; wrq->u.mode = IW_MODE_INFRA; } else { BssType = Ndis802_11AutoUnknown; wrq->u.mode = IW_MODE_AUTO; } </pre>
Access	Description	ID	Parameters
Set	SSID	SIOCSIWESSID	<pre> erq = &wrq->u.essid; memset(&Ssid, 0x00, sizeof(NDIS_802_11_SSID)); if (erq->flags) { if (erq->length > IW_ESSID_MAX_SIZE) { Status = -E2BIG; break; } Status = copy_from_user(Ssid.Ssid, erq->pointer, (erq->length - 1)); Ssid.SsidLength = erq->length - 1; //minus null character. } else { Ssid.SsidLength = 0; // ANY ssid memcpy(pSsid->Ssid, "", 0); pAd->CommonCfg.BssType = BSS_INFRA; pAd->CommonCfg.AuthMode = Ndis802_11AuthModeOpen; pAd->CommonCfg.WepStatus = Ndis802_11EncryptionDisabled; } pSsid = &Ssid; if (pAd->Mlme.CntlMachine.CurrState != CNTL_IDLE) { MlmeRestartStateMachine(pAd); } pAd->MlmeAux.CurrReqIsFromNdis = FALSE; MlmeEnqueue(pAd, MLME_CNTL_STATE_MACHINE, OID_802_11_SSID, sizeof(NDIS_802_11_SSID), (VOID *)pSsid); Status = NDIS_STATUS_SUCCESS; StateMachineTouched = TRUE; </pre>
	Channel / Frequency (Hz)	SIOCSIWFREQ	<pre> frq = &wrq->u.freq; if((frq->e == 0) && (frq->m <= 1000)) chan = frq->m; // Setting by channel number else MAP_KHZ_TO_CHANNEL_ID((frq->m /100) , chan); pAd->CommonCfg.Channel = chan; </pre>
	node name/nickname	SIOCSIWNICKN	<pre> erq = &wrq->u.data; if (erq->flags) { if (erq->length <= IW_ESSID_MAX_SIZE) Status = copy_from_user(pAd->nickn, erq->pointer, erq->length); else Status = -E2BIG; } </pre>
	Bit Rate (bps)	SIOCSIWRATE	RTMPSetDesiredRates(pAd, wrq->u.bitrate.value);
	RTS/CTS threshold	SIOCSIWRTS	<pre> RtsThresh = wrq->u.rts.value; if (wrq->u.rts.disabled) </pre>

		<pre> RtsThresh = MAX_RTS_THRESHOLD; if((RtsThresh > 0) && (RtsThresh <= MAX_RTS_THRESHOLD)) pAd->CommonCfg.RtsThreshold = (USHORT)RtsThresh; else if (RtsThresh == 0) pAd->CommonCfg.RtsThreshold = MAX_RTS_THRESHOLD; </pre>
Fragmentation threshold (bytes)	SIOCSIWFRAG	<pre> FragThresh = wrq->u.frag.value; if (wrq->u.rts.disabled) FragThresh = MAX_FRAG_THRESHOLD; if ((FragThresh >= MIN_FRAG_THRESHOLD) && (FragThresh <= MAX_FRAG_THRESHOLD)) pAd->CommonCfg.FragmentThreshold = (USHORT)FragThresh; else if (FragThresh == 0) pAd->CommonCfg.FragmentThreshold = MAX_FRAG_THRESHOLD; if (pAd->CommonCfg.FragmentThreshold == MAX_FRAG_THRESHOLD) pAd->CommonCfg.bFragmentZeroDisable = TRUE; else pAd->CommonCfg.bFragmentZeroDisable = FALSE; </pre>
Encoding token & mode	SIOCSIWENCODE	<pre> index = (wrq->u.encoding.flags & IW_ENCODE_INDEX) - 1; if((index < 0) (index >= NR_WEP_KEYS)) index = pAd->CommonCfg.DefaultKeyId; // Default key for tx (shared key) if(wrq->u.encoding.pointer) { len = wrq->u.encoding.length; if(len > WEP_LARGE_KEY_LEN) len = WEP_LARGE_KEY_LEN; memset(pAd->SharedKey[index].Key, 0x00, MAX_LEN_OF_KEY); Status = copy_from_user(pAd->SharedKey[index].Key, wrq->u.encoding.pointer, len); pAd->SharedKey[index].KeyLen = len <= WEP_SMALL_KEY_LEN ? WEP_SMALL_KEY_LEN : WEP_LARGE_KEY_LEN; } pAd->CommonCfg.DefaultKeyId = (UCHAR) index; if (wrq->u.encoding.flags & IW_ENCODE_DISABLED) pAd->CommonCfg.WepStatus = Ndis802_11WEPDisabled; else pAd->CommonCfg.WepStatus = Ndis802_11WEPEnabled; if (wrq->u.encoding.flags & IW_ENCODE_RESTRICTED) pAd->CommonCfg.AuthMode = Ndis802_11AuthModeShared; else pAd->CommonCfg.AuthMode = Ndis802_11AuthModeOpen; if(pAd->CommonCfg.WepStatus == Ndis802_11WEPDisabled) pAd->CommonCfg.AuthMode = Ndis802_11AuthModeOpen; </pre>
AP's MAC address	SIOCSIWAP	<pre> Status = copy_from_user(&Bssid, &wrq->u.ap_addr.sa_data, sizeof(NDIS_802_11_MAC_ADDRESS)); if (pAd->Mlme.CntlMachine.CurrState != CNTL_IDLE) { MlmeRestartStateMachine(pAd); } pAd->MlmeAux.CurrReqIsFromNdis = FALSE; MlmeEnqueue(pAd, MLME_CNTL_STATE_MACHINE, OID_802_11_BSSID, sizeof(NDIS_802_11_MAC_ADDRESS), (VOID *)&Bssid); Status = NDIS_STATUS_SUCCESS; StateMachineTouched = TRUE; </pre>

	Operation Mode	SIOCSIWMODE	<pre> if(wrq->u.mode == IW_MODE_ADHOC) { if (pAd->CommonCfg.BssType != BSS_ADHOC) { pAd->bConfigChanged = TRUE; } pAd->CommonCfg.BssType = BSS_ADHOC; } else if (wrq->u.mode == IW_MODE_INFRA) { if (pAd->CommonCfg.BssType != BSS_INFRA) { pAd->bConfigChanged = TRUE; } pAd->CommonCfg.BssType = BSS_INFRA; } else { Status = -EINVAL; } pAd->CommonCfg.WpaState = SS_NOTUSE; </pre>
--	----------------	-------------	---

7.2 Parameters for iwpriv

Please refer section 3 to have iwpriv parameters and values.

Parameters:

```

int    socket_id;
char   name[25];           // interface name
char   data[255];         // command string
struct iwreq wrq;

```

Default setting:

```

wrq.ifr_name = name = "ra0";           // interface name
wrq.u.data.pointer = data;             // data buffer of command string
wrq.u.data.length = strlen(data);      // length of command string
wrq.u.data.flags = 0;

```

Data Structure:

Please refer to `./include/oid.h` for update and detail definition.

7.2.1 Set Data, Parameters is Same as iwpriv

Command and IOCTL Function		
Set Data		
Function Type	Command	IOCTL

RTPRIV_IOCTL_SET	iwpriv ra0 set SSID=RT2860AP	<pre> sprintf(name, "ra0"); strcpy(data, "SSID=RT2860AP"); strcpy(wrq.ifr_name, name); wrq.u.data.length = strlen(data); wrq.u.data.pointer = data; wrq.u.data.flags = 0; ioctl(socket_id, RTPRIV_IOCTL_SET, &wrq); </pre>
------------------	------------------------------	--

7.2.2 Get Data, Parameters is the same as iwpriv

Command and IOCTL Function		
Get Data		
Function Type	Command	IOCTL
RTPRIV_IOCTL_STATISTICS	lwpriv ra0 stat	<pre> sprintf(name, "ra0"); strcpy(data, "stat"); strcpy(wrq.ifr_name, name); wrq.u.data.length = strlen(data); wrq.u.data.pointer = data; wrq.u.data.flags = 0; ioctl(socket_id, RTPRIV_IOCTL_STATISTICS, &wrq); </pre>
RTPRIV_IOCTL_GSITESURVEY	lwpriv ra0 get_site_survey	<pre> sprintf(name, "ra0"); strcpy(data, "get_site_survey"); strcpy(wrq.ifr_name, name); wrq.u.data.length = strlen(data); wrq.u.data.pointer = data; wrq.u.data.flags = 0; ioctl(socket_id, RTPRIV_IOCTL_GSITESURVEY, &wrq); </pre>

7.2.3 Set Raw Data with Flags

IOCTL Function	
Set Raw Data by I/O Control Interface with Flags	
Function Type	IOCTL
RT_OID_802_11_COUNTRY_REGION	<pre> sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(UCHAR)); wrq.u.data.length = sizeof(UCHAR); wrq.u.data.pointer = data; wrq.u.data.flags = RT_OID_802_11_COUNTRY_REGION; ioctl(socket_id, RT_PRIV_IOCTL, &wrq); </pre>
OID_802_11_BSSID_LIST_SCAN	<pre> sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); wrq.u.data.length = 0; wrq.u.data.pointer = data; wrq.u.data.flags = OID_802_11_BSSID_LIST_SCAN; ioctl(socket_id, RT_PRIV_IOCTL, &wrq); </pre>
OID_802_11_SSID	<pre> sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(NDIS_802_11_SSID)); wrq.u.data.length = sizeof(NDIS_802_11_SSID); wrq.u.data.pointer = data; wrq.u.data.flags = OID_802_11_SSID; ioctl(socket_id, RT_PRIV_IOCTL, &wrq); </pre>
OID_802_11_BSSID	<pre> sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(NDIS_802_11_MAC_ADDRESS)); wrq.u.data.length = sizeof(NDIS_802_11_MAC_ADDRESS); wrq.u.data.pointer = data; wrq.u.data.flags = OID_802_11_BSSID; </pre>

	ioctl(socket_id, RT_PRIV_IOCTL, &wrq);
RT_OID_802_11_RADIO	<pre> sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(BOOLEAN)); wrq.u.data.length = sizeof(BOOLEAN); wrq.u.data.pointer = data; wrq.u.data.flags = RT_OID_802_11_RADIO; ioctl(socket_id, RT_PRIV_IOCTL, &wrq); </pre>
RT_OID_802_11_PHY_MODE	<pre> sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(RT_802_11_PHY_MODE)); wrq.u.data.length = sizeof(RT_802_11_PHY_MODE); wrq.u.data.pointer = data; wrq.u.data.flags = RT_OID_802_11_PHY_MODE; ioctl(socket_id, RT_PRIV_IOCTL, &wrq); </pre>
RT_OID_802_11_STA_CONFIG	<pre> sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(RT_802_11_STA_CONFIG)); wrq.u.data.length = sizeof(RT_802_11_STA_CONFIG); wrq.u.data.pointer = data; wrq.u.data.flags = RT_OID_802_11_STA_CONFIG; ioctl(socket_id, RT_PRIV_IOCTL, &wrq); </pre>
OID_802_11_DESIRED_RATES	<pre> sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(NDIS_802_11_RATES)); wrq.u.data.length = sizeof(NDIS_802_11_RATES); wrq.u.data.pointer = data; wrq.u.data.flags = OID_802_11_DESIRED_RATES; ioctl(socket_id, RT_PRIV_IOCTL, &wrq); </pre>
RT_OID_802_11_PREAMBLE	<pre> sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(RT_802_11_PREAMBLE)); wrq.u.data.length = sizeof(RT_802_11_PREAMBLE); wrq.u.data.pointer = data; wrq.u.data.flags = RT_OID_802_11_PREAMBLE; ioctl(socket_id, RT_PRIV_IOCTL, &wrq); </pre>
OID_802_11_WEP_STATUS	<pre> printf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(NDIS_802_11_WEP_STATUS)); wrq.u.data.length = sizeof(NDIS_802_11_WEP_STATUS); wrq.u.data.pointer = data; wrq.u.data.flags = OID_802_11_WEP_STATUS; ioctl(socket_id, RT_PRIV_IOCTL, &wrq); </pre>
OID_802_11_AUTHENTICATION_MODE	<pre> printf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(NDIS_802_11_AUTHENTICATION_MODE)); wrq.u.data.length = sizeof(NDIS_802_11_AUTHENTICATION_MODE); wrq.u.data.pointer = data; wrq.u.data.flags = OID_802_11_AUTHENTICATION_MODE; ioctl(socket_id, RT_PRIV_IOCTL, &wrq); </pre>
OID_802_11_INFRASTRUCTURE_MODE	<pre> printf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(NDIS_802_11_NETWORK_INFRASTRUCTURE)); wrq.u.data.length = sizeof(NDIS_802_11_NETWORK_INFRASTRUCTURE); wrq.u.data.pointer = data; wrq.u.data.flags = OID_802_11_INFRASTRUCTURE_MODE; ioctl(socket_id, RT_PRIV_IOCTL, &wrq); </pre>
OID_802_11_REMOVE_WEP	<pre> printf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(NDIS_802_11_KEY_INDEX)); wrq.u.data.length = sizeof(NDIS_802_11_KEY_INDEX); wrq.u.data.pointer = data; </pre>

	<pre>wrq.u.data.flags = OID_802_11_REMOVE_WEP; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);</pre>
RT_OID_802_11_RESET_COUNTERS	<pre>printf(name, "ra0"); strcpy(wrq.ifr_name, name); wrq.u.data.length = 0; wrq.u.data.pointer = data; wrq.u.data.flags = RT_OID_802_11_RESET_COUNTERS; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);</pre>
OID_802_11_RTS_THRESHOLD	<pre>printf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(NDIS_802_11_RTS_THRESHOLD)); wrq.u.data.length = sizeof(NDIS_802_11_RTS_THRESHOLD); wrq.u.data.pointer = data; wrq.u.data.flags = OID_802_11_RTS_THRESHOLD; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);</pre>
OID_802_11_FRAGMENTATION_THRESHOLD	<pre>printf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(NDIS_802_11_FRAGMENTATION_THRESHOLD)); wrq.u.data.length = sizeof(NDIS_802_11_FRAGMENTATION_THRESHOLD); wrq.u.data.pointer = data; wrq.u.data.flags = OID_802_11_FRAGMENTATION_THRESHOLD; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);</pre>
OID_802_11_POWER_MODE	<pre>printf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(NDIS_802_11_POWER_MODE)); wrq.u.data.length = sizeof(NDIS_802_11_POWER_MODE); wrq.u.data.pointer = data; wrq.u.data.flags = OID_802_11_POWER_MODE; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);</pre>
OID_802_11_TX_POWER_LEVEL	<pre>printf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(NDIS_802_11_TX_POWER_LEVEL)); wrq.u.data.length = sizeof(NDIS_802_11_TX_POWER_LEVEL); wrq.u.data.pointer = data; wrq.u.data.flags = OID_802_11_TX_POWER_LEVEL; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);</pre>
RT_OID_802_11_TX_POWER_LEVEL_1	<pre>printf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(ULONG)); wrq.u.data.length = sizeof(ULONG); wrq.u.data.pointer = data; wrq.u.data.flags = RT_OID_802_11_TX_POWER_LEVEL_1; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);</pre>
OID_802_11_NETWORK_TYPE_IN_USE	<pre>printf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(NDIS_802_11_NETWORK_TYPE)); wrq.u.data.length = / sizeof(NDIS_802_11_NETWORK_TYPE); wrq.u.data.pointer = data; wrq.u.data.flags = OID_802_11_NETWORK_TYPE_IN_USE; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);</pre>
OID_802_11_RX_ANTENNA_SELECTED	<pre>printf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(NDIS_802_11_ANTENNA)); wrq.u.data.length = sizeof(NDIS_802_11_ANTENNA); wrq.u.data.pointer = data; wrq.u.data.flags = OID_802_11_RX_ANTENNA_SELECTED; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);</pre>
OID_802_11_TX_ANTENNA_SELECTED	<pre>printf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(NDIS_802_11_ANTENNA)); wrq.u.data.length = sizeof(NDIS_802_11_ANTENNA);</pre>

	<pre>wrq.u.data.pointer = data; wrq.u.data.flags = OID_802_11_TX_ANTENNA_SELECTED; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);</pre>
RT_OID_802_11_ADD_WPA	<pre>printf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, 32); wrq.u.data.length = 32; wrq.u.data.pointer = data; wrq.u.data.flags = RT_OID_802_11_ADD_WPA; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);</pre>
OID_802_11_REMOVE_KEY	<pre>printf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(NDIS_802_11_REMOVE_KEY)); wrq.u.data.length = sizeof(NDIS_802_11_REMOVE_KEY); wrq.u.data.pointer = data; wrq.u.data.flags = OID_802_11_REMOVE_KEY; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);</pre>
OID_802_11_ADD_KEY	<pre>printf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, keylength); //5,10,13,26 wrq.u.data.length = keylength; wrq.u.data.pointer = data; wrq.u.data.flags = OID_802_11_ADD_KEY; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);</pre>
OID_802_11_SET_IEEE8021X	<pre>printf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(BOOLEAN)); wrq.u.data.length = sizeof(BOOLEAN); wrq.u.data.pointer = data; wrq.u.data.flags = OID_802_11_SET_IEEE8021X; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);</pre>
OID_802_11_SET_IEEE8021X_REQUIRE_KEY	<pre>printf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(BOOLEAN)); wrq.u.data.length = sizeof(BOOLEAN); wrq.u.data.pointer = data; wrq.u.data.flags = OID_802_11_SET_IEEE8021X_REQUIRE_KEY; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);</pre>
OID_802_11_ADD_WEP	<pre>printf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, keylength); //5,10,13,26 wrq.u.data.length = keylength; wrq.u.data.pointer = data; wrq.u.data.flags = RT_OID_802_11_RADIO; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);</pre>
OID_802_11_CONFIGURATION	<pre>printf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(NDIS_802_11_CONFIGURATION)); wrq.u.data.length = sizeof(NDIS_802_11_CONFIGURATION); wrq.u.data.pointer = data; wrq.u.data.flags = OID_802_11_CONFIGURATION; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);</pre>
OID_SET_COUNTERMEASURES	<pre>printf(name, "ra0"); strcpy(wrq.ifr_name, name); wrq.u.data.length = 0; wrq.u.data.pointer = data; wrq.u.data.flags = OID_SET_COUNTERMEASURES; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);</pre>
OID_802_11_DISASSOCIATE	<pre>printf(name, "ra0"); strcpy(wrq.ifr_name, name); wrq.u.data.length = 0; wrq.u.data.pointer = data; wrq.u.data.flags = OID_802_11_DISASSOCIATE;</pre>

	ioctl(socket_id, RT_PRIV_IOCTL, &wrq);
OID_802_11_PMKID	printf(name, "ra0"); strcpy(wrq.ifr_name, name); wrq.u.data.length = keylength; //follow your setting wrq.u.data.pointer = data; wrq.u.data.flags = OID_802_11_PMKID; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);
RT_OID_WPA_SUPPLICANT_SUPPORT	printf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(BOOLEAN)); wrq.u.data.length = sizeof(BOOLEAN); wrq.u.data.pointer = data; wrq.u.data.flags = RT_OID_WPA_SUPPLICANT_SUPPORT; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);
RT_OID_WPA_SUPPLICANT_SUPPORT	printf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(ULONG)); wrq.u.data.length = sizeof(ULONG); wrq.u.data.pointer = data; wrq.u.data.flags = RT_OID_WPA_SUPPLICANT_SUPPORT; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);
RT_SET_DEL_MAC_ENTRY	sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0xdd, 6); strcpy(wrq.ifr_name, name); wrq.u.data.length = 6; wrq.u.data.pointer = data; wrq.u.data.flags = RT_SET_DEL_MAC_ENTRY; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);
RT_OID_802_11_SET_HT_PHYMODE OID_GET_SET_TOGGLE	typedef struct { RT_802_11_PHY_MODE PhyMode; UCHAR TransmitNo; UCHAR HtMode; //HTMODE_GF or HTMODE_MM UCHAR ExtOffset; //extension channel above or below UCHAR MCS; UCHAR BW; UCHAR STBC; UCHAR SHORTGI; UCHAR rsv; } OID_SET_HT_PHYMODE ; RT_802_11_PHY_MODE tmp_ht_mode; sprintf(wrq.ifr_name, "ra0"); wrq.u.data.pointer = (caddr_t) &tmp_ht_mode; wrq.u.data.length = sizeof(RT_802_11_PHY_MODE); wrq.u.data.flags = RT_OID_802_11_SET_HT_PHYMODE OID_GET_SET_TOGGLE; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);

7.2.4 Get Raw Data with Flags

IOCTL Function	
Get Raw Data by I/O Control Interface with Flags	
Function Type	IOCTL
RT_OID_DEVICE_NAME	sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, 255); wrq.u.data.length = 255; wrq.u.data.pointer = data; wrq.u.data.flags = RT_OID_DEVICE_NAME;

	ioctl(socket_id, RT_PRIV_IOCTL, &wrq);
RT_OID_VERSION_INFO	sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(RT_VERSION_INFO)); wrq.u.data.length = sizeof(RT_VERSION_INFO); wrq.u.data.pointer = data; wrq.u.data.flags = RT_OID_VERSION_INFO; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);
OID_802_11_BSSID_LIST	sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, BssLen); wrq.u.data.length = BssLen; wrq.u.data.pointer = data; wrq.u.data.flags = OID_802_11_BSSID_LIST; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);
OID_802_3_CURRENT_ADDRESS	sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(CurrentAddress)); wrq.u.data.length = sizeof(CurrentAddress); wrq.u.data.pointer = data; wrq.u.data.flags = OID_802_3_CURRENT_ADDRESS; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);
OID_GEN_MEDIA_CONNECT_STATUS	sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(NDIS_MEDIA_STATE)); wrq.u.data.length = sizeof(NDIS_MEDIA_STATE); wrq.u.data.pointer = data; wrq.u.data.flags = OID_GEN_MEDIA_CONNECT_STATUS; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);
OID_802_11_BSSID	sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(NDIS_802_11_MAC_ADDRESS)); wrq.u.data.length = sizeof(NDIS_802_11_MAC_ADDRESS); wrq.u.data.pointer = data; wrq.u.data.flags = OID_802_11_BSSID; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);
OID_802_11_SSID	sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(NDIS_802_11_SSID)); wrq.u.data.length = sizeof(NDIS_802_11_SSID); wrq.u.data.pointer = data; wrq.u.data.flags = OID_802_11_SSID; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);
RT_OID_802_11_QUERY_LINK_STATUS	sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(RT_802_11_LINK_STATUS)); wrq.u.data.length = sizeof(RT_802_11_LINK_STATUS); wrq.u.data.pointer = data; wrq.u.data.flags = RT_OID_802_11_QUERY_LINK_STATUS; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);
OID_802_11_CONFIGURATION	sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(NDIS_802_11_CONFIGURATION)); wrq.u.data.length = sizeof(NDIS_802_11_CONFIGURATION); wrq.u.data.pointer = data; wrq.u.data.flags = OID_802_11_CONFIGURATION; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);
OID_802_11_RSSI_TRIGGER	sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(ulInfo)); wrq.u.data.length = sizeof(ulInfo); wrq.u.data.pointer = data; wrq.u.data.flags = OID_802_11_RSSI_TRIGGER;

	ioctl(socket_id, RT_PRIV_IOCTL, &wrq);
RT_OID_802_11_RSSI	<pre> sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(ullInfo)); wrq.u.data.length = sizeof(ullInfo); wrq.u.data.pointer = data; wrq.u.data.flags = RT_OID_802_11_RSSI; ioctl(socket_id, RT_PRIV_IOCTL, &wrq); </pre>
RT_OID_802_11_RSSI_1	<pre> sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(ullInfo)); wrq.u.data.length = sizeof(ullInfo); wrq.u.data.pointer = data; wrq.u.data.flags = RT_OID_802_11_RSSI_1; ioctl(socket_id, RT_PRIV_IOCTL, &wrq); </pre>
RT_OID_802_11_RSSI_2	<pre> sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(ullInfo)); wrq.u.data.length = sizeof(ullInfo); wrq.u.data.pointer = data; wrq.u.data.flags = RT_OID_802_11_RSSI_2; ioctl(socket_id, RT_PRIV_IOCTL, &wrq); </pre>
OID_802_11_STATISTICS	<pre> sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(NDIS_802_11_STATISTICS)); wrq.u.data.length = sizeof(NDIS_802_11_STATISTICS); wrq.u.data.pointer = data; wrq.u.data.flags = OID_802_11_STATISTICS; ioctl(socket_id, RT_PRIV_IOCTL, &wrq); </pre>
OID_GEN_RCV_OK	<pre> sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(ullInfo)); wrq.u.data.length = sizeof(ullInfo); wrq.u.data.pointer = data; wrq.u.data.flags = OID_GEN_RCV_OK; ioctl(socket_id, RT_PRIV_IOCTL, &wrq); </pre>
OID_GEN_RCV_NO_BUFFER	<pre> sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(ullInfo)); wrq.u.data.length = sizeof(ullInfo); wrq.u.data.pointer = data; wrq.u.data.flags = OID_GEN_RCV_NO_BUFFER; ioctl(socket_id, RT_PRIV_IOCTL, &wrq); </pre>
RT_OID_802_11_PHY_MODE	<pre> typedef enum RT_802_11_PHY_MODE { PHY_11BG_MIXED = 0, PHY_11B, PHY_11A, PHY_11ABG_MIXED, PHY_11G, PHY_11ABGN_MIXED, // both band 5 PHY_11N, // 6 PHY_11GN_MIXED, // 2.4G band 7 PHY_11AN_MIXED, // 5G band 8 PHY_11BGN_MIXED, // if check 802.11b. 9 PHY_11AGN_MIXED, // if check 802.11b. 10 } RT_802_11_PHY_MODE sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(ullInfo)); wrq.u.data.length = sizeof(ullInfo); wrq.u.data.pointer = data; wrq.u.data.flags = RT_OID_802_11_PHY_MODE; ioctl(socket_id, RT_PRIV_IOCTL, &wrq); </pre>

RT_OID_802_11_STA_CONFIG	<pre> sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(RT_802_11_STA_CONFIG)); wrq.u.data.length = sizeof(RT_802_11_STA_CONFIG); wrq.u.data.pointer = data; wrq.u.data.flags = RT_OID_802_11_STA_CONFIG; ioctl(socket_id, RT_PRIV_IOCTL, &wrq); </pre>
OID_802_11_RTS_THRESHOLD	<pre> sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(RtsThresh)); wrq.u.data.length = sizeof(RtsThresh); wrq.u.data.pointer = data; wrq.u.data.flags = OID_802_11_RTS_THRESHOLD; ioctl(socket_id, RT_PRIV_IOCTL, &wrq); </pre>
OID_802_11_FRAGMENTATION_THRESHOLD	<pre> sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(FragThresh)); wrq.u.data.length = sizeof(FragThresh); wrq.u.data.pointer = data; wrq.u.data.flags = OID_802_11_FRAGMENTATION_THRESHOLD; ioctl(socket_id, RT_PRIV_IOCTL, &wrq); </pre>
OID_802_11_POWER_MODE	<pre> sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(PowerMode)); wrq.u.data.length = sizeof(PowerMode); wrq.u.data.pointer = data; wrq.u.data.flags = OID_802_11_POWER_MODE; ioctl(socket_id, RT_PRIV_IOCTL, &wrq); </pre>
RT_OID_802_11_RADIO	<pre> sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(RadioState)); wrq.u.data.length = sizeof(RadioState); wrq.u.data.pointer = data; wrq.u.data.flags = RT_OID_802_11_RADIO; ioctl(socket_id, RT_PRIV_IOCTL, &wrq); </pre>
OID_802_11_INFRASTRUCTURE_MODE	<pre> sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(BssType)); wrq.u.data.length = sizeof(BssType); wrq.u.data.pointer = data; wrq.u.data.flags = OID_802_11_INFRASTRUCTURE_MODE; ioctl(socket_id, RT_PRIV_IOCTL, &wrq); </pre>
RT_OID_802_11_PREAMBLE	<pre> sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(PreamType)); wrq.u.data.length = sizeof(PreamType); wrq.u.data.pointer = data; wrq.u.data.flags = RT_OID_802_11_PREAMBLE; ioctl(socket_id, RT_PRIV_IOCTL, &wrq); </pre>
OID_802_11_AUTHENTICATION_MODE	<pre> sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(AuthMode)); wrq.u.data.length = sizeof(AuthMode); wrq.u.data.pointer = data; wrq.u.data.flags = OID_802_11_AUTHENTICATION_MODE; ioctl(socket_id, RT_PRIV_IOCTL, &wrq); </pre>
OID_802_11_WEP_STATUS	<pre> sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(WepStatus)); wrq.u.data.length = sizeof(WepStatus); wrq.u.data.pointer = data; wrq.u.data.flags = OID_802_11_WEP_STATUS; ioctl(socket_id, RT_PRIV_IOCTL, &wrq); </pre>

OID_802_11_TX_POWER_LEVEL	<pre>sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(ULONG)); wrq.u.data.length = sizeof(ULONG); wrq.u.data.pointer = data; wrq.u.data.flags = OID_802_11_TX_POWER_LEVEL; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);</pre>
OID_802_11_TX_POWER_LEVEL_1	<pre>sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(ULONG)); wrq.u.data.length = sizeof(ULONG); wrq.u.data.pointer = data; wrq.u.data.flags = OID_802_11_TX_POWER_LEVEL_1; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);</pre>
OID_802_11_NETWORK_TYPES_SUPPORTED	<pre>sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, 16); wrq.u.data.length = 16; wrq.u.data.pointer = data; wrq.u.data.flags = OID_802_11_NETWORK_TYPES_SUPPORTED; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);</pre>
OID_802_11_NETWORK_TYPE_IN_USE	<pre>sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(ULONG)); wrq.u.data.length = sizeof(ULONG); wrq.u.data.pointer = data; wrq.u.data.flags = OID_802_11_NETWORK_TYPE_IN_USE; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);</pre>
RT_OID_802_11_QUERY_EEPROM_VERSION	<pre>sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(ULONG)); wrq.u.data.length = sizeof(ULONG); wrq.u.data.pointer = data; wrq.u.data.flags = RT_OID_802_11_QUERY_EEPROM_VERSION; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);</pre>
RT_OID_802_11_QUERY_FIRMWARE_VERSION	<pre>sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(ULONG)); wrq.u.data.length = sizeof(ULONG); wrq.u.data.pointer = data; wrq.u.data.flags = RT_OID_802_11_QUERY_FIRMWARE_VERSION; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);</pre>
RT_OID_802_11_QUERY_NOISE_LEVEL	<pre>sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(UCHAR)); wrq.u.data.length = sizeof(UCHAR); wrq.u.data.pointer = data; wrq.u.data.flags = RT_OID_802_11_QUERY_NOISE_LEVEL; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);</pre>
RT_OID_802_11_EXTRA_INFO	<pre>sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(ULONG)); wrq.u.data.length = sizeof(ULONG); wrq.u.data.pointer = data; wrq.u.data.flags = RT_OID_802_11_EXTRA_INFO; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);</pre>
RT_OID_802_11_QUERY_PIDVID	<pre>sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(ULONG)); wrq.u.data.length = sizeof(ULONG); wrq.u.data.pointer = data; wrq.u.data.flags = RT_OID_802_11_QUERY_PIDVID; ioctl(socket_id, RT_PRIV_IOCTL, &wrq);</pre>

RT_OID_WE_VERSION_COMPILED	<pre> sprintf(name, "ra0"); strcpy(wrq.ifr_name, name); memset(data, 0, sizeof(UINT)); wrq.u.data.length = sizeof(UINT); wrq.u.data.pointer = data; wrq.u.data.flags = RT_OID_WE_VERSION_COMPILED; ioctl(socket_id, RT_PRIV_IOCTL, &wrq); </pre>
RT_OID_802_11_QUERY_LAST_TX_RATE	<pre> HTTRANSMIT_SETTING tmpHT; sprintf(wrq.ifr_name, "ra0"); wrq.u.data.pointer = (caddr_t) &tmpHT; wrq.u.data.flags = RT_OID_802_11_QUERY_LAST_TX_RATE; ioctl(socket_id, RT_PRIV_IOCTL, &wrq); </pre>
RT_OID_802_11_QUERY_LAST_RX_RATE	<pre> HTTRANSMIT_SETTING tmpHT; sprintf(wrq.ifr_name, "ra0"); wrq.u.data.pointer = (caddr_t) &tmpHT; wrq.u.data.flags = RT_OID_802_11_QUERY_LAST_RX_RATE; ioctl(socket_id, RT_PRIV_IOCTL, &wrq); </pre>
SHOW_IPV4_MAT_INFO	<pre> u_char buffer[IW_PRIV_SIZE_MASK]; sprintf(wrq.ifr_name, "ra0"); wrq.u.data.pointer = (caddr_t) buffer; wrq.u.data.flags = SHOW_IPV4_MAT_INFO; ioctl(socket_id, RTPRIV_IOCTL_SHOW, &wrq); </pre>
SHOW_IPV6_MAT_INFO	<pre> u_char buffer[IW_PRIV_SIZE_MASK]; sprintf(wrq.ifr_name, "ra0"); wrq.u.data.pointer = (caddr_t) buffer; wrq.u.data.flags = SHOW_IPV6_MAT_INFO; ioctl(socket_id, RTPRIV_IOCTL_SHOW, &wrq); </pre>
SHOW_ETH_CLONE_MAC	<pre> u_char buffer[IW_PRIV_SIZE_MASK]; sprintf(wrq.ifr_name, "ra0"); wrq.u.data.pointer = (caddr_t) buffer; wrq.u.data.flags = SHOW_ETH_CLONE_MAC; ioctl(socket_id, RTPRIV_IOCTL_SHOW, &wrq); </pre>
SHOW_CONN_STATUS	<pre> u_char buffer[IW_PRIV_SIZE_MASK]; sprintf(wrq.ifr_name, "ra0"); wrq.u.data.pointer = (caddr_t) buffer; wrq.u.data.flags = SHOW_CONN_STATUS; ioctl(socket_id, RTPRIV_IOCTL_SHOW, &wrq); </pre>

7.2.5 Set Raw Data with Flags

IOCTL Function	
Get Raw Data by I/O Control Interface with Flags	
Function Type	IOCTL
RT_OID_802_11_SET_HT_PHYMODE OID_GET_SET_TOGGLE	<pre> typedef struct { RT_802_11_PHY_MODE PhyMode; UCHAR TransmitNo; UCHAR HtMode; //HTMODE_GF or HTMODE_MM UCHAR ExtOffset; //extension channel above or below UCHAR MCS; UCHAR BW; UCHAR STBC; UCHAR SHORTGI; UCHAR rsv; } OID_SET_HT_PHYMODE ; RT_802_11_PHY_MODE tmp_ht_mode; </pre>

```
printf(wrq.ifr_name, "ra0");  
wrq.u.data.pointer = (caddr_t) & tmp_ht_mode;  
wrq.u.data.length = sizeof(RT_802_11_PHY_MODE);  
wrq.u.data.flags = RT_OID_802_11_SET_HT_PHYMODE |  
OID_GET_SET_TOGGLE;  
ioctl(socket_id, RT_PRIV_IOCTL, &wrq);
```

Ralink CONFIDENTIAL
Ralink Website document

**for stevej@cradlepoint.com
And Company Use Only**

8 IOCTL HOW TO

8.1 Get Data

8.1.1 GET IPv4 and MAC apping table:

Linux console command: **iwpriv ra0 ipv4_matinfo**

sample code =>

```
u_char buffer[IW_PRIV_SIZE_MASK];

sprintf(wrq.ifr_name, "ra0");

wrq.u.data.pointer = (caddr_t) buffer;

wrq.u.data.flags = SHOW_IPV4_MAT_INFO;

ioctl(socket_id, RTPRIV_IOCTL_SHOW, &wrq);
```

8.1.2 GET IPv6 and MAC mapping table:

Linux console command: **iwpriv ra0 ipv6_matinfo**

sample code =>

```
u_char buffer[IW_PRIV_SIZE_MASK];

sprintf(wrq.ifr_name, "ra0");

wrq.u.data.pointer = (caddr_t) buffer;

wrq.u.data.flags = SHOW_IPV6_MAT_INFO;

ioctl(socket_id, RTPRIV_IOCTL_SHOW, &wrq);
```

8.1.3 GET station connection status:

Linux console command: **iwpriv ra0 connStatus**

sample code =>

```
u_char buffer[IW_PRIV_SIZE_MASK];

sprintf(wrq.ifr_name, "ra0");
```



```
wrq.u.data.pointer = (caddr_t) buffer;  
  
wrq.u.data.flags = SHOW_CONN_STATUS;  
  
ioctl(socket_id, RTPRIV_IOCTL_SHOW, &wrq);
```

8.1.4 GET station statistics information:

Linux console command: iwpriv ra0 stat

sample code =>

```
u_char buffer[IW_PRIV_SIZE_MASK];  
  
sprintf(wrq.ifr_name, "ra0");  
  
wrq.u.data.pointer = (caddr_t) buffer;  
  
wrq.u.data.flags = 0;  
  
ioctl(socket_id, RTPRIV_IOCTL_STATISTICS, &wrq);
```

8.1.5 GET AP list table:

Linux console command: iwpriv ra0 get_site_survey

sample code =>

```
u_char buffer[4096];  
  
sprintf(wrq.ifr_name, "ra0");  
  
wrq.u.data.pointer = (caddr_t) buffer;  
  
wrq.u.data.flags = 0;  
  
ioctl(socket_id, RTPRIV_IOCTL_GSITESURVEY, &wrq);
```

8.1.6 GET scan table:

sample code =>

```
u_char buffer[4096];
```

```
sprintf(wrq.ifr_name, "ra0");

wrq.u.data.pointer = (caddr_t) buffer;

wrq.u.data.length = 4096;

wrq.u.data.flags = OID_802_11_BSSID_LIST;

ioctl(socket_id, RT_PRIV_IOCTL, &wrq);

PNDIS_802_11_BSSID_LIST_EX pBssidList = (PNDIS_802_11_BSSID_LIST_EX) buffer ;
```

8.1.7 GET station's MAC:

sample code =>

```
u_char buffer[6];

sprintf(wrq.ifr_name, "ra0");

wrq.u.data.pointer = (caddr_t) buffer;

wrq.u.data.flags = OID_802_3_CURRENT_ADDRESS;

ioctl(socket_id, RT_PRIV_IOCTL, &wrq);
```

8.1.8 GET station connection status:

Sample code =>

```
#define NdisMediaStateConnected      1

#define NdisMediaStateDisconnected  0

NDIS_MEDIA_STATE MediaState;

sprintf(wrq.ifr_name, "ra0");

wrq.u.data.pointer = (caddr_t) & MediaState;

wrq.u.data.flags = OID_GEN_MEDIA_CONNECT_STATUS;

ioctl(socket_id, RT_PRIV_IOCTL, &wrq);
```

8.1.9 GET AP's BSSID

Sample code =>

```
char BSSID[6];

sprintf(wrq.ifr_name, "ra0");

wrq.u.data.pointer = (caddr_t) BSSID;

wrq.u.data.flags = OID_802_11_BSSID;

ioctl(socket_id, RT_PRIV_IOCTL, &wrq);
```

8.1.10 GET SSID

Sample code =>

```
NDIS_802_11_SSID SSID;

sprintf(wrq.ifr_name, "ra0");

wrq.u.data.pointer = (caddr_t) &SSID;

wrq.u.data.flags = OID_802_11_SSID;

ioctl(socket_id, RT_PRIV_IOCTL, &wrq);
```

8.1.11 GET station's last TX related information:

Sample code =>

```
HTTRANSMIT_SETTING tmpHT;

sprintf(wrq.ifr_name, "ra0");

wrq.u.data.pointer = (caddr_t) &tmpHT;

wrq.u.data.flags = RT_OID_802_11_QUERY_LAST_TX_RATE;

ioctl(socket_id, RT_PRIV_IOCTL, &wrq);
```

8.1.12 GET station's last RX related information:

Sample code =>

```
HTTRANSMIT_SETTING tmpHT;
```

```
printf(wrq.ifr_name, "ra0");

wrq.u.data.pointer = (caddr_t) & tmpHT;

wrq.u.data.flags = RT_OID_802_11_QUERY_LAST_RX_RATE;

ioctl(socket_id, RT_PRIV_IOCTL, &wrq);
```

8.1.13 GET station's wireless mode:

Sample code =>

```
typedef enum _RT_802_11_PHY_MODE {

    PHY_11BG_MIXED = 0,

    PHY_11B,

    PHY_11A,

    PHY_11ABG_MIXED,

    PHY_11G,

    PHY_11ABGN_MIXED,           // both band           5

    PHY_11N,                   //                  6

    PHY_11GN_MIXED,           // 2.4G band       7

    PHY_11AN_MIXED,           // 5G band         8

    PHY_11BGN_MIXED,          // if check 802.11b. 9

    PHY_11AGN_MIXED,          // if check 802.11b. 10

} RT_802_11_PHY_MODE
```

```
unsigned long tmp_mode;

printf(wrq.ifr_name, "ra0");

wrq.u.data.pointer = (caddr_t) & tmp_mode;

wrq.u.data.flags = RT_OID_802_11_PHY_MODE;
```

```
ioctl(socket_id, RT_PRIV_IOCTL, &wrq);
```

8.1.14 GET Bss type:

Sample code =>

```
typedef enum _NDIS_802_11_NETWORK_INFRASTRUCTURE
{
    Ndis802_11IBSS,

    Ndis802_11Infrastructure,

    Ndis802_11AutoUnknown,

    Ndis802_11Monitor,

    Ndis802_11InfrastructureMax // Not a real value, defined as upper bound
} NDIS_802_11_NETWORK_INFRASTRUCTURE

NDIS_802_11_NETWORK_INFRASTRUCTURE BssType;

sprintf(wrq.ifr_name, "ra0");

wrq.u.data.pointer = (caddr_t) &BssType;

wrq.u.data.flags = OID_802_11_INFRASTRUCTURE_MODE;

ioctl(socket_id, RT_PRIV_IOCTL, &wrq);
```

8.1.15 GET Authentication Mode:

Sample code =>

```
typedef enum _NDIS_802_11_AUTHENTICATION_MODE
{
    Ndis802_11AuthModeOpen,

    Ndis802_11AuthModeShared,

    Ndis802_11AuthModeAutoSwitch,
```

```

Ndis802_11AuthModeWPA,

Ndis802_11AuthModeWPAPSK,

Ndis802_11AuthModeWPANone,

Ndis802_11AuthModeWPA2,

Ndis802_11AuthModeWPA2PSK,

Ndis802_11AuthModeWPA1WPA2,

Ndis802_11AuthModeWPA1PSKWPA2PSK,

Ndis802_11AuthModeMax      // Not a real mode, defined as upper bound

} NDIS_802_11_AUTHENTICATION_MODE


NDIS_802_11_AUTHENTICATION_MODE   AuthMode;

sprintf(wrq.ifr_name, "ra0");

wrq.u.data.pointer = (caddr_t) & AuthMode;

wrq.u.data.flags = OID_802_11_AUTHENTICATION_MODE;

ioctl(socket_id, RT_PRIV_IOCTL, &wrq);

```

8.1.16 GET Encryption Type:

Sample code =>

```

typedef enum _NDIS_802_11_WEP_STATUS
{

    Ndis802_11WEPEnabled,

    Ndis802_11Encryption1Enabled = Ndis802_11WEPEnabled,

    Ndis802_11WEPDisabled,

    Ndis802_11EncryptionDisabled = Ndis802_11WEPDisabled,

    Ndis802_11WEPKeyAbsent,

```

```
Ndis802_11Encryption1KeyAbsent = Ndis802_11WEPKeyAbsent,  
  
Ndis802_11WEPNotSupported,  
  
Ndis802_11EncryptionNotSupported = Ndis802_11WEPNotSupported,  
  
Ndis802_11Encryption2Enabled,  
  
Ndis802_11Encryption2KeyAbsent,  
  
Ndis802_11Encryption3Enabled,  
  
Ndis802_11Encryption3KeyAbsent,  
  
Ndis802_11Encryption4Enabled,    // TKIP or AES mix  
  
Ndis802_11Encryption4KeyAbsent,  
  
} NDIS_802_11_WEP_STATUS, *PNDIS_802_11_WEP_STATUS,  
  
NDIS_802_11_WEP_STATUS    WepStatus;  
  
sprintf(wrq.ifr_name, "ra0");  
  
wrq.u.data.pointer = (caddr_t) & WepStatus;  
  
wrq.u.data.flags = OID_802_11_WEP_STATUS;  
  
ioctl(socket_id, RT_PRIV_IOCTL, &wrq);
```

8.1.17 GET RSSI 0 (unit: db)

Sample code =>

```
long rssi_0  
  
sprintf(wrq.ifr_name, "ra0");  
  
wrq.u.data.pointer = (caddr_t) & rssi_0;  
  
wrq.u.data.flags = RT_OID_802_11_RSSI;  
  
ioctl(socket_id, RT_PRIV_IOCTL, &wrq);
```

8.1.18 GET RSSI 1 (unit: db)

Sample code =>

```
long rssi_1

sprintf(wrq.ifr_name, "ra0");

wrq.u.data.pointer = (caddr_t) &rssi_1;

wrq.u.data.flags = RT_OID_802_11_RSSI_1;

ioctl(socket_id, RT_PRIV_IOCTL, &wrq);
```

8.1.19 GET RSSI 2 (unit: db)

Sample code =>

```
long rssi_2

sprintf(wrq.ifr_name, "ra0");

wrq.u.data.pointer = (caddr_t) &rssi_2;

wrq.u.data.flags = RT_OID_802_11_RSSI_2;

ioctl(socket_id, RT_PRIV_IOCTL, &wrq);
```

8.1.20 GET Driver wireless extension version

Sample code =>

```
Unsigned int wext_version;

sprintf(wrq.ifr_name, "ra0");

wrq.u.data.pointer = (caddr_t) &wext_version;

wrq.u.data.flags = RT_OID_WE_VERSION_COMPILED;

ioctl(socket_id, RT_PRIV_IOCTL, &wrq);
```

8.2 How to display rate, BW:

```
HTTRANSMIT_SETTING HTSetting;
```

```
Double Rate;
```



```
double b_mode[] = {1, 2, 5.5, 11};

float g_Rate[] = { 6,9,12,18,24,36,48,54};

switch(HTSetting.field.MODE)

{

    case 0:

        if (HTSetting.field.MCS >=0 && HTSetting.field.MCS<=3)

            Rate = b_mode[HTSetting.field.MCS];

        else if (HTSetting.field.MCS >=8 && HTSetting.field.MCS<=11)

            Rate = b_mode[HTSetting.field.MCS-8];

        else

            Rate = 0;

        break;

    case 1:

        if ((HTSetting.field.MCS >= 0) && (HTSetting.field.MCS < 8))

            Rate = g_Rate[HTSetting.field.MCS];

        else

            Rate = 0;

        break;

    case 2:

    case 3:

        if (0 == bGetHTTxRateByBW_GI_MCS(HTSetting.field.BW,

            HTSetting.field.ShortGI,

            HTSetting.field.MCS,

            &Rate))
```

```
        Rate = 0;

        break;

    default:

        Rate = 0;

        break;

    }

char bGetHTTxRateByBW_GI_MCS(int nBW, int nGI, int nMCS, double* dRate)

{

    double HTTxRate20_800[16]={6.5, 13.0, 19.5, 26.0, 39.0, 52.0, 58.5, 65.0, 13.0, 26.0, 39.0, 52.0, 78.0,
    104.0, 117.0, 130.0};

    double HTTxRate20_400[16]={7.2, 14.4, 21.7, 28.9, 43.3, 57.8, 65.0, 72.2, 14.444, 28.889, 43.333, 57.778,
    86.667, 115.556, 130.000, 144.444};

    double HTTxRate40_800[18]={13.5, 27.0, 40.5, 54.0, 81.0, 108.0, 121.5, 135.0, 27.0, 54.0, 81.0, 108.0,
    162.0, 216.0, 243.0, 270.0, 6.0, 39.0};

    double HTTxRate40_400[18]={15.0, 30.0, 45.0, 60.0, 90.0, 120.0, 135.0, 150.0, 30.0, 60.0, 90.0, 120.0,
    180.0, 240.0, 270.0, 300.0, 6.7, 43.3};

    // no TxRate for (BW = 20, GI = 400, MCS = 32) & (BW = 20, GI = 400, MCS = 32)

    if (((nBW == BW_20) && (nGI == GI_400) && (nMCS == 32)) ||

        ((nBW == BW_20) && (nGI == GI_800) && (nMCS == 32)))

        return 0; //false

    if (nBW == BW_20 && nGI == GI_800)

        *dRate = HTTxRate20_800[nMCS];
```

```

else if( nBW == BW_20 && nGI == GI_400)

    *dRate = HTTxRate20_400[nMCS];

else if( nBW == BW_40 && nGI == GI_800)

    *dRate = HTTxRate40_800[nMCS];

else if( nBW == BW_40 && nGI == GI_400)

    *dRate = HTTxRate40_400[nMCS];

else

    return 0; //false

return 1; //true

}

```

8.3 Set Data for N mode

8.3.1 SET HT mode:

Sample code =>

```

typedef struct {

    RT_802_11_PHY_MODE    PhyMode;

    UCHAR                  TransmitNo;

    UCHAR                  HtMode;           //HTMODE_GF or HTMODE_MM

    UCHAR                  ExtOffset;        //extension channel above or below

    UCHAR                  MCS;

    UCHAR                  BW;

    UCHAR                  STBC;

    UCHAR                  SHORTGI;

    UCHAR                  rsv;

```

```
} OID_SET_HT_PHYMODE ;
```

```
RT_802_11_PHY_MODE tmp_ht_mode;
```

```
sprintf(wrq.ifr_name, "ra0");
```

```
wrq.u.data.pointer = (caddr_t) & tmp_ht_mode;
```

```
wrq.u.data.length = sizeof(RT_802_11_PHY_MODE);
```

```
wrq.u.data.flags = RT_OID_802_11_SET_HT_PHYMODE | OID_GET_SET_TOGGLE;
```

```
ioctl(socket_id, RT_PRIV_IOCTL, &wrq);
```

CONFIDENTIAL

Ralink Website document

**for stevej@cradlepoint.com
And Company Use Only**