
MZTIO

发布 0.0

Hongyi Wu(吴鸿毅)

2019 年 12 月 09 日

Contents:

| | | |
|----------|---------------------------------|-----------|
| 1 | README | 3 |
| 1.1 | Safety | 3 |
| 1.2 | Logic programming | 4 |
| 2 | WEB Control GUI | 5 |
| 2.1 | register | 5 |
| 2.2 | web pages | 6 |
| 2.3 | Oscilloscope | 8 |
| 2.4 | FIFO IP code limits | 8 |
| 3 | remote control | 11 |
| 3.1 | minicom | 11 |
| 3.2 | static IP setting | 12 |
| 4 | ubuntu | 13 |
| 4.1 | basic configuration | 13 |
| 4.2 | Restore SD card space | 14 |
| 4.3 | update the boot files | 15 |
| 4.4 | /dev/mmcblk0p1 | 15 |
| 5 | Vivado | 17 |
| 5.1 | Install | 17 |
| 5.2 | Compile | 17 |
| 5.3 | In system debug | 17 |
| 6 | experiment | 19 |
| 6.1 | online monitor | 19 |
| 6.2 | experiment mode | 19 |
| 7 | Code | 23 |
| 7.1 | PS code | 23 |
| 7.2 | PL code | 23 |
| 7.3 | xillydemo | 25 |

If you need firmware, please contact Hongyi Wu(wuhongyi@qq.com)

If you want to know how PKU uses MZTIO, please click on the link below: [PKUMZTIO](#)

XIA SUPPORT: [XIA Blog](#)

The Pixie-16 MZ-TrigIO is designed to route signals from the backplane (rear connectors) to the front panel (front connectors) and make logical combinations between them in FPGA fabric. It has the following features and capabilities:

- Ethernet programmable trigger/coincidence control module for the Pixie-16
 - 48+ Pixie-16 backplane trigger connections to local Zynq processor
 - 48 front panel LVDS connections to local Zynq processor
 - MicroZed Zynq processor with embedded Linux, acting as a standalone PC with built-in SD card drive, USB host, 10/100 Ethernet, webserver, etc
 - 1588 PTP and SyncE clock synchronization
 - Open source user access to software and firmware
 - Use as standalone desktop unit or in 6U PXI chassis
 - Custom I/O standards via daughtercards
-

1.1 Safety

Please take a moment to review these safety precautions. They are provided both for your protection and to prevent damage to the Pixie module and connected equipment. This safety information applies to all operators and service personnel.

- Power Source
 - The Pixie-16 MZ-TrigIO module is powered through an AC/DC wall adapter or a PXI backplane. The default adapter has a variety of AC plug attachments for different localities.

- Please remember to shut down the Linux OS before removing the power plug from the Pixie-16 MZ-TrigIO or powering down the PXI chassis.
 - User Adjustments/Disassembly
 - To avoid personal injury, and/or damage, always disconnect power before accessing the module's interior. There are a few jumpers related to clocking on the board that experienced users may want to use.
 - Voltage Ratings
 - Signals on the inputs and outputs must not exceed $\pm 3.3V$. Please review the pinout in the appendix before making any connections.
 - Daughtercards
 - Daughtercards can be used as alternatives to front panel and rear inputs, which requires caution to avoid conflicts from FPGA outputs and standard connector inputs.
 - Servicing and Cleaning
 - To avoid personal injury, and/or damage to the Pixie module or connected equipment, do not attempt to repair or clean the inside of these units.
 - Linux Passwords
 - The Pixie-16 MZ-TrigIO Linux OS comes with default user IDs and passwords for 1) SSH login, 2) SMB file sharing, and 3) Web Operations as described below. Users should immediately change these passwords, especially when the Pixie-16 MZ-TrigIO is connected to external networks. Don't let hackers take over your Pixie-16 MZ-TrigIO!
 - Linux Backup
 - The Pixie-16 MZ-TrigIO Linux OS is stored on a removable SD card. SD cards' file systems can become corrupted, which would crash the Linux system and make the Pixie-16 MZ-TrigIO unable to operate. Therefore periodic backup of the SD card is recommended, for example using Win32DiskImager. (Byte for byte copy is required).
 - Note that all Linux passwords are stored on the SD card.
-

1.2 Logic programming

In order to meet the needs of medium and low energy experimental nuclear physics, we have developed the following basic functions.

- signal delay
- signal extend
- coincidence
- multiplicity
- scaler/counter
- down scale
- remote parameter adjustment
-

2.1 register

The user can easily adjust the experimental logic by modifying the control registers in the settings.ini file.

Of course, for different types of experiments, we have specialized software, please refer to the manual of the experiment for the specific register control method.

```

settings.ini - Hongyi Wu @ Peking University (于 PixieNet)
File Edit Options Buffers Tools Conf Help
1 0x000 0 CSR[15:0] (R)
2 0x001 0 VERSION (R)
3 0x002 0 D18[2:0] (W/R)
4 0x003 0 outblock[1:0] (W/R)
5 0x00A 0 numtrig (R)
6 0x00B 0 numtrig (R)
7 0x00C 0 runticks (R)
8 0x00D 0 runticks (R)
9 0x100 0x6666 FrontIO_Aena (W/R)
10 0x105 0x6666 LVDSIO_Aena (W/R)
11 0x101 0x6666 FrontIO_Bena (W/R)
12 0x106 0x6666 LVDSIO_Bena (W/R)
13 0x102 0x6600 FrontIO_Cena (W/R)
14 0x107 0x6666 LVDSIO_Cena (W/R)
15 0x103 0x00000000 TriggerAllena (W/R)
16 0x104 0x0000 EB_Dataena (W/R)
17 0x108 0xFFFF frontA_coincidence_mask (W/R)
18 0x109 0xFFFF frontB_coincidence_mask (W/R)
19 0x10A 0xFFFF frontC_coincidence_mask (W/R)
20 0x10B 0xFFFFFFFF TriggerAll_coincidence_mask (W/R)
21 0x10C 0xFFFF EB_Data_coincidence_mask (W/R)
22 0x110 0xFFFF frontA_multiplicity_mask (W/R)
23 0x111 0xFFFF frontB_multiplicity_mask (W/R)
24 0x112 0xFFFF frontC_multiplicity_mask (W/R)
25 0x113 0xFFFFFFFF TriggerAll_multiplicity_mask (W/R)
26 0x114 0xFFFF EB_Data_multiplicity_mask (W/R)
27 0x118 0x0000 frontA_coincidence_pattern (W/R)
28 0x119 0x0000 frontB_coincidence_pattern (W/R)
29 0x11A 0x0000 frontC_coincidence_pattern (W/R)
30 0x11B 0x00000000 TriggerAll_coincidence_pattern (W/R)
31 0x11C 0x0000 EB_Data_coincidence_pattern (W/R)
32 0x120 2 frontA_multiplicity_threshold (W/R)
33 0x121 2 frontB_multiplicity_threshold (W/R)
34 0x122 2 frontC_multiplicity_threshold (W/R)
35 0x123 2 TriggerAll_multiplicity_threshold (W/R)
36 0x124 2 EB_Data_multiplicity_threshold (W/R)
37 0x128 0 frontA_output_select (W/R)
38 0x129 0 frontB_output_select (W/R)
39 0x12A 0 frontC_output_select (W/R)
40 0x12B 0 TriggerAll_output_select (W/R)
41 0x12C 0 EB_Data_output_select (W/R)
42 0x030 0x00320028 DelayAndExtend1 (W/R)
43 0x031 0x000A DownScale1 (W/R)
44 0x040 0 LEMO output mode (W/R)
1 -:--- settings.ini All (1,0) (Conf[Space]) 07:49 0.20
Package assoc is obsolete!


```

2.2 web pages

2.2.1 main page


The main page of the web, it will provide basic information and precautions for the module.

不安全 | 222.29.111.225/index.html



Pixie-16 MZ Trigger IO

Thank you for using PKUXIADAQ



[Main](#)
[Status](#)
[Log](#)
[Support](#)

The Pixie-16 MZ-TriggerIO is designed to route signals from the backplane (rear connectors) to the front panel (front connectors) and make logical combinations between them in FPGA fabric. It has the following features and capabilities:

- Ethernet programmable trigger/coincidence control module for the Pixie-16
- 48+ Pixie-16 backplane trigger connections to local Zynq processor
- 48 front panel LVDS connections to local Zynq processor
- MicroZed Zynq processor with embedded Linux, acting as a standalone PC with built-in SD card drive, USB host, 10/100 Ethernet, webserver, etc
- 1588 PTP and SyncE clock synchronization
- Open source user access to software and firmware
- Use as standalone desktop unit or in 6U PXI chassis
- Custom I/O standards via daughtercards

Do not visit the Status page while execute other tasks.

When you access the Status page, the page will automatically refresh every 5 seconds.

Copyright © Hongyi Wu Contact information: wuhongyi@qq.com

2.2.2 status page


When you access the status page, the page will automatically refresh every 5 second.

There are currently five columns of monitorable parameters on this page.

- The fourth row of the first column indicates the date the solid is allowed to be used.
- The fifteenth line of the first column indicates the running time of the current round of DAQ.
- The first column, line 16, represents the percentage of DPMFULL and total runtime.


The parameters of the third column, the fourth column and the fifth column are determined by the settings of each experiment. For details, please refer to the manual of the specific experiment settings.

← → 不安全 | 222.29.111.225/status.cgi



Pixie-16 MZ Trigger IO

Thank you for using PKUXIADAQ



[Main](#)
[Status](#)
[Log](#)
[Support](#)

| Parameter | Local Logic | Parameter | Trigger I/O Status | Parameter | Exp Logic | Parameter | Scaler | Parameter | Scaler |
|--------------|-------------|------------------|--------------------|-----------------|-----------|---------------|--------|-----------|--------|
| CSROUT | 0x4 | IN_FRONTA | 0x6666 | DelayAndExtend1 | 0x320028 | BackPlaneFT | 1000 | reserved | 0 |
| FW_VERSION | 0x20190720 | LVDSIO_A | 0x6666 | DownScale1 | 0xA | BackPlaneVT | 0 | reserved | 0 |
| SW_VERSION | 0x20190720 | IN_FRONTB | 0x6666 | reserved | 0x0 | A1_1 | 1000 | reserved | 0 |
| DataOfExpiry | 0x20991231 | LVDSIO_B | 0x6666 | reserved | 0x0 | A2_1 | 1000 | reserved | 0 |
| reserved | 0x0 | IN_FRONTC | 0x6600 | reserved | 0x0 | A3_1 | 1000 | reserved | 0 |
| COINTEST | 0x1F00 | LVDSIO_C | 0x6666 | reserved | 0x0 | A4_1 | 1004 | reserved | 0 |
| DPMFULL | 393 | IN_TRIGGERALL | 0x0 | reserved | 0x0 | B1_1 | 0 | reserved | 0 |
| DPMFULL | 0 | IN_EBDATA | 0x0 | reserved | 0x0 | B2_1 | 0 | reserved | 0 |
| NUMVTRIGS | 0 | CMASK_FRONTA | 0xEEEE | reserved | 0x0 | B3_1 | 0 | reserved | 0 |
| NUMVTRIGS | 0 | CMASK_FRONTB | 0x9999 | reserved | 0x0 | B4_1 | 0 | reserved | 0 |
| NUMFTRIGS | 30684 | CMASK_FRONTC | 0x9999 | reserved | 0x0 | C1_1 | 0 | reserved | 0 |
| NUMFTRIGS | 0 | CMASK_TRIGGERALL | 0x80424 | reserved | 0x0 | C2_1 | 0 | reserved | 0 |
| RUNTIME[s] | 3068373922 | CMASK_EBDATA | 0x40C | reserved | 0x0 | C3_1 | 0 | reserved | 0 |
| RUNTICKS | 0 | MMSUM_FRONTA | 12 | reserved | 0x0 | C4_1 | 0 | reserved | 0 |
| RUNTIME[s] | 30 | MMSUM_FRONTB | 8 | reserved | 0x0 | reserved | 0 | reserved | 0 |
| DPM[%] | 0 | MMSUM_FRONTC | 9 | reserved | 0x0 | reserved | 0 | reserved | 0 |
| T_ZYNQ | 49 | MMSUM_TRIGGERALL | 4 | LEMO mode | 0x2 | Front Trigger | 1000 | reserved | 0 |
| T_BOARD | 28 | MMSUM_EBDATA | 3 | reserved | 0x0 | Back Trigger | 1004 | reserved | 0 |
| SNUM | 1 | reserved | 0x0 | reserved | 0x0 | Front Back | 1004 | reserved | 0 |
| UNIQUE_ID | 0x197B7679 | reserved | 0x0 | reserved | 0x0 | Front && Back | 1000 | reserved | 0 |
| UNIQUE_ID | 0x92EB0001 | reserved | 0x0 | reserved | 0x0 | DS10 | 100 | reserved | 0 |

Copyright © Hongyi Wu Contact information: wuhongyi@qq.com

2.2.3 log page

In development, this page will save the status parameters and read the historical parameters.

2.2.4 support page

This page provides some basic instructions, including XIA instructions, PKU instructions, and more.


2.3 Oscilloscope

Output signals to the oscilloscope through the MZTIO daughter board.

Most oscilloscopes have only 4 channels, so our monitor settings are set by default for 4 channels. If you want to monitor 8 channels at the same time, you can do it with 2 oscilloscopes.

Of course, the monitored signal can be switched by modifying the control register. For instructions on how to monitor different signals, please read the instructions for the specific experiment.

The following figure is an example of oscilloscope monitoring. Line 1 represents the trigger signal, line 2 is the down scale 10, line 3 represents the signal after line 1 is delayed by 400 ns, and line 4 represents line 3 is extend to 500 ns.

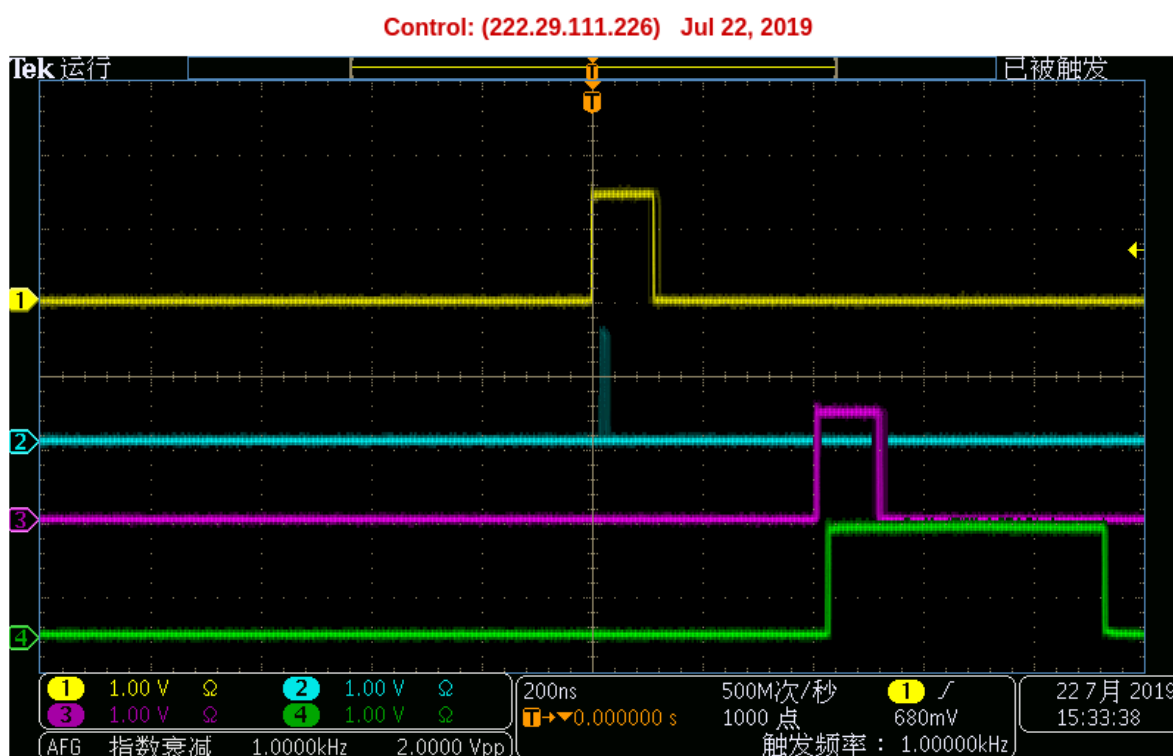

2.4 FIFO IP code limits

The figure below shows the settable range of the FIFO IP core parameters.

Component Name

fifo_delay512

Basic

Native Ports

Status Flags

Data Counts

Summary

Optional Flags

☐ Almost Full Flag

☐ Almost Empty Flag

Handshaking Options

Write Port Handshaking

☐ Write Acknowledge

Active High

☐ Overflow

Active High

Read Port Handshaking

☐ Valid Flag

Active High

☐ Underflow Flag

Active High

Programmable Flags

Programmable Full Type

No Programmable Full Threshold

Full Threshold Assert Value

511

[6 - 511]

Full Threshold Negate Value

510

[5 - 510]

Programmable Empty Type

No Programmable Empty Threshold

Empty Threshold Assert Value

4

[4 - 510]

Empty Threshold Negate Value

5

[5 - 511]

Due to the limitation of the FIFO IP core, the delay is set to a minimum of 4 clocks.

3.1 minicom

Connect the USB cable to your computer to get the IP

Serial communication software(minicom) can be used in Linux OS

```
minicom -s
```

```
+-----[configuration]-----+
| Filenames and paths          |
| File transfer protocols      |
| Serial port setup            |
| Modem and dialing            |
| Screen and keyboard          |
| Save setup as dfl             |
| Save setup as..              |
| Exit                         |
| Exit from Minicom            |
+-----+

```

- Enter *Serial port setup* , modify Serial Device to */dev/ttyUSB0* . Bps/Par/Bits change to *115200 8N1*, the bottom two options are *NO*
- Enter *Modem and dialing* , delete A, B, and K items
- Then select *Save setup as dfl* to save the settings
- Finally, select *Exit* to exit the configuration mode and enter the control mode

```
user: root
password: xia17pxn
```

The password is the default, so users can log in.

Assuming the IP address is 222.29.111.80, you can log in with the following command.

```
ssh -Y root@222.29.111.80
```

3.2 static IP setting

Because Ubuntu 18.04 uses netplan to manage the network. So you can create a file ending in yaml in the /etc/netplan/ directory. For example, the 01-netplan.yaml file.

Then write the following configuration under this file(You need to modify the IP address and gateway):

```
network:
  version: 2
  renderer: networkd
  ethernets:
    enp3s0:
      dhcp4: no
      addresses: [192.168.1.110/24]
      gateway4: 192.168.1.1
      nameservers:
        addresses: [8.8.8.8, 114.114.114.114]
```

It is important to note that the spaces in each line must be there, otherwise the error will be reported and the setting will fail!

```
network:
  version: 2
  renderer: networkd
  ethernets:
    eth0:
      addresses: [10.10.6.33/24]
      gateway4: 10.10.6.10
      dhcp4: no
```

The above parameters are the configurations used by the CIAE experiment.

Finally, use *sudo netplan apply* to restart the network service. Use *ip a* to see if your static IP is set up successfully!

4.1 basic configuration

4.1.1 ubuntu 18

If the operating system is the latest version, no additional source configuration is required.

If you want to install CERN ROOT, add the following line to `/etc/apt/sources.list`

```
deb http://ports.ubuntu.com/ xenial main universe multiverse
```

4.1.2 ubuntu 12

If the operating system version is the previous version, you need to modify the source configuration as follows.

Edit source list file

```
vim /etc/apt/sources.list
```

change into:

```
deb http://old-releases.ubuntu.com/ubuntu vivid main restricted universe multiverse
deb http://old-releases.ubuntu.com/ubuntu vivid-security main restricted universe↵
↵multiverse
deb http://old-releases.ubuntu.com/ubuntu vivid-updates main restricted universe↵
↵multiverse
deb http://old-releases.ubuntu.com/ubuntu vivid-proposed main restricted universe↵
↵multiverse
deb http://old-releases.ubuntu.com/ubuntu vivid-backports main restricted universe↵
↵multiverse
deb-src http://old-releases.ubuntu.com/ubuntu vivid main restricted universe↵
↵multiverse
deb-src http://old-releases.ubuntu.com/ubuntu vivid-security main restricted↵
↵universe multiverse
deb-src http://old-releases.ubuntu.com/ubuntu vivid-updates main restricted↵
↵universe multiverse
deb-src http://old-releases.ubuntu.com/ubuntu vivid-proposed main restricted↵
↵universe multiverse
```

(下页继续)

(续上页)

```
deb-src http://old-releases.ubuntu.com/ubuntu vivid-backports main restricted_  
↪universe multiverse  
  
deb http://mirrors.ustc.edu.cn/ubuntu/ vivid main universe  
deb-src http://mirrors.ustc.edu.cn/ubuntu/ vivid main universe
```

4.1.3 software upgrade

```
apt-get update
```

```
#install firefox  
apt-get install firefox  
# install emacs  
apt-get install emacs  
  
# ROOT dependent library  
apt-get install cmake  
apt-get install libx11-dev  
apt-get install libxpm-dev  
apt-get install libxft-dev  
apt-get install libxext-dev  
apt-get install gfortran  
apt-get install libssl-dev  
apt-get install xlibmesa-glu-dev  
apt-get install libglew1.5-dev  
apt-get install libftgl-dev  
apt-get install libmysqlclient-dev  
apt-get install libfftw3-dev  
apt-get install libcfitsio-dev  
apt-get install graphviz-dev  
apt-get install libavahi-compat-libdnssd-dev  
apt-get install libxml2-dev  
apt-get install libkrb5-dev  
apt-get install libgsl0-dev  
apt-get install libqt4-dev
```

```
apt-get install root-system-bin
```

Ubuntu color configuration, place the color configuration file `.dircolors` in the personal directory, the file name is `.dir_colors` in the readhat system.

4.2 Restore SD card space

In order to speed up the installation speed of the image, only the SD card space of about 8/16G is actually formatted. The 16/32G SD card and the 8/16G space are not used. In order to be able to use, the following operations are performed.

```
fdisk /dev/mmcblk0  
# Then enter: d [ENTER], 2 [ENTER], n [ENTER] [ENTER], [ENTER], [ENTER], [ENTER],  
↪w [ENTER]. Then reboot the OS. If there is a problem, please refer to *Getting_  
↪started with Xillinux for Zynq-7000 EPP*
```

```
# Execute the following command
resize2fs /dev/mmcblk0p2

# Use the following command to view the result
df -h
```

4.3 update the boot files

To mount the SD card boot partition to a folder /mnt/sd, execute

```
mount /dev/mmcblk0p1 /mnt/sd
```

this is useful to update the boot files without removing the SD card. The Pixie-16 MZ-TrigIO has to be rebooted before the new boot files become effective.

So the procedure would be:

- generate FW files on a desktop PC
- copy to shared Linux folder on the SD card (/var/www)
- mount boot partition mount /dev/mmcblk0p1 /mnt/sd (create /mnt/sd if not already there)
- copy files e.g. cp /var/www/xillydemo.bit /mnt/sd
- reboot or power cycle (reboot)

```
scp xillydemo.bit root@222.29.111.157:~
```

4.4 /dev/mmcblk0p1

```
boot.bin  devicetree.dtb  uImage  xillydemo.bit
```


5.1 Install

aaa

5.2 Compile

When you open it for the first time, you need to clear the `P16_MZTIO_FW_0p01/build` folder.

- Open Vivado. Use Tools > Run Tcl Script to run project generating script `···/verilog/xillydemo-vivado.tcl`. The resulting project file is in `···verilogvivado`
- There have been cases where the script crashes Vivado, and then the compile has ~100 pin property critical warnings. In such cases, start over.
- Compile demo project (generate bitstream). Ignore warnings and critical warnings.
- Check `build/xillydemo.runs/impl_1/xillydemo.bit`

5.3 In system debug

Is possible???

About multiplicity output in RJ45 in PKU firmware

- when setting multiplicity==0, output high level
- when setting multiplicity>=1, the default output is low level, and it is high when triggered.

When the MSRB bit 6 is 1

- the synchronization indication signal can be obtained
- have the DPMFULL output information
- have back plane FT, VT information

6.1 online monitor

After modifying the parameter configuration file `settings.ini`, you need to run the following program to modify the register settings.

```
./progfippi
```

It should be noted that the program is not allowed to be executed when DAQ running

You can view the parameters settings in the web page, and the scaler counter and so on.


6.2 experiment mode

We will provide a common combination of firmware and software for the following four types of experiments.

6.2.1 in beam gamma

designing...

6.2.2 beta decay

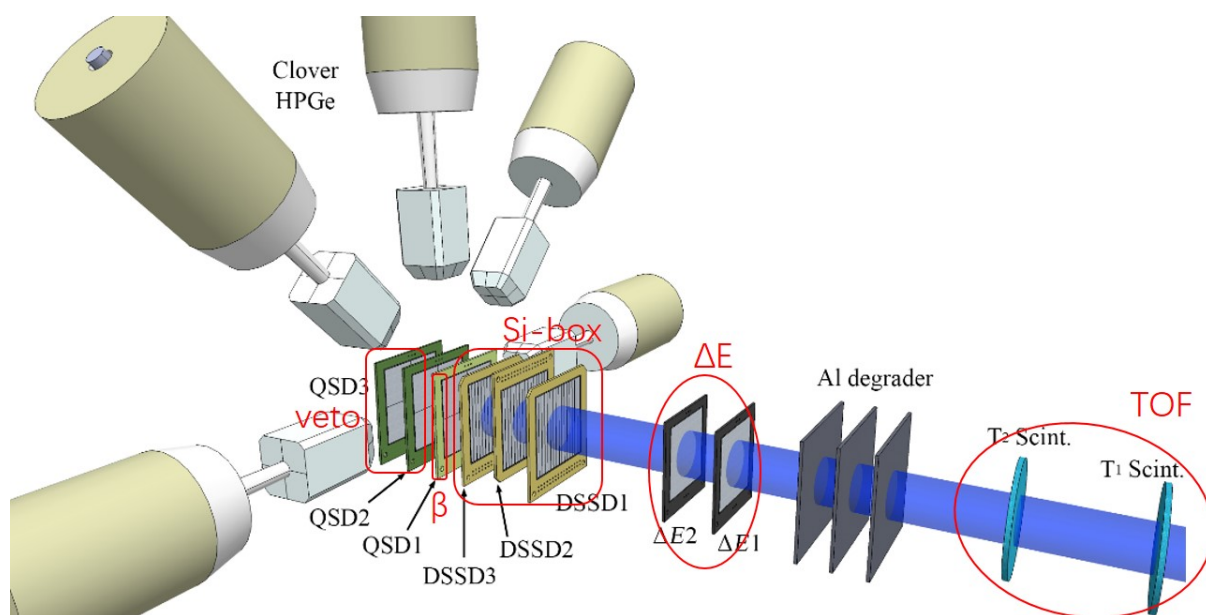

Listed below is the silicon detector information in the detection array:

- **QSDΔE1**
 - MICRON MSQ25, Junction 4, 50.0mm x 50.0mm, 309um
- **QSDΔE2**
 - CIAE Q300, Junction 4, 50.0mm x 50.0mm, 300um
- **DSSD1**
 - MICRON W1, Junction 16, Ohmic 16, 49.5mm x 49.5mm, 142um
- **DSSD2**
 - MICRON W1, Junction 16, Ohmic 16, 49.5mm x 49.5mm, 142um
- **DSSD3**
 - MICRON W1, Junction 16, Ohmic 16, 49.5mm x 49.5mm, 142um
- **QSD1**
 - MICRON MSQ25, Junction 4, 50.0mm x 50.0mm, 1546um
- **QSD2**
 - CIAE Q300, Junction 4, 50.0mm x 50.0mm, 300um
- **QSD3**
 - CIAE Q300, Junction 4, 50.0mm x 50.0mm, 300um

The signals of the plastic scintillator T1 and T2 are converted into pulse amplitude information by TAC, which can be collected using 100MSPS module.

designing...

6.2.3 nuclear reaction

designing...

6.2.4 Super heavy nucleus

designing...

7.1 PS code

```
docs      #PKU MZTIO GUIDES
static    # css js
webops

Pixie16_MZTrigIO_Manual.pdf

MZTIOCommon.c
MZTIOCommon.h
MZTIODefs.h
clockprog.c
progfippi.cc
settings.ini
status.c
status.cgi
makefile

pkulogo100.jpg
why.jpg
webopspasswords
index.html
log.html
status.html
support.html
```

7.2 PL code

7.2.1 downscale

```
module downscale
(
```

(下页继续)

(续上页)

```
din,
dout,
down,
clk
);

parameter DATA_W = 16;
input [DATA_W-1:0] down;
input din;
output dout;
reg          dout;
input clk;
endmodule
```

7.2.2 scaler

```
module scaler
(
    din,
    dout ,
    endcount,
    clk
);

parameter DATA_W = 32;
output [DATA_W-1:0] dout;
reg    [DATA_W-1:0] dout;

input din;
input endcount;
input clk;
endmodule
```

7.2.3 signaldelay512

```
module signaldelay512
(
    din,
    dout,
    delay,
    clk
);

output dout;
reg    dout;
input [9:0] delay;
input      din;
input      clk;
endmodule
```

7.2.4 signalextend512

```
module signalextend512
(
    din,
```

(下页继续)

(续上页)

```

dout,
extend,
clk
);

input din;
output dout;
reg      dout;
input [9:0] extend;
input clk;
endmodule

```

7.2.5 IP core


FIFO

```

module fifo_delay512(clk, srst, din, wr_en, rd_en, dout, full, empty,
data_count)
/* synthesis syn_black_box black_box_pad_pin="clk,srst,din[0:0],wr_en,rd_en,
↪dout[0:0],full,empty,data_count[9:0]" */;
input clk;
input srst;
input [0:0]din;
input wr_en;
input rd_en;
output [0:0]dout;
output full;
output empty;
output [9:0]data_count;
endmodule

```

7.3 xillydemo

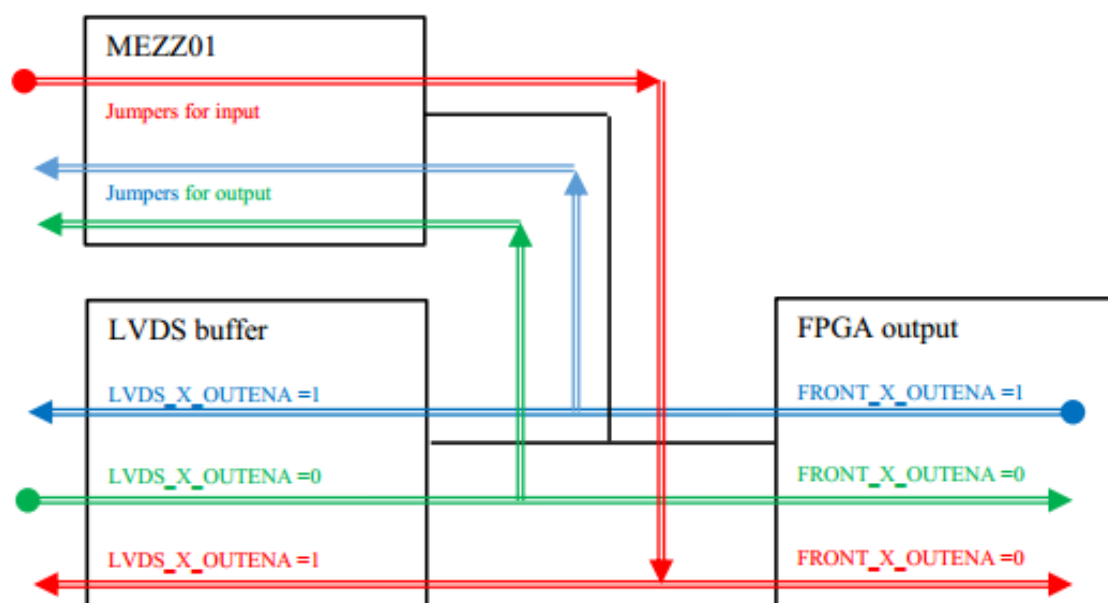

DB

```

// The configuration of the FrontIO_A/B/C is completely flexible. For example,
↪if you connect the RJ-45 of a Pixie-16 to FrontI/O A 0-3 (the upper RJ-45 on the
↪trigger board), signals will connect
// F05 - Front I/O A 3      FrontIO_Aena==0
// F01 - Front I/O A 0      FrontIO_Aena==0
// FI5 - Front I/O A 1      FrontIO_Aena==1
// FI1 - Front I/O A 2      FrontIO_Aena==1

// F0 5p/5n synchronization status / multiplicity result channel 0 (pku
↪firmware)
// F0 1p/1n not used / multiplicity result channel 1 (pku firmware)
// FI 5p/5n external fast trigger
// FI 1p/1n external validation trigger

// FrontIO_Aout [3] [0] [7] [4] [11] [8] [15] [12]
// FrontIO_Ain [1] [2] [5] [6] [9] [10] [13] [14]

```

- FRONT_X_OUTENA

- == 1 表示从 MZ 往前面板驱动输出，代码里面操作 out
- == 0 表示从前面板往 MZ 驱动输入，代码里面操作 in

- LVDS_X_OUTTENA

- == 1 表示驱动网口向外输出
- == 0 表示驱动网口向里输入

如果 MEZZ01 开启输入模式，则必须设置 FRONT_X_OUTENA==0 && LVDS_X_OUTTENA==1，其余模式下，MEZZ01 跳针全部设置成输出模式，此时网口可用于输入或者输出模式。

当前，在前面板 C 口配置一个 MEZZ01 模块，其中前四通道设置为信号输入，分别连接 [1]/[2]/[5]/[6]，后四个通道设置为信号输出，分别连接 [9]/[10]/[13]/[14]。该配置模式下，C 口对应的四个网口仍然可用于多重性的输出，此时参数 FrontIO = 0x6600，LVDSIO = 0x6666。如果不使用 MEZZ01 模块，只连接网口与 P16 模块，则参数 FrontIO/LVDSIO 均设置为 0x6666。