

RFID Reader – Software installation and compiling instructions


To compile the RFID reader's software and upload the program to NanoModule, see the following instructions.

The `rfid` directory includes the software files for the wireless RFID reader. The software was developed in Linux operating system with NanoStacks v1.0.0 and FreeRTOS v4.1.3.

Descriptions of the files:

- `main.c` – main tasks including NanoStack and FreeRTOS functions
- `mifare.c` – PN512 module's configurations and functions for RFID tag operations
- `mifare.h` – header file
- `app.rules` – NanoStack options
- `FreeRTOSConfig.h` – FreeRTOS configurations
- `Makefile` – compiler instructions
- `rfid.hex` – compiled program in binary format
- `nano_programmer` – loader program to upload the software to the NanoModule

Description of the program structure:

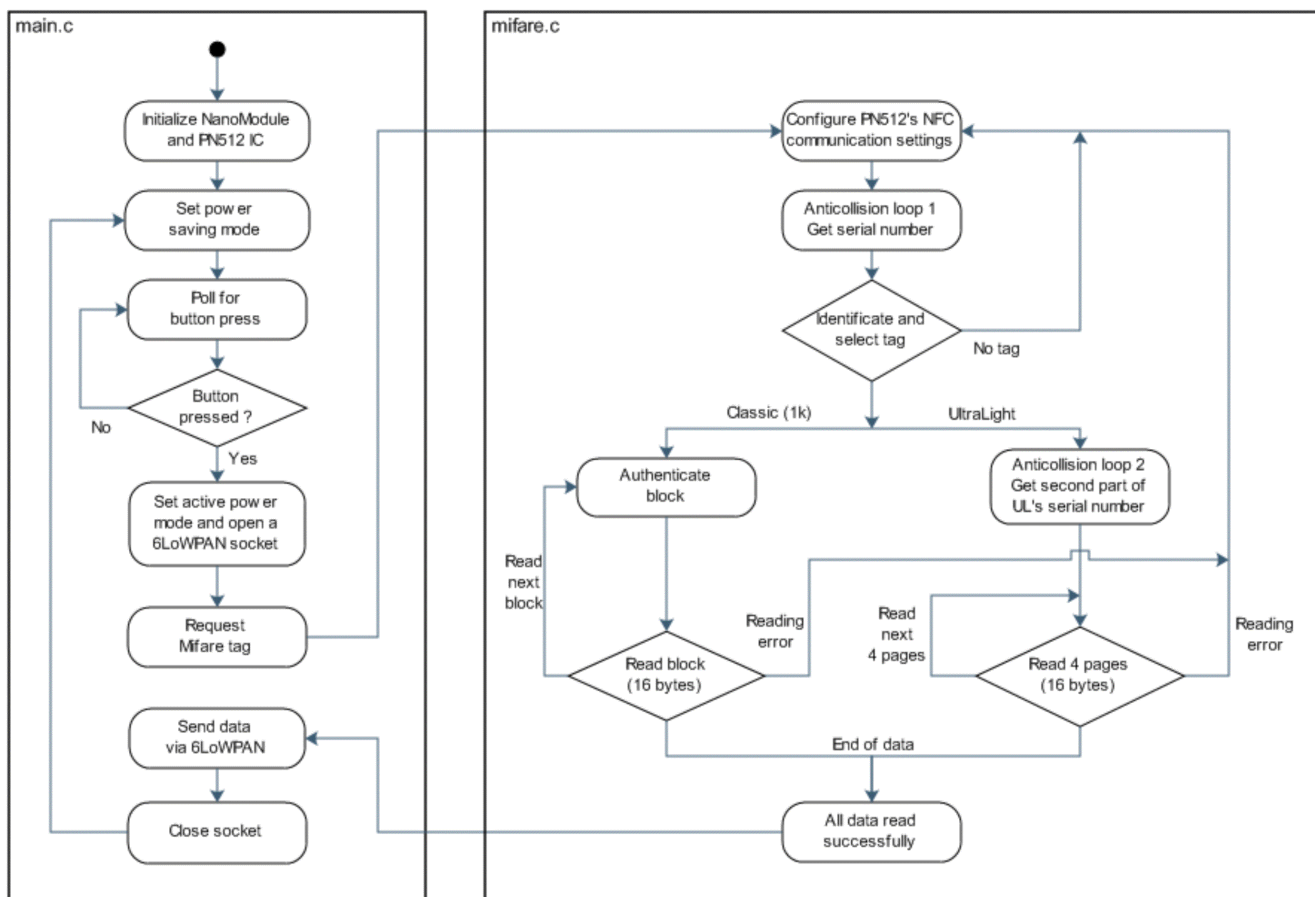

To install the NanoStack development environment and upload the program software to NanoModule:

1. Download the NanoStack GPL Source package from <http://sourceforge.net/projects/nanostack/> and the FreeRTOS package from <http://sourceforge.net/projects/freertos/>.
2. Install SDCC compiler from Sensinode's download page (http://www.sensinode.com/top/information.php?info_id=10).
3. Download and extract *sdcc-large-stack-auto.tgz* from <http://www.sensinode.com/downloads/toolchain/> to SDCC's `lib` directory.
4. Place the `rfid` directory to NanoStack's `/Examples` directory.
5. Compile the software with `make` command in `rfid` directory.
6. Place the NanoModule on the Devboard D200 and connect it to the PC's USB port.
7. Upload the compiled program to NanoModule with command:
`./nano_programmer -d /dev/ttyUSB<port#> -P rfid.hex`

See Sensinode's NanoStack v1.0.x manuals and <http://nanostack.wiki.sourceforge.net/> for more detailed instructions.