

**SERIAL / ETHERNET INTERFACE
COMMUNICATION PROTOCOL
SPECIFICATION
(SICP V2.07 released)**

For
PHILIPS Professional Displays

Table of Contents

2021. Aug .31

I.	INTRODUCTION	6
1.1	Purpose.....	6
1.2	Definitions, Abbreviations and Acronyms	6
2.	COMMAND PACKET FORMAT	6
2.1	Physical Specifications	6
2.2	Communication Procedure.....	7
2.3	MESSAGES – SYSTEM.....	10
2.4	Communication Control	10
3	Platform, SICP version, Model Number and FW, SW Version numbers.....	13
3.1	Message-Get (SICP version, platform information).....	13
3.2	Message Report (SICP version, platform information).....	13
3.3	Message-Get (Model Number, FW Version, Build date)	13
3.4	Message-Report (Model Number, FW Version, Build date).....	13
4	MESSAGES – GENERAL.....	14
4.1	Power state.....	14
4.2	Lock Functions for IR-Remote Control & Keypad	14
4.3	Power state at Cold Start.....	16
4.4	MESSAGES – INPUT SOURCES.....	17
4.5	Auto Signal Detecting / Failover	21
4.6	Monitor restart.....	25
4.7	Backlight On-Off	25
5.1	Video Parameters	26
	Important: see note 1 & 2 above in chapter "5.1 Video Parameters"	27
	Important: see note 1 & 2 above in chapter "5.1 Video Parameters"	28
	Important: see note 1 & 2 above in chapter "5.1 Video Parameters"	29
	Important: see note 1 & 2 above in chapter "5.1 Video Parameters"	30
	Important: see note 1 & 2 above in chapter "5.1 Video Parameters"	30

Important: see note 1 & 2 above in chapter "5.1 Video Parameters"	44
Important: see note 1 & 2 above in chapter "5.1 Video Parameters"	44
5.2 Picture Format	45
5.3 VGA video Parameters	45
5.4 Picture-in-Picture (PIP)	46
5.5 Get number of input sources	54
5.6 Channel number Set/Get	55
5.6.1 Get channel number	55
5.6.2 Set channel number	56
5.7 Channel number step +/-	56
6 MESSAGES – AUDIO	57
6.1 Volume	57
6.2 Volume mute	62
6.2.1 Get volume mute status	62
6.2.2 Set volume mute	62
6.3 Speakers on-off	62
6.3.1 Get Speakers status	62
6.3.2 Set Speakers on-off	63
6.4 Audio sync	63
6.4.1 Get Audio sync status	63
6.4.2 Set Audio sync status	64
7. MISCELLANEOUS	65
7.1 Operating Hours	65
7.2 Power Saving Mode	65
7.3 Auto Adjust	66
7.4 Temperature Sensors	58
7.5 Serial Code	58
7.6 Tiling	59
7.7 AnyTile (Canvas)	62
7.8 Light Sensor	63
7.9 Human Sensor	64
7.10 OSD Rotating	65
7.11 Display Orientation	66
7.11 Information OSD	67
7.12 MEMC Effect	68
7.13 Touch Feature	69


7.14	Noise Reduction.....	68
7.15	Scan Mode	69
7.16	Scan Conversion	70
7.17	Switch On Delay (Tiling).....	71
7.18	Factory Reset	72
7.19	Power On logo	73
7.20	Fan Speed	74
7.21	APM status (advanced power management).....	75
7.22	Power saving mode status.....	76
7.23	Pixel Shift	77
7.24	Off Timer	78
7.25	ECO mode	79
7.26	Picture Style.....	80
7.27	Send screenshot	81
7.28	Video signal present	81
7.29	Frame compensation Get value Horz value	82
7.30	Frame compensation Set value Horz.....	83
7.31	Frame compensation Get value Vertical	83
7.32	Frame compensation Set value Vert	84
7.33	Enter admin menu (android settings menu)	84
7.34	Enable disable navigation bar Get.....	84
7.35	Enable disable navigation bar Set	85
7.36	Boot on source	85
7.37	HDMI input range	87
7.38	Testpattern	88
7.39	Freeze screen Get.....	89
7.40	Freeze screen set.....	90
7.41	Clock (= time).....	90
7.42	Auto Time sync	92
7.43	Teamviewer on-off	93
7.44	Date	94
7.45	Time zone	95
7.46	RS232 Routing (network control port)	98
7.47	WOL (Wake On LAN)	99
7.48	Auto Restart	100

7.49	HDMI one wire (= CEC)	101
7.50	SICP Serial port Forwarding.....	102
7.52	Language OSD.....	104
8.	Scheduling.....	105
8.1	Scheduling Parameters.....	105
9.	Group ID	109
10.	Custom Multi-Window Settings.....	109
11.	Color Calibration – MIC (TBD).....	112
12.	LED STRIP control for I0BDLxx5IT.....	112
12.1	Message-Get (Report)	113
12.2	Message-Set	113
13.	MicroSD and USB ports Unlock/Lock –	115
14.	Monitor ID	116
15.	Firmware upgrade.....	116
16.	Platforms.....	116
17.	Command summary (Last updated: 19/July/2021).....	118
18.	Revision history.....	124

I. INTRODUCTION

I.1 Purpose

The purpose of this document is to explain in detail the commands and steps that can be used to control a Philips display via RS232C / ethernet.

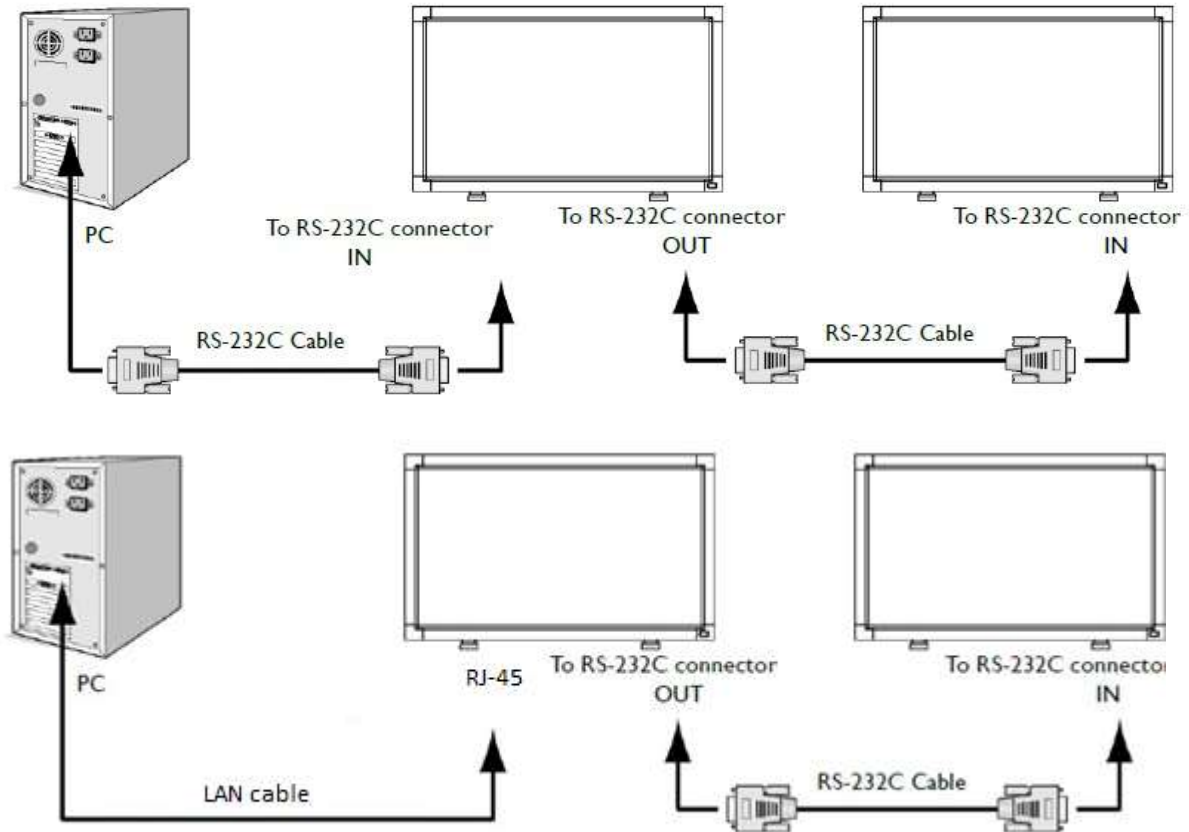

I.2 Definitions, Abbreviations and Acronyms


PBS	Professional Business Solutions
RC	Remote Control
ACK	Acknowledge
NACK	Not Acknowledge
NAV	Not Available
ID	Identification
0xXX	Hexadecimal notation
OSD	On Screen Display (menu information on the screen of the monitor)
IWB	interactive white board
APM	advanced power management

2. COMMAND PACKET FORMAT

2.1 Physical Specifications


1. Baud Rate :, **9600**
2. Data bits: 8
3. Parity : None
4. Stop Bit : 1
5. Flow Control : None

6. The Pin Assignments for DB9 male connector:
Male D-Sub 9-Pin (outside view)

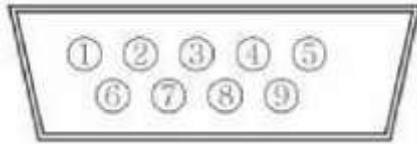


Pin #	Signal	Remark
1	NC	
2	RXD	Input to LCD Monitor
3	TXD	Output from LCD Monitor
4	NC	
5	GND	
6	NC	
7	NC	
8	NC	
9	NC	
frame	GND	

Note: A crossover cable (null modem) is needed for connection to the host controller:

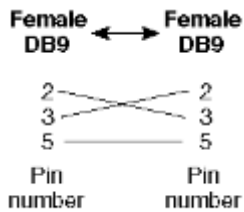

Philips Signage displays use RXD, TXD and GND pins for RS-232C control. For RS-232C cable, the reverse type cable should be used.

If the RS232 is a jack 2.5 mm connection in the monitor than also a jack to SubD9 cable is included in the box of the monitor, see picture below:

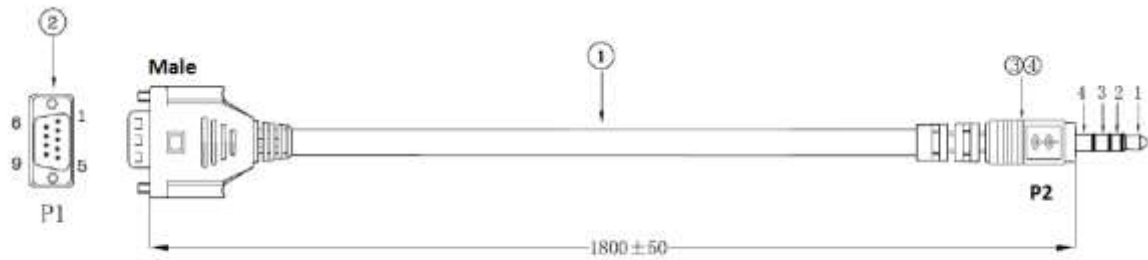

WIRING TABLE

P1	WIRING COLOR	P2
2	RED 红色	1
3	BLUE 蓝色	2
9	BLACK 黑色	3
5	DRAIN 地线	4

2.2 Communication Procedure

Control commands can be sent from a host controller via the RS232/Ethernet (port 5000) connection. A new command should not be sent until the previous command is acknowledged. However, if a response is not received within 500 milliseconds a retry may be triggered. Every valid command receives an ACK. A command that is valid but not supported in the current implementation will be responded to with a NAV (Not Available). If the command buffer is corrupt (transmission errors) the command will be responded to with a NACK. The display operates according to the received command. If the command is a valid “Get” command, the display responds with the requested info. If the command is a valid “Set” command allowed, the display performs the requested operation.

Figure1 and Figure2 explain the mechanism of the Get and Set commands.

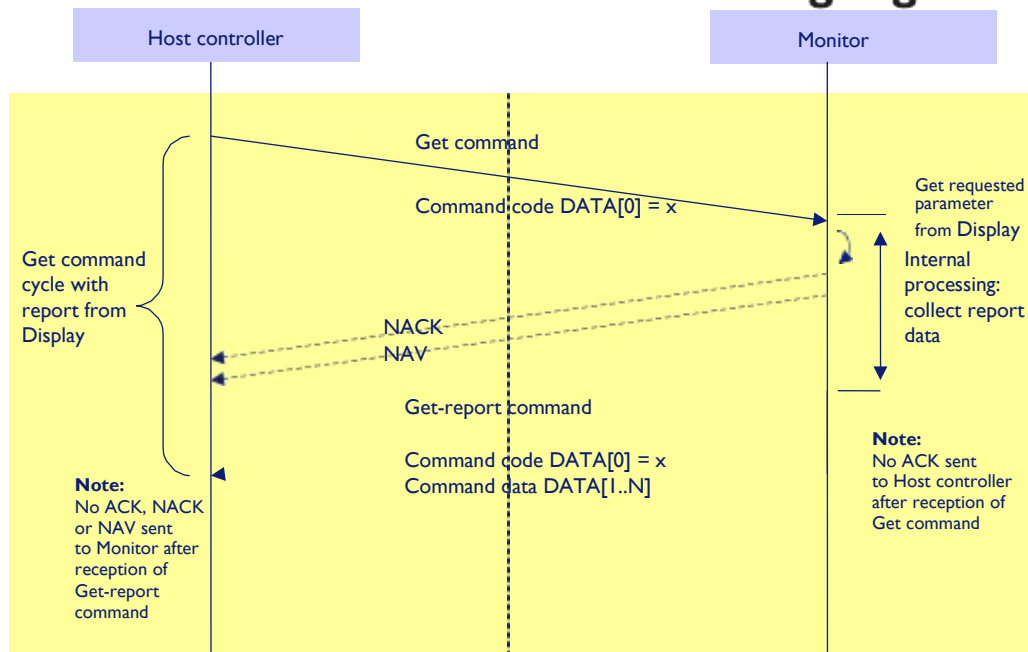


Figure 1: Explanation of mechanism of Get Command.

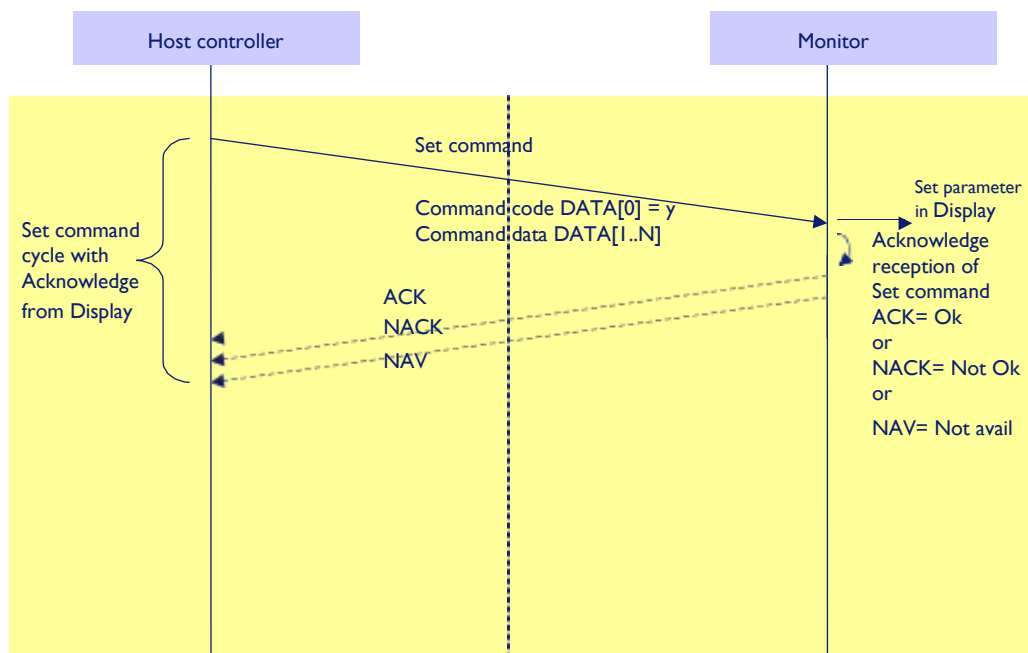


Figure 2: Explanation of mechanism of Set Command.

2.2.1 Command Format

The serial/Ethernet command packet format is as follows:

MsgSize	Control	Group	Data[0]	Data[1]	...	Data[N]	Checksum
---------	---------	-------	---------	---------	-----	---------	----------

Note: TCP/IP port 5000 is used by default for control in all displays at the time of this writing.

In detail:

Number of Field	Name of Field	Description																				
Byte 1:	MsgSize	Message Size has to be calculated in the following way: MsgSize + Control + Data(0) + ... + Data(N) + Checksum Range = 3 to 40 (0x3 to 0x28).																				
Byte 2:	Control	Message Control. Bit 7..0: Monitor ID Signal mode: Display Address range from 1 to 255 Broadcast mode: Display Address is 0 which indicates no ACK or Report is expected. The monitor will reply with the monitor ID set in the monitor. Example: Monitor ID = 03 (set in the monitor) Group ID= 02 (set in the monitor) Sending: 05 03 00 19 1F (get power state) Response: 06 03 02 19 02 1C																				
Byte 3:	Group	Group ID range in the monitor menu: Off (= 255), 1-254 <table border="1"><thead><tr><th>Monitor ID</th><th></th><th>Group ID</th><th></th></tr></thead><tbody><tr><td>0-255</td><td></td><td>0-254</td><td>Range</td></tr><tr><td>0</td><td></td><td>0</td><td>Broadcast</td></tr><tr><td>1-255</td><td></td><td>0</td><td>Control by Monitor ID</td></tr><tr><td>0-255</td><td></td><td>1-254</td><td>Control by Group ID</td></tr></tbody></table> <p>Himalaya 1.0 do not support group off (group = off or 255) Group ID value OSD setting: 1-255 Command: 0-255 If group ID = off in the monitor than the group ID byte may not been sent. Group off will not be supported in the future models, means the group byte must always be send. Example: get power state command: 04 01 19 1C (without group byte > group ID in the monitor = off) 05 01 00 19 1D (with group byte) There will be no ACK if the group byte is different than 0. The monitor will reply with the group byte ID set in the monitor. Example: Monitor ID = 03 (set in the monitor) Group ID= 02 (set in the monitor) Sending: 05 03 00 19 1F (get power state) Response: 06 03 02 19 02 1C</p>	Monitor ID		Group ID		0-255		0-254	Range	0		0	Broadcast	1-255		0	Control by Monitor ID	0-255		1-254	Control by Group ID
Monitor ID		Group ID																				
0-255		0-254	Range																			
0		0	Broadcast																			
1-255		0	Control by Monitor ID																			
0-255		1-254	Control by Group ID																			

2016 © TPV Technology Ltd., All rights reserved

Page | 9

2.3 MESSAGES – SYSTEM

2.4 Communication Control

This defines the feedback command from Philips Professional Display to host controller when it receives the display command from the host controller, depending on the commands availability, the command reported back to host controller can be one of the ACK, NACK or NAV.

Note: there is no reply message when the wrong ID address is being used.

2.4.1 Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x00 = Communication Control – Report		Generic report message after Get or Set message
DATA[1]	Communication Control		0x06 = Acknowledge (ACK) 0x15 = Not Acknowledge (NACK) 0x18 = Not Available (NAV). Command not available, not relevant or cannot execute

Example

Send:

MsgSize	Control	Group	Data (0)	Data (1)	Checksum	Description
0x06	0x01	0x00	0x00	0x01	0x06	

ACK reply: (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum	Description
0x06	0x01	0x01	0x00	0x06	0x00	Command is well executed.

Example

Send:

MsgSize	Control	Group	Data (0)	Data (1)	Checksum	Description
0x06	0x01	0x00	0x17	0x01	0x11	

NACK reply: (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum	Description
0x06	0x01	0x01	0x00	0x15	0x13	Wrong command code-Data (0), the system will reply “NACK”.

Example

Send:

MsgSize	Control	Group	Data (0)	Data (1)	Checksum	Description
0x06	0x01	0x00	0x00	0x01	0x06	

NAV reply: (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum	Description
0x06	0x01	0x01	0x00	0x18	0x1E	Checksum error, the system will reply “NAV”.

Example

Send:

MsgSize	Control	Group	Data (0)	Data (1)	Checksum	Description
0x06	0x01	0x00	0x00	0x04	0x03	

NAV reply: (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum	Description
0x06	0x01	0x01	0x00	0x18	0x1E	Wrong parameter-Data (1), the system will reply “NAV”.

Example

Send:

MsgSize	Control	Group	Data (0)	Data (1)	Checksum	Description
0x06	0x01	0x00	0x00	0x01	0x06	

NAV reply: (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum	Description
0x06	0x01	0x01	0x00	0x18	0x1E	Command is correct, while system is already in stand-by mode, so reply "NAV".

Example

Send:

MsgSize	Control	Group	Data (0)	Data (1)	Checksum	Description
0x06	0x01	0x00	0x00	0x01	0x06	

No reply: (Display address 01- not active ID)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum	Description
0x06	0x01	0x01	0x00	0x18	0x1E	Command is correct, while system would NOT reply any message due to it's not active.

Example

Send:

MsgSize	Control	Group	Data (0)	Data (1)	Checksum	Description
0x06	0x01	0x00	0x00	0x01	0x06	

No reply: (Display address 00- Broadcast ID)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum	Description
0x06	0x01	0x01	0x00	0x18	0x1E	Command is correct; all systems would NOT reply any message due to "Daisy Chain's limitation- Collision might occur.

3 Platform, SICP version, Model Number and FW, SW Version numbers

This command provides the complete set of Model & Version information

3.1 Message-Get (SICP version, platform information)

Bytes	Bytes Description	Bits	Description
DATA[0]	0xA2 = Get Platform and Version Labels		Request the SICP version
DATA[1]	Which Label		0x00 = Get SICP implementation version 0x01 = Get the platform label (Ex: Eagle, Phoenix, Himalaya, Dragon) 0x02 = Get the platform version (Ex: Eagle 1.2, Eagle 1.3, Phoenix 1.0, Himalaya 1.0, Dragon 1.0, 10BDL3051T 1.0)

Example: Get SICP version (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0xA2	0x00	0xA5

3.2 Message Report (SICP version, platform information)

Bytes	Bytes Description	Bits	Description
DATA[0]	0xA2 = Platform and Version Label – Report		Request the internal Hardware (platform) version.
DATA[1] to DATA[N]	Character[0] to Character[N-1]		36 (0x24) characters maximum. No. of characters, N = 1 to 36 (0x24). The actual size determines the value of the message size byte.

3.3 Message-Get (Model Number, FW Version, Build date)

Bytes	Bytes Description	Bits	Description
DATA[0]	0xA1 = Get Model Number & FW version of device with Date		Request the Model Number and FW version of the device
DATA[1]	Codes to request		0x00 = Model Number 0x01 = FW version 0x02 = Build Date 0x03 = Android FW version (build number)*

(*) 0x03 android FW version is supported on below [platform](#):

QL3.0 > (android: FB03.01)
Dragon 1.0 > (android: FB10.07 Scalar not implement yet)
Dragon 1.5 > (android: FB06.03 Scalar not implement yet)
Himalaya 2 > (android: FB03.10 Scalar: V1.105)
10BDL3051T > (android: FB03.07)
24BDL4151T > (android from FB03.04)
CRD50/51
And all future models.

3.4 Message-Report (Model Number, FW Version, Build date)

Bytes	Bytes Description	Bits	Description
-------	-------------------	------	-------------

DATA[0]	0xA1 = Report – Model Number & FW version of device with Date		Request the Model number, FW version, FW build date
DATA[1] to DATA[N]	Character[0] to Character[N-1]		36 (0x24) characters maximum. No. of characters, N = 1 to 36 (0x24). The actual size determines the value of the message size byte.

4 MESSAGES – GENERAL

4.1 Power state

This command is used to set/get the power state as it is defined as below.

4.1.1 Message-Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0x19 = Power state – Get		Command requests the display to report its current power state

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x19	0x1D

4.1.2 Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x19 = Power State – Report		Command reports Power state
DATA[1]	Power State		0x01 = Power Off 0x02 = On

Example: Power State On (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x01	0x19	0x02	0x1D

Special Note: 2016 model 10BDL3051T defines DATA[1] meaning as below

0x01 = Power Off (backlight off/CPU clock low)

0x02 = On (means backlight on/CPU clock normal)

4.1.3 Message-Set

Check the power save (APM, eco mode) settings in the menu of your monitor if power on is not working via the network, more information can be found in the manual of your monitor.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x18 = Power state – Set		Command to change the Power state of the display
DATA[1]	Power state		0x01 = Power Off 0x02 = On

Example: Power State Deep Sleep (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0x18	0x01	0x1E

Special Note: 2016 model 10BDL3051T defines DATA[1] meaning as below

0x01 = Power Off (backlight off/CPU clock low)

0x02 = On (means backlight on/CPU clock normal)

4.2 Lock Functions for IR-Remote Control & Keypad

The following commands separately are used to lock/unlock the Remote Control and Keypad.

4.2.1 Message-Get (IR-Remote Control)

Bytes	Bytes Description	Bits	Description
DATA[0]	0x1D = Get – Lock Status – IR – Remote Control		Get unlock all /lock all /lock all but power/lock all but volume/ Primary/Secondary status

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x1D	0x19

4.2.2 Message-Report (IR-Remote Control)

Bytes	Bytes Description	Bits	Description
DATA[0]	0x1D = Report – Lock Status – IR – Remote Control		Report unlock all /lock all /lock all but power/lock all but volume/ Primary/Secondary status
DATA[1]	Status indicator byte for Remote Control		0x01 = Unlock all 0x02 = Lock all 0x03 = Lock all but Power 0x04 = Lock all but Volume 0x05 = Primary (Master) 0x06 = Secondary (Daisy chain PD) 0x07 = Lock all except Power & Volume

Example: Unlock all on IR Remote Control on (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0x1D	0x01	0x1B

4.2.3 Message-Set (IR –Remote Control)

Bytes	Bytes Description	Bits	Description
DATA[0]	0x1C = Set – Lock State – IR – Remote Control		Set unlock all/lock all /lock all but power/lock all but volume/ Primary/Secondary status
DATA[1]	Status indicator byte for Remote Control		0x01 = Unlock all 0x02 = Lock all 0x03 = Lock all but Power 0x04 = Lock all but Volume 0x05 = Primary (Master) 0x06 = Secondary (Daisy chain PD) 0x07 = Lock all except Power & Volume

Example: IR Remote Control – lock all but power (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0x1C	0x03	0x18

4.2.3 Message-Get (Keypad)

Bytes	Bytes Description	Bits	Description
DATA[0]	0x1B = Get – Keypad Lock Status		Get unlock all /lock all/lock all but power/ lock all but Volume

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x1B	0x1F

4.2.4 Message-Report (Keypad)

Bytes	Bytes Description	Bits	Description
DATA[0]	0x1B = Report – Keypad Status		Report unlock all /lock all/lock all but power/ lock all but Volume
DATA[1]	Status indicator byte for Keypad		0x01 = Unlock all 0x02 = Lock all 0x03 = Lock all but Power* 0x04 = Lock all but Volume* 0x07 = Lock all except Power & Volume*

(*) not valid for 10BDL3151T & 24BDL2451T

Example: Reporting status of Keypad indicating Lock all for (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x01	0x1B	0x02	0x1F

4.2.5 Message-Set (Keypad)

Bytes	Bytes Description	Bits	Description
DATA[0]	0x1A = Set – Keypad Lock Status		Set unlock all/lock all /lock all but power/ lock all but Volume
DATA[1]	Status indicator byte for Keypad		0x01 = Unlock all 0x02 = Lock all 0x03 = Lock all but Power* 0x04 = Lock all but Volume* 0x07 = Lock all except Power & Volume*

(*) not valid for 10BDL3151T & 24BDL2451T

Example: Set Lock all on Keypad for (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0x1A	0x02	0x1F

4.3 Power state at Cold Start

Command is used to set the cold start power state, the cold start power state are updated and stored by this command. In the OSD setting of the monitor it is called “switch on state”.

4.3.1 Message-Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0xA4 = Power at Cold Start – Get		Get Power state at Cold Start state

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0xA4	0xA0

4.3.2 Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0xA4 = Power at Cold Start – Report		Report from Power state at Cold Start state
DATA[1]	Power at Cold Start		0x00 = Power Off 0x01 = Forced On 0x02 = Last Status

Example: Current Power state at Cold Start state: Last Status (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x01	0xA4	0x02	0xA0

4.3.3 Message-Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0xA3 = Power at Cold Start – Set		Set Power state at Cold Start
DATA[1]	Power at Cold Start		0x00 = Power Off 0x01 = Forced On 0x02 = Last Status

The value is stored and it is applied only when the display starts up from cold start power state the next time:
Power Off:

The monitor will automatically switched Off (even if the last status was on) whenever the mains power is turned on or resumed after the power interruption.

Forced On:

The monitor will be automatically switched to ON mode whenever the mains power is turned on or resumed after the power interruption.

Last Status:

The monitor will be automatically switched to the last status (either Power Off or On) whenever the mains power is turned on or resumed after the power interruption.

Example: Set Power state at cold start to last status (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0xA3	0x02	0xA6

4.4 MESSAGES – INPUT SOURCES

4.4.1 Input Source

This command is used to change or to get the current input source.

4.4.1.1 Message-Set

DATA[1] : set the current source value as below.

DATA[2]: playlist number for PDF player and Media player source input and URL number for source input browser

Bytes	Bytes Description	Bits	Description
DATA[0]	0xAC = Input Source – Set		Command requests the display to set the current input source
DATA[1]	Input Source Type/Number		0x01 = VIDEO 0x02 = S-VIDEO 0x03 = COMPONENT 0x04 = CVI 2 (not applicable) 0x05 = VGA 0x06 = HDMI 2 0x07 = Display Port 2 0x08 = USB 2 0x09 = Card DVI-D 0x0A = Display Port 1 0x0B = Card OPS 0x0C = USB 1 0x0D = HDMI 0x0E = DVI-D 0x0F = HDMI3 0x10 = BROWSER 0x11 = SMARTCMS 0x12= DMS (Digital Media Server) 0x13= INTERNAL STORAGE 0x14= Reserved 0x15 = Reserved 0x16= Media Player 0x17= PDF Player 0x18= Custom 0x19 = HDMI 4 0x1A =VGA2 0x1B = VGA3 0x1C = IWB 0x1D=CMND&Play Web 0x1E= Home/Launcher 0x1F= USB TypeC 0x20= Kiosk 0x21= Smart Info 0x22= Tuner 0x23= Google Cast

DATA[2]	<p>Start playlist file number on source input media player or PDF player. Start URL number on browser input.</p> <p>Only working on: Dragon I, Dragon I.5, I0BDL305IT, dragon I.5, Himalaya 2 & QL3 (see the platform list)</p> <p>And all new models from 2019 onwards</p> <p>The monitor will start to display the playlist or URL number.</p>		<p>0x01 = playlist file 1 or URL 1 0x02 = playlist file 2 or URL 2 0x03 = playlist file 3 or URL 3 0x04 = playlist file 4 or URL 4 0x05 = playlist file 5 or URL 5 0x06 = playlist file 6 or URL 6 0x07 = playlist file 7 or URL 7 0x08 = USB autoplay 0x09 = reserved 0x0A = reserved 0x0B = reserved 0x0C = reserved 0x0D = reserved 0x0E = reserved 0x0F = reserved 0x10 = reserved 0x11 = reserved 0x12 = reserved 0x13 = reserved 0x14 = reserved 0x15 = reserved 0x16 = reserved 0x17 = reserved 0x18 = reserved</p>
DATA[3]	OSD Style	Bit7	Reserved
		Bit6	<p>Do not switch. Source is made current. Set is updated with the details of this source; however, source change is performed.</p> <p>1 = Do not switch. 0 = Switch</p>
		Bit2.0	<p>Source info. Display Style</p> <p>0 = Reserved 1 = Source label</p>
DATA[4]	Mute Style	Bit 7	(Reserved, value is 0)
		Bit 6	(Reserved, value is 0)
		Bit 5	(Reserved, value is 0)
		Bit 4	(Reserved, value is 0)
		Bit 3	(Reserved, value is 0)
		Bit 2	(Reserved, value is 0)
		Bit 1	(Reserved, value is 0)
		Bit 0	(Reserved, value is 0)

Example: Set on DVI-D with Source label displaying on OSD (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Data (3)	Data (4)	Checksum
0x09	0x01	0x00	0xAC	0x09	0x09	0x01	0x00	0xA5

Source command examples:

HDMI 1 :	09 01 00 AC 0D 09 01 00 A1	Ack: 06 01 01 00 06 00
HDMI 2 :	09 01 00 AC 06 09 01 00 AA	Ack: 06 01 01 00 06 00
HDMI 3 :	09 01 00 AC 0F 09 01 00 A3	Ack: 06 01 01 00 06 00
HDMI 4 :	09 01 00 AC 19 09 01 00 B5	Ack: 06 01 01 00 06 00
DVI :	09 01 00 AC 0E 09 01 00 A2	Ack: 06 01 01 00 06 00
AV :	09 01 00 AC 01 09 01 00 AD	Ack: 06 01 01 00 06 00
YPBPR :	09 01 00 AC 03 09 01 00 AF	Ack: 06 01 01 00 06 00
VGA :	09 01 00 AC 05 09 01 00 A9	Ack: 06 01 01 00 06 00
DP :	09 01 00 AC 0A 09 01 00 A6	Ack: 06 01 01 00 06 00
USB :	09 01 00 AC 0C 09 01 00 A0	Ack: 06 01 01 00 06 00

OPS : 09 01 00 AC 0B 09 01 00 A7 Ack: 06 01 01 00 06 00
 BROWSER: 09 01 00 AC 10 09 01 00 BC Ack: 06 01 01 00 06 00
 SMARTCMS: 09 01 00 AC 11 09 01 00 BD Ack: 06 01 01 00 06 00
 Media player: 09 01 00 AC 16 09 01 00 BA Ack: 06 01 01 00 06 00
 PDF player: 09 01 00 AC 17 09 01 00 BB Ack: 06 01 01 00 06 00
 Custom : 09 01 00 AC 18 09 01 00 B4 Ack: 06 01 01 00 06 00

Switch to and start mediaplayer playlist 1
 09 01 00 AC 16 01 01 00 B2

Switch to and start mediaplayer playlist 2
 09 01 00 AC 16 02 01 00 B1

Switch to and start mediaplayer USB autoplay
 09 01 00 AC 16 08 01 00 BB

4.4.1.2 Message-Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0xAD = Current Source – Get		Command requests the display to report the current input source in use.

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0xAD	0xA9

4.4.1.3 Message-Report

DATA[1] will get the current source value as below.

DATA[2] will get the current selected playlist or URL number if current source is PDF player, Browser, Media player.

DATA[3], DATA[4] can be ignored by requestor or may not be returned by device depending on model .

Bytes	Bytes Description	Bits	Description
DATA[0]	0xAD = Current Source – Report		Command reports to the host controller the current input source in use by the display.
DATA[1]	Input Source Type/Number		0x01 = VIDEO 0x02 = S-VIDEO 0x03 = COMPONENT 0x04 = CVI 2 (not applicable) 0x05 = VGA 0x06 = HDMI 2 0x07 = Display Port 2 0x08 = USB 2 0x09 = Card DVI-D 0x0A = Display Port 1 0x0B= Card OPS 0x0C = USB 1 0x0D= HDMI 0x0E= DVI-D 0x0F = HDMI3 0x10= BROWSER 0x11= SMARTCMS 0x12= DMS (Digital Media Server) 0x13= INTERNAL STORAGE 0x14= Reserved 0x15= Reserved 0x16= Media Player 0x17= PDF Player 0x18= Custom

			0x19 = HDMI 4 0x1A =VGA2 0x1B = VGA3 0x1C = IWB 0x1D=CMND&Play Web 0x1E= Home/Launcher 0x1F= USB TypeC 0x20= Kiosk 0x21= Smart Info 0x22= Tuner 0x23= Google Cast
DATA[2]	<p>Get the selected playlist file number on source input media player or PDF player. Get the selected URL number on browser input.</p> <p>Only supported on Dragon 1.0, 1.5, 1.6, QL3, 10BDL3151T, 10BDL4151T, 75BDL3151T, CRD50 & Himalay 2.0 (see the platform list)</p> <p>And all the future models.</p>		0x00 = no playlist or URL 0x01 = playlist file 1 or URL 1 0x02 = playlist file 2 or URL 2 0x03 = playlist file 3 or URL 3 0x04 = playlist file 4 or URL 4 0x05 = playlist file 5 or URL 5 0x06 = playlist file 6 or URL 6 0x07 = playlist file 7 or URL 7 0x08 = USB autoplay 0x09 = reserved 0x0A = reserved 0x0B = reserved 0x0C = reserved 0x0D = reserved 0x0E = reserved 0x0F = reserved 0x10 = reserved 0x11 = reserved 0x12 = reserved 0x13 = reserved 0x14 = reserved 0x15 = reserved 0x16 = reserved 0x17 = reserved 0x18 = reserved

			0x17= PDF Player 0x18= Custom
DATA[3]	OSD Style	Bit7	Reserved
		Bit6	Reserved
		Bit2.0	Source info. Display Style 0 = Reserved 1 = Source label
DATA[4]	Mute Style	Bit 7	(Reserved, value is 0)
		Bit 6	(Reserved, value is 0)
		Bit 5	(Reserved, value is 0)
		Bit 4	(Reserved, value is 0)
		Bit 3	(Reserved, value is 0)
		Bit 2	(Reserved, value is 0)
		Bit 1	(Reserved, value is 0)
		Bit 0	(Reserved, value is 0)

Example: Current Input Source: VIDEO (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Data (3)	Data (4)	Checksum
0x09	0x01	0x01	0xAD	0xFD	0x01	0x00	0x00	0x58

4.5 Auto Signal Detecting / Failover

Failover means, if current input source has no signal system will switch to another based on settings as defined by commands below. The specification file explains the usage/behaviour.

4.5.1 Message-Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0xAF = Auto Signal Detecting – Get		Command requests the display to report its current Auto Signal Detecting status

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0xAF	0xAB

4.5.2 Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0xAF = Auto Signal Detecting – Report		Command reports Auto Signal Detecting Setting
DATA[1]	On / All / PC sources only / Video sources only / Failover		0x00 = Off 0x01 = All 0x02 = Reserved 0x03 = PC sources only 0x04 = Video sources only 0x05 = Failover

Special Note:

Some models don't have the PC sources and video sources only in the OSD, check the manual of your monitor.

Example: Current Display settings: Off and All (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x01	0xAF	0x00	0XA9
0x06	0x01	0x01	0xAF	0x01	0xA8

4.5.3 Message-Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0xAE = Auto Signal Detecting – Set		Command to change the Auto Signal Detecting setting of the display
DATA[1]	On / All / PC sources only / Video sources only / Failover		0x00 = Off 0x01 = All 0x02 = Reserved 0x03 = PC sources only 0x04 = Video sources only 0x05 = Failover

Special Note:

Some models don't have the PC sources and video sources only in the OSD, check the manual of your monitor.

Example: Set the Display to the following: Auto Signal Detecting Off (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0xAE	0x00	0xA9

4.5.4 Message-Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0xA6 = Failover – Get		Command requests the display to report its current Failover status

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0xA6	A1

4.5.5 Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0xA6 = Failover – Report		Command reports Failover Setting
DATA[1] Until DATA[17]	HDMI / Component / Composite / Display Port / DVI-D / VGA / OPS / USB / Browser / SmartCMS / Internal Storage / DMS / HDMI 2/ HDMI 3 / USB Playlist / USB AutoPlay / Media Player / PDF player / Custom/HMDI 4/ VGA2 / VGA3 / IWB / CMND&Play Web		1 st priority until 17 th priority 0x00 = HDMI 0x01 = Component 0x02 = Composite 0x03 = Display Port 0x04 = DVI-D 0x05 = VGA 0x06 = OPS 0x07 = USB 0x08 = Browser 0x09 = SmartCMS 0x0A= Internal Storage 0x0B = DMS (Digital Media Server) 0x0C = HDMI2 0x0D = HDMI3 0x0E = USB Playlist 0x0F = USB AutoPlay 0x10= Media Player 0x11= PDF Player 0x12= Custom 0x13= HDMI 4 0x14 =VGA2 0x15 = VGA3 0x16 = IWB 0x17 = CMND&Play Web 0x18= Home/Launcher 0x19= USB TypeC 0x1A= Kiosk 0x1B= Smart Info 0x1C= Tuner 0x1D= Google Cast

Example: Current Display settings: Sources priority = HDMI – Component – Composite – Display Port – DVI-D – VGA – OPS – USB – Browser – SmartCMS – Internal Storage – DMS – HDMI 2 – HDMI3 (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Data (3)	Data (4)	Data (5)
0x0D	0x01	0x01	0xA6	0x00	0x01	0x02	0x03	0x04
Data (6)	Data (7)	Data (8)	Data (9)	Data (10)	Data (11)	Data (12)	Data (13)	
0x05	0x06	0x07	0x08	0x09	0x0A	0x0B	0x0C	
Data (14)	Data (15)	Data (16)	Data (17)	Checksum				
0x0D								

4.5.6 Message-Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0xA5 = Failover – Set		Command to change the Failover setting of the display
DATA[1] Until DATA[14]	HDMI / Component / Composite / Display Port / DVI-D / VGA / OPS / USB / Browser / SmartCMS / Internal Storage / DMS / HDMI 2/ HDMI 3 / USB Playlist / USB AutoPlay / Media Player / PDF player / Custom/ HDMI 4 / VGA2 / VGA3 / IWB / CMND&Play Web		1 st priority until priority 14 0x00 = HDMI 0x01 = Component 0x02 = Composite 0x03 = Display Port 0x04 = DVI-D 0x05 = VGA 0x06 = OPS 0x07 = USB 0x08 = Browser 0x09 = SmartCMS 0x0A= Internal Storage 0x0B = DMS (Digital Media Server) 0x0C = HDMI2 0x0D = HDMI3 0x0E = USB Playlist 0x0F = USB AutoPlay 0x10= Media Player 0x11= PDF Player 0x12= Custom 0x13 = HDMI 4 0x14 =VGA2 0x15 = VGA3 0x16 = IWB 0x17 = CMND&Play Web 0x18= Home/Launcher 0x19= USB TypeC 0x1A= Kiosk 0x1B= Smart Info 0x1C= Tuner 0x1D= Google Cast

The following commands are used to get/set the color parameters for specific color temperature.

Example: Set the Display to the following: Sources priority = HDMI – Component – Composite – Display Port – DVI- D – VGA – OPS – USB – Browser – SmartCMS – Internal Storage – DMS – HDMI2 – HDMI3 (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Data (3)	Data (4)	Data (5)
0x13	0x01	0x00	0xA5	0x00	0x01	0x02	0x03	0x04
Data (6)	Data (7)	Data (8)	Data (9)	Data (10)	Data (11)	Data (12)	Data (13)	
0x05	0x06	0x07	0x08	0x09	0x0A	0x0B	0x0C	
Data (14)	Checksum							
0x0D	B6							

example:

06 01 00 AE 05 AC (set failover active)

13 01 00 A5 01 02 03 04 05 00 00 00 00 00 00 00 00 B6

4.6 Monitor restart

The following command is used to restart/reboot the monitor.

Supported from SCIP 2.02 onwards.

4.6.1 Message-Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0x57 = monitor Restart – Set		Command to restart monitor
DATA[1]	Select target system to restart		0x00 = Android 0x01 = Scalar (?)

Example: Restart Android system of the monitor (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0x57	0x00	0x50

4.7 Backlight On-Off

4.7.1 Get backlight status

Check if the backlight is off or on.

Supported from SICP 2.03 onwards.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x71 = Backlight – Get		Command to check if the backlight is on or off

Example: get the picture backlight status

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x71	0x75

The following commands are used to get/set the color parameters for specific color temperature.

Report from monitor

06 01 01 71 00 77 > get status : backlight is on

06 01 01 71 01 76 > get status : backlight is off

4.7.2 Set backlight on-off

Set the backlight on or off. (the audio will not be muted/unmuted)

Message-Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0x72 = Backlight – Set		Command to switch on-off the backlights
DATA[1]			0x00 = backlight on 0x01 = backlight off

Example: set backlight off (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0x72	0x01	0x74

06 01 00 72 00 75 > set backlight on

06 01 00 72 01 74 > set backlight off

MESSAGES – VIDEO

5.1 Video Parameters

The following commands are used to get/set video parameters as it is defined below.

Note 1: this command is not supported on below models:

10BDLxxxx

24BDL4151T

Note 2: This command is only supported on external sources (HDMI, DVI, VGA, ...) not supported on android sources (browser, PDF, installed app, custom, media player) on below models:

BDL3452T 3.0

BDL3651T 3.0

BDL3550Q

BDL4550D 3.0

5.1.1 Message-Get Video parameters

Bytes	Bytes Description	Bits	Description
DATA[0]	0x33 = Video Parameters – Get		Command requests the display to report its current video parameters.

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x33	0x37

5.1.2 Message-Report Video parameters

The following commands are used to get/set the color parameters for specific color temperature.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x33 = Video Parameters – Report		Command reports to the host controller the current video parameters of the display.
DATA[1]	Brightness.		0 to 100 (%) of the user selectable range of the display.
DATA[2]	Color.		0 to 100 (%) of the user selectable range of the display.
DATA[3]	Contrast.		0 to 100 (%) of the user selectable range of the display.
DATA[4]	Sharpness.		0 to 100 (%) of the user selectable range of the display.
DATA[5]	Tint (Hue)		0 to 100 (%) of the user selectable range of the display.
DATA[6]	Black Level		0 to 100 (%) of the user selectable range of the display.
DATA[7]	Gamma Selection		0x01 = Native, 0x02 = S gamma, 0x03 = 2.2, 0x04 = 2.4, 0x05 = D-image(DICOM gamma)

Bytes	Bytes Description	Bits	Description
DATA[0]	0x33 = Video Parameters – Report		Command reports to the host controller the current video parameters of the display.
DATA[1]	Brightness.		0 to 100 (%) of the user selectable range of the display.
DATA[2]	Color.		0 to 100 (%) of the user selectable range of the display.
DATA[3]	Contrast.		0 to 100 (%) of the user selectable range of the display.
DATA[4]	Sharpness.		0 to 10 (%) of the user selectable range of the display.
DATA[5]	Tint (Hue)		-50 to +50 (%) of the user selectable range of the display.
DATA[6]	Black Level		0 to 100 (%) of the user selectable range of the display.
DATA[7]	Gamma Selection		0x01 = Native, 0x02 = S gamma, 0x03 = 2.2, 0x04 = 2.4, 0x05 = D-image(DICOM gamma)

Example: All video parameters are set to 55 % (0x37) (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Data (3)	Data (4)	Data (5)	Data (6)	Data (7)
0x0C	0x01	0x00	0x33	0x37	0x37	0x37	0x37	0x37	0x37	0x03
Checksum										
0x3D										

5.1.3 Message-Set Video parameters

Important: see note 1 & 2 above in chapter "5.1 Video Parameters"

Bytes	Bytes Description	Bits	Description
DATA[0]	0x32 = Video Parameters – Set		Command to change the current video parameters
DATA[1]	Brightness.		0 to 100 (%) of the user selectable range of the display.
DATA[2]	Color.		0 to 100 (%) of the user selectable range of the display.
DATA[3]	Contrast.		0 to 100 (%) of the user selectable range of the display.
DATA[4]	Sharpness.		0 to 100 (%) of the user selectable range of the display.
DATA[5]	Tint (Hue)		0 to 100 (%) of the user selectable range of the display.
DATA[6]	Black Level		0 to 100 (%) of the user selectable range of the display.
DATA[7]	Gamma Selection		0x01 = Native, 0x02 = S gamma, 0x03 = 2.2, 0x04 = 2.4, 0x05 = D-image(DICOM gamma)

NOTE: Following table applicable for Phoenix 2.0 [platform](#) only (year 2015 BDLxx70EL/BDLxx90VL/BDLxx30QL/BDLxx35QL).

Bytes	Bytes Description	Bits	Description
-------	-------------------	------	-------------

The following commands are used to get/set the color parameters for specific color temperature.

DATA[0]	0x32 = Video Parameters – Set		Command to change the current video parameters
DATA[1]	Brightness.		0 to 100 (%) of the user selectable range of the display.
DATA[2]	Color.		0 to 100 (%) of the user selectable range of the display.
DATA[3]	Contrast.		0 to 100 (%) of the user selectable range of the display.
DATA[4]	Sharpness.		0 to 10 (%) of the user selectable range of the display.
DATA[5]	Tint (Hue)		-50 to +50 (%) of the user selectable range of the display.
DATA[6]	Black Level		0 to 100 (%) of the user selectable range of the display.
DATA[7]	Gamma Selection		0x01 = Native, 0x02 = S gamma, 0x03 = 2.2, 0x04 = 2.4, 0x05 = D-image(DICOM gamma)

NOTE: Following table applicable for Phoenix 2.0 [platform](#) only (year 2015 BDLxx70EL/BDLxx90VL/BDLxx30QL/BDLxx35QL).

NOTE: Tint(Hue) value (-50) ~ (-1)

-50	-49	-48	-47	-46	-45	-44	-43	-42	-41
0xCE	0xCF	0xD0	0xD1	0xD2	0xD3	0xD4	0xD5	0xD6	0xD7
-40	-39	-38	-37	-36	-35	-34	-33	-32	-31
0xD8	0xD9	0xDA	0xDB	0xDC	0xDD	0xDE	0xDF	0xE0	0xE1
-30	-29	-28	-27	-26	-25	-24	-23	-22	-21
0xE2	0xE3	0xE4	0xE5	0xE6	0xE7	0xE8	0xE9	0xEA	0xEB
-20	-19	-18	-17	-16	-15	-14	-13	-12	-11
0xEC	0xED	0xEE	0xEF	0xF0	0xF1	0xF2	0xF3	0xF4	0xF5
-10	-9	-8	-7	-6	-5	-4	-3	-2	-1
0xF6	0xF7	0xF8	0xF9	0xFA	0xFB	0xFC	0xFD	0xFE	0xFF

Example: Set all video parameters to 0x37 (55 %) (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Data (3)	Data (4)	Data (5)	Data (6)	Data (7)
0x0C	0x01	0x00	0x32	0x37	0x37	0x37	0x37	0x37	0x37	0x03
Checksum										
0x3C										

5.1.4 Message-Get Color Temperature

The following commands are used to get/set the color temperature.
Important: see note 1 & 2 above in chapter "5.1 Video Parameters"

Bytes	Bytes Description	Bits	Description
DATA[0]	0x35 = Color Temperature – Get		Command requests the display to report its current color temperature.

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x35	0x31

5.1.5 Message-Report Color Temperature

Bytes	Bytes Description	Bits	Description
-------	-------------------	------	-------------

The following commands are used to get/set the color parameters for specific color temperature.

DATA[0]	0x35 = Color Temperature – Report		Command reports to the host controller the current color temperature of the display.
DATA[1]	Color temperature		0x00 = User 1 0x01 = Native 0x02 = 11000K(Not applicable) 0x03 = 10000K 0x04 = 9300K 0x05 = 7500K 0x06 = 6500K 0x07 = 5770K (Not applicable) 0x08 = 5500K(Not applicable) 0x09 = 5000K 0x0A = 4000K 0x0B = 3400K (Not applicable) 0x0C = 3350K (Not applicable) 0x0D = 3000K 0x0E = 2800K (Not applicable) 0x0F = 2600K (Not applicable) 0x10 = 1850K (Not applicable) 0x12 = User 2

Example: The current color temperature is set to Native (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x01	0x35	0x01	0x32

5.1.6 Message-Set Color Temperature

Important: see note 1 & 2 above in chapter "5.1 Video Parameters"

Bytes	Bytes Description	Bits	Description
DATA[0]	0x34 = Color Temperature – Set		Command to change the current color parameters
DATA[1]	Color temperature		0x00 = User 1 0x01 = Native 0x02 = 11000K(Not applicable) 0x03 = 10000K 0x04 = 9300K 0x05 = 7500K 0x06 = 6500K 0x07 = 5770K (Not applicable) 0x08 = 5500K(Not applicable) 0x09 = 5000K 0x0A = 4000K 0x0B = 3400K (Not applicable) 0x0C = 3350K (Not applicable) 0x0D = 3000K 0x0E = 2800K (Not applicable) 0x0F = 2600K (Not applicable) 0x10 = 1850K (Not applicable) 0x12 = User 2

Example: The current color temperature is set to Native (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x01	0x34	0x01	0x33

The following commands are used to get/set the color parameters for specific color temperature.

5.1.7 Message-Get RGB parameters

Important: see note 1 & 2 above in chapter "5.1 Video Parameters"

And this command is not working on [platform](#) QL3 on source inputs: browser, PDF player, media player, CMND&play, installed apk.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x37 = Color Parameters – Get		Command requests the display to report its current color parameters.

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x37	0x33

5.1.8 Message-Report RGB parameters

Bytes	Bytes Description	Bits	Description
DATA[0]	0x37 = Color Parameters – Report		Command reports to the host controller the current color parameters of the display.
DATA[1]	Red color gain value		0 to 255 of the user selectable range of the display.
DATA[2]	Green color gain value		0 to 255 of the user selectable range of the display.
DATA[3]	Blue color gain value		0 to 255 of the user selectable range of the display.
DATA[4]	Red color offset value		0 to 255 of the user selectable range of the display.
DATA[5]	Green color offset value		0 to 255 of the user selectable range of the display.
DATA[6]	Blue color offset value		0 to 255 of the user selectable range of the display.

Example: All color parameters are set to 255 (0xFF) (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Data (3)	Data (4)	Data (5)	Data (6)	Check
0x0B	0x01	0x01	0x37	0xFF	0xFF	0xFF	0xFF	0xFF	0xFF	0xFF

5.1.9 Message-Set RGB parameters

Important: see note 1 & 2 above in chapter "5.1 Video Parameters"

And this command is not working on [platform](#) QL3 on source inputs: browser, PDF player, media player, CMND&play, installed apk.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x36 = Color Parameters – Set		Command to change the current color parameters
DATA[1]	Red color gain value		0 to 255 of the user selectable range of the display.
DATA[2]	Green color gain value		0 to 255 of the user selectable range of the display.
DATA[3]	Blue color gain value		0 to 255 of the user selectable range of the display.
DATA[4]	Red color offset value		0 to 255 of the user selectable range of the display.
DATA[5]	Green color offset value		0 to 255 of the user selectable range of the display.
DATA[6]	Blue color offset value		0 to 255 of the user selectable range of the display.

Example: All color parameters are set to 255 (0xFF) (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Data (3)	Data (4)	Data (5)	Data (6)	Check
0x0B	0x01	0x01	0x36	0xFF	0xFF	0xFF	0xFF	0xFF	0xFF	0xFF

5.1.9.1 Message-Get Color Temperature 100K steps

Important: see note 1 & 2 above in chapter "5.1 Video Parameters"

Bytes	Bytes Description	Bits	Description
DATA[0]	0x12 = Color Temperature 100K steps – Get		Command requests the display to report its current color temperature 100K steps.

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x12	0x16

5.1.9.2 Message-Report Color Temperature 100K steps

Bytes	Bytes Description	Bits	Description
DATA[0]	0x12 = Color Temperature 100K – Report		Command reports to the host controller the current color temperature 100K steps of the display.
DATA[1]	Color temperature steps		20 to 100 of the user selectable range of the display. 0x14(20) = 2000K 0x15(21) = 2100K 0x16(22) = 2200K 0x61(97) = 9700K 0x62(98) = 9800K 0x63(99) = 9900K 0x64(100) = 10000K

NOTE: Following table applicable for Phoenix 2.0 platform only (year 2015 BDLxx70EL/BDLxx90VL/BDLxx30QL/BDLxx35QL) and all the future models.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x12 = Color Temperature 100K – Report		Command reports to the host controller the current color temperature 100K steps of the display.
DATA[1]	Color temperature steps		20 to 100 of the user selectable range of the display. 0x1A(26) = 2600K 0x1B(27) = 2700K 0x1C(28) = 2800K 0x61(97) = 9700K 0x62(98) = 9800K 0x63(99) = 9900K 0x64(100) = 10000K

Example: The current color temperature is set to 10000K (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x01	0x12	0x64	0x70

5.1.9.3 Message-Set Color Temperature 100K steps

Important: see note 1 & 2 above in chapter "5.1 Video Parameters"

Bytes	Bytes Description	Bits	Description
DATA[0]	0x11 = Color Temperature 100K steps – Set		Command to change the current color temperature 100K steps
DATA[1]	Color temperature		20 to 100 of the user selectable range of the display. 0x14(20) = 2000K

			0x15(21) = 2100K 0x16(22) = 2200K 0x61(97) = 9700K 0x62(98) = 9800K 0x63(99) = 9900K 0x64(100) = 10000K
--	--	--	---

NOTE: Following table applicable for Phoenix 2.0 platform only (year 2015 BDLxx70EL/BDLxx90VL/BDLxx30QL/BDLxx35QL) and all the future models.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x11 = Color Temperature 100K steps – Set		Command to change the current color temperature 100K steps
DATA[1]	Color temperature		20 to 100 of the user selectable range of the display. 0x1A(26) = 2600K 0x1B(27) = 2700K 0x1C(28) = 2800K 0x61(97) = 9700K 0x62(98) = 9800K 0x63(99) = 9900K 0x64(100) = 10000K

Example: The current color temperature is set to 10000K (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x01	0x11	0x64	0x73

5.2 Picture Format

This command is used to control the display screen format.

5.2.1 Message-Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0x3B = Picture Format – Get		Command requests the display to report its current picture format

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x3B	0x3F

5.2.2 Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x3B = Picture Format – Report		Command report to the host controller the current picture format of the display.
DATA[1]	Picture Format*	Bit 7..4	Not used.
		Bit 3..0	Picture Format. 0x00 = Normal (4:3) 0x01 = Custom 0x02 = Real (1:1) 0x03 = Full 0x04 = 21:9 0x05 = Dynamic 0x06 = 16:9

Special Note:-

DATA [1] value 0x05 = Dynamic not supported in 2016 Dragon 1.0 (see [platform](#) list).

* For further explanations, please see section 6.2.3 – Message-Set.

Example: Current Picture Format is Widescreen on Full Display (Display address 01)

MsgSize	Control	Group	Data (0)	Data (0)	Checksum
0x06	0x01	0x01	0x3B	0x03	0x3E

5.2.3 Message-Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0x3A = Picture Format – Set		Command requests the display to set the specified picture format
DATA[1]	Picture Format	Bit 7..4	Not used.
		Bit 3..0	Picture Format. 0x00 = Normal 0x01 = Custom 0x02 = Real 0x03 = Full 0x04 = 21:9 0x05 = Dynamic 0x06 = 16:9

Special Note:-

DATA [1] value 0x05 = Dynamic not supported in 2016 Dragon I.x (see [platform](#) list)

The display shall respond with NAV if it receives a Picture Format that is not relevant to its Display Aspect Ratio.

The display shall ignore the [Picture Format – Set] if it receives a Picture Format that it cannot execute.

Example: Set Picture Format to Widescreen on Full Display (Display address 01)

MsgSize	Control	Group	Data (0)	Data (0)	Checksum
0x06	0x01	0x00	0x3A	0x03	0x3E

5.3 VGA video Parameters

This command is used to control the VGA video parameters.

Value in(0,10,20,30,40,50,60,70,80,90,100)

5.3.1 Message-Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0x39 = VGA Video Parameters – Get		Command requests the display to report its VGA current video parameters.

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x39	0x3D

5.3.2 Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x39 = VGA Video Parameters – Report		Command reports to the host controller the VGA current video parameters of the display.
DATA[1]	Clock		0 to 100 (%) of the user selectable range of the display.
DATA[2]	Clock Phase		0 to 100 (%) of the user selectable range of the display.
DATA[3]	H. position		0 to 100 (%) of the user selectable range of the display.
DATA[4]	V. Position		0 to 100 (%) of the user selectable range of the display.

Example: All VGA video parameters are set to 55 % (0x37) (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Data (3)	Data (4)	Checksum
0x09	0x01	0x01	0x39	0x37	0x37	0x37	0x37	0x30

5.3.4 Message-Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0x38 = VGA Video Parameters – Set		Command to change the VGA current video parameters
DATA[1]	Clock(Invalid)		0 to 100 (%) of the user selectable range of the display.
DATA[2]	Clock Phase(Invalid)		0 to 100 (%) of the user selectable range of the display.
DATA[3]	H. position		0 to 100 (%) of the user selectable range of the display.
DATA[4]	V. Position		0 to 100 (%) of the user selectable range of the display.

Example: Set all VGA video parameters to 0x37 (55 %) (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Data (3)	Data (4)	Checksum
0x09	0x01	0x00	0x38	0x37	0x37	0x37	0x37	0x30

5.4 Picture-in-Picture (PIP)

This command is used to control PIP on/off with different Quadrants of the screen.

5.4.1 Message-Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0x3D = Picture-in-Picture – Get		Command requests the display to get the specified PIP settings.

Example: Get PIP setting (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x3D	0x39

5.4.2 Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x3D = Picture-in-Picture – Report		Command reports to the host controller the current PIP settings.
DATA[1]	Picture-in-Picture	Bit 7..4	(reserved, default 0)
		Bit 0..3	0x00 = Off 0x01 = On (PIP) 0x02 = POP 0x03 = Quick swap 0x04 = PBP 2win 0x05 = PBP 3win 0x06 = PBP 4win 0x07 = PBP 3win-1 0x08 = PBP 3win-2 0x09 = PBP 4win-1 0x0A = SICP (Custom) Note: platform list 1.Eagle 1.3 platform only support (0x00 / 0x01) 2.HIMALAYA 1.0 & 1.2 platform only support (0x00 ~0x06) 3.DRAGON 1.0, 1.5, 1.6 platform only support (0x00 / 0x01/ 0x03 /0x04 / 0x0A) 4.Phoenix platform doesn't support PIP. 5. HIMALAYA 2.0 doesn't support 0X02
DATA[2]	Additional PIP parameters	Bit 7..3	(reserved, default 0)
		Bit 2..0	Position of the PIP window: 0x00 = position 0 (typically bottom-left) 0x01 = position 1 (typically top-left) 0x02 = position 2 (typically top-right) 0x03 = position 3 (typically bottom-right) 0x04 = position 4 (typically center).
DATA[3]			(reserved, default 0)
DATA[4]			(reserved, default 0)

Example: Current PIP setting is enabling and located at position 2 (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Data (3)	Data (4)	Checksum
0x09	0x01	0x00	0x3D	0x01	0x02	0x00	0x00	0x37

5.4.3 Message-Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0x3C = Picture-in-Picture – Set		Command requests the display to set the specified PIP settings.
DATA[1]	Picture-in-Picture	Bit 7..4	(reserved, default 0)
		Bit 0..3	0x00 = Off 0x01 = On (PIP) 0x02 = POP 0x03 = Quick swap 0x04 = PBP 2win 0x05 = PBP 3win 0x06 = PBP 4win 0x07 = PBP 3win-1 0x08 = PBP 3win-2 0x09 = PBP 4win-1 0x0A = SICP (Custom) Note: platform list 1.Eagle 1.3 platform only support (0x00 / 0x01) 2.HIMALAYA 1.0 & 1.2 platform only support (0x00 ~0x06) 3.DRAGON 1.0, 1.5, 1.6 platform only support (0x00 / 0x01/ 0x03 /0x04 / 0x0A) 4.Phoenix platform doesn't support PIP. 5. HIMALAYA 2.0 doesn't support 0X02
DATA[2]	Additional PIP parameters	Bit 7..2	(reserved, default 0)
		Bit 1..0	Position of the PIP window: 0x00 = position 0 (typically bottom-left) 0x01 = position 1 (typically top-left) 0x02 = position 2 (typically top-right) 0x03 = position 3 (typically bottom-right) 0x04 = position 4 (typically center).
DATA[3]			(reserved, default 0)
DATA[4]			(reserved, default 0)

Example: Set PIP ON, top-right (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Data (3)	Data (4)	Checksum
0x09	0x01	0x00	0x3C	0x01	0x02	0x00	0x00	0x37

5.4.4 Picture-In-Picture (PIP) Source

This command is used to control the PIP source settings for each display quadrant on the screen.

Himalaya I.x & 2.0 [platform](#) carries the following PIP Design only

Example: If display resolution is 4K2K, user can select input source for each Full HD quadrant.

<u>Q1 (main)</u>	Q2
Q3	Q4

PIP Set/Get can only change input source for Q2, Q3, and Q4 individually by following the commands below.

Dragon I.x [platform](#) and older [platforms](#) ([Eagle](#)) carries the following PIP Design only.

<u>Main Source</u>

5.4.4.1 Message-Get PIP source

Bytes	Bytes Description	Bits	Description
DATA[0]	0x85 = PIP Source – Get		Command requests the display to report its current PIP source setting.

This command is used to get the source for the PIP window when PIP feature is activated.

Example: Get PIP source setting (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x85	0x81

5.4.4.2 Message-Report PIP source

Dragon I.x & 1.6 [platform](#) DATA[3] & DATA[4] are not available.

Return bytes are DATA[0]~DATA[2]+Checksum byte.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x85 = PIP Source – Get		Command requests the display to report its current PIP source setting.
DATA[1]	Source Type		0xFD = Input Source (normal state) 0xFE = Reserved for smartcard
DATA[2]	Q2 Source Number		If Source types == 0xFD then... 0x01 = VIDEO 0x02 = S-VIDEO 0x03 = COMPONENT 0x04 = CVI 2 (not applicable)

		<p>0x05 = VGA 0x06 = HDMI 2 0x07 = Display Port 2 0x08 = USB 2 0x09 = Card DVI-D 0x0A = Display Port 0x0B= Card OPS 0x0C = USB 0x0D= HDMI 0x0E= DVI-D 0x0F = HDMI3 0x10= BROWSER 0x11= SMARTCMS 0x12= DMS (Digital Media Server) 0x13= INTERNAL STORAGE 0x14= Reserved 0x15= Reserved 0x16= Media Player 0x17= PDF Player 0x18= Custom 0x19 = reserved 0x1A = VGA2 0x1B = VGA3 0x1C = IWB 0x1D= CMND&Play Web 0x1E = USB TypeC 0x1F = Kiosk 0x20= Smart Info 0x21= Tuner 0x22= Google Cast</p>
DATA[3]	Q3 Source Number	<p>If Source type == 0xFD then...</p> <p>0x01 = VIDEO 0x02 = S-VIDEO 0x03 = COMPONENT 0x04 = CVI 2 (not applicable) 0x05 = VGA 0x06 = HDMI 2 0x07 = Display Port 2 0x08 = USB 2 0x09 = Card DVI-D 0x0A = Display Port 0x0B= Card OPS 0x0C = USB 0x0D= HDMI 0x0E= DVI-D 0x0F = HDMI3 0x10= BROWSER 0x11= SMARTCMS 0x12= DMS (Digital Media Server) 0x13= INTERNAL STORAGE 0x14= Reserved 0x15= Reserved 0x16= Media Player 0x17= PDF Player 0x18= Custom 0x19 = reserved 0x1A = VGA2 0x1B = VGA3</p>

			0x1C = IWB 0x1D=CMND&Play Web 0x1E = USB TypeC 0x1F = Kiosk 0x20= Smart Info 0x21= Tuner 0x22= Google Cast
--	--	--	--

DATA[4]	Q4 Source Number	<p>If Source type == 0xFD then...</p> <p>0x01 = VIDEO 0x02 = S-VIDEO 0x03 = COMPONENT 0x04 = CVI 2 (not applicable) 0x05 = VGA 0x06 = HDMI 2 0x07 = Display Port 2 0x08 = USB 2 0x09 = Card DVI-D 0x0A = Display Port 0x0B= Card OPS 0x0C = USB 0x0D= HDMI 0x0E= DVI-D 0x0F = HDMI3 0x10= BROWSER 0x11= SMARTCMS 0x12= DMS (Digital Media Server) 0x13= INTERNAL STORAGE 0x14= Reserved 0x15= Reserved 0x16= Media Player 0x17= PDF Player 0x18= Custom 0x19 = reserved 0x1A = VGA2 0x1B = VGA3 0x1C = IWB 0x1D=CMND&Play Web 0x1E = USB TypeC 0x1F= Kiosk 0x20= Smart Info 0x21= Tuner 0x22= Google Cast</p>
---------	------------------	--

Example: Get PIP source report (Display address 01, Q2 Video, Q3 VGA, Q4 DVI-D)

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Data(3)	Data(4)	Checksum
0x09	0x01	0x01	0x85	0xFD	0x01	0x05	0x0E	0x7B

5.4.4.3 Message-Set

This is the PIP source selection command

Dragon 1.x & 2.0 [platform](#) – DATA[3] & DATA[4] may not be send.

Return bytes are DATA[0]~DATA[2]+Checksum byte.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x84 = PIP Source – Set		Command requests the display to set the specified PIP source.
DATA[1]	Source Type		0xFD = Input Source (normal state) 0xFE = Reserved for smartcard
DATA[2]	Q2 Source Number		If Source type == 0xFD then... 0x01 = VIDEO 0x02 = S-VIDEO 0x03 = COMPONENT 0x04 = CVI 2 (not applicable) 0x05 = VGA 0x06 = HDMI 2 0x07 = Display Port 2 0x08 = USB 2 0x09 = Card DVI-D 0x0A = Display Port 0x0B= Card OPS 0x0C = USB 0x0D= HDMI 0x0E= DVI-D 0x0F = HDMI3 0x10= BROWSER 0x11= SMARTCMS 0x12= DMS (Digital Media Server) 0x13= INTERNAL STORAGE 0x14= Reserved 0x15= Reserved 0x16= Media Player

			0x17= PDF Player 0x18= Custom 0x19 = reserved 0x1A = VGA2 0x1B = VGA3 0x1C = IVB 0x1D= CMND&Play Web 0x1E = USB TypeC 0x1F= Kiosk 0x20= Smart Info 0x21= Tuner 0x22= Google Cast
DATA[3]	Q3 Source Number		If Source type == 0xFD then... 0x01 = VIDEO 0x02 = S-VIDEO 0x03 = COMPONENT 0x04 = CVI 2 (not applicable) 0x05 = VGA 0x06 = HDMI 2 0x07 = Display Port 2 0x08 = USB 2 0x09 = Card DVI-D 0x0A = Display Port 0x0B= Card OPS 0x0C = USB 0x0D= HDMI 0x0E= DVI-D 0x0F = HDMI3 0x10= BROWSER 0x11 = SMARTCMS 0x12= DMS (Digital Media Server) 0x13= INTERNAL STORAGE 0x14= Reserved 0x15= Reserved 0x16= Media Player 0x17= PDF Player 0x18= Custom 0x19 = reserved 0x1A = VGA2 0x1B = VGA3 0x1C = IVB 0x1D=CMND&Play Web 0x1E = USB TypeC 0x1F= Kiosk 0x20= Smart Info 0x21= Tuner 0x22= Google Cast

DATA[4]	Q4 Source Number	<p>If Source type == 0xFD then...</p> <p>0x01 = VIDEO 0x02 = S-VIDEO 0x03 = COMPONENT 0x04 = CVI 2 (not applicable) 0x05 = VGA 0x06 = HDMI 2 0x07 = Display Port 2 0x08 = USB 2 0x09 = Card DVI-D 0x0A = Display Port 0x0B= Card OPS 0x0C = USB 0x0D= HDMI 0x0E= DVI-D 0x0F = HDMI3 0x10= BROWSER 0x11= SMARTCMS 0x12= DMS (Digital Media Server) 0x13= INTERNAL STORAGE 0x14= Reserved 0x15= Reserved 0x16= Media Player 0x17= PDF Player 0x18= Custom 0x19 = reserved 0x1A = VGA2 0x1B = VGA3 0x1C = IWB 0x1D=CMND&Play Web 0x1E = USB TypeC 0x1F= Kiosk 0x20= Smart Info 0x21= Tuner 0x22= Google Cast</p>
---------	------------------	--

This command is used to select the source for the PIP window before the PIP feature is activated.

Example: Set source PIP (Display address 01, Q2 Video, Q3 VGA, Q4 DVI-D)

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Data(3)	Data(4)	Checksum
0x09	0x01	0x00	0x84	0xFD	0x01	0x05	0x0E	0x7B

Example :

set PIP source to DP: 07 01 00 84 FD 0A 75
set PIP source to VGA: 07 01 00 84 FD 05 7A

5.5 Get number of input sources

This command request the number of source inputs and which source inputs are available.
Command is available from SICP version 2.05 onwards.

5.5.1 Message-Get number of source input + the source inputs

Bytes	Bytes Description	Bits	Description
-------	-------------------	------	-------------

DATA[0]	0xAB = number of sources – Get		Command requests the number of source inputs and which source inputs are available
---------	---------------------------------------	--	--

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0xAB	0xAF

5.5.2 Message-Report current number of source inputs and the source inputs.

Bytes	Bytes Description	Bits	Description
DATA[0]	0xAB = number of sources – Report		Command reports total number of source inputs
DATA[1]	Number of source input		Total number of source inputs
DATA[2]	Source input		Source input name 1

DATA[3]	Source input		Source input name 2
DATA[x]	Source input		Source input name ...

Example:

Send 05 01 00 AB AF

For example if the monitor do have 13 source input then the reply should be like below

11 01 00 AB **0B** 0D 06 0F 19 05 0A 10 16 17 11 18 BA

0B = 11 source inputs available on the monitor

0D 06 0F 19 05 0A 10 16 17 11 18 = all the available source inputs

- | | |
|-----------------|--------|
| 1. HDMI 1 | = 0x0D |
| 2. HDMI 2 | = 0x06 |
| 3. HDMI 3 | = 0x0F |
| 4. HDMI 4 | = 0x19 |
| 5. VGA | = 0x05 |
| 6. Display port | = 0x0A |
| 7. Browser | = 0x10 |
| 8. Media player | = 0x16 |
| 9. PDF player | = 0x17 |
| 10. CMND&play | = 0x11 |
| 11. Custom | = 0x18 |

The source values can be found in command 0xAC, search in this document “Input Source – Set”

5.6 Channel number Set/Get

This command get the current channel or set the new channel number.
Command is supported on monitors with an internal tuner.

5.6.1 Get channel number

Bytes	Bytes Description	Bits	Description
DATA[0]	0xC1 = Channel Parameters – Get		Command requests the display to report its current Channel number parameter.

Example:

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0xC1	0xC5

Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0xC1 = Channel Parameters – Get		Command reports to the host controller the current Channel number parameters of the display.
DATA[1]	Channel high byte value		0x00 > 0x27
DATA[2]	Channel low byte value		0x00 > 0xFF If data [1] >= 0x27 > data[2] max = 0x0F

(*) currently the max channel number = 9999 which is 0x27 high byte value and 0x0F low byte value = 270F hex

Example1: reported channel number = 2054 (806 hex = 2054 dec)

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Checksum
0x07	0x01	0x00	0xC1	0x08	0x06	0xC9

5.6.2 Set channel number

Command is supported on monitors with an internal tuner.

Bytes	Bytes Description	Bits	Description
DATA[0]	0xC2 = Channel Parameters – Set		Command set to the host controller the current Channel number parameters of the display.
DATA[1]	Channel high byte value		0x00 > 0x27
DATA[2]	Channel low byte value		0x00 > 0xFF* If data [1] >= 0x27 > data[2] max = 0x0F

(*) currently the max channel number = 9999 which is 0x27 high byte value and 0x0F low byte value = 270F hex

Example1: set channel number = 99

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Checksum
0x07	0x01	0x00	0xC2	0x00	0x63	0xA7

More examples:

Set channel:

254 : 07 01 00 C2 00 FE 3A

1250 : 07 01 00 C2 04 E2 22

5.7 Channel number step +/-

This command set the current channel one step up or down.

Command is supported on monitors with an internal tuner.

Bytes	Bytes Description	Bits	Description
DATA[0]	0xC3 = Channel step +/-		Command set to the host controller the current Channel number with one step up or down
DATA[1]	0x00 = step down 0x01 = step up		

Example:

Channel step + : 06 01 00 C3 01 C5

Channel step - : 06 01 00 C3 00 C4

6 MESSAGES – AUDIO

6.1 Volume

This command is used to set/get the volume of speaker out and audio out as it is defined as below.

6.1.1 Message-Get current volume level speakers and audio out

Bytes	Bytes Description	Bits	Description
DATA[0]	0x45 = Volume – Get		Command requests the display to report its current Volume level

The interface to set Software must be such that they also modify the variables representing these current parameters. To mute the display, set Volume = 0 or use the volume mute command.

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x45	0x41

6.1.2 Message-Report current volume level speakers and audio out

This command can get current volume level for speaker & audio out individually. Valid values range from 0x00 (lowest 0% volume) through 0x64 (highest – 100% volume).

Some [platforms](#) don't have variable audio out and the report (Ack) is different, see the [special note](#) remark in this chapter.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x45 = Volume – Report		Command reports current Volume level
DATA[1]	Speaker Out Volume level		0 to 100 (%) of the user selectable range of the display.
DATA[2]	Audio Out Volume level		0 to 100 (%) of the user selectable range of the display.

DATA[1]	Speaker Out Volume level		0 to 60 (%) of the user selectable range of the display.
DATA[2]	Audio Out Volume level		0 to 60 (%) of the user selectable range of the display.

Example: Current Display settings: Volume:**22% (0x16)** for Speak out and **10%(0x0A)** for Audio out (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Checksum
---------	---------	-------	----------	----------	----------	----------

0x07	0x01	0x00	0x45	0x16	0x0A	0x5F
------	------	------	------	------	------	------

SPECIAL NOTE:

HIMALAYA 1.0 & 1.2 and Eagle (platforms) don't have variable audio out and data(2) is not received.
See below example: Data(1) is the speaker out volume level 100% (0x64).

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x01	0x45	0x64	0x27

6.1.3 Message-Set current volume level speakers and audio out

This command can set volume level for speaker & audio out individually. Valid values range from 0x00 (lowest 0% volume) through 0x64 (highest – 100% volume). If DATA [1] or [2] are higher than 0x64 no action will be taken in the display and current volume level will be maintained without any effect.
Some [platforms](#) don't have variable audio out and the command is different, see the [special note](#) remark in this chapter.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x44 = Volume – Set		
DATA[1]	Speaker Out Volume level		0 to 100 (%) of the user selectable range of the display.
DATA[2]	Audio Out Volume level		0 to 100 (%) of the user selectable range of the display.

DATA[1]	Speaker Out Volume level		0 to 60 (%) of the user selectable range of the display.
DATA[2]	Audio Out Volume level		0 to 60 (%) of the user selectable range of the display.

Example: Set the Display Volume to **22% (0x16)** for Speaker out and **50 % (0x32)** for Audio out (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Checksum
0x07	0x01	0x00	0x44	0x16	0x32	0x66

SPECIAL NOTE:

Himalaya 1 & 1.2 and Eagle (platforms) don't have variable audio out and data(2) may not be sent.
See below example: Data(1) is the speaker out volume level 22% (0x16).

MsgSize	Control	Group	Data(0)	Data(1)	Checksum
0x06	0x01	0x00	0x44	0x16	0x55

6.1.4 Message-Set Volume level – step up or step down for Speaker out or Audio Out

This command can set volume level in step up or step down a count for speaker & audio out individually. DATA [1] or [2] must supply “0x00” to count down a step and supply “0x01” to count up a step of volume. All other values supplied to DATA [1] or [2] will get no “response” from the display.
Some [platforms](#) don't have variable audio out and the command is different, see the [special note](#) remark in this chapter.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x41 = Volume +/- – Set		Adjust volume up/down
DATA[1]	Speaker Out.		0 : down, 1: up, 2: no change*
DATA[2]	Audio Out.		0 : down, 1: up, 2: no change*

* “2 no change” will only work in below platforms:
[Dragon 1.0](#) : from firmware phase 3 (after V1.3XX).
[Dragon 1.5](#) : from firmware phase 2 (after V1.2XX).
[Dragon 1.6](#): from start production
[Himalay 2.0](#) : from start production
 and all future models.

Example: Set the Display Volume up (0x01) (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Data(2)	Checksum
0x07	0x01	0x00	0x41	0x01	0x00	0x46

SPECIAL NOTE:

[Himalaya 1 & 1.2 and Eagle](#) (platforms) don't have variable audio out and data(2) may not be sent.
 See below example: Data(1) is the speaker out volume.

MsgSize	Control	Group	Data(0)	Data(1)	Checksum	Volume
0x06	0x01	0x00	0x41	0x00	0x46	Step -
0x06	0x01	0x00	0x41	0x01	0x47	Step +

6.1.5 Volume Limit – Speaker out

This command is used to set or get the volume limit (minimum, maximum and switch on volume) for speaker out

6.1.5.1 Message-Set Volume Limit

Bytes	Bytes Description	Bits	Description
DATA[0]	0xB8 = Volume Limits– Set for Speaker out		The 3 values must conform to the rule : Min <= Switch On <= Max
DATA[1]	Minimum Volume		0 to 100 (%) of the user selectable range of the display.
DATA[2]	Maximum Volume		0 to 100 (%) of the user selectable range of the display.
DATA[3]	Switch On Volume		0 to 100 (%) of the user selectable range of the display.

Example: Set the Display Speaker out to the following: 10% (0x0A), 77% (0x4D), 50% (0x32) (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Data (3)	Checksum
0x08	0x01	0x00	0xB8	0x0A	0x4D	0x32	0xC4

6.1.5.2 Message-Get Volume Limit

2. Bytes	Bytes Description	Bits	Description
DATA[0]	0xB6 = Volume Limits– Get for Speaker out		The 3 values must conform to the rule : Min <= Switch On <= Max
DATA[1]	Minimum Volume		0 to 100 (%) of the user selectable range of the display.
DATA[2]	Maximum Volume		0 to 100 (%) of the user selectable range of the display.
DATA[3]	Switch On Volume		0 to 100 (%) of the user selectable range of the display.

Example: send get speaker out volume limit

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0xB6	0xB2

Return example from the monitor: Get the Speaker out values as follows: 10% (0x0A), 77% (0x4D), 50% (0x32) (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Data (3)	Checksum
---------	---------	-------	----------	----------	----------	----------	----------

0x08	0x01	0x01	0xB6	0x0A	0x4D	0x32	0xCB
------	------	-------------	------	------	------	------	------

6.1.6 Volume Limit – Audio out

This command is used to set or get the volume limit (minimum, maximum and switch on volume) for Audio out

6.1.6.1 Message-Set Volume Limit – Audio out

Bytes	Bytes Description	Bits	Description
DATA[0]	0xB9 = Volume Limits– Set for Audio out.		The 3 values must conform to the rule : Min <= Switch On <= Max
DATA[1]	Minimum Volume		0 to 100 (%) of the user selectable range of the display.
DATA[2]	Maximum Volume		0 to 100 (%) of the user selectable range of the display.
DATA[3]	Switch On Volume		0 to 100 (%) of the user selectable range of the display.

SPECIAL NOTE:

Following DATA [1], DATA [2], DATA [3], applicable for Phoenix 2.0 platform only (year 2015
BDLxx70EL/BDLxx90VL/BDLxx30QL/BDLxx35QL)

DATA[1]	Minimum Volume		0 to 60 (%) of the user selectable range of the display.
DATA[2]	Maximum Volume		0 to 60 (%) of the user selectable range of the display.
DATA[3]	Switch On Volume		0 to 60 (%) of the user selectable range of the display.

Example: Set the Display Audio out to the following: 10% (0x0A), 77% (0x4D), 50% (0x32) (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Data (3)	Checksum
0x08	0x01	0x00	0xB9	0x0A	0x4D	0x32	0xC5

6.1.6.2 Message-Get Volume Limit – Audio out

Bytes	Bytes Description	Bits	Description
DATA[0]	0xB7 = Volume Limits– Get values for Audio out.		The 3 values must conform to the rule : Min <= Switch On <= Max
DATA[1]	Minimum Volume		0 to 100 (%) of the user selectable range of the display.
DATA[2]	Maximum Volume		0 to 100 (%) of the user selectable range of the display.
DATA[3]	Switch On Volume		0 to 100 (%) of the user selectable range of the display.

SPECIAL NOTE:

Following DATA [1], DATA [2], DATA [3], applicable for Phoenix 2.0 platform only (year 2015
BDLxx70EL/BDLxx90VL/BDLxx30QL/BDLxx35QL)

DATA[1]	Minimum Volume		0 to 60 (%) of the user selectable range of the display.
DATA[2]	Maximum Volume		0 to 60 (%) of the user selectable range of the display.
DATA[3]	Switch On Volume		0 to 60 (%) of the user selectable range of the display.

Example: send get audio out volume limit

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0xB7	0xB3

Get example of the Display Audio out values as follows: 10% (0x0A), 77% (0x4D), 50% (0x32) (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Data (3)	Checksum
0x08	0x01	0x01	0xB7	0x0A	0x4D	0x32	0xCA

6.1.7 Audio Parameters

This command is used to set/get the audio parameters as it is defined as below.

6.1.7.1 Message-Get

Bytes	Bytes Description	Bits	Description
-------	-------------------	------	-------------

DATA[0]	0x43 = Audio Parameters – Get		Command requests the display to report its current audio parameters
---------	--------------------------------------	--	---

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x43	0x47

6.1.7.2 Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x43 = Audio Parameters – Report		Command reports Audio Parameters
DATA[1]	Treble.		0 to 100 (%) of the user selectable range of the display.
DATA[2]	Bass.		0 to 100 (%) of the user selectable range of the display.

SPECIAL NOTE:

Following DATA [1], DATA [2] applicable for Phoenix 2.0 platform only (year 2015
BDLxx70EL/BDLxx90VL/BDLxx30QL/BDLxx35QL)

DATA[1]	Treble.		-8 to 8 are the boundaries of the user selectable range of the display.
DATA[2]	Bass.		-8 to 8 are the boundaries of the user selectable range of the display.

Example: Current Display settings: Treble: 80% (0x50), Bass: 93% (0x5D) (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Checksum
0x07	0x01	0x01	0x43	0x50	0x5D	0x49

6.1.7.3 Message-Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0x42 = Audio Parameters – Set		Command to change the Audio Parameters of the display
DATA[1]	Treble.		0 to 100 (%) of the user selectable range of the display.
DATA[2]	Bass.		0 to 100 (%) of the user selectable range of the display.

SPECIAL NOTE:

Following DATA [1], DATA [2] applicable for Phoenix 2.0 platform only (year 2015
BDLxx70EL/BDLxx90VL/BDLxx30QL/BDLxx35QL)

DATA[1]	Treble.		-8 to 8 are the boundaries of the user selectable range of the display.
DATA[2]	Bass.		-8 to 8 are the boundaries of the user selectable range of the display.

SPECIAL NOTE: Following table applicable for Phoenix 2.0 platform only (year 2015
BDLxx70EL/BDLxx90VL/BDLxx30QL/BDLxx35QL)

The value (-8) ~ (-1)

-8	-7	-6	-5	-4	-3	-2	-1
0xF8	0xF9	0xFA	0xFB	0xFC	0xFD	0xFE	0xFF

The interface to set Software must be such that they modify the variables representing these current parameters

Example: Set the Display to the following: Treble: 77% (0x4D), Bass: 77% (0x4D) (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Checksum
0x07	0x01	0x00	0x42	0x4D	0x4D	0x44

6.2 Volume mute

The command is supported from SICP 2.00 onwards.

This command mute the volume of the internal speakers and audio out.

6.2.1 Get volume mute status

Bytes	Bytes Description	Bits	Description
DATA[0]	0x46 = Volume mute - Get		Command report current volume mute status

Example : get volume mute status

MsgSize	Control	Group	Data (0)	checksum
0x05	0x01	0x00	0x46	0x42

Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x46 = Volume mute - Get		Command report current volume mute status
DATA[1]			0x01 = mute on 0x00= mute off

Example: current volume mute is on

MsgSize	Control	Group	Data (0)	Data (1)	checksum
0x06	0x01	0x01	0x46	0x01	0x41

6.2.2 Set volume mute

Bytes	Bytes Description	Bits	Description
DATA[0]	0x47 = Volume mute - Set		Command set current volume mute
DATA[1]			0x01 = mute on 0x00= mute off

Example: set volume mute off

MsgSize	Control	Group	Data (0)	Data (1)	checksum
0x06	0x01	0x00	0x47	0x00	0x40

6.3 Speakers on-off

6.3.1 Get Speakers status

This command is supported from SICP 2.07 onwards.

This command report if the internal speakers are on or off.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x8F = Speaker on/off – Get		Command report current speakers status

Example : get speaker status

MsgSize	Control	Group	Data (0)	checksum
0x05	0x01	0x00	0x8F	0x8B

Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x8F = Speaker on/off – Get		Command report current speakers status
DATA[1]			0x01 = speakers on 0x00= speakers off

Example: the internal speakers are on

MsgSize	Control	Group	Data (0)	Data (1)	checksum
0x06	0x01	0x01	0x8F	0x01	0x89

6.3.2 Set Speakers on-off

This command is supported from SICP 2.07 onwards.
The command set the internal speakers on or off.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x8E = Speaker on/off – Set		Command set current speakers on or off.
DATA[1]			0x01 = speakers on 0x00= speakers off

Example: set speakers off

MsgSize	Control	Group	Data (0)	Data (1)	checksum
0x06	0x01	0x00	0x8E	0x00	0x89

Set speakers off : 06 01 00 8E 00 89

Set speakers on : 06 01 00 8E 01 88

6.4 Audio sync

Supported from SICP 2.07 onwards.

The following commands are used to get/set the Audio sync parameters as it is defined below.

6.4.1 Get Audio sync status

Bytes	Bytes Description	Bits	Description
DATA[0]	0x8D = Audio sync Parameters – Get		Command requests the display to report its current Audio sync parameter.

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x8D	0x89

Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x8D = audio sync Parameters – Get		Command reports to the host controller the current Audio sync parameter of the display.
DATA[1]	Audio sync		0x00 = off 0x01 = on

Example 1: Report audio sync ON

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x01	0x8D	0x01	0x8A

6.4.2 Set Audio sync status

Supported from SICP 2.07 onwards.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x8C = audio sync Parameters – Set		Command set Audio sync parameter on or off
DATA[1]	Audio sync parameter		0x00 = off 0x01 = on

Example I: set audio sync on

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0x8C	0x01	0x8A

Set audio sync on 06 01 00 8C 01 8A

Set audio sync off: 06 01 00 8C 00 8B

7. MISCELLANEOUS

7.1 Operating Hours

The command is used to record the working hours of the display.

7.1.1 Message-Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0x0F = Misc. Info – Get		Command requests the display to report from miscellaneous information parameters
DATA[1]	Item		0x02 = Operating Hours (All other values are reserved)

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0x0F	0x02	0x0A

7.1.2 Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x0F = Misc. Info – Report		Command reports current Operating Hours
DATA[1] to DATA[2]	Operating Hours		DATA [1] and DATA [2] form the MS Byte and LSByte, respectively, of the 16-bit-wide Operational Hours value.

Example: Current Display Operation Hours counter value (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Checksum
0x07	0x01	0x01	0x0F	0x4D	0x00	0x45

7.2 Power Saving Mode

This command is used for dimming back light power consumption control. Different levels of power consumptions can be achieved by using this command.

7.2.1 Message-Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0xDE = Smart Power – Get		Command requests the display to get the specified Power Saving Mode.

Example: Get the Smart Power Level (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0xDE	0xDA

7.2.2 Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0xDE = Smart Power – Report		Command reports Power Saving Mode Setting
DATA[1]	Level of Smart Power control		0x00 = OFF 0x01 = Low (defined to be same as OFF) 0x02 = Medium 0x03 = High

Example: Current Display settings: Power Saving Mode setting is Low (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x01	0xDE	0x01	0xD9

7.2.3 Message-Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0xDD = Smart Power – Set		Command requests the display to set the specified Power Saving Mode.
DATA[1]	Level of Smart Power control		For the currently-defined Type = 0: 0x00 = OFF (no special action, default mode) 0x01 = Low (defined to be same as OFF) 0x02 = Medium 0x03 = High (highest power-saving mode)

Example: Set the Display to Medium Smart Power Level (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0xDD	0x02	0xD8

Note1: This command controls the level of power-saving when the display is active-on.

Note2: Exactly how this feature is implemented, or whether it can be done at all, depends on the platform. It is possible that the picture quality might be compromised as a trade-off.

7.3 Auto Adjust

This command works for VGA (host controller) video auto adjust.

7.3.1 Message-Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0x70 = Video Alignment – Set		Command requests the display to make auto adjustment on VGA Input source.
DATA[1]	Item		0x40 = Auto Adjust (* All other values are reserved *)
DATA[2]			(reserved, default 0)

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Checksum
0x07	0x01	0x00	0x70	0x40	0x00	0x36

7.4 Temperature Sensors

Compare two sensor data and report higher value of the two sensors in 1 data byte for reporting.

7.4.1 Message-Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0x2F = Temperature Sensor – Get		Command requests the display to report its value of the temperature sensors ($\pm 3^{\circ}\text{C}$).

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x2F	0x2B

7.4.2 Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x2F = Temperature Sensor – Report		Command reports Temperature sensor value
DATA[1]	Temperature Sensor 1		0-100 in Celsius degrees represented in hex.
DATA[2]	Temperature Sensor 2		0-100 in Celsius degrees represented in hex.

SPECIAL NOTE: 2016 Dragon 1.0 & 2.0 [platform](#) only supports DATA[1] only. DATA[2] value is invalid.

Example: Current Temp Sensor 1 read out: = 28°C (Display address 01)

Current Temp Sensor 2 read out: = 31°C (Display address 02)

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Checksum
0x07	0x01	0x01	0x2F	0x1C	0x1F	0x2B

7.5 Serial Code

7.5.1 Message-Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0x15 = Serial Code Get		Command requests the display to report its Serial Code Number (Production code) 14 digits

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x15	0x11

7.5.2 Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x15 = Serial Code – Report		Command reports Serial Code
DATA[1]	1 st Character		Character acc. ASCII character map (HEX)
DATA[2]	2 nd Character		
DATA[3]	3 rd Character		
DATA[14]	14 th Character		Character acc. ASCII character map (HEX)

Example: Current Display settings: Serial Code = HA1A0917123456 (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Data (3)	Data (4)	Data (5)	Data (6)	Data (7)
0x13	0x01	0x01	0x15	0x48	0x41	0x31	0x41	0x30	0x39	0x31

Data (8)	Data (9)	Data (10)	Data (11)	Data (12)	Data (13)	Data (14)	Checksum
0x37	0x31	0x32	0x33	0x34	0x35	0x36	0x77

7.6 Tiling

The command is used to set/get the tiling status as it is defined as below. Tiling is basically splitting video content to appear in more than one display. Video wall, is an example.

7.6.1 Message-Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0x23 = Tiling – Get		Command requests the display to report Tiling status.

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x23	0x27

7.6.2 Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x23 = Tiling – Report		Command reports Tiling Setting
DATA[1]	Enable		0x00 = No 0x01 = Yes
DATA[2]	Frame comp.		0x00 = No 0x01 = Yes
DATA[3]	Position		0x01 = position 1 0x02 = position 2 ... See Note 1
DATA[4]	V Monitors, H Monitors		0x00 = don't care 0x01 = V Monitors =1, H Monitors =1 0x02 = V Monitors =1, H Monitors =2 ... See Note 2

Note 1:

(1) For Zero Bezel models, the maximum Position value is 150 (hexadecimal value is 0x96).

(2) For other models, the maximum Position value is 25 (hexadecimal value is 0x19).

(3) The Position is counted from left to right, then up to down in the Tiling Wall.

Example: See Figure 3 for the hexadecimal Position value in a 4x3 (H Monitors x V Monitors) Tiling Wall.

Example: See Figure 4 for the hexadecimal Position value in a 5x5 (H Monitors x V Monitors) Tiling Wall.

Example: See Figure 5 for the hexadecimal Position value in a 15x10 (H Monitors x V Monitors) Tiling Wall.

Note 2:

(20) For Zero Bezel models, the maximum H Monitors are 15 and the maximum V Monitors are 10. The formulas for DATA [4], V Monitors, and H Monitors are as follows:

H Monitors = MOD (Data [4], 15) (Data [4] ÷ 15, take the remainder)

V Monitors = INT (Data [4], 15) + 1 (Data [4] ÷ 15, take the quotient and plus one)

Data [4] = (V Monitors – 1) x 15 + H Monitors

Example: If H Monitors = 12 and V Monitors = 6, the Data [4] value will be (6–1) x 15 + 12 = 87

(2) For other models, the maximum H Monitors and V Monitors are 5, and the formulas for DATA [4], V Monitors, and H Monitors are as follows:

H Monitors = MOD (Data [4], 5) (Data [4] ÷ 5, take the remainder)

V Monitors = INT (Data [4], 5) + 1 (Data [4] ÷ 5, take the quotient and plus one)

$\text{Data [4]} = (\text{V Monitors} - 1) \times 5 + \text{H Monitors}$
 Example: If H Monitors = 4 and V Monitors = 3, the Data [4] value will be $(3-1) \times 5 + 4 = 14$.

Example for BDL4675XU, Display address 01,

Set the display as follows:

Tiling enabled: Yes

Frame comp.: No

Position: 2

H Monitors: 3

V monitors: 2

Data [4] value will be: $(2-1) \times 5 + 3 = 18$ (hex value: 0x12)

MsgSize	Control	Group	Data[0]	Data (1)	Data (2)	Data (3)	Data (4)	Checksum
0x09	0x01	0x01	0x23	0x01	0x00	0x02	0x12	0x3B

Example for BDL4230E, Display address 01

Set the display as follows:

Tiling enabled: Yes

Frame comp.: No

Position: 2

H Monitors: 3

V monitors: 2

Data [4] value will be: $(2-1) \times 5 + 3 = 8$

MsgSize	Control	Group	Data[0]	Data (1)	Data (2)	Data (3)	Data (4)	Checksum
0x09	0x01	0x01	0x23	0x01	0x00	0x02	0x08	0x21

Figure 3. The hexadecimal Position value in a 4x3 (H Monitors x V Monitors) Tiling Wall.

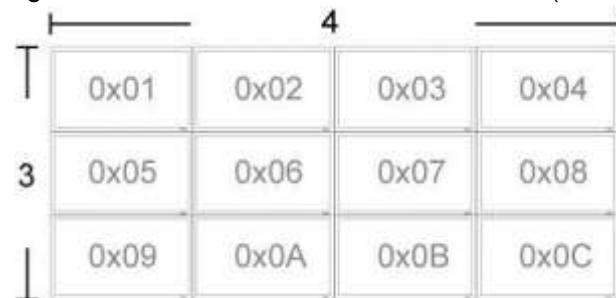


Figure 4. The hexadecimal Position value in a 5x5 (H Monitors x V Monitors) Tiling Wall.


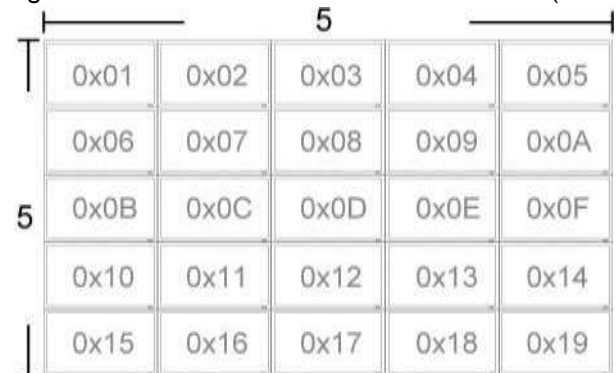


Figure 5. The hexadecimal Position value in a 15x10 (H Monitors x V Monitors) Tiling Wall.

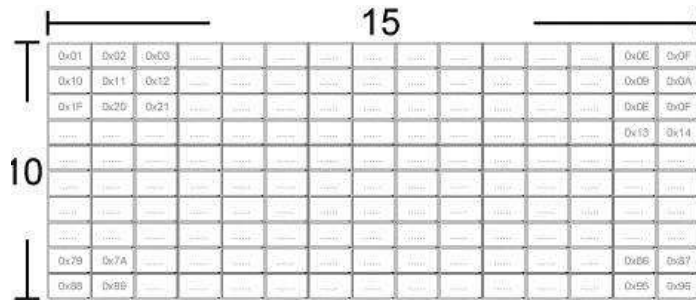

7.6.3 Message-Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0x22 = Tiling – Set		Command reports Tiling Setting
DATA[1]	Enable		0x00 = No 0x01 = Yes
DATA[2]	Frame comp.		0x00 = No 0x01 = Yes 0x02 = don't overwrite (keep previous value)
DATA[3]	Position		0x00 = don't overwrite (keep previous value) 0x01 = position 1 0x02 = position 2 ... See Note 1 at 8.6.2
DATA[4]	V Monitors, H Monitors		0x00 = don't overwrite (keep previous value) 0x01 = V Monitors =1, H Monitors =1 0x02 = V Monitors =1, H Monitors =2 ... See Note 2 at 8.6.2

Example for BDL4675XU, Display address: 01

Set the display as follows:

Tiling enabled: Yes

Frame comp.: No

Position: 2

H Monitors: 3

V monitors: 2

Data [4] value will be $(2-1) \times 15 + 3 = 18$ (hex value: 0x12)

MsgSize	Control	Group	Data[0]	Data (1)	Data (2)	Data (3)	Data (4)	Checksum
0x09	0x01	0x00	0x22	0x01	0x00	0x02	0x12	0x3B

Example for BDL4675XU, Display address 01

Set the display as follows:

Tiling enabled: Yes

Frame comp., Position, H Monitors, V Monitors: Keep as before

MsgSize	Control	Group	Data[0]	Data (1)	Data (2)	Data (3)	Data (4)	Checksum
0x09	0x01	0x00	0x22	0x01	0x02	0x00	0x00	0x29

Example for BDL4230E, Display address 01

Set the display as follows:

Tiling enabled: Yes

Frame comp.: No

Position: 2

H Monitors: 3

V monitors: 2

MsgSize	Control	Group	Data[0]	Data (1)	Data (2)	Data (3)	Data (4)	Checksum
0x09	0x01	0x00	0x22	0x01	0x00	0x02	0x08	0x21

Example for BDL4230E, Display address 01

Set the display as follows:

Tiling enabled: Yes

Frame comp., Position, H Monitors, V Monitors: Keep as before

MsgSize	Control	Group	Data[0]	Data (1)	Data (2)	Data (3)	Data (4)	Checksum
0x09	0x01	0x00	0x22	0x01	0x02	0x00	0x00	0x29

7.7 AnyTile (Canvas)

Tiling can be set beyond the OSD menu options and therefore can be flexible to a certain extent allowable by command thresholds.

SPECIAL NOTE: only 2016 Dragon 1.x, Dragon 1.6 & Himalaya2.0 [platform](#) supports these commands

Those commands only work if the the canvas tiling is activated from the admin menu.

7.7.1 AnyTile Assign Group ID and monitor ID

Change the monitor ID & Group ID of the monitor, this command is only working via IP connection and not via RS232.

Bytes	Bytes Description	Bits	Description
DATA[0]	0xC0 = Set Group ID & Monitor ID (this command only works via IP)		Change Group ID and monitor ID of the monitor
DATA[1]	Monitor ID		Monitor ID
DATA[2]	Group ID		Group ID

7.7.2 Display monitor ID

Bytes	Bytes Description	Bits	Description
DATA[0]	0x4C = Display monitor ID – Set		Enable or Disable displaying monitor ID on the monitor
DATA[1]	Monitor ID		

7.7.3 AnyTile –Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x4A = Custom Tiling – Report		Command reports Custom Tiling Setting
DATA[1]	Enable		0x00 = No 0x01 = Yes
DATA[2]	Rotation (lsb)		0 degree > lsb= 0x00 & msb= 0x00 90 degree > lsb= 0x5A & msb= 0x00 270 degree > lsb= 0x0E & msb= 0x10
DATA[3]	Rotation (msb)		
DATA[4]	Input H Start(lsb)		H Start of captured input picture(lsb).
DATA[5]	Input H Start(msb)		H Start of captured input picture(msb).
DATA[6]	Input V Start(lsb)		V Start of captured input picture(lsb).
DATA[7]	Input V Start(msb)		V Start of captured input picture(msb).
DATA[8]	Input H Size(lsb)		H Size of captured input picture(lsb).
DATA[9]	Input H Size(msb)		H Size of captured input picture(msb).
DATA[10]	Input V Size(lsb)		V Size of captured input picture(lsb).
DATA[11]	Input V Size(msb)		V Size of captured input picture(msb).

Example: 05 01 00 4A 4E

Data[4] to Data[11] is the pixel value in hex, max value depends of the panel.

If FHD : max = 1920/1080

7.7.4 AnyTile Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0x4B = Custom Tiling –		Command reports Custom Tiling Setting
DATA[1]	Enable		0x00 = No 0x01 = Yes
DATA[2]	Rotation (lsb)		0 degree 90 degree 270 degree
DATA[3]	Rotation (msb)		
DATA[4]	Input H Start(lsb)		H Start of captured input picture(lsb).
DATA[5]	Input H Start(msb)		H Start of captured input picture(msb).
DATA[6]	Input V Start(lsb)		V Start of captured input picture(lsb).
DATA[7]	Input V Start(msb)		V Start of captured input picture(msb).
DATA[8]	Input H Size(lsb)		H Size of captured input picture(lsb).
DATA[9]	Input H Size(msb)		H Size of captured input picture(msb).
DATA[10]	Input V Size(lsb)		V Size of captured input picture(lsb).
DATA[11]	Input V Size(msb)		V Size of captured input picture(msb).

7.7.4 AnyTile Set/Get Resolution Mode

Bytes	Bytes Description	Bits	Description
DATA[0]	0x4E = Display monitor ID – Get 0x4F = Display monitor ID – Set		Set/get the resolution input mode
DATA[1]	Mode		0x00 : default 0x01 : FHD 0x02 : UHD4K

7.8 Light Sensor

The command is used to set/get the light sensor status as it is defined as below.

7.8.1 Message-Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0x25 = Light Sensor – Get		Command requests the display to report its current light sensor status

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x25	0x21

7.8.2 Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x25 = Light Sensor – Report		Command reports Light Sensor Setting
DATA[1]	On / Off		0x00 = Off 0x01 = On 0xFF = HVV unavailable in this model

Example: Current Display settings: Off and On (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x01	0x25	0x00	0x23
0x06	0x01	0x01	0x25	0x01	0x22

7.8.3 Message-Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0x24 = Light Sensor – Set		Command to change the Light Sensor setting of the display
DATA[1]	On / Off		0x00 = Off 0x01 = On

Example: Set the Display to the following: Light Sensor off (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0x24	0x00	0x23

7.9 Human Sensor

The command is used to set/get the external human sensor (CRD41) status as it is defined as below.

The command is available from SICP 1.99 onwards and if Human sensor is supported on the monitor.

7.9.1 Human Sensor Message-Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0xB3 = Human Sensor – Get		Command requests the display to report its current Human sensor time status

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0xB3	0xB7

7.9.2 Human Sensor Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0xB3 = Human Sensor – Report		Command reports Human Sensor Setting
DATA[1]	Off /mins		0x00 = Off 0x01 = 10 mins 0x02 = 20 mins 0x03 = 30 mins 0x04 = 40 mins 0x05 = 50 mins 0x06 = 60 mins 0xFF = HW unavailable in this model

Example: Current Display settings: Off and 30 mins (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x01	0xB3	0x00	0xB5
0x06	0x01	0x01	0xB3	0x03	0xB6

7.9.3 Human Sensor Message-Set

Bytes	Bytes Description	Bits	Description
-------	-------------------	------	-------------

DATA[0]	0xB4 = Human Sensor – Set		Command to change the Human Sensor setting of the display
DATA[1]	Off /mins		0x00 = Off 0x01 = 10 mins 0x02 = 20 mins 0x03 = 30 mins 0x04 = 40 mins 0x05 = 50 mins 0x06 = 60 mins

Example: Set the Display to the following: Human Sensor off and 50 mins (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0xB4	0x00	0xB3
0x06	0x01	0x00	0xB4	0x05	0xB6

7.10 OSD Rotating

The command is used to set/get the OSD menu direction as it is defined as below.

7.10.1 Message-Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0x27 = OSD Rotating – Get		Command requests the display to report its current OSD rotating status

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x27	0x23

7.10.2 Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x27 = OSD Rotating – Report		Command reports OSD Rotating Setting
DATA[1]	On / Off		0x00 = Off 0x01 = On

Example: Current Display settings: Off and On (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x01	0x27	0x00	0x21
0x06	0x01	0x01	0x27	0x01	0x20

7.10.3 Message-Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0x26 = OSD Rotating – Set		Command to change the OSD Rotating setting of the display
DATA[1]	On / Off		0x00 = Off 0x01 = On

Example: Set the Display to the following: OSD rotating Off (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0x26	0x00	0x21

7.11 Display Orientation

The command is used to set/get the Orientation (= rotate content) of the display.

Supported from SICP 1.90 onwards.

Not all the monitors support this rotation command, check the manual of your monitor if rotation is supported.

7.11.1 Message-Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0x16 = Display Orientation – Get		Command requests the display to report its current Display orientation status

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x16	0x12

7.11.2 Message-Report

Himalaya2.0 [platform](#) only support OSD Rotation(DATA[2]) and Image rotation on main window(DATA[4]).

Bytes	Bytes Description	Bits	Description
DATA[0]	0x16 = Display Orientation Report		Command reports Display orientation status
DATA[1]	Auto Rotate		0x00 = Off 0x01 = On (only available on Dragon 1 & 1.5 platform)
DATA[2]	OSD Rotation		0x00 = Landscape 0x01 = Portrait
DATA[3]	Image All		0x00 = Off 0x01 = On (not supported on the CRD50) 0x02 = On Clock Wise* 0x03 = On Counter Clock Wise* (*) only supported on the CRD50
DATA[4]	Display Window 1(Main)		0x00 = Off 0x01 = On
DATA[5]	Display Window 2(Sub1)		0x00 = Off 0x01 = On
DATA[6]	Display Window 3(Sub2)		0x00 = Off 0x01 = On
DATA[7]	Display Window 4(Sub3)		0x00 = Off 0x01 = On

7.11.3 Message-Set

Himalaya2.0 [platform](#) only support OSD Rotation(DATA[2]) and Image rotation on main window(DATA[4]).
Some monitors don't support rotation (on all the source inputs), check the manual of your monitor.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x17 = Display Orientation Set		Command sets Display orientation details

DATA[1]	Auto Rotate		0x00 = Off 0x01 = On (only available on Dragon 1 & 1.5 platform)
DATA[2]	OSD Rotation		0x00 = Landscape 0x01 = Portrait
DATA[3]	Image All		0x00 = Off 0x01 = On (not supported on the CRD50) 0x02 = On Clock Wise* 0x03 = On Counter Clock Wise* (*) only supported on the CRD50
DATA[4]	Display Window 1(Main)		0x00 = Off 0x01 = On
DATA[5]	Display Window 2(Sub1)		0x00 = Off 0x01 = On
DATA[6]	Display Window 3(Sub2)		0x00 = Off 0x01 = On
DATA[7]	Display Window 4(Sub3)		0x00 = Off 0x01 = On

Example:

Set landscape: 0C 01 00 17 00 00 00 00 00 00 00 1A

Set portrait: 0C 01 00 17 00 01 01 01 00 00 00 1B

7.11 Information OSD

The command is used to set/get the Information OSD Feature as it is defined as below.

7.11.1 Message-Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0x2D = Information OSD Feature – Get		Command requests the display to report its current Information OSD Feature status

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x2D	0x29

7.11.2 Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x2D = Information OSD Feature – Report		Command reports the Information OSD Feature enabled or disabled
DATA[1]	Off, 1 – 60		0x00 = Off 0x01 – 0x3C = 1 – 60

Example: Current Display Information OSD Feature settings: Off (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x01	0x2D	0x00	0x2B

7.11.3 Message-Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0x2C = Information OSD Feature – Set		Command to set the Information OSD Feature of the display enabled or disabled
DATA[1]	Off, 1 – 60		0x00 = Off 0x01 – 0x3C = 1 – 60

Example: Set the Display to the following: Information OSD Feature: Off (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0x2C	0x00	0x2B

7.12 MEMC Effect

The command is used to set/get the MEMC effects as it is defined as below.

NOTE: check in the manual if your monitor do support the MEMC feature.

7.12.1 Message-Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0x29 = MEMC Effect – Get		Command requests the display to report its current MEMC effect status

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x29	0x2D

7.12.2 Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x29 = MEMC Effect – Report		Command reports the MEMC effect level
DATA[1]	Off/Low/Medium/High		0x00 = Off 0x01 = Low 0x02 = Medium 0x03 = High

Example: Current Display MEMC settings: Off (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x01	0x29	0x00	0x2F

7.12.3 Message-Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0x28 = MEMC Effect – Set		Command to set the MEMC level of the display for various picture motion performance
DATA[1]	Off/Low/Medium/High		0x00 = Off 0x01 = Low 0x02 = Medium 0x03 = High

Example: Set the Display to the following: MEMC Effect off (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0x28	0x00	0x2F

7.13 Touch Feature

The command is used to set/get the Touch Feature as it is defined as below.

NOTE: Himalaya 1.0 & 1.2 Dragon 1.x & 2.0 [platform](#) does NOT support this commands.

7.13.1 Message-Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0x1F = Touch Feature – Get		Command requests the display to report its current Touch Feature status

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x1F	0x1B

7.13.2 Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x1F = Touch Feature – Report		Command reports the Touch Feature enabled or disabled
DATA[1]	On / Off		0x00 = Off 0x01 = On

Example: Current Display Touch Feature settings: Off (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x01	0x1F	0x00	0x19

7.13.3 Message-Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0x1E = Touch Feature – Set		Command to set the Touch Feature of the display enabled or disabled
DATA[1]	On /Off		0x00 = Off 0x01 = On

Example: Set the Display to the following: Touch Feature off (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0x1E	0x00	0x19

7.14 Noise Reduction

The command is used to set/get the Noise reduction Feature as it is defined as below.

7.14.1 Message-Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0x2B = Noise Reduction Feature – Get		Command requests the display to report its current Noise Reduction status

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x2B	0x2F

7.14.2 Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x2B = Noise reduction Feature – Report		Command reports the Noise Reduction Feature enabled or disabled
DATA[1]	Off / Low / Middle / High		0x00 = Off 0x01 = Low 0x02 = Middle 0x03 = High 0x04 = default*

(*) only valid for challenger2.1 [platform](#)

Example: Current Display Noise Reduction Feature settings: Off (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x01	0x2B	0x00	0x2D

7.14.3 Message-Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0x2A = Noise reduction Feature – Set		Command to set the Noise Reduction Feature of the display enabled or disabled
DATA[1]	Off / Low / Middle / High		0x00 = Off 0x01 = Low 0x02 = Middle 0x03 = High 0x04 = default*

(*) only valid for challenger2.1 [platform](#)

Example: Set the Display to the following: Noise Reduction Feature off (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0x2A	0x00	0x2D

7.15 Scan Mode

The command is used to set/get the Scan Mode Feature as it is defined as below.

7.15.1 Message-Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0x51 = Scan Mode Feature – Get		Command requests the display to report its current Scan Mode Feature status

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x51	0x55

7.15.2 Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x51 = Scan Mode Feature – Report		Command reports the Scan Mode Feature enabled or disabled
DATA[1]	Over scan / Under scan		0x00 = Over scan (ON) 0x01 = Under scan 0x02 = Off 0x03 > 0x1C (from 0 > 25)*

(*) From 0 > 25 only valid for challenger 2.1 [platform](#)

Example: Current Display Scan Mode Feature settings: Over scan (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x01	0x51	0x00	0x57

7.15.3 Message-Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0x50 = Scan Mode Feature – Set		Command to set the Scan mode Feature of the display enabled or disabled
DATA[1]	Over scan / Under scan		0x00 = Over scan 0x01 = Under scan 0x02 = Off 0x03 > 0x1C (from 0 > 25)*

(*) From 0 > 25 only valid for challenger 2.1 [platform](#)

Example: Set the Display to the following: Scan Mode Feature over scan (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0x50	0x00	0x57

7.16 Scan Conversion

The command is used to set/get the Scan Conversion Feature as it is defined as below.

NOTE: Himalaya I.0 & I.2 & Dragon I.x & I.6 [platform](#) does NOT support Scan Conversion.

7.16.1 Message-Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0x53 = Scan Conversion Feature – Get		Command requests the display to report its current Scan Conversion Feature status

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x53	0x57

7.16.2 Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x53 = Scan Conversion Feature – Report		Command reports the Scan Conversion Feature enabled or disabled
DATA[1]	Progressive / Interlace		0x00 = Progressive 0x01 = Interlace

Example: Current Display Scan Conversion Feature settings: Progressive (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x01	0x53	0x00	0x55

7.16.3 Message-Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0x52 = Scan Conversion Feature – Set		Command to set the Scan Conversion Feature of the display enabled or disabled
DATA[1]	Progressive / Interlace		0x00 = Progressive 0x01 = Interlace

Example: Set the Display to the following: Scan Conversion Feature Progressive (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0x52	0x00	0x55

7.17 Switch On Delay (Tiling)

The command is used to set/get the Switch on Delay (Tiling) Feature as it is defined as below.

Value in (OFF (0), 2, 4, 6, 8, 10, 20, 30, 40, 50, Auto (60))

7.17.1 Message-Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0x55 = Switch On Delay (Tiling) Feature – Get		Command requests the display to report its current Switch On Delay (Tiling) Feature status

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x55	0x51

7.17.2 Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x55 = Switch On Delay (Tiling) Feature – Report		Command reports the Switch On Delay (Tiling) Feature enabled or disabled
DATA[1]	Switch on delay time		0x00 = Off 0x01 = Auto 0x02 = 2 seconds 0x03 = 3 seconds 0x04 = 4 seconds 0xFD = 253 seconds 0xFE = 254 seconds 0xFF = 255 seconds

Example: Current Display Switch On Delay (Tiling) Feature settings: Off (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x01	0x55	0x01	0x52

7.17.3 Message-Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0x54 = Switch On Delay (Tiling) Feature – Set		Command to set the Switch On Delay (Tiling) Feature of the display enabled or disabled
DATA[1]	Switch on delay time		0x00 = Off 0x01 = Auto 0x02 = 2 seconds 0x03 = 3 seconds 0x04 = 4 seconds 0xFD = 253 seconds 0xFE = 254 seconds 0xFF = 255 seconds

Example: Set the Display to the following: Switch On Delay (Tiling) Feature: Off (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0x54	0x00	0x53

7.18 Factory Reset

The command is used to set/get the Factory Reset as it is defined as below.

7.18.1 Message-Set

Bytes	Bytes Description	Bits	Description		
DATA[0]	0x56 = Factory Reset – Set		Command to do the Factory Reset of the display		
			1	User Input Control: Local Keyboard/Remote Control	
			2	User Input Control State: Remote Control State/Local Keyboard State	
			3	Power at Cold Start	
			4	Auto Signal Detecting	
			5	Video Parameters: Brightness/Contrast/Sharpness/Color/Tint/Black Level/Gamma	每個 Input source 設定
			6	Color Temperature	每個 Input source 設定
			7	Color Parameters: Red Gain/Green Gain/Blue Gain/Red Offset/Green Offset/Blue Offset	每個 Input source 設定
			8	Picture Format	每個 Input source 設定
			9	nVGA Video Parameters: Clock/Clock Phase/Hor Position/Ver Position	所有 Input source 儲存
			10	Picture-in-Picture (Disable PIP function) :PIP Off	
			11	Volume	
			12	Volume Limits: Max/Min/SwitchOn (After reset, put Max=100 · Min=0 · SwitchOn=0)	
			13	Audio Parameters: Treble/Bass	每個 Input source 設定
			14	Smart Power	
			15	Tiling: Position/V. Monitor/H.Monitor(Clear Tiling Position=1, V. Monitor=1, H.Monitor=1)	
			16	Light Sensor	No supported.
			17	OSD Rotating	No supported.
			18	Information OSD Feature	
			19	MEMC Effect	No supported.
			20	Touch Feature	No supported.
			21	Noise Reduction Feature	每個 Input source 設定
			22	Scan Mode Feature	每個 Input source 設定
			23	Scan Conversion Feature	每個 Input source 設定
			24	Switch On Delay (Tiling) Feature	

Example: Set the Display to factory reset

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x56	0x52

7.19 Power On logo

The command is used to set/get the Power on logo status as it is defined as below.

7.19.1 Message-Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0x3F = Power On logo status – Get		Command requests the display to report its current Power On logo status

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x3F	0x3B

7.19.2 Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x3F = Power On logo status – Report		Command reports the Power On logo enabled or disabled
DATA[1]	Off / On / User		0x00 = Off 0x01 = On 0x02 = User

Example: Current Display Power On logo setting: Off (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x01	0x3F	0x00	0x39

7.19.3 Message-Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0x3E = Power On logo status – Set		Command to set the Power On logo of the display enabled or disabled
DATA[1]	Off / On / User		0x00 = Off 0x01 = On 0x02 = User

Example: Set the Display to the following: Power on logo Off (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0x3E	0x00	0x39

7.20 Fan Speed

The command is used to set/get the Fan Speed status as it is defined as below.

Supported from SICIP 1.87 and FAN supported monitors.

7.20.1 Message-Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0x62 = Fan Speed status – Get		Command requests the display to report its current Fan Speed status

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x62	0x66

7.20.2 Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x62 = Fan Speed status – Report		Command reports the Fan Speed status enabled or disabled
DATA[1]	Off / Auto / Low / Middle / High		0x00 = Off 0x01 = Auto 0x02 = Low 0x03 = Middle 0x04 = High

Example: Current Display Fan Speed settings: Off (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x01	0x62	0x00	0x64

7.20.3 Message-Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0x61 = Fan Speed status – Set		Command to set the Fan Speed status of the display enabled or disabled
DATA[1]	Off / Auto / Low / Middle / High		0x00 = Off 0x01 = Auto 0x02 = Low 0x03 = Middle 0x04 = High

Example: Set the Display to the following: Fan Speed off (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0x61	0x00	0x66

7.21 APM status (advanced power management)

The command is used to set/get the APM status as it is defined as below.

Supported on Himalaya & eagle I.3 [platform](#).

7.21.1 Message-Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0xD1 = APM status – Get		Command requests the display to report its current APM status

Example: (Display address 01)

MsgSize	Control	Group	Data(0)	Checksum
0x05	0x01	0x00	0xD1	0xD5

7.21.2 Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0xD1 = APM status – Report		Command reports the APM enabled or disabled
DATA[1]			0x00 = Off 0x01 = On 0x02 = Mode 1 (TCP off / WOL on) 0x03 = Mode 2 (TCP on / WOL off)

Note: Himalaya [platform](#) only support off/Mode1/Mode2.

Eagle I.3 [platform](#) only support on/off.

Example: Current Display APM setting: Off (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x01	0xD1	0x00	0xD7

7.21.3 Message-Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0xD0 = APM status – Set		Command to set the APM enabled or disabled
DATA[1]			0x00 = Off 0x01 = On 0x02 = Mode 1 (TCP off / WOL on) 0x03 = Mode 2 (TCP on / WOL off)

Note: Note: Himalaya [platform](#) only support off/Mode1/Mode2.

Eagle I.3 [platform](#) only support on/off.

Example: Set the Display to the following: APM off (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0xD0	0x00	0xD7

7.22 Power saving mode status

The command is used to set/get the Power Saving Mode status as it is defined as below.

7.22.1 Message-Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0xD3 = Power Saving mode status – Get		Command requests the display to report its current Power Saving Mode status

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0xD3	0xD7

7.22.1 Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0xD3 = Power Saving Mode status – Report		Command reports the Power Saving Mode enabled or disabled
DATA[1]	Off / On		0x00 = RGB Off & Video Off 0x01 = RGB Off, Video On 0x02 = RGB On, Video Off 0x03 = RGB On & Video On 0x04 = mode 1 0x05 = mode 2 0x06 = mode 3 0x07 = mode 4

Example: Current Display Power Saving Mode setting: RGB & Video off (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x01	0xD3	0x00	0xD5

7.22.1 Message-Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0xD2 = Power Saving Mode status – Set		Command to set the Power Saving Mode enabled or disabled
DATA[1]	Off / On		0x00 = RGB Off & Video Off 0x01 = RGB Off, Video On 0x02 = RGB On, Video Off 0x03 = RGB On & Video On 0x04 = mode 1 0x05 = mode 2 0x06 = mode 3 0x07 = mode 4

Example: Set the Display to the following: Power Saving Mode RGB & Video Off (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0xD2	0x00	0xD5

7.23 Pixel Shift

The command is used to set/get the pixel shift value.
The command is supported from SICP 1.99 onwards.

7.23.1 Message-Get Pixel Shift

Bytes	Bytes Description	Bits	Description
DATA[0]	0xB1 = Pixel Shift – Get		Command requests the display to report its current Pixel shift value

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0xB1	0xB5

7.23.2 Message-Report Pixel Shift

Bytes	Bytes Description	Bits	Description
DATA[0]	0xB1 = Pixel Shift – Report		Command reports Pixel Shift Setting
DATA[1]	Off /secs		0x00 = Off 0x01 = 10 secs 0x02 = 20 secs 0x03 = 30 secs 0x04 = 40 secs ... 0x5A = 900 secs 0x5B = AUTO

Example: Current Display settings: Off and xx secs (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x01	0xB1	0x00	0xB7
0x06	0x01	0x01	0xB1	0x03	0xB4

7.23.3 Message-Set Pixel Shift

Bytes	Bytes Description	Bits	Description
DATA[0]	0xB2 = Pixel Sensor – Set		Command to change the Pixel shift setting of the display
DATA[1]	Off /mins		0x00 = Off 0x01 = 10 secs 0x02 = 20 secs 0x03 = 30 secs 0x04 = 40 secs ... 0x5A = 900 secs 0x5B = AUTO

Example: Set the Display to the following: Pixel Sensor off and 50 secs (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
---------	---------	-------	----------	----------	----------

0x06	0x01	0x00	0xB2	0x00	0xB5
0x06	0x01	0x00	0xB2	0x05	0xB0

7.24 Off Timer

The command is used to set/get the Off Timer value.

The command is supported from SICP 1.99 onwards.

7.24.1 Message-Get Off Timer

Bytes	Bytes Description	Bits	Description
DATA[0]	0x91 = Off Timer– Get		Command requests the display to report its current Off timer value

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x91	0x95

7.24.2 Message-Report Off Timer

Bytes	Bytes Description	Bits	Description
DATA[0]	0x91 = Off Timer – Report		Command reports Off Timer Setting
DATA[1]	Off /Hours		0x00 = Off 0x01 = 1 Hour 0x02 = 2 Hours 0x03 = 3 Hours 0x04 = 4 Hours ... 0x18 = 24 Hours

8

Example: Current Display settings: Off and 3 hours (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x01	0x91	0x00	0x97
0x06	0x01	0x01	0x91	0x03	0x94

7.24.3 Message-Set Off Timer

Bytes	Bytes Description	Bits	Description
DATA[0]	0x92 = Off Timer – Set		Command to change the Off Timer setting of the display
DATA[1]	Off /Hours		0x00 = Off 0x01 = 1 Hour 0x02 = 2 Hours 0x03 = 3 Hours 0x04 = 4 Hours ... 0x18 = 24 Hours

Example: Set the Display to the following: Pixel Sensor off and 5 hours (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0x92	0x00	0x95
0x06	0x01	0x00	0x92	0x05	0x90

7.25 ECO mode

The command is used to set/get the ECO mode to normal or low power standby.

The command is supported from SICP 2.00 onwards.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x63 = Eco mode– Get		Command requests the display to report its current ECO mode value

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x63	0x67

7.25.1 Message-report ECO mode

Bytes	Bytes Description	Bits	Description
DATA[0]	0x63 = ECO mode status – Report		Command reports the ECO mode enabled or disabled
DATA[1]	Low power standby or normal		0x00 = low power standby 0x01 = normal

Example: Current ECO Mode setting: (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum	
0x06	0x01	0x01	0x63	0x00	0x65	Low power standby
0x06	0x01	0x01	0x63	0x01	0x64	normal

7.25.2 Message- Set ECO mode

Bytes	Bytes Description	Bits	Description
DATA[0]	0x64 = ECO mode status – set		Command set the ECO mode enabled or disabled

DATA[1]	Low power standby or normal		0x00 = low power standby 0x01 = normal
---------	-----------------------------	--	---

Example: Current Display Power Saving Mode setting: RGB & Video off (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum	
0x06	0x01	0x00	0x64	0x00	0x63	Low power standby
0x06	0x01	0x00	0x64	0x01	0x62	normal

7.26 Picture Style

7.26.1 Message get

The command is used to set/get the picture style :

Highbright, sRGB, Vivid, Natural, Standard, Video, Static Signage, Text, Energy saving

The command is supported from SICP 2.03 onwards.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x65 = Picture Style – Get		Command requests the display to report its current Picture Style value

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x65	0x61

7.26.2 Message-report get Picture Style

Bytes	Bytes Description	Bits	Description
DATA[0]	0x65 = Picture Style status – Report		Command reports the Picture Style
DATA[1]	Picture style*		0x00 = Highbright 0x01 = sRGB 0x02 = Vivid 0x03 = Natural 0x04 = Standard 0x05 = Video 0x06 = Static Signage 0x07 = Text 0x08 = Energy saving 0x09 = Soft 0x0A = User

*: could be that not all the picture styles are available, check the OSD menu of your monitor

Example: Current picture style setting: (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum	
0x06	0x01	0x01	0x65	0x00	0x60	Highbright

0x06	0x01	0x01	0x65	0x03	0x62	Natural
------	------	------	------	------	------	---------

7.26.3 Message-set Picture Style

8 The command is supported from SICP 2.03 onwards.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x66 = Set Picture Style		Command set the Picture Style
DATA[1]	Picture style*		0x00 = Highbright 0x01 = sRGB 0x02 = Vivid 0x03 = Natural 0x04 = Standard 0x05 = Video 0x06 = Static Signage 0x07 = Text 0x08 = Energy saving 0x09 = Soft 0x0A = User

*: could be that not all the picture styles are available, check the OSD menu of your monitor

Example : set picture style to highbright

MsgSize	Control	Group	Data (0)	DATA[1]	Checksum
0x06	0x01	0x00	0x66	0x00	0x61

7.27 Send screenshot

Take a screenshot of current source and send it via Email.

This command is supported from SCIP 2.02 onwards.

Note that

1. Different model may not have screenshot of all sources. Video layers may not be captured either. Means external sources can not be captured.
2. Email information should be set in Settings-> Signage Display -> Server Settings -> Email Notification
3. The screenshot will be named, {yyyy-MM-dd-HH-mm-ss}.png and put under {internal storage}/Philips/Screenshots

Only possible on android monitors from SICP 2.02 onwards.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x58 = Take a screenshot and email- Set		Command to take a screenshot

Example: **Take a screenshot**

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x58	0x5C

7.28 Video signal present

7.28.1 Message-Get

Is supported from SICP 2.03 onwards.

The following command is used to get information if there is videosignal present or not on the screen.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x59 = Video Present Parameter – Get		Command requests the display to report its current Video present parameter.

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)
0x05	0x01	0x00	0x59	CRC

7.28.2 Message-report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x59 = Video Present Parameter – Get		
DATA[1]	Video status		0x00 video not present 0x01 video present

Report message example

MsgSize	Control	Group	Data (0)	Data (1)	Checksum	
0x06	0x01	0x01	0x59	0x00	0x5F	Video not present
0x06	0x01	0x01	0x59	0x01	0x5E	Video present

7.29 Frame compensation Get value Horz value

Is supported from SICP 2.03 onwards.

Get the Horizontal frame compensation value.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x5E = Frame compensation Horz value – Get		Command requests the display to report its current Frame compensation Horz value
DATA[1]	Frame compensation Left or Right		0x00 = Frame compensation Horz value 0x01 = Frame compensation Left value 0x02 = Frame compensation Right value

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0x5E	0x00	0x59

Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x5E = Frame compensation – Horz Report		frame compensation left or right value
DATA[1]	Frame compensation Left or Right		0x00 = Frame compensation Horz value 0x01 = Frame compensation Left value 0x02 = Frame compensation Right value
DATA[2]			0x00 = 00 0x01 = 01 ... 0x64 = 100

Example: Current Display settings:

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Checksum
0x07	0x01	0x01	0x5E	0x00	0x00	0x59
0x07	0x01	0x01	0x5E	0x01	0x03	0x5B

7.30 Frame compensation Set value Horz

Is supported from SCIP 2.03

Set the Horizontal frame compensation value.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x5F = Frame compensation – Horz Set		Set Horz frame compensation value
DATA[1]	Frame compensation Left or Right		0x00 = Frame compensation Horz value 0x01 = Frame compensation Left value 0x02 = Frame compensation Right value
DATA[2]			0x00 = 00 0x01 = 01 ... 0x64 = 100

Example: Current Display settings:

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Checksum
0x07	0x01	0x00	0x5F	0x00	0x00	0x59
0x07	0x01	0x00	0x5F	0x01	0x03	0x5B

7.31 Frame compensation Get value Vertical

Is supported from firmware version : tbc

Get the Vertical frame compensation value.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x67 = Frame compensation Vert value – Get		Command requests the display to report its current Frame compensation Vert value
DATA[1]	Frame compensation Top or Bottom		0x00 = Frame compensation Vert value 0x01 = Frame compensation Top value 0x02 = Frame compensation Bottom value

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0x67	0x00	0x60

Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x67 = Frame compensation Vert– Report		Vert frame compensation value
DATA[1]	Frame compensation Top or Bottom		0x00 = Frame compensation Vert value 0x01 = Frame compensation Top value 0x02 = Frame compensation Bottom value
DATA[2]			0x00 = 00 0x01 = 01 ... 0x64 = 100

Example: Current Display settings:

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Checksum
0x07	0x01	0x01	0x67	0x00	0x00	0x60
0x07	0x01	0x01	0x67	0x01	0x03	0x62

7.32 Frame compensation Set value Vert

Set the Vertical frame compensation value.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x68 = Frame compensation Vert – Set		Set Vert frame compensation value
DATA[1]	Frame compensation Top or Bottom		0x00 = Frame compensation Vert value 0x01 = Frame compensation Top value 0x02 = Frame compensation Bottom value
DATA[2]			0x00 = 00 0x01 = 01 ... 0x64 = 100

10

Example: Current Display settings:

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Checksum
0x07	0x01	0x00	0x68	0x00	0x00	0x6E
0x07	0x01	0x00	0x68	0x01	0x03	0x6C

7.33 Enter admin menu (android settings menu)

This command will display the android admin menu (without password) on the monitor.

This command is only supported on android models from fw version : :tbc

Bytes	Bytes Description	Bits	Description
DATA[0]	0x73 = Enter admin menu		Command to put the admin (android) menu on the screen

Example: admin menu will be displayed on the monitor

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x73	0x77

7.34 Enable disable navigation bar Get

This command read if the navigation bar is enable or disabled.

This command is only supported android touch models with the navigation bar feature, from fw version : :tbc

Bytes	Bytes Description	Bits	Description
DATA[0]	0x74 = Enable disable navigation bar		Read if the navigation bar is enable or disabled

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x74	0x70

Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x74 = Enable disable navigation bar		
DATA[1]			0x00 = disable navigation bar 0x01 = enable navigation bar

Example: reply from monitor:

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x01	0x74	0x00	0x72
0x06	0x01	0x01	0x74	0x01	0x73

7.35 Enable disable navigation bar Set

This command will enable/disable the navigation bar on the touch monitor.

This command is only supported android touch models with the navigation bar feature, from fw version : :tbc

Bytes	Bytes Description	Bits	Description
DATA[0]	0x75 = Enable disable navigation bar		Command to put the admin (android) menu on the screen
DATA[1]			0x00 = disable navigation bar 0x01 = enable navigation bar

Example:

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0x75	0x00	0x72
0x06	0x01	0x00	0x75	0x01	0x73

7.36 Boot on source

The following commands are used to get/set the boot on source as it is defined below.

Available from SICP 2.05 onwards.

7.36.1 Message-Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0xBA = Boot on source – Get		Command requests the display to report its boot on source input

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0xBA	0xBE

7.36.2 Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0xBA = Boot on source – Report		Command reports to the host controller the current Boot on source input of the display.

DATA[1]	Video source		<p>For video source:</p> <p>0x00 = Last input</p> <p>0x01 = VIDEO</p> <p>0x02 = S-VIDEO</p> <p>0x03 = COMPONENT</p> <p>0x04 = CVI 2 (not applicable)</p> <p>0x05 = VGA</p> <p>0x06 = HDMI 2</p> <p>0x07 = Display Port 2</p> <p>0x08 = USB 2</p> <p>0x09 = Card DVI-D</p> <p>0x0A = Display Port</p> <p>0x0B= Card OPS</p> <p>0x0C = USB</p> <p>0x0D= HDMI</p> <p>0x0E= DVI-D</p> <p>0x0F = HDMI3</p> <p>0x10= BROWSER</p> <p>0x11= SMARTCMS</p> <p>0x12= DMS (Digital Media Server)</p> <p>0x13= INTERNAL STORAGE</p> <p>0x14= reserved</p> <p>0x15= Reserved</p> <p>0x16=Media Player</p> <p>0x17=PDF Player</p> <p>0x18=Custom</p> <p>0x19= HDMI 4</p> <p>0x1A = VGA2</p> <p>0x1B = VGA3</p> <p>0x1C = IVB</p> <p>0x1D=CMND&Play Web</p> <p>0x1E= Home/Launcher</p> <p>0x1F= USB TypeC</p> <p>0x20= kiosk</p> <p>0x21= Smart Info</p> <p>0x22= Tuner</p> <p>0x23= Google Cast</p>
DATA[2]	Bookmark/Playlist/File Tag(s)		<p>To set the set Tag from 0 through 8</p> <p>0x00 = Tag 0</p> <p>0x01 = Tag 1</p> <p>0x02 = Tag 2</p> <p>0x03 = Tag 3</p> <p>0x04 = Tag 4</p> <p>0x05 = Tag 5</p> <p>0x06 = Tag 6</p> <p>0x07 = Tag 7</p> <p>0x08 = USB autoplay</p>

7.36.3 Message-Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0xBB = Boot on source – Set		set the Boot on source input of the display.

DATA[1]	Video source		<p>For video source:</p> <p>0x00 = Last Input</p> <p>0x01 = VIDEO</p> <p>0x02 = S-VIDEO</p> <p>0x03 = COMPONENT</p> <p>0x04 = CVI 2 (not applicable)</p> <p>0x05 = VGA</p> <p>0x06 = HDMI 2</p> <p>0x07 = Display Port 2</p> <p>0x08 = USB 2</p> <p>0x09 = Card DVI-D</p> <p>0x0A = Display Port</p> <p>0x0B= Card OPS 0x0C</p> <p>0x0C = USB</p> <p>0x0D= HDMI</p> <p>0x0E= DVI-D</p> <p>0x0F = HDMI3</p> <p>0x10= BROWSER</p> <p>0x11= SMARTCMS</p> <p>0x12= DMS (Digital Media Server)</p> <p>0x13= INTERNAL STORAGE</p> <p>0x14= reserved</p> <p>0x15= Reserved</p> <p>0x16=Media Player</p> <p>0x17=PDF Player</p> <p>0x18=Custom</p> <p>0x19= HDMI 4</p> <p>0x1A = VGA2</p> <p>0x1B = VGA3</p> <p>0x1C = IWB</p> <p>0x1D=CMND&Play Web</p> <p>0x1E= Home/Launcher</p> <p>0x1F= USB TypeC</p> <p>0x20= Kiosk</p> <p>0x21= Smart Info</p> <p>0x22= Tuner</p> <p>0x23= Google Cast</p>
DATA[2]	Bookmark/Playlist/File Tag(s)		<p>To set the set Tag from 0 through 8</p> <p>0x00 = Tag 0</p> <p>0x01 = Tag 1</p> <p>0x02 = Tag 2</p> <p>0x03 = Tag 3</p> <p>0x04 = Tag 4</p> <p>0x05 = Tag 5</p> <p>0x06 = Tag 6</p> <p>0x07 = Tag 7</p> <p>0x08 = USB autoplay</p>

Example:

set boot on source to USB autoplay : 07 01 00 BB 16 08 A3

set boot on source to custom: 07 01 00 BB 18 00 A5

7.37 HDMI input range

This command is used to set/get the HDMI input range value as it is defined as below.
Only supported if the monitor do have the HDMI input range in the OSD picture menu.
Supported from SICP V2.06 onwards.

7.37.1 Message-Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0x6A = HDMI input range – Get		Command requests the display to report its current HMDI input range value

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x6A	0x6E

7.37.2 Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x6A = HDMI input range – Report		Command reports HDMI range value
DATA[1]	HDMI range value		0x01 = Auto 0x02 = Limit 0x03 = Full

Example: HDMI range = Limit (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x01	0x6A	0x02	0x6E

7.37.3 Message-Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0x6B = HDMI input range – Set		Command to change the HDMI input range
DATA[1]	HMDI range value		0x01 = Auto 0x02 = Limit 0x03 = Full

Example: set HDMI range value Full (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0x6B	0x03	0x6F

7.38 Testpattern

This command is used to set/get the internal testpattern as it is defined as below.

This command is not supported on the xxBDL4550D / xxBDL3550Q / xxBDL3452T / xxBDL3651T.
Supported from SICP V2.06 onwards.

7.38.1 Message-Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0x6C = Testpattern – Get		Command requests the display to report its current internal testpattern

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x6C	0x68

7.38.2 Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x6C = Testpattern – Report		Command reports testpattern state
DATA[1]	Testpattern		0x00 = Testpattern is off 0x01 = white 100% 0x02 = red 0x03 = green 0x04 = blue 0x05 = black 0x06 = half white Top 0x07 = half white Button 0x08 = ramp 0x09 = white 12% 0x0A = white 25% 0x0B = white 65%

Example: internal red pattern is on (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x01	0x6C	0x02	0x68

7.38.3 Message-Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0x6D = Testpattern – Set		Command to change the internal test pattern
DATA[1]	Testpattern		0x00 = set Testpattern off 0x01 = white 100% 0x02 = red 0x03 = green 0x04 = blue 0x05 = black 0x06 = half white Top 0x07 = half white Button 0x08 = ramp 0x09 = white 12% 0x0A = white 25% 0x0B = white 65%

Example: set white internal test pattern on (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0x6D	0x01	0x6B

7.39 Freeze screen Get

This command read if the picture is frozen.
Supported from SICP V2.06 onwards.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x76 = Freeze screen Get		Read if the picture is frozen.

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x76	0x72

Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x76 = Freeze screen get		
DATA[1]			0x00 = screen is not frozen 0x01 = screen is frozen

12

Example: reply from monitor:

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x01	0x76	0x00	0x70
0x06	0x01	0x01	0x76	0x01	0x71

7.40 Freeze screen set

This command freeze/unfreeze the picture.
Supported from SICP V2.06 onwards.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x77 = Freeze screen set		
DATA[1]			0x00 = unfreeze screen 0x01 = freeze screen

Example:

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0x77	0x00	0x70
0x06	0x01	0x00	0x77	0x01	0x71

7.41 Clock (= time)

Supported from SICP 2.07 onwards.

The following commands are used to get/set Clock parameters as it is defined below.

7.41.1 Message-Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0x87 = Clock Parameters – Get		Command requests the display to report its current clock parameters.

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x87	0x83

Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x87 = Clock Parameters – Get		Command reports to the host controller the current clock parameters of the display.
DATA[1]	Clock hour		0 to 23 of the start time hour 24: NULL
DATA[2]	Clock minutes		0 to 59 of the start time minute 60: NULL

Example1: Report clock time = 08:06 (AM)

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Checksum
0x07	0x01	0x00	0x87	0x08	0x06	0x8F

7.41.2 Message-Set

Supported from S1CP 2.07 onwards.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x86 = Clock Parameters – Set		Command set to the host controller the current clock parameters of the display.
DATA[1]	Clock hour		0 to 23 of the start time hour 24: NULL
DATA[2]	Clock minutes		0 to 59 of the start time minute 60: NULL

Example 1: set clock time = 10:08 (AM)

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Checksum
0x07	0x01	0x00	0x86	0x0A	0x08	0x82

7.42 Auto Time sync

Supported from SICP 2.07 onwards.

The following commands are used to get/set the auto time sync parameters as it is defined below.

7.42.1 Message-Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0x89 = Auto Time Sync Parameters – Get		Command requests the display to report its current Auto Time Sync parameter.

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x89	0x8D

Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x89 = Auto Time Sync Parameters – Get		Command reports to the host controller the current Auto Time Sync parameter of the display.
DATA[1]	Auto time		0x00 = off 0x01 = on

Example 1: Report auto Time sync ON

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x01	0x89	0x01	0x8E

7.42.2 Message-Set

Supported from SICP 2.07 onwards.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x88 = Auto Time Sync Parameters – Set		Command set Audio Time Sync parameter on or off
DATA[1]	Audio Time sync parameter		0x00 = off 0x01 = on

Example 1: set auto time sync on

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0x88	0x01	0x8E

7.43 Teamviewer on-off

Supported from SICP 2.07 onwards (only on the android monitors).

The following commands are used to get/set the teamviewer parameters as it is defined below.

It will switch on-off the teamviewer access.

7.43.1 Message-Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0x93 = Teamviewer Parameters – Get		Command requests the display to report its current Teamviewer parameter.

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x93	0x97

Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x93 = Teamviewer Parameters – Get		Command reports to the host controller the current Teamviewer parameter of the display.
DATA[1]	Teamviewer parameter		0x00 = off 0x01 = on

Example 1: Report teamviewer ON

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x01	0x93	0x01	0x94

7.43.2 Message-Set

Supported from SICP 2.07 onwards.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x94 = Teamviewer Parameters – Set		Command set the Teamviewer parameter.
DATA[1]	Teamviewer parameter		0x00 = off 0x01 = on

Example 1: set teamviewer on

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0x94	0x01	0x92

7.44 Date

Supported from SICP 2.07 onwards.

The following commands are used to get/set the date parameters as it is defined below.

7.44.1 Message-Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0x95 = Date Parameters – Get		Command requests the display to report its current date.

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x95	0x91

Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x95 = Date Parameters – Get		Command reports to the host controller the current date parameter of the display.
DATA[1]	Date - Day		1 to 0x1F 0x20: NULL
DATA[2]	Date - Month		1 to 0x0C 0x0D: NULL
DATA[3]	Date - Year		high byte: 0 to 0x63 0x64 : NULL
DATA[4]	Date - Year		low byte: 0 to 0x63 0x64 : NULL

Example 1: Report date: 10 April 2021

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Data (3)	Data (4)	Checksum
0x09	0x01	0x01	0x95	0x0A	0x04	0x15	0x14	0x93

7.44.2 Message-Set

Supported from SICP 2.07 onwards.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x96 = Date Parameters – Set		Command to set the current date parameter of the display.
DATA[1]	Date - Day		1 to 0x1F 0x20: NULL
DATA[2]	Date - Month		1 to 0x0C 0x0D: NULL
DATA[3]	Date - Year		high byte: 0 to 0x63 0x64 : NULL
DATA[4]	Date - Year		low byte: 0 to 0x63 0x64 : NULL

Example 1: set date: 28 May 2021

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Data (3)	Data (4)	Checksum
0x09	0x01	0x00	0x96	0x1C	0x05	0x15	0x14	0x86

7.45 Time zone

Supported from SICP 2.07 onwards on Android monitors.

The following commands are used to get/set the time zone parameters as it is defined below.

7.45.1 Message-Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0x8B = Time zone parameters – Get		Command requests the display to report its current Time zone.

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x8B	0x8F

Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x8B = Time zone parameters – Get		Command reports to the host controller the current Time zone parameter of the display.
DATA[1]	Time zone		See the timezone list below, column data[1]

Data[1]	GMT	ID String	Display Name	Description
1	-11	Pacific/Midway	Midway Island	Samoa Standard Time
2	-10	Pacific/Honolulu	Hawaii	Hawaii-Aleutian Standard Time
3	-9	America/Anchorage	Alaska	Alaska Standard Time
4	-8	America/Los_Angeles	Pacific Time	Pacific Standard Time
5	-8	America/Tijuana	Tijuana	Pacific Standard Time
6	-7	America/Phoenix	Arizona	Mountain Standard Time
7	-7	America/Chihuahua	Chihuahua	Mexican Pacific Standard Time
8	-7	America/Denver	Mountain Time	Mountain Standard Time
9	-6	America/Costa_Rica	Central America	Central Standard Time
10	-6	America/Chicago	Central Time	Central Standard Time
11	-6	America/Mexico_City	Mexico City	Central Standard Time
12	-6	America/Regina	Saskatchewan	Central Standard Time
13	-5	America/Bogota	Bogota	Colombia Standard Time

14	-5	America/New_York	Eastern Time	Eastern Standard Time
15	-4	America/Caracas	Venezuela	Venezuela Time
16	-4	America/Barbados	Atlantic Time (Barbados)	Atlantic Standard Time
17	-4	America/Halifax	Atlantic Time (Canada)	Atlantic Standard Time
18	-4	America/Manaus	Manaus	Amazon Standard Time
19	-4	America/Santiago	Santiago	Chile Standard Time
20	-3.5	America/St_Johns	Newfoundland	Newfoundland Standard Time
21	-3	America/Sao_Paulo	Brasilia	Brasilia Standard Time
22	-3	America/Argentina/Buenos_Aires	Buenos Aires	Argentina Standard Time
23	-3	America/Godthab	Greenland	West Greenland Standard Time
24	-3	America/Montevideo	Montevideo	Uruguay Standard Time
25	-2	Atlantic/South_Georgia	Mid-Atlantic	South Georgia Time
26	-1	Atlantic/Azores	Azores	Azores Standard Time
27	-1	Atlantic/Cape_Verde	Cape Verde Islands	Cape Verde Standard Time
28	0	Africa/Casablanca	Casablanca	Western European Standard Time
29	0	Europe/London	London, Dublin	Greenwich Mean Time
30	1	Europe/Amsterdam	Amsterdam, Berlin	Central European Standard Time
31	1	Europe/Belgrade	Belgrade	Central European Standard Time
32	1	Europe/Brussels	Brussels	Central European Standard Time
33	1	Europe/Sarajevo	Sarajevo	Central European Standard Time
34	1	Africa/Windhoek	Windhoek	West Africa Standard Time
35	1	Africa/Brazzaville	W. Africa Time	West Africa Standard Time
36	2	Asia/Amman	Amman, Jordan	Eastern European Standard Time
37	2	Europe/Athens	Athens, Istanbul	Eastern European Standard Time
38	2	Asia/Beirut	Beirut, Lebanon	Eastern European Standard Time
39	2	Africa/Cairo	Cairo	Eastern European Standard Time
40	2	Europe/Helsinki	Helsinki	Eastern European Standard Time
41	2	Asia/Jerusalem	Jerusalem	Israel Standard Time
42	2	Africa/Harare	Harare	Central Africa Time

43	3	Europe/Minsk	Minsk	Moscow Standard Time
44	3	Asia/Baghdad	Baghdad	Arabian Standard Time
45	3	Europe/Moscow	Moscow	Moscow Standard Time
46	3	Asia/Kuwait	Kuwait	Arabian Standard Time
47	3	Africa/Nairobi	Nairobi	East Africa Time
48	3.5	Asia/Tehran	Tehran	Iran Standard Time
49	4	Asia/Baku	Baku	Azerbaijan Standard Time
50	4	Asia/Tbilisi	Tbilisi	Georgia Standard Time
51	4	Asia/Yerevan	Yerevan	Armenia Standard Time
52	4	Asia/Dubai	Dubai	Gulf Standard Time
53	4.5	Asia/Kabul	Kabul	Afghanistan Time
54	5	Asia/Karachi	Islamabad, Karachi	Pakistan Standard Time
55	5	Asia/Oral	Ural'sk	West Kazakhstan Time
56	5	Asia/Yekaterinburg	Yekaterinburg	Yekaterinburg Standard Time
57	5.5	Asia/Calcutta	Kolkata	India Standard Time
58	5.5	Asia/Colombo	Sri Lanka	India Standard Time
59	5.75	Asia/Katmandu	Kathmandu	Nepal Time
60	6	Asia/Almaty	Astana	East Kazakhstan Time
61	6.5	Asia/Rangoon	Yangon	Myanmar Time
62	7	Asia/Krasnoyarsk	Krasnoyarsk	Krasnoyarsk Standard Time
63	7	Asia/Bangkok	Bangkok	Indochina Time
64	7	Asia/Jakarta	Jakarta	Western Indonesia Time
65	8	Asia/Shanghai	Beijing	China Standard Time
66	8	Asia/Hong_Kong	Hong Kong	Hong Kong Standard Time
67	8	Asia/Irkutsk	Irkutsk	Irkutsk Standard Time
68	8	Asia/Kuala_Lumpur	Kuala Lumpur	Malaysia Time
69	8	Australia/Perth	Perth	Australian Western Standard Time
70	8	Asia/Taipei	Taipei	Taipei Standard Time
71	9	Asia/Seoul	Seoul	Korean Standard Time
72	9	Asia/Tokyo	Tokyo, Osaka	Japan Standard Time
73	9	Asia/Yakutsk	Yakutsk	Yakutsk Standard Time
74	9.5	Australia/Adelaide	Adelaide	Australian Central Standard Time
75	9.5	Australia/Darwin	Darwin	Australian Central Standard Time
76	10	Australia/Brisbane	Brisbane	Australian Eastern Standard Time
77	10	Australia/Hobart	Hobart	Australian Eastern Standard

				Time
78	10	Australia/Sydney	Sydney, Canberra	Australian Eastern Standard Time
79	10	Asia/Vladivostok	Vladivostok	Vladivostok Standard Time
80	10	Pacific/Guam	Guam	Chamorro Standard Time
81	11	Asia/Magadan	Magadan	Magadan Standard Time
82	12	Pacific/Majuro	Marshall Islands	Marshall Islands Time
83	12	Pacific/Auckland	Auckland	New Zealand Standard Time
84	12	Pacific/Fiji	Fiji	Fiji Standard Time
85	13	Pacific/Tongatapu	Tonga	Tonga Standard Time

Example I: Report timezone date London:

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x01	0x8B	0x1D	0x90

7.45.2 Message-Set

Supported from SICP 2.07 onwards.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x8A = Time zone parameters – Set		Command to set the current Time zone parameter of the display.
DATA[1]	Time zone		See the timezone list above

Example I: set time zone Pacific/Fiji

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0x8A	0x54	0xD9

7.46 RS232 Routing (network control port)

7.46.1 Message-Get

Supported from SICP 2.07 onwards.

The following commands are used to get/set the SICP parameters as it is defined below.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x9A = RS232 routing Parameters – Get		Command requests the display to report its current RS232 parameter.

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x9A	0x9E

7.46.2 Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x9A = RS232 routing Parameters – Get		Command requests the display to report its current RS232 parameter.
DATA[1]	RS232 parameter		0x00 = RS232 0x01 = LAN > RS232 0x02 = CARD-OPS > RS232 0x03 = Reserved

Example I: Report RS232 routing = LAN > RS232

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x01	0x9A	0x01	0x9D

7.46.3 Message-Set

Supported from SICP 2.07 onwards.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x9B = RS232 routing Parameters – Set		Command set the RS232 routing parameter.
DATA[1]	RS232 parameter		0x00 = RS232 0x01 = LAN > RS232 0x02 = CARD-OPS > RS232 0x03 = Reserved

Example I: set RS232 port to : LAN > RS232

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0x9B	0x01	0x9D

Examples: set

RS232: 06 01 00 9B 00 9C

LAN > RS232: 06 01 00 9B 01 9D

CardOPS > RS232: 06 01 00 9B 02 9E

7.47 WOL (Wake On LAN)

7.47.1 Message-Get

Supported from SICP 2.07 onwards.

The following commands are used to get/set the WOL parameter as it is defined below.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x9C = WOL Parameter – Get		Command requests the display to report its current WOL parameter.

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x9C	0x98

7.47.2 Message-Report

Bytes	Bytes Description	Bits	Description
-------	-------------------	------	-------------

DATA[0]	0x9C = WOL Parameter – Get		Command requests the display to report its current WOL parameter.
DATA[1]	WOL parameter		0x00 = OFF 0x01 = ON

Example1: Report WOL = ON

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x01	0x9C	0x01	0x9B

7.47.3 Message-Set

Supported from SICP 2.07 onwards.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x9D = WOL Parameter – Set		Command set the WOL routing parameter.
DATA[1]	WOL parameter		0x00 = OFF 0x01 = ON

Example1: set WOL : ON

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0x9D	0x01	9B

Examples:

Set WOL on: 06 01 00 9D 00 9A

Set WOL off: 06 01 00 9D 01 9B

7.48 Auto Restart

Supported from SICP 2.07 onwards.

The following commands are used to get/set auto restart parameters as it is defined below.

7.48.1 Message-Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0x9E = Auto Restart Parameters – Get		Command requests the display to report its current Auto restart parameters.

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x9E	0x9A

7.48.2 Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x9E = Auto Restart Parameters – Get		Command reports to the host controller the current Auto restart parameters of the display.
DATA[1]	Auto restart on-off		0x00 = OFF 0x01 = ON
DATA[2]	Auto restart hour		0 to 23 of the start time hour 24: NULL

DATA[3]	Auto restart minutes		0 to 59 of the start time minute 60: NULL
---------	----------------------	--	--

Example I: Report auto restart enabled & restart time = 08:06 (AM)

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Data (3)	Checksum
0x08	0x01	0x01	0x9E	0x01	0x08	0x06	0x99

7.48.3 Message-Set

Supported from SICP 2.07 onwards.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x9F = Auto Restart Parameters – Set		Command set to the host controller the current Auto restart parameters of the display.
DATA[1]	Auto restart on-off		0x00 = OFF 0x01 = ON
DATA[2]	Auto restart hour		0 to 23 of the start time hour 24: NULL
DATA[3]	Auto restart minutes		0 to 59 of the start time minute 60: NULL

Example I: enable the auto restart and set restart time time = 10:08 (AM)

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Data (3)	Checksum
0x08	0x01	0x00	0x9F	0x01	0x0A	0x08	0x95

7.49 HDMI one wire (= CEC)

Supported from SICP 2.07 onwards.

The following commands are used to get/set the HDMI one wire parameters as it is defined below.

This command will also control the HDMI with One wire Power off (if available in the monitor) at the same time.

7.49.1 Message-Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0xBC = HDMI one wire Parameters – Get		Command requests the display to report its current HDMI one wire & if available HDMI one wire power off parameter.

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0xBC	0xBB

7.49.2 Message-Report

Bytes	Bytes Description	Bits	Description
-------	-------------------	------	-------------

DATA[0]	0xBC = HDMI one wire Parameters – Get		Command requests the display to report its current HDMI one wire & if available HDMI one wire power off parameter.
DATA[1]	HDMI one wire & HDMI one wire power off (this parameter is not always available)		0x00 = off 0x01 = on if “HDMI one wire power off” is available in the monitor: 0x00 = off 0x01 = on with “HDMI one wire power off” disabled. 0x10 = reserved 0x11 = on with “HDMI one wire power off” enabled.

Example 1: Report HDMI one wire ON and HDMI one wire power off is on

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x01	0xBC	0x01	0xBB

7.49.3 Message-Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0xBD = HDMI one wire Parameters – Set		Command set the HDMI one wire & if available the HDMI one wire power off parameter.
DATA[1]	HDMI one wire & HDMI one wire power off (this parameter is not always available)		0x00 = off 0x01 = on if “HDMI one wire power off” is available in the monitor: 0x00 = off 0x01 = on with “HDMI one wire power off” disabled. 0x10 = reserved 0x11 = on with “HDMI one wire power off” enabled.

Example 1: set HDMI one wire ON and “HDMI one wire power off” = on

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0xBD	0x01	0xBB

7.50 SICP Serial port Forwarding

Supported from SICP 2.07 onwards and only on the CRD50.

The following commands are used to get/set the SICP Serial port forwarding parameters as it is defined below.

7.51.3 Message-Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0xBE = SICP Serial port Forwarding Parameters – Get		Command requests the display to report its current SICP Serial port Forwarding parameter.

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0xBE	0xBA

7.50.2 Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0xBE = SICP Serial port Forwarding Parameters – Get		Command requests the display to report its current SICP Serial port Forwarding parameter.
DATA[1]			0x00 = off (normal RS232) 0x01 = on (RS232 port forwarding)

Example 1: Report SICP port forwarding is enabled

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x01	0xBE	0x01	0xBB

7.50.3 Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0xBF = SICP Serial port Forwarding Parameters – Set		Command set the SICP Serial port Forwarding parameter.
DATA[1]			0x00 = off (normal RS232) 0x01 = on (RS232 port forwarding)

Example I: SICP Serial port Forwarding on

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0xBF	0x01	0xB9

SICP Serial port Forwarding **On**: 06 01 00 BF 01 B9

SICP Serial port Forwarding **Off**: 06 01 00 BF 00 B8

7.52 Language OSD

Supported from SICP 2.07 onwards.

The following commands are used to get/set the OSD language status parameters as it is defined below.

7.52.1 Message-Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0xA7 = language – Get		Command requests the display to report its current language.

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0xA7	0xA3

7.52.2 Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0xA7 = language – Get		Language get
DATA[1]	Language		See language table below

Language table

DATA[1]	ID String	Support Language	Display String
1	en_US	ENGLISH	English
2	es_ES	SPANISH	Español
3	fr_FR	FRENCH	Français
4	it_IT	ITALIAN	Italiano
5	lv_LV	LATVIAN	Latviešu
6	lt_LT	LITHUANIAN	Lietuvių
7	nl_NL	DUTCH	Nederlands
8	nb_NO	NORWEGIAN	Norsk bokmål
9	pl_PL	POLSKI	Polski
10	pt_PT	PORTUGUESE	Português
11	fi_FI	FINNISH	Suomi
12	sv_SE	SWEDISH	Svenska
13	tr_TR	TURKISH	Türkçe
14	ru_RU	RUSSIAN	Русский
15	ar_EG	ARABIC	العربية
16	zh_CN	SIMPLIFIED CHINESE	中文(简体)
17	zh_TW	TRADITIONAL CHINESE	中文(繁體)

18	ja_JP	JAPANESE	日本語
19	cs_CZ	CZECH	Čeština
20	da_DK	DANISH	Dansk
21	de_DE	GERMAN	Deutsch
22	et_EE	ESTONIAN	Eesti

Example I: Report English language.

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x01	0xA7	0x01	0xA0

7.52.3 Message-Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0xA8 = language – Set		Command set the OSD Language.
DATA[1]	language		See language table above.

Example I: set English language

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0xA8	0x01	0xAE

8. Scheduling

8.1 Scheduling Parameters

The following commands are used to get/set scheduling parameters as it is defined below.

8.1.1 Message-Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0x5B = Scheduling Parameters – Get		Command requests the display to report its current Scheduling parameters.
DATA[1]	Page		1 to 7 of the scheduling pages

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0x5B	0x01	0x5D

8.1.2 Message-Report

Only Dragon 1.0, 1.5, 1.6, QL3, 10BDL3151T, 10BDL4151T, 75BDL3151T, CRD50 & Himalay 2.0 [platform](#) and all monitors from SCIP 2.05 onwards supports additional DATA[8] to indicate playlist/bookmark/file number.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x5B = Scheduling Parameters – Report		Command reports to the host controller the current Scheduling parameters of the display.
DATA[1]	Page		0: Page disable 1: Page enable
DATA[2]	Start time hour		0 to 23 of the start time hour 24: NULL
DATA[3]	Start time minute		0 to 59 of the start time minute 60: NULL
DATA[4]	End time hour		0 to 23 of the end time hour 24: NULL

DATA[5]	End time minute		0 to 59 of the end time minute 60: NULL
DATA[6]	Video source		For video source: 0x00 = NULL 0x01 = VIDEO 0x02 = S-VIDEO 0x03 = COMPONENT 0x04 = CVI 2 (not applicable) 0x05 = VGA 0x06 = HDMI 2 0x07 = Display Port 2 0x08 = USB 2 0x09 = Card DVI-D 0x0A = Display Port 0x0B= Card OPS 0x0C = USB 0x0D= HDMI 0x0E= DVI-D 0x0F = HDMI3 0x10= BROWSER 0x11 = SMARTCMS 0x12= DMS (Digital Media Server) 0x13= INTERNAL STORAGE 0x14= reserved 0x15= Reserved 0x16=Media Player 0x17=PDF Player 0x18=Custom 0x19= HDMI 4 0x1A = VGA2 0x1B = VGA3 0x1C = IVB 0x1D=CMND&Play Web 0x1E= Home/Launcher 0x1F= USB TypeC 0x20= Kiosk 0x21= Smart Info 0x22= Tuner 0x23= Google Cast

DATA[7]	Working day(s)		To set the scheduling working days. Bit0 = 1: every week Bit1 = Monday Bit2 = Tuesday Bit3 = Wednesday Bit4 = Thursday Bit5 = Friday Bit6 = Saturday Bit7 = Sunday
DATA[8]	Bookmark/Playlist/File Tag(s)		To set the set Tag from 1 through 7 0x01 = Tag 1 0x02 = Tag 2 0x03 = Tag 3 0x04 = Tag 4 0x05 = Tag 5 0x06 = Tag 6 0x07 = Tag 7 0x08 = USB autoplay

Example 1: Report page 1 with display port starts at 06:30 and ends at 22:00 every day for none android monitors

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Data (3)	Data (4)	Data (5)
0x0D	0x01	0x01	0x5B	0x01	0x06	0x1E	0x16	0x00
Data (6)	Data (7)	Data (8)	Checksum					
0x0A	0xFF	0x00	0xAC					

Example 2: every Monday from 06:30 to 22:00 on HDMI 1 for android monitors
0d 01 01 5a 11 06 1e 16 00 0d 03 01 47

8.1.3 Message-Set

Only Dragon 1.0, 1.5, 1.6, QL3, 10BDL3151T, 10BDL4151T, 75BDL3151T, CRD50 & Himalay 2.0 [platform](#) and all monitors from SCIP 2.05 onwards supports additional DATA[8] to indicate playlist/bookmark/file number.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x5A = Scheduling Parameters – Set		Command to change the current Scheduling parameters
DATA[1]	Page		BIT 7-BIT4: 1 to 7 of the scheduling pages BIT 3-BIT0: 0: Page disable 1: Page enable
DATA[2]	Start time hour		0 to 23 of the start time hour 24: NULL
DATA[3]	Start time minute		0 to 59 of the start time minute 60: NULL
DATA[4]	End time hour		0 to 23 of the end time hour 24: NULL
DATA[5]	End time minute		0 to 59 of the end time minute 60: NULL

DATA[6]	Video source		<p>For video source:</p> <p>0x00 = NULL</p> <p>0x01 = VIDEO</p> <p>0x02 = S-VIDEO</p> <p>0x03 = COMPONENT</p> <p>0x04 = CVI 2 (not applicable)</p> <p>0x05 = VGA</p> <p>0x06 = HDMI 2</p> <p>0x07 = Display Port 2</p> <p>0x08 = USB 2</p> <p>0x09 = Card DVI-D</p> <p>0x0A = Display Port</p> <p>0x0B= Card OPS 0x0C</p> <p>0x0C = USB</p> <p>0x0D= HDMI</p> <p>0x0E= DVI-D</p> <p>0x0F = HDMI3</p> <p>0x10= BROWSER</p> <p>0x11= SMARTCMS</p> <p>0x12= DMS (Digital Media Server)</p> <p>0x13= INTERNAL STORAGE</p> <p>0x14= reserved</p> <p>0x15= Reserved</p> <p>0x16=Media Player</p> <p>0x17=PDF Player</p> <p>0x18=Custom</p> <p>0x19= HDMI 4</p> <p>0x1A = VGA2</p> <p>0x1B = VGA3</p> <p>0x1C = IWB</p> <p>0x1D=CMND&Play Web</p> <p>0x1E= Home/Launcher</p> <p>0x1F= USB TypeC</p> <p>0x20= kiosk</p> <p>0x21= Smart Info</p> <p>0x22= Tuner</p> <p>0x23= Google Cast</p>
DATA[7]	Working day(s)		<p>To set the scheduling working days.</p> <p>Bit0 = 1: every week</p> <p>Bit1 = Monday</p> <p>Bit2 = Tuesday Bit3 = Wednesday Bit4 = Thursday Bit5 = Friday</p> <p>Bit6 = Saturday Bit7 = Sunday</p>
DATA[8]	Bookmark/Playlist/File Tag(s)		<p>To set the set Tag from 1 through 7</p> <p>0x01 = Tag 1</p> <p>0x02 = Tag 2</p> <p>0x03 = Tag 3</p> <p>0x04 = Tag 4</p> <p>0x05 = Tag 5</p> <p>0x06 = Tag 6</p> <p>0x07 = Tag 7</p> <p>0x08 = USB autoplay</p>

Example 1: Set page 1 with HDMI starts at 06:30 and ends at 22:00 every day.

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Data (3)	Data (4)	Data (5)
---------	---------	-------	----------	----------	----------	----------	----------	----------

0x0D	0x01	0x00	0x5A	0x10	0x06	0x1E	0x16	0x00
Data (6)	Data (7)	Data (7)	Checksum					
0x0A	0xFF	0x00	0xBD					

Example 2: every Monday from 06:30 to 22:00 on HDMI I for android monitors
0d 01 00 5a 11 06 1e 16 00 0d 03 01 46

9. Group ID

This command is used to set/get the Group ID as it is defined as below.
Supported from SICP 1.86 onwards.

9.1.1 Message-Get

Bytes	Bytes Description	Bits	Description
DATA[0]	0x5D = Group ID – Get		Command requests the display to report its Group ID

Example: (Display address 01)

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0x5D	0x59

9.1.2 Message-Report

Bytes	Bytes Description	Bits	Description
DATA[0]	0x5D = group ID – Report		Command reports Group ID
DATA[1]	Group ID		Group ID range: Off (for old command), 1-254 0x01-0xFE = 1-254 0xFF = Off, It is for the old command.

Example: Group ID = 1 (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x01	0x5D	0x01	0x5A

9.1.3 Message-Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0x5C = Group ID Set		Command to set the Group ID
DATA[1]	Group ID		Group ID range: Off (for old command), 1-254 0x01-0xFE = 1-254 0xFF = Off, It is for the old command.

Example: set the Group ID = 1 (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0x5C	0x01	0x5A

10. Custom Multi-Window Settings

This command is used to set or get screen divisions – called windows on the display screen & configure the multi window individually. A window contains the video from a particular input source.

NOTE: Width, Height parameters can't be higher than the LCD panel resolution. Aspect ratio 16:9 is only supported.

10.1.1 Message-Set

Bytes	Bytes Description	Bits	Description
DATA[0]	0xFB = Execute Custom Multi-Win – Set		Command requests the display to set the image of window.
DATA[1]	Switch Custom Multi-Win		0x00 = Custom Multi-Win OFF 0x01 = Custom Multi-Win ON
DATA[2]	Windows		0x00 = Open one window 0x01 = Open two windows 0x02 = Open three windows 0x03 = Open four windows

Example: Set Display address 01, Custom Multi-Win ON, open 3 windows,

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Checksum
0x07	0x01	0x00	0xFB	0x01	0x02	0xFE

10.1.2 Message-Get (report)

SPECIAL NOTE: Dragon 1.x & 1.6 [platform](#) supports only a maximum of 2 windows. Main window and a sub(x) window.

This message report can be just about which window is currently active or can be very detailed. Both examples are presented after the table.

Bytes	Bytes Description	Bits	Description
DATA[0]	0xFD = Custom Multi-Win – Report		Command report to the host controller the window's information of the display.
DATA[1]	Window		0x00 = Main(Display Win1) 0x01 = Sub1(Display Win2) 0x02 = Sub2(Display Win3) 0x03 = Sub3(Display Win4)
DATA[2]	Image rotation		0x00 = ROT_NONE (OFF) 0x01 = ROT_90 (ON) 0x02 = ROT_270, 0x03 = ROT_H_MIRROR 0x04 = ROT_V_MIRROR 0x05 = ROT_HV_MIRROR
DATA[3]	X position of image(High byte)		X position of image(High byte)
DATA[4]	X position of image(Low byte)		X position of image(Low byte)
DATA[5]	Y position of image(High byte)		Y position of image(High byte)
DATA[6]	Y position of image(Low byte)		Y position of image(Low byte)
DATA[7]	Width of image(High byte)		Width of image(High byte)
DATA[8]	Width of image(Low byte)		Width of image(Low byte)
DATA[9]	Height of image(High byte)		Height of image(High byte)
DATA[10]	Height of image(Low byte)		Height of image(Low byte)
DATA[11]	Picture Format		Picture Format. 0x00 = Normal (4:3) 0x01 = Custom 0x02 = Real (1:1) 0x03 = Full 0x04 = 21:9 0x05 = Dynamic 0x06 = 16:9 0xFF = Current setting(don't change)

SPECIAL NOTE: Dragon 1.x [platform](#) doesn't support DATA [11] value 0x05.

Example: Display address 01, Main window, ROT_NONE, X:0, Y:0, W:1920, H:1080, Zoom mode: Full

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Data (3)	Data (4)
0x10	0x01	0x01	0xFD	0x00	0x00	0x00	0x00

Data (5)	Data (6)	Data (7)	Data (8)	Data (9)	Data (10)	Data (11)	Checksum
0x00	0x00	0x07	0x80	0x04	0x38	0x03	0x55

Example: Get information of Main window (Display address 01)

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0xFD	0x00	0xFA

10.1.3 Message-Set

SPECIAL NOTE: 2016 Dragon 1.x [platform](#) supports only a maximum of 2 windows. Main window and a sub(x) window.

Bytes	Bytes Description	Bits	Description
DATA[0]	0xFC = Custom Multi-Win – Set		Command requests the display to set the image data of window.
DATA[1]	Window		0x00 = Main(Display Win1) 0x01 = Sub1(Display Win2) 0x02 = Sub2(Display Win3) 0x03 = Sub3(Display Win4)
DATA[2]	Image rotation		0x00 = ROT_NONE (OFF) 0x01 = ROT_90 (ON) 0x02 = ROT_270, 0x03 = ROT_H_MIRROR 0x04 = ROT_V_MIRROR 0x05 = ROT_HV_MIRROR
DATA[3]	X position of image(High byte)		X position of image(High byte)
DATA[4]	X position of image(Low byte)		X position of image(Low byte)
DATA[5]	Y position of image(High byte)		Y position of image(High byte)
DATA[6]	Y position of image(Low byte)		Y position of image(Low byte)
DATA[7]	Width of image(High byte)		Width of image(High byte)
DATA[8]	Width of image(Low byte)		Width of image(Low byte)
DATA[9]	Height of image(High byte)		Height of image(High byte)
DATA[10]	Height of image(Low byte)		Height of image(Low byte)
DATA[11]	Picture Format		Picture Format. 0x00 = Normal 0x01 = Custom 0x02 = Real 0x03 = Full 0x04 = 21:9 0x05 = Dynamic 0x06 = 16:9 0xFF = Current setting(don't change)

SPECIAL NOTE: Dragon 1.x [platform](#) doesn't support DATA [11] value 0x05.

Example: Set Display address 01, Main window, ROT_NONE, X:0, Y:0, W:1280, H:2160, Zoom mode: Full

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Data (3)	Data (4)
0x10	0x01	0x00	0xFC	0x00	0x00	0x00	0x00
Data (5)	Data (6)	Data (7)	Data (8)	Data (9)	Data (10)	Data (11)	Checksum
0x00	0x00	0x07	0x80	0x04	0x38	0x03	0x55

11. Color Calibration – MIC (TBD)

This command is used to set color calibration related special operations.

11.1 Message-Set

CMD: **0xFE**

12. LED STRIP control for I0BDLxx5IT

Both LED strips of the I0BDL3051T can be switched ON or OFF and set to a particular color. By default, both LED strips are OFF at all times. The left and right LED stripes are controlled at the same time, it is not possible to control only the left or right LED strip. The commands can be send to the monitor via LAN , WiFi or via an android apk on localhost:5000. The default port is 5000 and can be changed in the admin menu. The I0BDL4151T RGB leds can only be switched on or off.

Fig A: External front /back view of IOBDL3051T



12.1 Message-Get (Report)

Use this command to Read status of LED strips such as light up status, and color assigned in terms of R, G and B values.

Bytes	Bytes Description	Bits	Description
DATA[0]	0xF4 = Get		Command to get LED light up status and color combination values currently assigned as R, G and B values
DATA[1]	Light up status		0x00 = off (default), 0x01 = on
DATA[2]	Red value		Valid return values range from 0x00~0xFF
DATA[3]	Green value		Valid return values range from 0x00~0xFF
DATA[4]	Blue value		Valid return values range from 0x00~0xFF

The IOBDL4151T RGB leds can only be switched on or off, RGB data is 00 or FF

Example: The return values indicates LED strips are ON and are of bright Yellow color

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Data(3)	Data(4)	Checksum
0x09	0x01	0x01	0xF4	0x01	0xFF	0xF2	0x00	0xF1

12.2 Message-Set

Use this command to simultaneously switch on/off LED strips as shown above and set color based on R, G, and B values.

Bytes	Bytes Description	Bits	Description
DATA[0]	0xF3 = Set		Command to set LED STRIPS ON/OFF and Choose color
DATA[1]	Light up status		0x00 = off, 0x01 = on
DATA[2]	Red value		Valid Values range from 0x00~0xFF only if DATA[1] = 0x01

DATA[3]	Green value		Valid Values range from 0x00~0xFF only if DATA[1] = 0x01
DATA[4]	Blue value		Valid Values range from 0x00~0xFF only if DATA[1] = 0x01

The 10BDL4151T RGB leds can only be switched on or off, RGB data is 00 or FF

Example: set the RGB values to bright Yellow and light ON the LED strips

MsgSize	Control	Group	Data (0)	Data (1)	Data (2)	Data(3)	Data(4)	Checksum
0x09	0x01	0x00	0xF3	0x01	0xFF	0xF2	0x00	0xF7

Fig B: A few R, G, B values shown as decimals against the color they represent for reference purposes.



Examples:

OFF:

09 01 00 F3 00 FF 00 00 04

RED

09 01 00 F3 01 FF 00 00 05

GREEN
09 01 00 F3 01 00 FF 00 05

BLUE
09 01 00 F3 01 00 00 FF 05

13. MicroSD and USB ports Unlock/Lock –

I0BDL3051T USB A type ports, microUSB ports and MicroSD slots – all at once can either be disabled by “lock” command or enabled by “unlock” command. Commercial use demands protection from malware and other digital instructions.

These commands are only valid for:

I0BDL3051T
[Dragon I.0](#) : from firmware phase 3 (from Android 9_03 & scaler I_303).
[Dragon I.5](#) : from firmware phase 2 (after V1.2XX).
[Dragon I.6](#) : from production start

[QL 3.0](#) from firmware version : tbc

All other models from production start onwards.

Individual lock/unlock of MicroSD or any of the USB A type ports or microUSB ports is not available. At “lock” state, any USB device or T-Flash/MicroSD memory card plugged into any the USB ports or MicroSD slot respectively, will not be “accessible” or “recognizable” although they might receive power from the monitor. By default MicroSD and USB ports are unlocked.

13.1 Message-Get (Report)

Use this command to Read Lock/Unlock status of MicroSD and USB ports.

Bytes	Bytes Description	Bits	Description
DATA[0]	0xF2 = Get		Read status of whether MicroSD and USB ports on the monitor is locked or unlocked
DATA[1]	Read status		0x00 = unlocked (default) 0x01 = Locked

Example: Example get lock/unlock status MICROSD and USB ports:

MsgSize	Control	Group	Data (0)	Checksum
0x05	0x01	0x00	0xF2	0xF6

Reply message if unlocked: 0x06 0x01 0x01 0xF2 0x00 0xF4

Reply message if locked: 0x06 0x01 0x01 0xF2 0x01 0xF5

13.2 Message-Set

Use this command to lock or unlock MicroSD and USB ports in the monitor.

Bytes	Bytes Description	Bits	Description
DATA[0]	0xF1 = Set		Set MicroSD and USB ports to locked or unlocked status
DATA[1]	Set status		0x00 = unlocked 0x01 = Locked

Example: This commands shows how to unlock (enable) MicroSD and USB ports

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0xF1	0x00	0xF6

14. Monitor ID

This command is supported from SICP 2.03 onwards.

This command is used to set the monitor ID.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x69 = monitor ID Set		Command to set the Monitor ID
DATA[1]	monitor ID		0x01-0xFF = 1-255

Example: set the Monitor with monitor ID = 3 to monitor ID = 6

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x03	0x00	0x69	0x06	0x6A

15. Firmware upgrade

This command is working on android models from SICP V2.06 onwards.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x20 = firmware upgrade set		Command to invoke the android firmware (update.zip)
DATA[1]	reserved		Reserved for future use.

Example: Start the firmware upgrade.

The system will restart and continue the update flow, it will take 5+ mins in total.

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x00	0x20	0x00	0x27

If the firmware update start, the monitor will reply with below command.

There is no information available during the firmware upgrade.

MsgSize	Control	Group	Data (0)	Data (1)	Checksum
0x06	0x01	0x01	0x20	0x06	0x20

Note :

The android firmware (update.zip) file must be in the root path in the internal storage of the monitor.

The root path is the path you see when the PC is connected via FTP or microUSB.

Use the get firmware command to check if the firmware upgrade did pass.

Get firmware command : 06 01 00 A1 03 A5 (also listed in this document)

16. Platforms

Very often we speak about platforms, this is the name of the electronic chassis, the mainboard inside the monitor.

An overview of the platforms with their corresponding model names can be found in below model list.

model	platform	model	platform	model	platform	model	platform	model	platform
10BDL3051T	10BDL3051T	BDL6520EL	eagle 1.2	BDL5586XL	eagle 1.3	65BDL3000Q	Phoenix 1.0	55BDL1005/7X	Phoenix 1.0
32BDL4050D	Dragon 1.0	BDL6524ET/02	eagle 1.2	BDL8470EU	Himalaya	65BDL3010T	Phoenix 1.0	BDL4990VL	Phoenix 2.0
43BDL4050D	Dragon 1.0	BDL3250EL	eagle 1.3	BDL8470QT	Himalaya	BDL3260EL	Phoenix 1.0	BDL5570EL	Phoenix 2.0
43BDL4051T	Dragon 1.0	BDL4250EL	eagle 1.3	BDL8470QU	Himalaya	BDL4260EL	Phoenix 1.0	BDL5590VL	Phoenix 2.0
49BDL4050D	Dragon 1.0	BDL4252EL	eagle 1.3	BDL9870EU	Himalaya	BDL4280VL	Phoenix 1.0	xxBDL3050Q	QL3
55BDL4050D	Dragon 1.0	BDL4254ET	eagle 1.3	75BDL3000U	Himalaya 1.2	BDL4660EL	Phoenix 1.0	XxBDL4051D	Dragon 1.6
55BDL4051T	Dragon 1.0	BDL4256ET	eagle 1.3	75BDL3010T	Himalaya 1.2	BDL4680VL	Phoenix 1.0	xxBDL4150D	Himalaya 2.0
65BDL3051T	Dragon 1.0	BDL4271VL	eagle 1.3	75BDL3003H	Himalaya 1.2	BDL4765EL	Phoenix 1.0	xxBDL3010Q	Challenger 2.1
65BDL4050D	Dragon 1.0	BDL4650EL	eagle 1.3	BDL3220QL	MTK5580	BDL4780VH	Phoenix 1.0	10BDL4151T	Discovery 1.1
42BDL5055P	Dragon 1.5	BDL4652EL	eagle 1.3	BDL4220QL	MTK5580	BDL4988XC	Phoenix 1.0	CRD50	CRD50
42BDL5057P	Dragon 1.5	BDL4671VL	eagle 1.3	BDL4235DL	MTK5580	BDL4988XL	Phoenix 1.0	xxBDL4031D	Dragon 1a
49BDL5055P	Dragon 1.5	BDL4677XH	eagle 1.3	BDL4620QL	MTK5580	BDL5560EL	Phoenix 1.0	10BDL4551T	10BDL4551T
49BDL5057P	Dragon 1.5	BDL4678XL	eagle 1.3	BDL5520QL	MTK5580	BDL5580VL	Phoenix 1.0	xxBDL6051C	BDL6051C 1.0
55BDL5055P	Dragon 1.5	BDL4776XL	eagle 1.3	BDL3230QL	MTK5580P2	BDL5588XC	Phoenix 1.0	xxBDL3552T	BDL3552T 1.0
55BDL5057P	Dragon 1.5	BDL4777XH	eagle 1.3	BDL4330QL	MTK5580P2	BDL5588XH	Phoenix 1.0	xxBDL8051C	BDL8051C 1.0
BDL4676XL	eagle	BDL4777XL	eagle 1.3	BDL4335QL	MTK5580P2	BDL5588XL	Phoenix 1.0	xxBDL3451T	BDL3452T 3.0
BDL4677XL	eagle	BDL5551EL	eagle 1.3	BDL4830QL	MTK5580P2	BDL6520QL	Phoenix 1.0	xxBDL3651T	BDL3651T 3.0
BDL4682XL	eagle	BDL5554ET	eagle 1.3	BDL4835QL	MTK5580P2	BDL6526QT	Phoenix 1.0	xxBDL3550Q	BDL3550Q
BDL5585XL	eagle	BDL5556ET	eagle 1.3	BDL5530QL	MTK5580P2	BDL4270EL	Phoenix 2.0	xxBDL4550D	BDL4550D 3.0
BDL5587XL	eagle	BDL5571VL	eagle 1.3	BDL5535QL	MTK5580P2	BDL4290VL	Phoenix 2.0	xxBDL3510Q	Challenger 2.1
BDL6551V	eagle	BDL5586XH	eagle 1.3	55BDL1005X	Phoenix 1.0	BDL4970EL	Phoenix 2.0	xxBDL4510D	Challenger 2.1
xxBDL3017P	Challenger 2.1	xxBDL2005X	Phoenix 1.1	xxBDL310x	Phoenix 1.1	xxBDL4005X	Phoenix 1.1	xxBDL3005	Phoenix 1.1
24BDL4151T	Dragon 2								

17. Command summary (Last updated: 19/July/2021)

Command name	Set Command	Get Command	Command Code	Remarks
Communication Control	√	√	0x00	Generic report
		<input type="checkbox"/>	0x01	
	<input type="checkbox"/>	<input type="checkbox"/>	0x02	
			0x03	
			0x04	
			0x05	
			0x06	
			0x07	
			0x08	
			0x09	
			0x0A	
			0x0B	
			0x0C	
			0x0D	
			0x0E	
Miscellaneous info		√	0x0F	Operating hours
			0x10	
Color Temperature 100K – Set	√		0x11	
Color Temperature 100K – Get		√	0x12	
Serial Code Get		√	0x15	
Display orientation get		√	0x16	
Display orientation set	√		0x17	
Power state Set	√		0x18	
Power state Get		√	0x19	
Keypad Lock status Set	√		0x1A	Changed Functionality
Keypad Lock status Get		√	0x1B	Changed Functionality
IR Lock status Set	√		0x1C	Changed Functionality
IR Lock status Get		√	0x1D	Changed Functionality
Touch Feature Set	√		0x1E	Himalaya 1.0 – no support
Touch Feature Get		√	0x1F	Himalaya 1.0 – no support
Start android firmware upgrade	<input type="checkbox"/>	<input type="checkbox"/>	0x20	
Tiling Set	√		0x22	
Tiling Get		√	0x23	
Light Sensor Set	√		0x24	
Light Sensor Get		√	0x25	
OSD Rotating Set	√		0x26	

OSD Rotating Get		√	0x27	
MEMC Effect Set	√		0x28	Himalaya 1.0 – no support
MEMC Effect Get		√	0x29	Himalaya 1.0 – no support
Noise Reduction Set	√		0x2A	
Noise Reduction Get		√	0x2B	
Information OSD Features Set	√		0x2C	
Information OSD Features Get		√	0x2D	
			0x2E	
Temperature Get		√	0x2F	
			0x30	
			0x31	
Video parameters Set	√		0x32	Add DICOM gamma
Video parameters Get		√	0x33	Brightness, etc.
Color Temperature Set	√		0x34	
Color Temperature Get		√	0x35	
Color Parameters Set	√		0x36	
Color Parameters Get		√	0x37	
VGA Video Parameters Set	√		0x38	
VGA Video Parameters Get		√	0x39	
Picture Format Set	√		0x3A	
Picture Format Get		√	0x3B	
Picture-in-picture Set	√		0x3C	
Picture-in-picture Get		√	0x3D	
Power On logo Set	√		0x3E	
Power On logo Get		√	0x3F	
			0x40	
Volume up/down Set	√		0x41	
Audio parameters Set	√		0x42	
Audio parameters Get		√	0x43	
Volume Set	√		0x44	
Volume Get		√	0x45	
Volume mute Get	<input type="checkbox"/>	√	0x46	
Volume mute Set	√	<input type="checkbox"/>	0x47	
			0x48	
			0x49	
custom tiling report/get		√	0x4A	
custom tiling set	√		0x4B	
			0x4C	

			0x4D	
			0x4E	
			0x4F	
Scan Mode Set	√		0x50	
Scan Mode Get		√	0x51	
Scan Conversion Set	√		0x52	Himalaya 1.0 – no support
Scan Conversion Get		√	0x53	Himalaya 1.0 – no support
Switch On Delay Set	√		0x54	
Switch On Delay Get		√	0x55	
Factory Reset Set	√		0x56	
Reboot monitor	√		0x57	
Send screenshot	√		0x58	
Videosignal present	√		0x59	
Scheduling Set	√		0x5A	Change/Add input source
Scheduling Get		√	0x5B	Change/Add input source
Group ID Set	√		0x5C	
Group ID Get		√	0x5D	
Get Horz frame compensation value	<input type="checkbox"/>		0x5E	
Set Horz frame compensation value	<input type="checkbox"/>		0x5F	
			0x60	
Fan Speed status Set	√		0x61	
Fan Speed status Get		√	0x62	
ECO mode Get		√	0x63	
ECO mode Set	√	<input type="checkbox"/>	0x64	
Picture style Get	<input type="checkbox"/>	√	0x65	
Picture style Set	√	<input type="checkbox"/>	0x66	
Get Vert frame compensation value	<input type="checkbox"/>		0x67	
Set Vert frame compensation value	<input type="checkbox"/>		0x68	
Set monitor ID	<input type="checkbox"/>		0x69	
HDMI input range – Get	<input type="checkbox"/>		0x6A	
HDMI input range – Set	<input type="checkbox"/>		0x6B	
Testpattern – Get		<input type="checkbox"/>	0x6C	
Testpattern – Set	<input type="checkbox"/>		0x6D	
			0x6E	
			0x6F	
Auto Adjust	√		0x70	VGA only
Picture mute get	<input type="checkbox"/>	<input type="checkbox"/>	0x71	
Picture mute set	<input type="checkbox"/>	<input type="checkbox"/>	0x72	
Enter admin menu	<input type="checkbox"/>	<input type="checkbox"/>	0x73	
Enable/disable navigation bar Get	<input type="checkbox"/>	<input type="checkbox"/>	0x74	

Enable/disable navigation bar Set	<input type="checkbox"/>	<input type="checkbox"/>	0x75	
FREEZE/UNFREEZE screen Get	<input type="checkbox"/>	<input type="checkbox"/>	0x76	
FREEZE/UNFREEZE screen Set	<input type="checkbox"/>	<input type="checkbox"/>	0x77	
			0x78	
			0x79	
			0x7A	
			0x7B	
			0x7C	
			0x7D	
			0x7E	
			0x7F	
			0x80	
			0x81	
			0x82	
			0x83	
PIP source Set	√		0x84	
PIP source Get		√	0x85	
			0x86	
			0x87	
			0x88	
			0x89	
Time zone Set	<input type="checkbox"/>		0x8A	
Time zone Get	<input type="checkbox"/>		0x8B	
			0x8C	
			0x8D	
Speakers on-off Set	<input type="checkbox"/>		0x8E	
Speakers on-off Get	<input type="checkbox"/>		0x8F	
			0x90	
Off Timer Get	<input type="checkbox"/>	√	0x91	
Off Timer Set	√		0x92	
Teamviewer Get	<input type="checkbox"/>		0x93	
Teamviewer Set	<input type="checkbox"/>		0x94	
Date Get	<input type="checkbox"/>		0x95	
Date Set	<input type="checkbox"/>		0x96	
	<input type="checkbox"/>		0x97	
	<input type="checkbox"/>		0x98	
RS232 routing Get	<input type="checkbox"/>	<input type="checkbox"/>	0x9A	
RS232 routing Set	<input type="checkbox"/>	<input type="checkbox"/>	0x9B	
WOL Get	<input type="checkbox"/>	<input type="checkbox"/>	0x9C	
WOL Set	<input type="checkbox"/>	<input type="checkbox"/>	0x9D	
Auto restart Get	<input type="checkbox"/>	<input type="checkbox"/>	0x9E	
Auto restart Set	<input type="checkbox"/>	<input type="checkbox"/>	0x9F	
			0xA0	

Model Number, FW, Build date			0xA1	Help ID the PD info
Platform and version labels		√	0xA2	
Power state at cold start Set	√		0xA3	
Power state at cold start Set	√		0xA3	
Power state at cold start Get		√	0xA4	
Failover Set	√		0xA5	Change/Add input source
Failover Get		√	0xA6	Change/Add input source
Language – Get		<input type="checkbox"/>	0xA7	
Language - Set	<input type="checkbox"/>		0xA8	
			0xA9	
			0xAA	
			0xAB	
Input Source	√		0xAC	Change/Add input source
Current Source		√	0xAD	Change/Add input source
Auto Signal Detecting Set	√		0xAE	Change/Add input source
Auto Signal Detecting Get		√	0xAF	Change/Add input source
			0xB0	
Pixel Shift Get	<input type="checkbox"/>	√	0xB1	
Pixel Shift Set	√		0xB2	
Human sensor Get	<input type="checkbox"/>	√	0xB3	
Human sensor Set	√		0xB4	
			0xB5	
Volume Limit Speaker out		√	0xB6	
Volume limit Audio out		√	0xB7	
Volume limits Speaker out	√		0xB8	
Volume limit Audio out	√		0xB9	
Boot on source get		<input type="checkbox"/>	0xBA	
Boot on source set		<input type="checkbox"/>	0xBB	
HDMI one wire Get	<input type="checkbox"/>	<input type="checkbox"/>	0XBC	
HDMI one wire Set	<input type="checkbox"/>	<input type="checkbox"/>	0xBD	
SICP Serial port Forwarding-Set	<input type="checkbox"/>	<input type="checkbox"/>	0xBE	
SICP Serial port Forwarding-Get	<input type="checkbox"/>	<input type="checkbox"/>	0xBF	
AnyTile Assign Group ID and monitor ID			0xC0	
Channel number Get	<input type="checkbox"/>	<input type="checkbox"/>	0xC1	
Channel number Get	<input type="checkbox"/>	<input type="checkbox"/>	0xC2	
Channel number Step +/-	<input type="checkbox"/>	<input type="checkbox"/>	0xC3	
			0xC4	
			0xC5	
			0xC6	
			0xC7	
			0xC8	
			0xC9	

			0xCA	
			0xCB	
			0xCC	
			0xCD	
			0xCE	
			0xCF	
APM status Set	√		0xD0	
APM status Get		√	0xD1	
Power Save status Set	√		0xD2	
Power Save status Get		√	0xD3	
			0xD4	
			0xD5	
			0xD6	
			0xD7	
			0xD8	
			0xD9	
			0xDA	
			0xDB	
			0xDC	
Smart power Set	√		0xDD	Dimming backlight
Smart power Get		√	0xDE	Dimming backlight
			0xDF	
			0xE0	
			0xE1	
			0xE2	
			0xE3	
			0xE4	
			0xE5	
			0xE6	
			0xE7	
			0xE8	
			0xE9	
			0xEA	
			0xEB	
			0xEC	
			0xED	
			0xEF	
			0xF0	
External Storage Lock Set	√		0xF1	
External Storage Lock Get	<input type="checkbox"/>	√	0xF2	
Led Control Set	√		0xF3	
Led Control Get		√	0xF4	
			0xF5	
			0xF6	

			0xF7	
			0xF8	
			0xF9	
			0xFA	
Custom Multi-Win Set	√		0xFB	Himalaya 1.0 - no support
Custom Multi-Win Set	√		0xFC	Himalaya 1.0 - no support
Custom Multi-Win Get		√	0xFD	Himalaya 1.0 - no support
MIC color calibration	√		0xFE	Reserved for Future use
			0xFF	

18. Revision history

V1.6 → V1.7 (To modify some commands)

Command name	Set Command	Get Command	Command Code	Remarks
Power state at cold start Get		√	0xA4	
Power state at cold start Set	√		0xA3	
Picture-in-picture Get		√	0x3D	
Picture-in-picture Set	√		0x3C	
PIP source Get		√	0x85	
PIP source Set	√		0x84	
Smart power Get		√	0xDE	Dimming backlight
Smart power Set	√		0xDD	Dimming backlight

V1.7 → V1.8 (To support some commands)

Command name	Set Command	Get Command	Command Code	Remarks
Light Sensor Get		√	0x25	
Light Sensor Set	√		0x24	
OSD Rotating Get		√	0x27	
OSD Rotating Set	√		0x26	
MEMC Effect Get		√	0x29	
MEMC Effect Set	√		0x28	
Touch Feature Get		√	0x1F	
Touch Feature Set	√		0x1E	

V1.8 → V1.82 (Add some more commands)

Command name	Set Command	Get Command	Command Code	Remarks
User Input Control State Get		√	0x1B	
User Input Control State Set	√		0x1A	
Color Temperature Get		√	0x35	
Color Temperature Set	√		0x34	
Color Parameters Get		√	0x37	
Color Parameters Set	√		0x36	

V1.82 → V1.84 (Change definition of byte 2)

Number of Field	Name of Field	Description
Byte 1:	MsgSize	Message Size has to be calculated in the following way: MsgSize + Control + Data(0) + ... + Data(N) + Checksum Range = 3 to 40 (0x3 to 0x28).
Byte 2:	Control (first case)	Message Control. Bit 7..6: (reserved; set to 00) Bit 5..0: Monitor ID [Display Address range from 0 to 64]
Byte 2:	Control for Broadcast commands	Message Control. Bit 7: Does not allow Replies. Set to 1 to indicate no ACK or Report is expected. Bit 6: (reserved; set to zero) Bit 5..0: Monitor ID [Display Address range from 0 to 64] Reserved for RS232 chaining: all zeroes means all devices in the chain.

Number of Field	Name of Field	Description
Byte 1:	MsgSize	Message Size has to be calculated in the following way: MsgSize + Control + Data(0) + ... + Data(N) + Checksum Range = 3 to 40 (0x3 to 0x28).
Byte 2:	Control	Message Control. Bit 7..0: Monitor ID Signal mode: Display Address range from 1 to 255 Broadcast mode: Display Address is 0 which indicates no ACK or Report is expected.

V1.84 → V1.85 (add some more commands)

Command name	Set Command	Get Command	Command Code	Remarks
VGA Video Parameters Get		√	0x39	
VGA Video Parameters Set	√		0x38	
Information OSD Features Get		√	0x2D	
Information OSD Features Set	√		0x2C	
Noise Reduction Get		√	0x2B	
Noise Reduction Set	√		0x2A	
Scan Mode Get		√	0x51	
Scan Mode Set	√		0x50	
Scan Conversion Get		√	0x53	
Scan Conversion Set	√		0x52	
Switch On Delay Get		√	0x55	
Switch On Delay Set	√		0x54	
Factory Reset Set	√		0x56	

VI.85 → VI.86

- Add Group byte

Byte 3:	Group	Group ID range: Off(for old command),1-254		
		Monitor ID	Group ID	
		0-255	0-254	range
		0	0	broadcast
		1-255	0	Control by Monitor ID
		0-255	1-254	Control by Group ID

- Add DICOM gamma in video parameters

DATA[7]	Gamma Selection		0x01 = Native, 0x02 = S gamma, 0x03 = 2.2, 0x04 = 2.4, 0x05 = D-image(DICOM gamma)
---------	-----------------	--	---

- Add scheduling/Group commands

Command name	Set Command	Get Command	Command Code	Remarks
Scheduling Get			0x5B	
Scheduling Set			0x5A	
Group ID Get			0x5D	
Group ID Set			0x5C	

VI.86 → VI.87

1. Add Power On logo/Fan Speed status commands.

Command name	Set Command	Get Command	Command Code	Remarks
Power On logo Get		√	0x3F	
Power On logo Set	√		0x3E	
Fan Speed status Get		√	0x62	
Fan Speed status Set	√		0x61	
APM status Get		√	0xD1	
APM status Set	√		0xD0	
Power Save status Get		√	0xD3	
Power Save status Set	√		0xD2	
Failover Get		√	0xA6	
Failover Set	√		0xA5	
Volume up/down Set	√		0x41	
Color Temperature 100K – Get		√	0x12	
Color Temperature 100K – Set	√		0x11	

2. Add User 2 option in Color Temperature control.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x35 = Color Temperature – Report		Command reports to the host controller the current color temperature of the display.
DATA[1]	Color temperature		0x00 = User 1 0x01 = Native 0x02 = 11000K(Not applicable) 0x03 = 10000K 0x04 = 9300K 0x05 = 7500K 0x06 = 6500K 0x07 = 5770K (Not applicable)

			0x08 = 5500K(Not applicable) 0x09 = 5000K 0x0A = 4000K 0x0B = 3400K (Not applicable) 0x0C = 3350K (Not applicable) 0x0D = 3000K 0x0E = 2800K (Not applicable) 0x0F = 2600K (Not applicable) 0x10 = 1850K (Not applicable) 0x12 = User 2
--	--	--	---

3. User can adjust color temperature by 100K/step.

Bytes	Bytes Description	Bits	Description
DATA[0]	0x12 = Color Temperature 100K – Report		Command reports to the host controller the current color temperature 100K steps of the display.
DATA[1]	Color temperature steps		20 to 100 of the user selectable range of the display. 0x14(20) = 2000K 0x15(21) = 2100K 0x16(22) = 2200K 0x61(97) = 9700K 0x62(98) = 9800K 0x63(99) = 9900K 0x64(100) = 10000K

VI.87 → VI.88 (last edited by Siddarth MAR/18/2015)

Lock IR Get		√	0x1D
Lock IR Set	√		0x1C
Lock Keypad Get		√	0x1B
Lock Keypad Set	√		0x1A

Added input source list & modified order and Data byte definitions

Input Source	√		0xAC
Current Source		√	0xAD

Added /modified input source list

PIP source Get		√	0x85
PIP source Set	√		0x84

1. 4K2K has 4 Full HD quadrants – added quadrant fields to select for Q2, Q3, Q4

Picture-in-picture Get		√	0x3D
Picture-in-picture Set	√		0x3C

2. Removed “All except USB” and made it “Reserved”

Auto Signal Detecting Get		√	0xAF
Auto Signal Detecting Set	√		0xAE

3. BDLXX70EU/ BDLXX70QU/ BDLXX70QT has 11 input sources - added additional input sources

Failover Get		√	0xA6
--------------	--	---	------

Failover Set	√	0xA5
--------------	---	------

Added additional input sources

Scheduling Get	√	0x5B
Scheduling Set	√	0x5A

Modified command to get Platform label, platform label

SICP version, Platform Label, version	√	0xA2
---------------------------------------	---	------

Added a command to get Model number, FW version, Build Date

Model Number, FW Version, Build date	√	0xA1
--------------------------------------	---	------

Added Failover input signal sources

Added new input signal sources

Modified Checksum values in example CMD packet formats

Added Volume control for Audio Out

Added Quadrant notes for BDLXX70EU/ BDLXX70QU/ BDLXX70QT display models

Added Volume Get/Set for Speaker out & Audio out

Volume Limit Speaker out	√	0xB8
Volume limit Audio out	√	0xB9

SICP 1.88 (03192015) → SICP 1.88 (03302015)

Added a few commands

Command name	Set Command	Get Command	Command Code	Remarks
Custom Multi-Win Get		√	0xFD	
Custom Multi-Win Set	√		0xFC	
Custom Multi-Win Set	√		0xFB	
MIC color calibration	√		0xFE	

SICP 1.88 (03302015) → SICP 1.88 (June 3, 2015)

Added values:

0x3B = Picture Format – Report

0x3A = Picture Format – Set

Modified values

0x55 = Switch On Delay (Tiling) Feature – Report

0x54 = Switch On Delay (Tiling) Feature – Set

Group ID

Special NOTE for Phoenix 2.0 use ONLY

0x33 Video Parameters – Report

0x32 Video Parameters – Set

0x12 Color Temperature 100K – Report

0x11 Color Temperatures 100K – Set
0x45 = Volume – Report
0x44 = Volume – Set
0xB8 = Volume Limits– Set
0x43 = Audio Parameters – Report
0x42 = Audio Parameters – Set

SICP 1.88 (06032015) → SICP 1.88 (06292015)

Added special note and added valid ranges

0x32 Video Parameters – Set
0x45 = Volume – Report
0x44 = Volume – Set
0x42 = Audio Parameters – Set
0x3F = Power On logo status – Report
0x3E = Power On log status – Set

SICP 1.88 (06292015) → SICP 1.88 (08192015)

Added Volume Get for Speaker out & Audio out

Volume Limit Speaker out		√	0xB6
Volume limit Audio out		√	0xB7

SICP 1.88 (08192015) → SICP 1.89 (03072016)

Color Temperature – Data [1] naming changed from “nature” to “native”.
Input source – added newer sources (PDF player, Media Player, Custom), modified DATA[2]
Other minor changes

SICP 1.89 (03072016) → SICP 1.90 (04132016)

Added

Display orientation get		√	0x16	
Display orientation set	√		0x17	

Changed

custom tiling get		√	0x4A	
custom tiling set	√		0x4B	
APM status Get		√	0xD1	
APM status Set	√		0xD0	
Power Save status Get		√	0xD3	
Power Save status Set	√		0xD2	
Light Sensor Get		√	0x25	
PIP source Get		√	0x85	
PIP source Set	√		0x84	
Custom Multi-Win Get		√	0xFD	Himalaya 1.0

Custom Multi-Win Set	√		0xFC	Himalaya 1.0
Custom Multi-Win Set	√		0xFB	Himalaya 1.0
Tiling Get		√	0x23	
Tiling Set	√		0x22	
PIP source Set	√		0x84	Change/Add input sources
Picture-in-picture Get		√	0x3D	
Picture-in-picture Set	√		0x3C	

SICP 1.90 (04132016) → SICP 1.91 (04142016)

Changed CMD code

Display orientation get		√	0x16	
Display orientation set	√		0x17	

Updated command summary table

SICP 1.91 (04132016) → SICP 1.92 (04182016)

Changed CMD code

Scheduling Get		√	0x5B	Added DATA[8]
Scheduling Set	√		0x5A	Added DATA[8]

SICP 1.92 (04182016) → SICP 1.93 (06222016)

Checksum changes, Checksum inclusions and Typo corrections

SICP 1.93 (06222016) → SICP 1.94 (09022016)

Adding command validity list for 2016 model IOBDL3051T

Command name	Set	Get	Command Code
Communication Control	V	V	0x00
Miscellaneous info		V	0x0F
Serial Code Get		V	0x15
Power state Set	V		0x18 (Screen status only)
Power state Get		V	0x19 (Screen status only)
Touch Feature Set	V		0x1E
Touch Feature Get		V	0x1F
Power On logo Set	V		0x3E
Power On logo Get		V	0x3F
Audio parameters Set	V		0x42
Audio parameters Get		V	0x43

Audio Volume Set	V		0x44
------------------	---	--	------

Audio Volume Get		V	0x45
Factory Reset Set	V		0x56
Scheduling Set	V		0x5A
Scheduling Get		V	0x5B
Group ID Set	V		0x5C
Group ID Get		V	0x5D
Model Number, FW Version, Build date		V	0xA1
Input Source	V		0xAC
Current Source		V	0xAD
External Storage Lock Set	V		0xF1
External Storage Lock Get		V	0xF2
Led Control Set	V		0xF3
Led Control Get		V	0xF4

SICP 1.94 (09022016) → SICP 1.95 (09072016)

Modified Sub Chapter numbers under section 8.6.4

Modified Chapter 4.1.2, Chapter 4.1.3 – defined Special note

+ Added 0xA2 supported command list for I0BDL3051T

+ Added Chapter 13 about LED strips commands applicable only for I0BDL3051T

Command name	Set	Get	Command Code
Communication Control	V	V	0x00
Miscellaneous info		V	0x0F
Serial Code Get		V	0x15
Power state Set	V		0x18 (Screen status only)
Power state Get		V	0x19 (Screen status only)
Touch Feature Set	V		0x1E
Touch Feature Get		V	0x1F
Power On logo Set	V		0x3E
Power On logo Get		V	0x3F
Audio parameters Set	V		0x42
Audio parameters Get		V	0x43
Audio Volume Set	V		0x44
Audio Volume Get		V	0x45
Factory Reset Set	V		0x56

Scheduling Set	V		0x5A
Scheduling Get		V	0x5B
Group ID Set	V		0x5C
Group ID Get		V	0x5D
Model Number, FW Version, Build date		V	0xA1
Platform and version labels		V	0xA2
Input Source	V		0xAC
Current Source		V	0xAD
External Storage Lock Set	V		0xF1
External Storage Lock Get		V	0xF2
Led Control Set	V		0xF3
Led Control Get		V	0xF4

SICP 1.95 (09072016) → SICP 1.96 (09082016)

Modified Chapter 3.2.I with more info for platform label and version 10BDL3051T 1.0

SICP 1.96 (09082016) → SICP 1.97(09092016)

-Deleted unsupported “Audio Parameters Set/Get” commands for 10BDL3051T
+Added Chapter 14 for External Storage Lock/Unlock description.

Updated command list for 10BDL3051T

Command name	Set	Get	Command Code
Communication Control	V	V	0x00
Miscellaneous info		V	0x0F
Serial Code Get		V	0x15
Power state Set	V		0x18 (Screen status only)
Power state Get		V	0x19 (Screen status only)
Touch Feature Set	V		0x1E
Touch Feature Get		V	0x1F
Power On logo Set	V		0x3E
Power On logo Get		V	0x3F
Audio Volume Set	V		0x44
Audio Volume Get		V	0x45
Factory Reset Set	V		0x56
Scheduling Set	V		0x5A
Scheduling Get		V	0x5B
Group ID Set	V		0x5C
Group ID Get		V	0x5D
Model Number, FW Version, Build date		V	0xA1
Platform and version labels		V	0xA2
Input Source	V		0xAC
Current Source		V	0xAD
External Storage Lock Set	V		0xF1
External Storage Lock Get		V	0xF2
Led Control Set	V		0xF3
Led Control Get		V	0xF4

SICP 1.97(09092016) → SICP 1.98 (11172016)

Group byte example inclusion – Page 9
TCP/IP port 5000 definition – Page 9
Custom MultiWindow Width/Height definition – Page 80
Typo correction – Page 80
PIP source platform name changes
Checksum miscalculations have been corrected

18 April 2017 SICP 1.98

0x45 = Volume –Get

Message-Report current volume level for Speaker out or Audio Out
Changed

Old: Valid values range from 0x00 (lowest 0% volume) through 0xFE (highest – 100% volume).

New: Valid values range from 0x00 (lowest 0% volume) through 0x64 (highest – 100% volume).

Add [reply](#) for models with no audio out variable level

18 April 2017 SICP 1.98

0x44 = Volume – Set

Changed:

Old:

This command can set volume level for speaker & audio out individually. Valid values range from 0x00 (lowest 0% volume) through 0xFE (highest – 100% volume). If DATA [1] or [2] value supplied is "0xFF" no action will be taken in the display and current volume level will be maintained without any effect.

New:

This command can set volume level for speaker & audio out individually. Valid values range from 0x00 (lowest 0% volume) through 0x64 (highest – 100% volume). If DATA [1] or [2] are higher than 0x64 no action will be taken in the display and current volume level will be maintained without any effect.

18 April 2017 SICP 1.98

Add [vol set, step+ & -](#) command for models with no audio out variable level

Add [platform](#) info

20 May 2017 SICP 1.98 > 1.99

[Add Pixel Shift command](#)

[Add Off Timer command](#)

[Add Human Sensor command](#)

[Add more platforms to command 0XF2 \(lock/unlock USB\)](#)

14 June 2017 SICP 1.99

Correct CRC value in the examples (0x92 command)

Add "2: no change" in volume command 0x41

8 August 2017 SICP 1.99

Add QL2K17 models in [platform](#) list

(platform name QL2K17 is changed to QL3.0 in version SICP 1.99 10 Aug)

Add HDMI 4 input source in the get and set commands

Add HDMI 4 in the scheduling get and set commands

Updated phase 2 and 3 with the firmware version : "after V1.2XX " and
"after V1.3XX "

10 Aug 2017 SICP 1.99

platform name QL2K17 changed to QL3.0 cmdnd

17 October 2017 SICP 1.99

Added VGA2, VGA3, IWB set & get source input, PIP, failover and scheduler.

Updated the "Command summary" on page 87-90.

20 October 2017 SICP 2.00

Added ECO mode set & get (0x63/0x64)

Updated the "Command summary" on page 87-90.

14 December 2017 SICP 2.00

- Updated [platform](#) names in the platform list
32"~65" BDL4150D (MSD9103V2+RK3399) > Dragon 1.6
75"~98" BDL4150D (MSD9U02V2+RK3399) > Himalaya 2.0
Updated the platform exceptions in all the notes.
- Picture-in-Picture(PIP) Set/Get(0x3C/0x3D), add diversity:
PBP 3win, PBP 4win, PBP 3win-1, PBP 3win-2, PBP 4win-1 are supported on Dragon 1.6 platform
- APM status Set/Get(0xD0/0xD1) > add mode 2 & 3
- Add set/get picture style (0x65/0x66)
- Add set/get volume mute (0x46/0x47)
- Updated the "Command summary" on page 87-90.

15 December 2017 SICP 2.00

Correction, HIMALAYA 2.0 do also support PIP any size/position, note accordingly modified.

18 December 2017 SICP 2.00

Information added: Himalaya 2.00 do support canvas tiling

29 March 2018 SICP 2.01

DATA[2] modified in Input source set (0XAC) & Current source get(0XAD) source input

> add playlist and URL number

Modified information into:

DATA[1] : set the current source value as below.

DATA[2]: playlist number for PDF player and Media player source input and URL number for source input browser

27 April 2018 SICP 2.01

Below information added for commands:

RGB parameters Set/get (0x36/0x37)

Video parameters set/get (0x32/ 0x33)

This command is not working on [platform](#) QL3 on source inputs: browser, PDF player, media player, CMND&play, installed apk.

28 May 2018 SICP 2.01

Dragon 2.0 name changed into Dragon 1.6

65BDL4150D	Himalaya 2.0
75BDL4150D	Himalaya 2.0
86BDL4150D	Himalaya 2.0
98BDL4150D	Himalaya 2.0

Platform name changed in above models from dragon2 > Himalaya 2.0

Start playlist number, add the platforms in red : dragon 1.6 & Himalaya 2

DATA[2]	<p>Get the selected playlist file number on source input media player or PDF player. Get the selected URL number on browser input.</p> <p>Only working on: Dragon 1, Dragon 1.5, 10BDL3051T, dragon 1.6, Himalaya 2 & QL3 (see the platform list)</p> <p>From firmware version : TBC</p>
---------	--

25 July 2018 SICP 2.02

Remove the API information in controlling the led stripes on the 10BDL3051T.
Chapter: LED STRIP control for 10BDL3051T

Add command Monitor restart: 0x57
Chapter: Monitor restart

Add command send screenshot: 0x58
Chapter : Send screenshot

‘9 Oct 2018 SICP 2.02

Add 0x03 = read the android fw version

Bytes	Bytes Description	Bits	Description
DATA[0]	0xA1 = Get Model Number & FW version of device with Date		Request the Model Number and FW version of the device
DATA[1]	Codes to request		0x00 = Model Number 0x01 = FW version 0x02 = Build Date 0x03 = Android FW version (build number)

Removed below in 3.4 Message-Report (Model Number, FW Version, Build date)

In case of having two firmware versions (scaler, Android) or more, please report all with space character in between each of them.

25 Oct 2018 SICP 2.02

Add command to rotate image in the CRD, 0x16 & 0x17 set/get rotation, add the yellow part in below table

0x00 = Off

0x01 = On (not supported on the CRD50)

0x02 = On Clock Wise*

0x03 = On Counter Clock Wise*

(*) only supported on the CRD50

23 Nov 2018 SICP 2.03 & also in SICP 2.02 23nov2018

Get and set Keypad lock, add note : (*) not valid for 10BDL3151T & 24BDL2451T

28 nov 2018 SICP 2.03

add below commands:

0x59 = Video Present – Get

0x5E = Frame compensation Horz value – Get

0x5F = Frame compensation – Horz Set

0x67 = Frame compensation Vert value – Get

0x68 = Frame compensation Vert – Set

0x69 = monitor ID Set

0x71 = Mute picture – Get > name is changed to backlight on-off

0x72 = Mute picture – Set > name is changed to backlight on-off

Updated the “Command summary” on page 87-90.

12december 2018 SICP 2.03

Add soft and user picture styles in 0x65 & 0x66

Scan Mode: add 00 > 25 value for challenger 2.1 platform

Add default in set /get noise reduction for challenger 2.1 platform

Bytes	Bytes Description	Bits	Description
DATA[0]	0x2B = Noise reduction Feature – Report		Command reports the Noise Reduction Feature enabled or disabled
DATA[1]	Off / Low / Middle / High		0x00 = Off 0x01 = Low 0x02 = Middle 0x03 = High 0x04 = default*

28 december 2018 SICP 2.03

Add comment in APM (0xD0 & 0xD1)

APM is same as power save in the challenger 2.1 platform

13 march 2019 SICP 2.03

0x03 = Android FW version (build number)* add supported platforms

0x71 & 0x72 change the naming from picture mute to backlight on-off

8 June 2019 SICP 2.03

Add in APM get & set command (0xD0/0xD1)

0x04 = Mode 3 (TCP on, WOL off, auto on/off)

0x05 = Mode 4 (TCP on, WOL off, no auto on/off)

9 June 2019 SICP 2.03

Removed in APM get & set command (0xD0/0xD1)

0x04 = Mode 3 (TCP on, WOL off, auto on/off)

0x05 = Mode 4 (TCP on, WOL off, no auto on/off)

Add in power save command (0xD2/0xD3) the “challenger 2.1”

Dragon 1.x , 1.6 & Challenger 2.1

20 June 2019 SICP 2.04

New command: 0x73 = Enter admin menu

20 June 2019 SICP 2.04 draft 3

Add commands:

Enable/disable navigation bar Get			0x74
Enable/disable navigation bar Set			0x75

31 July 2019 SICP 2.04 draft 4

Set/get Frame compensation > add top/bottom/left/right

09 Sept 2019 SICP 2.04 draft 5

Add CMND&Play Web source input

1. Failover Get/Set(0xA6/0xA5):

0x17 = CMND&Play Web

2. Input Source Get/Set (0xAD/0xAC)

0x1D=CMND&Play Web

3. PIP Source Get/Set (0x85/0x84)

0x1D=CMND&Play Web

4. Scheduling Get/Set (0x5B/0x5A):

0x1D=CMND&Play Web

24 September, SICP 2.04 released

26 feb 2020 version 2.05 released

Add new commands

- 0xAB get number of inputs and all the available inputs
- 0xBA/0xBB get/set boot on source
- in 0xBA/0xBB:
- Data[1] 0x00 = Null changed to Last input
- Data[2] add 0x00 = tag 0

Add USB autoplay source in below commands

0x5B & 0x5A = Scheduling: input media player > add “USB autoplay” in data[8]

0xAC & 0xAD set/get source: add “USB autoplay” in data[2]

31 feb 2020 version 2.05 released

Removed other baud rate values, only 9600 is supported

27 April 2020 version 2.06 draft I

Add new commands:

HDMI input range - Get	0x6A
HDMI input range - Set	0x6B
Internal testpattern – Set	0x6C
Internal testpattern – Get	0x6D

Add source inputs: “Home/Launcher” and “USB TypeC”

In source, failover, scheduler, boot on source & PIP (not Home/Launcher in PIP)

25 May 2020 SICP version 2.06 draft I

Add new command:

Freeze picture Get-Set: 0x76 & 0x77

26 May 2020 SICP version 2.06 draft I

Modified note in get command 0x33 (is working from fw version FB06.xx onwards)

29 May 2020 SICP version 2.06 draft I

Set video parameters 0x32

Changed comment into:

This command is not working on android sources (media player, CMND, PDF player, browser, app).

4 Nov 2020 SICP version 2.06 draft 3 & released

Add command to start fw upgrade (update.zip)

DATA[0]	0x20 = firmware upgrade set		Command to invoke the android firmware (update.zip)
---------	-----------------------------	--	---

18 Oct 2021 SICP version 2.06 released version

Freeze data byte(1) is changed. Is also changed in SICP 2.07

Bytes	Bytes Description	Bits	Description
DATA[0]	0x77 = Freeze screen set		
DATA[1]			0x00 = freeze screen changed to unfreeze screen 0x01 = unfreeze screen changed to freeze screen

18 nov 2020 version 2.05 & 2.06 released

Example corrected on page 79 & 80, scheduling, data 8 added in the example command.

28 January 2021 SICP version 2.07 draft I

- Model list updated with the latest models.

- Add source inputs:

Kiosk
Smart Info
Tuner
Google Cast

In source, failover, scheduler, boot on source & PIP

- Add an example in the “command format” in the monitor ID and group ID byte.

- The group byte ACK is changed in all the acknowledge examples from 00 > 01.

- New commands added

set/get time 0x86/0x87

set/get audio sync on/off : 0x8C/0x8D
 set/get speakers on/off: 0x8E/0x8F
 set/get auto time sync on/off 0x88/0x89
 set/get teamviewer on/off 0x93/0x94
 set/get date : 0x96/0x95
 set/get RS232 routing: Rs232, network, LAN > OPS: 0x9A/0x9B
 set/get WOL on/off 0x9C/0x9D
 set/get auto restart: on/off & set time 0x9E/0x9F
 set/get HDMI one wire, HDMI power off 0xBC/0xBD
 set/get port forwarding 0xBE/0xBF (only supported on the CRD50)
 set/get channel number 0xC1/0xC2 (only supported on monitors with a tuner)
 set/get channel step +/- 0xC3 (only supported on monitors with a tuner)
 set/get time zone : 0x8B/0x8A
~~Set/get USB lock/unlock 0x97/0x98~~ > is removed in SICP draft 4
 Because the command was already available: MicroSD and USB ports Unlock/Lock (0xF1/0xF2)

19 July 2021 SICP version 2.07 draft 2

Set/get Language 0xA8/0xA7

27 July 2021 SICP version 2.07 draft 3

- 7.48 Auto restart, add the red parts:

DATA[1]	Auto restart		0x00 = OFF 0x01 = ON
DATA[2]	Auto restart hour		0 to 23 of the start time hour 24: NULL
DATA[3]	Auto restart minutes		0 to 59 of the start time minute 60: NULL

- 7.49 HDMI one wire, changed to :

DATA[1]	HDMI one wire & HDMI one wire power off (this parameter is not always available)		0x00 = off 0x01 = on if "HDMI one wire power off" is available in the monitor: 0x00 = off 0x01 = on with "HDMI one wire power off" disabled. 0x10 = reserved 0x11 = on with "HDMI one wire power off" enabled.
---------	--	--	--

30 Aug 2021 SICP version 2.07 draft 4

~~Set/get USB lock/unlock 0x97/0x98~~ > is removed in SICP draft 4
 Because the command was already available: MicroSD and USB ports Unlock/Lock (0xF1/0xF2)

Platform list updated.
 Set get video (0x32/0x33) parameters: notes updated

31 Aug 2021 SICP version 2.07 released version

18 Oct 2021 SICP version 2.07 released version

Freeze data byte(1) is changed

Bytes	Bytes Description	Bits	Description
DATA[0]	0x77 = Freeze screen set		
DATA[1]			0x00 = freeze screen changed to unfreeze screen 0x01 = unfreeze screen changed to freeze screen

This is also changed in SICP 2.06

23 Feb 2022 SICP version 2.07 released version

RS232 routing, RS232 byte changed from 0x01 to 0x00

RS232 parameter		0x01 > changed to 0x00 = RS232 0x01 = LAN > RS232 0x02 = CARD-OPS > RS232 0x03 = Reserved
-----------------	--	---

17 March 2022 version 2.08

Test pattern, add info:

This command is not supported on the xxBDL4550D / xxBDL3550Q / xxBDL3452T / xxBDL3651T.



2016 © Koninklijke Philips N.V. All rights reserved.

Specifications are subject to change without notice.

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.