

User Manual of NyBoard V0_2

Introduction

- NyBoard is a motion control board for the robotic kitten named Nybble, the first product of OpenCat project. It's also compatible for other robots following OpenCat framework. Taking ATmega328P as the core processor, NyBoard runs at 20MHz clock to control 16 independent PWM servos with real-time adaption.
- The size of NyBoard is only 65×56mm. Components on the board are carefully laid out to precisely fit the contour of Raspberry Pi 3B and later models. There is a 2×5 socket connecting the NyBoard and Pi, which includes the power, UART, reset, I²C and I²C reference. Through it, the NyBoard can power Pi and communicate with Pi.
- NyBoard can accept 6~9V power inputs. Be careful with the polarity when connecting your power supply to NyBoard's battery socket. There's "+" and "-" besides the socket. **Reversed connection may damage your NyBoard!**
- To isolate voltage fluctuation caused by servos' movement, NyBoard provides two independent power management. One supplies a stable 5V power to the chips, the other supplies an adjustable voltage (4.5-7.5V) to suit most models of servos. To ensure safety during operation, please do not connect the servo to NyBoard first. Check the rated voltage of the servo, use a voltmeter to monitor the output for servos and adjust the potentiometer to obtain a desired voltage.
- NyBoard has a built-in I²C network with ATmega328P working as master and other peripherals as slaves, including the PWM/servo driver, the 6-Axis motion sensor and external EEPROM. NyBoard also provides a jumper switch for users to choose whether ATmega328p or Pi (or another AI chip) will be the master of the I²C network. We hope that by providing alternatives, users can explore and find the best configuration for their projects.



Features

- Core processor: ATmega328P working at the frequency of 20MHz.
- Power input: DC 6-9V
- Power output: Two independent power supplies, 5V to chips (3A peak), 4.5-7.5V adjustable voltage to servos (5A peak). Dial counterclockwise will increase the voltage for servos. The stable voltage range will shift with different input voltage. Due to the resistance in chip, the maximum output will be lower than raw input. Stable 7.5V can only be achieved with 9V input. Try to use the lowest voltage that can complete your motion requirement, to reduce the wearing of your servo's gears, and increase both circuit stability and battery life.


- On **NyBoard V0_2**, there's a jumper switch (SW3). You can choose to power the metal servos included in Nybble kit by batteries directly to achieve the best performance. **Don't power cheap plastic servos directly by battery!**
- LED power indicators: 2 LEDs, blue for the chip, yellow for the servos.
- Servo: 16 channel PWM outputs.
- Grouped 2x3 SPI port for burning bootloader or uploading sketches.
- FTDI port: 1x6 socket for connecting the 5V serial-to-USB translator. The long pin legs allow bending to the other side of the board or other directions for convenient access.
- Motion sensor port: connects to GY521-MPU6050, which is centered on the board. Interrupt is connected to pin **D2**. Note: MPU6050 should always be facing up for measurements using default library (I2Cdevlib).
- 2x5 Socket to Pi: connects to 5V power, I²C, I²C reference, 3.3V UART and reset.
- I²C switch (SW2): choose ATmega328P or Pi as the master of the I²C network. Note that the REF pin in the 2x5 socket must be connected to the Vcc of the master board as a reference for the level converter chip.
- Additional I²C ports: 3x I²C ports directly connected to the 2x5 socket of Pi, leveled at 3.3V. (It's not connected to the ATmega328's I²C network)
- EEPROM: 8KB. Page write limit is 32 Bytes.
- Additional D/A pins: 3x4 socket with unused pins of ATmega328P
- Additional 5V/GND pins: power other peripherals
- Additional capacitor port below C3: allow more stable output for intense motion
- IR receiver: Receiving frequency 38KHz (using Arduino digital pin **D4**). The long pins allow bending to the best receiving orientation.
- Buzzer: Active (using Arduino PWM pin **D5**)
- Reset button: Reset the NyBoard
- Battery voltage detector: can be programed to alarm when battery is low (using Arduino analog pin **ADC0**)
- PCB: double-layer, 65x56mm

Ports and Specification


The tables are ordered as the squares on the board, from left to right, top to bottom:

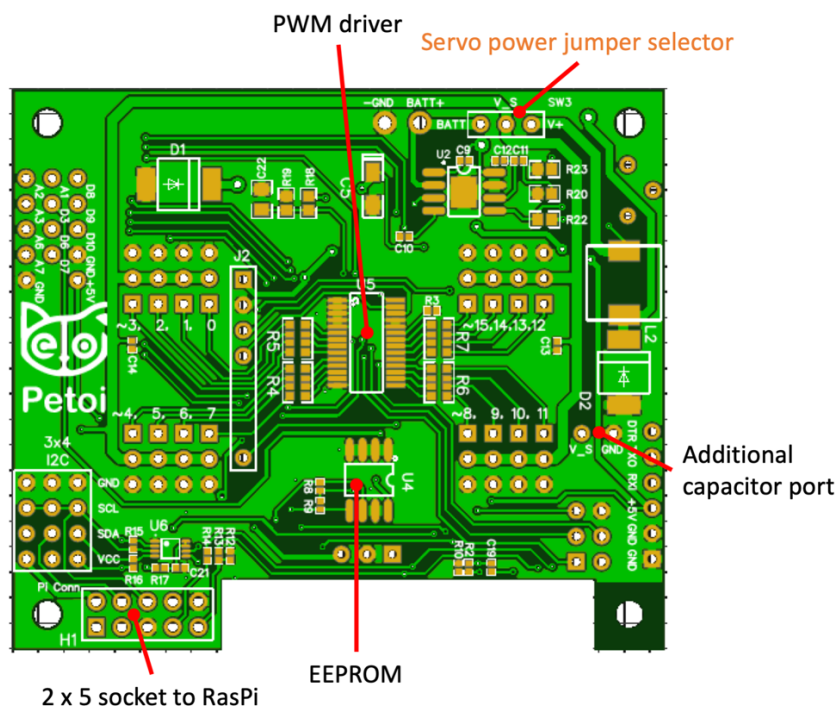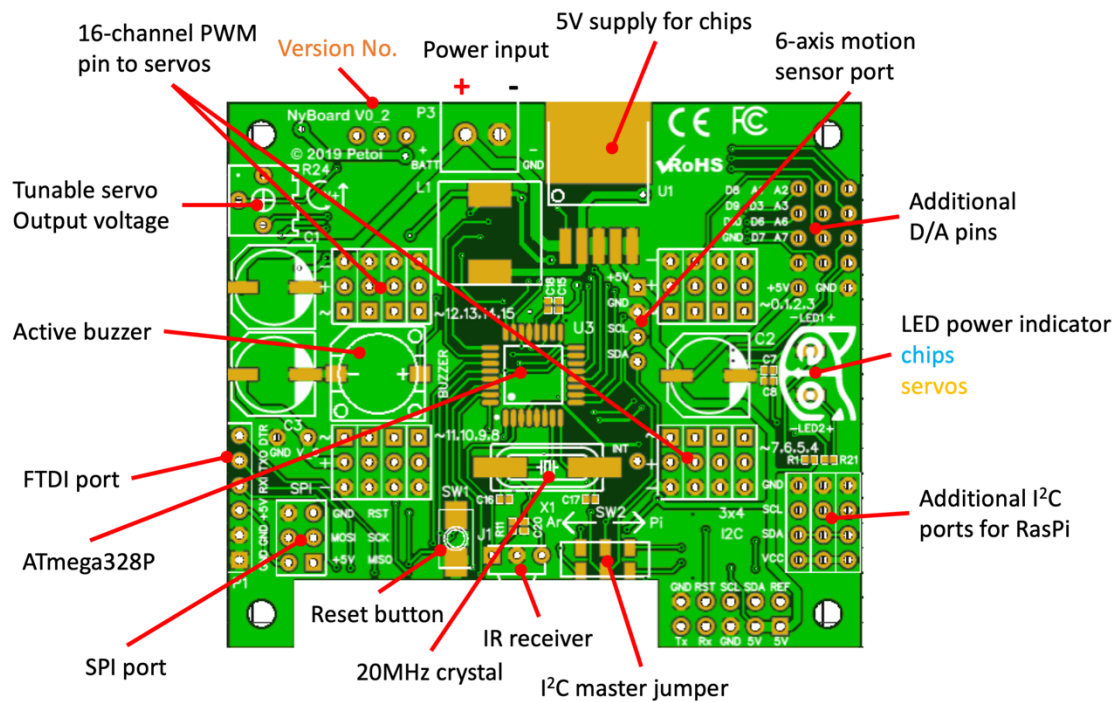

- Power input



- SW3



V_S is the servos' direct powerline. It can be wired with different powering source. Make sure the voltage of BATT+ is safe for your servos if you connect it with V_S.

V+ comes from the stepdown chip. It has regulated but limited output.

- 16 channel PWM pin to servos (NyBoard V0_2)

GND					GND			
+					+			
12	13	14	15		0	1	2	3
11	10	9	8		7	6	5	4
+					+			
GND					GND			

- FTDI port

DTR
TXO
RXI
+5V
GND
GND

- SPI port

GND	RST
MOSI	SCK
+5V	MISO

- IR receiver

OUT	GND	+5V
-----	-----	-----

- 6-Axis motion sensor port

Mark on NyBoard	Corresponding pins on GY521
+5V	VCC
GND	GND
SCL	SCL
SDA	SDA
/	/
/	/
/	/
INT	INT

- I²C jumper switch

Dial up to select ATmega328P, dial down to select Pi (or another AI chip)

- Pre-defined pins (~ supports PWM)

Interrupt	IR receiver	Buzzer	MOSI	MISO	SCK
D2	D4	D5 ~	D11 ~	D12	D13

- Additional D/A pins

D8	ADC1	ADC2
D9 ~	D3 ~	ADC3
D10 ~	D6 ~	ADC6
GND	D7	ADC7
+5V		GND

Recommended usage is using (D8, D9, D10, GND) for the ultrasound sensor, and (A2, A3, A6, A7) for optional foot contact sensors. You can also find other combinations in one row/column for convenient interfacing (2 Digital + 1 Analog, 2 Analog + 1 Digital, GND + digital + Analog, etc.)

- Additional I²C ports (the voltage of VCC is equal to REF)

GND	GND	GND
SCL_P	SCL_P	SCL_P
SDA_P	SDA_P	SDA_P
VCC	VCC	VCC

- Socket to Pi

REF	SDA_P	SCL_P	RST	GND
+5V	+5V	GND	TXD	RXD

May 21st, 2019