




Computational Aircraft Prototype Syntheses: The CAPS API for ESP Rev 1.21

Bob Haimes Marshall Galbraith
haimes@mit.edu galbramc@mit.edu
Aerospace Computational Design Lab
Massachusetts Institute of Technology

Note: Sections in **red** are changes in CAPS from Revision 1.20.

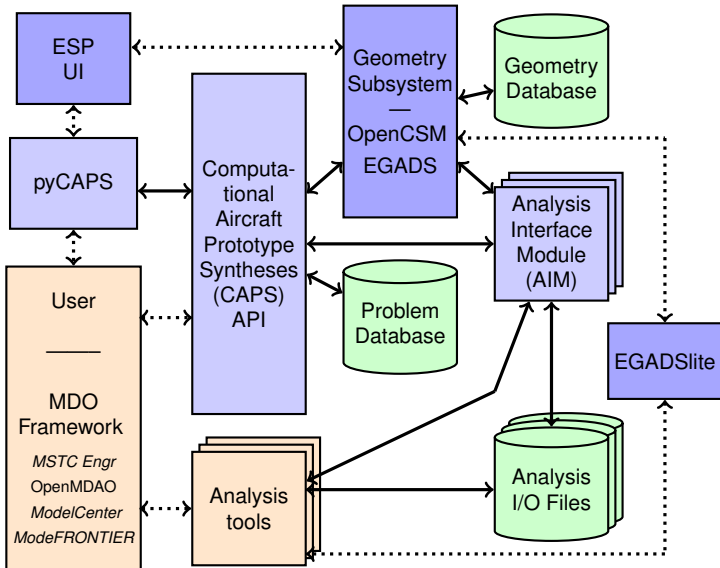

Changing Thrusts Beginning at Rev 1.19

CAPS was originally designed to run concurrently with an MDO framework. This has turned out to be rarely the method of execution. In addition there were always issues in restarting from where the runs left off (due to the amount of state info stored in AIMs, the difficulty in getting to the correct place in the control program and the scattering of files). Also if MDO frameworks are not used, then additional execution support is required within the CAPS environment. So the enhancements include:

- Restarting runs the same script (or control program) *recycling* previous data.
- AIM reload. The AIMs ended up maintaining too much internal *state*, which made restarting almost impossible (requiring either rerunning or writing out the state). The AIMs need recasting not to hold on to extraneous data.
- A file structure where the *Problem Database* contains all of the *Analysis I/O Files* (seen in the block diagram on the previous slide).
- Better support for Analysis execution, which embraces asynchronous CAPS running when the Analysis is not run directly in the AIM.
- More emphasis on tracking data and decisions during the session.
- Enhanced handling of derivatives from both geometry construction and analysis output.
- Removal of Value Object of Value Objects.

Variable Dimension GeometryIn Value Objects

Now that OpenCSM supports the ability to change the size of its *Design* and *Configuration Parameters* (GeometryIn Value Objects), this complicates dealing with derivatives associated with these inputs. This is because the meaning and use of rows and columns are now malleable. There are now internal *slots* for derivatives with respect to GeometryOut Value Objects, which are internally *registered* when `caps_getDot` is called. This is done via specifying which row/column is in play. The same is true for DataSet Objects, which request sensitivity information.

Note that when a changing a GeometryIn Value Object that effects the size of other GeometryIn Value Objects:

- 1 You can get which other GeometryIn Value Objects are effected when calling `caps_setValue` (see `nGIVAL` and `GIVALS`).
- 2 Any GeometryOut Value *slots* associated with changed size GeometryIn Objects are invalidated and removed. These would need to get reregistered if still needed.
- 3 Any DataSets associated with the changed-size GeometryIn Value Objects are also removed and need to be reinstated if still required.

Problem Object

The Problem is the top-level *container* for a single mission. It maintains a single set of interrelated geometric models, analyses to be executed, connectivity and data associated with the run(s), which can be both multi-fidelity and multidisciplinary. There can be multiple Problems in a single execution of CAPS and each Problem is designed to be *thread safe* allowing for multi-threading of CAPS at the highest level.

Value Object

A Value Object is the fundamental data container that is used within CAPS. It can represent *inputs* to the Analysis and Geometry subsystems and *outputs* from both. Also Value Objects can refer to *mission* parameters that are stored at the top-level of the CAPS database. The values contained in any *input* Value Object can be bypassed by the *linkage* connection to another Value (or *DataSet*) Object of the same (*sub*)*shape*. Attributes are also cast to temporary (*User*) Value Objects.

Analysis Object

The Analysis Object refers to an instance of running an analysis code. It holds the *input* and *output* Value Objects for the instance and a directory path in which to execute the code (though no explicit execution is initiated). Multiple various analyses can be utilized and multiple instances of the same analysis can be handled under the same Problem.

Bound Object

A Bound is a logical grouping of BRep Objects that all represent the same entity in an engineering sense (such as the “outer surface of the wing”). A Bound may include BRep entities from multiple Bodies; this enables the passing of information from one Body (for example, the aero OML) to another (the structures Body).

Dimensionally:

- 1D – Collection of Edges
- 2D – Collection of Faces

VertexSet Object

A VertexSet is a *connected* or *unconnected* group of locations at which discrete information is defined. Each *connected* VertexSet is associated with one Bound and a single *Analysis*. A VertexSet can contain more than one DataSet. A *connected* VertexSet can refer to 2 differing sets of locations. This occurs when the solver stores it's data at different locations than the vertices that define the discrete geometry (i.e. cell centered or non-isoparametric FEM discretizations). In these cases the solution data is provided in a different manner than the geometric.

DataSet Object

A DataSet is a set of engineering data associated with a VertexSet. The rank of a DataSet is the (user/pre)-defined number of dependent values associated with each vertex; for example, scalar data (such as *pressure*) will have rank of one and vector data (such as *displacement*) will have a rank of three. Values in the DataSet can either be deposited there by an application or can be computed (via evaluations, data transfers or sensitivity calculations).

Object	SubTypes	Parent Object
capsProblem	Parametric, Static	
capsValue	GeometryIn, GeometryOut, Parameter, User	capsProblem
capsAnalysis		capsProblem
capsValue	AnalysisIn, AnalysisOut, AnalysisDynO	capsAnalysis
capsBound		capsProblem
capsVertexSet	Connected, Unconnected	capsBound
capsDataSet	FieldOut, FieldIn, User, GeomSens, TessSens, Builtin	capsVertexSet

Body Objects are EGADS Objects (egos)

See `$ESP_ROOT/include/capsTypes.h` for the correct capitalization

Filtering the active CSM Bodies occurs at two different stages, once in the CAPS framework, and once in the AIMs. The filtering in the CAPS framework creates sub-groups of Bodies from the CSM stack that are passed to the specified AIM. Each AIM instance is then responsible for selecting the appropriate Bodies from the list it has received.

The filtering is performed by using two Body attributes: “capsAIM” and “capsIntent”.

Filtering within AIM Code

Each AIM can adopt it's own filtering scheme for down-selecting how to use each Body it receives. The “capsIntent” string is accessible to the AIM, but it is for information only.

CSM AIM targeting: “capsAIM”

The CSM script generates Bodies which are designed to be used by specific AIMs. The AIMs that the Body is designed for is communicated to the CAPS framework via the “capsAIM” string attribute. This is a semicolon-separated string with the list of AIM names. Thus, the CSM author can give a clear indication to which AIMs should use the Body. For example, a body designed for a CFD calculation could have:

```
ATTRIBUTE capsAIM $su2AIM;fun3dAIM;cart3dAIM
```

CAPS AIM Instantiation: “capsIntent”

The “capsIntent” Body attribute is used to disambiguate which AIM instance should receive a given Body targeted for the AIM. An argument to `caps_makeAnalysis` accepts a semicolon-separated list of keywords when an AIM is instantiated in CAPS/pyCAPS. Bodies from the “capsAIM” selection with a matching string attribute “capsIntent” are passed to the AIM instance. The attribute “capsIntent” is a semicolon-separated list of keywords. If the string to `caps_makeAnalysis` is **NUL**L, all Bodies with a “capsAIM” attribute that matches the AIM name are given to the AIM instance.

capsLength

This string Attribute must be applied to an EGADS Body to indicate the length units used in the geometric construction.

capsBound


This string Attribute must be applied to EGADS BRep Objects to indicate which CAPS Bound(s) are associated with the geometry. A entity can be assigned to multiple Bounds by having the Bound names separated by a semicolon. Face examples could be “Wing”, “Wing;Flap”, “Fuselage”, and etc.

Note: Bound names should not cross dimensional lines.

capsGroup

This string Attribute can be applied to EGADS BRep Objects to assist in grouping geometry into logical sets. A geometric entity can be assigned to multiple groups in the same manner as the capsBound attribute.

Note: CAPS does not internally use this, but is suggested of classifying geometry.

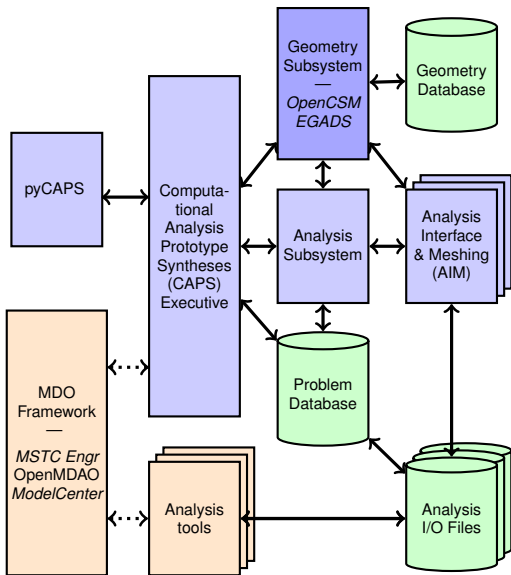

Setup (or read) the Problem:

- Initialize Problem with *csm* (or *static*) file
GeomIn and GeomOut parameters
- Specify *mission* parameters
- Make Analysis instances
AnalysisIn and AnalysisOut params
- Create *Bounds*, *VetrexSets* & *DataSets*
- Establish linkages between parameters

Run the Problem:

- Adjust the appropriate parameters
- Regenerate Geometry (if *dirty* – *lazy*)
- Call for Analysis Input file generation
- AIM Execute runs each *solver*
- Inform CAPS that an Analysis has run
fills AnalysisOut, **AnalysisDynO** Objects & *DataSets* (*lazy*)
- Generate *Objective Function*

CAPS Execution Phases

CAPS has 4 fundamental modes for starting the session:

- Scratch – This is for development (and not production). It will remove any existing data in the *Scratch* directory of the Problem's path.
- Initial – This *phase* is started by a call to `caps_open` that points to a nonexistent directory. The initialization can either be from a CSM, geometry file, an OpenCSM or EGADS Model.
- Continuation – This occurs when CAPS has not fully completed a *phase* either do to an interruption or not reaching `caps_close` (where the *phase* is marked as completed). In this case the CAPS application or pyCAPS script can be run from the beginning, but *recycling* of results is used to quickly get to the position where the *phase* terminated.
- Starting from a completed *phase*. **There are options for ignoring the deletion markers on Objects, read-only and reloading the CSM file.**

This is controlled by the Problem Object's initialization using `caps_open`.

CAPS Directory Structure

At the top level **prName** (of `caps_open`) you will find *phase* sub-directories. Note that *Scratch* is not as protected as the others.

In each *phase* subdirectory you may see:

- **capsCSMFiles** – A directory containing the CSM/UDC files used for reloading the geometry – must include the file *capsCSMLoad*.
Can be generated by a call to `caps_phaseNewCSM` (see page 16).
- `capsRestart.cpc` – A CSM saved state file – or –
- `capsRestart.egads` – An EGADS saved geometry file (for nonparametric runs).
- `capsRestart` – This subdirectory contains the CAPS restart data.
- `capsClosed` – An indication that the *phase* has been closed (`caps_close` has been called marking completion).
- `capsLock` – A flag that another application is using this subdirectory.
- `AIMnames` – any number of directories each related to an AIM instance in the running CAPS Problem.

CAPS Modes of Analysis Execution

There are 3 different ways that Analyses can be executed:

- **Manual** – This is the default mode. It requires a call to `caps_preAnalysis` (page 52), the execution of the solver (use `caps_system` – page 52 if the execution is performed via the command line) and then `caps_postAnalysis`, see page 53.
- **By the AIM** – If the AIM can execute the Analysis (noted by the return argument **exec** from either `caps_queryAnalysis` – page 46 or `caps_makeAnalysis` – page 49) use `caps_execute` (page 46) to perform “pre”, “exec” and “post”.
- **Automatic** – Again if the AIM does the Analysis execution (see above) and the flag **exec** was set for *auto-exec* on input when instantiating the AIM using `caps_makeAnalysis` (page 49) then the Analysis is triggered automatically when data associated with the AIM is retrieved. This happens during invocations of `caps_getData` (page 59) or `caps_getValue` (page 31).

Get CAPS revision

```
caps_revision(int *major, int *minor)
```

major the returned major revision
minor the returned minor revision number

Check State of CAPS Problem Phase

```
icode = caps_phaseState(const char *prNm, const char *phNm, int *bts)
```

prNm the path ending with the CAPS problem name
phNm the queried *phase* name (**NULL** is equivalent to *Scratch*)
bts the returned state (additive): 1 – locked, 2 – closed, 4 – no capsRestart directory
icode the integer return code

Setup for new Phase changing the CSM file

```
icode = caps_phaseNewCSM(const char *prName, const char *phName,  
                        const char *csm)
```

prName the path ending with the CAPS problem name
phName the new *phase* name
csm the CSM file to use in the new *phase* – for caps_open flag = 5
icode the integer return code

These functions may be called before CAPS *proper* is started via the invocation of caps_open.

Open CAPS Problem Phase

```
icode = caps_open(const char *prName, const char *phName, int flag,
                  void *ptr, int outLevel, capsObj *problem,
                  int *nErr, capsErrs **errs)
```

- prName** the path ending with the CAPS problem name
if exists the stored data initializes the problem, otherwise the directory is created
- phName** the current *phase* name (**NULL** is equivalent to *Scratch*)
- flag** 0 – **ptr** is a filename, 1 – **ptr** is an OpenCSM Model Structure, 2 – **ptr** is a Model **ego**,
3 – **ptr** is the starting *phase* name, 4* – continuation (**ptr** can be **NULL**),
5 – **ptr** is the starting *phase* name with reloading of the CSM/UDC files †,
6 – **ptr** is the starting *phase* name but does not remove Objects marked for deletion,
7 – Open the existing **phName** in read-only mode (**ptr** can be **NULL**)
- ptr** input path/filename (**flag** == 0) – based on file extension:
 *.csm initialize the project using the specified OpenCSM file
 *.egads initialize the project based on the static geometry
 – or – pointer to OpenCSM/EGADS Model – left open after caps_close
- outLevel** 0 - minimal, 1 - standard (default), 2 - debug
- problem** the returned CAPS problem Object
- nErr** the returned number of errors generated – 0 means no errors
- errs** the returned CAPS error structure – **NULL** with no errors
- icode** the integer return code

Notes: * A continuation can only occur on the same setup as initialized (ESP rev, version of OpenCASCADE and machine architecture)

† These files must be placed in the *capsCSMFiles* subdirectory (of the empty Phase directory) before calling caps_open

Specify a Call-back for Broken Links

```
icode = caps_brokenLink(void (*callBack)(capsObj problem, capsObj obj,  
                                     enum capstMethod tmethod, char *name,  
                                     enum capsstType stype))
```

callBack the function to be called when links are found to be broken – or –
NULL to remove an existing call-back

problem the almost complete reloaded Problem Object
obj is the existing Object that has lost its link (either source or target –
see **stype**)
tmethod the transfer method used for the broken link
name the name of the lost Value Object
stype the subtype of the lost Value Object

icode the integer return code

This is only needed if `caps_open` is invoked with **flag** as 5 or there are deleted Parameter Value Objects, Bounds and/or Analysis Objects (note that this must be called before `caps_open`).

If there are existing links that are broken due to the changes in the objects then the function **callBack** is invoked for each broken link during `caps_open`.

Note that this is not *thread safe* for multi-thread/multi-Problem situations. If you wish to have different call-backs per Problem initialization you will need to ensure the calls to `caps_open` are sequential.

Do not use CAPS signal handling

```
caps_externSignal()
```

Must be called before `caps_open`. Calling program is responsible for invoking `caps_rmLock()` on any abort, which deletes the `capsLock` file.

Get Problem root

```
icode = caps_getRootPath(const capsObj problem, const char **fullPath)
```

problem the input CAPS Problem Object

fullPath the file path to find the root of the Problem/Phase directory structure
if on Windows it will contain the drive

icode integer return code

Note: All other uses of *path* is relative to this point.

Close CAPS Problem

```
icode = caps_close(capsObj problem, int complete, const char *phName)
```

problem the input CAPS problem is written to disk and closed; memory cleanup is performed
complete -1 – remove the *phase*, 0 – the *phase* is left open, 1 – the *phase* is completed
phName Phase Name of the Scratch phase is closed as complete
icode the integer return code

Notes: If caps_open was initialized with an OpenCSM or EGADS Model, it is left open. **All Analyses must be past Post to be complete.**

Information about an Object

```
icode = caps_info(capsObj object, char **name, enum capsoType *otype,  
                 enum capsstType *stype, capsObj *link,  
                 capsObj *parent, capsOwn *last)
```

object the input CAPS Object
name the returned Object name pointer (if any)
otype the returned Object type: Problem, Value, Analysis, Bound, VertexSet, DataSet
stype the returned subtype (depending on **otype**)
link the returned linkage Value Object (**NULL** – no link)
parent the returned parent Object (**NULL** for a Problem or an Attribute generated User Value)
last the returned last owner to *touch* the Object
icode integer return code, **can be 1 indicating the Object is marked for deletion**

Number of Children in a Parent Object

```
icode = caps_size(capsObj object, enum capsObjType type,  
                 enum capsObjType subtype, int *size, int *nErr,  
                 capsErrors **errs)
```

object the input CAPS Object

type the data type to size: Bodies, Attributes, Value, Analysis, Bound, VertexSet, DataSet

subtype the subtype to size (depending on type)

size the returned size

nErr the returned number of errors generated – 0 means no errors

errs the returned CAPS error structure – **NULL** with no errors

icode integer return code

Mark an Object for Deletion

```
icode = caps_markForDelete(capsObj object)
```

object the Object to be deleted in the next Phase

Note: only Value Objects of subtype Parameter, Analysis and Bound Objects may be deleted! Value Objects of subtype User are automatically removed at Phase closure.

icode integer return code

Get Child by Index

```
icode = caps_childByIndex(capsObj object, enum capsoType type,  
                          enum capssType sty, int ind, capsObj *child)
```

- object** the input parent Object
- type** the Object type to return: Value, Analysis, Bound, VertexSet, DataSet
- sty** the subtype to find (depending on type)
- ind** the index [1-**size**]
- child** the returned CAPS Object
- icode** integer return code

Get Child by Name

```
icode = caps_childByName(capsObj object, enum capsoType type,  
                        enum capssType stype, const char *name,  
                        capsObj *child, int *nErr, capsErrs **errs)
```

object the input parent Object

type the Object type to return: Value, Analysis, Bound, VertexSet, DataSet

stype the subtype to find (depending on type)

name a pointer to the index character string

child the returned CAPS Object

nErr the returned number of errors generated – 0 means no errors

errs the returned CAPS error structure – NULL with no errors

icode integer return code

Set Verbosity Level

```
icode = caps_outLevel(capsObj problem, int outLevel)
```

problem the CAPS problem object

outLevel 0 - minimal, 1 - standard (default), 2 - debug

icode the integer return code / old outLevel

Get Body by index

```
icode = caps_bodyByIndex(capsObj obj, int index, ego *body,  
                        char **unit)
```

obj the input CAPS Problem or Analysis Object

index the index [1-**size**] – see `caps_size`, page 21

body the returned EGADS Body Object

units pointer to the string declaring the length units – **NULL** for unitless values

icode integer return code

Get Error Information

```
icode = caps_errorInfo(capsErrs *errors, int eindex, capsObj *errObj,  
                      int *eType, int *nLines, char ***lines)
```

- errors** the input CAPS Error structure
- eindex** the index into **errors** (1 bias)
- errObj** the offending CAPS Object
- eType** the returned error type (CINFO, CWARN, CERROR or CSTAT)
- nLines** the returned number of comment lines to describe the error
 - lines** a pointer to a list of character strings with the error description
- icode** integer return code

Free Error Structure

```
icode = caps_freeError(capsErrs *errors)
```

- errors** the CAPS Error structure to be freed
- icode** integer return code

Write Geometry Parameter File

```
icode = caps_writeParameters(const capsObj problem, char *fileName)
```

problem the input CAPS Problem Object

fileName the name of the parameter file to write

icode integer return code

Note: This outputs an OpenCSM Design Parameter file.

Read Geometry Parameter File

```
icode = caps_readParameters(const capsObj problem, char *fileName)
```

problem the input CAPS Problem Object

fileName the name of the parameter file to read

icode integer return code

Note: This reads an OpenCSM Design Parameter file and overwrites (makes *dirty*) the current state for the GeometryIn Values in the file.

Write out Geometry

```
icode = caps_writeGeometry(capsObj obj, int flag, const char *fName,  
                           int *nErr, capsErrs **errs)
```

- obj** the input CAPS Problem/Analysis Object
- flag** the write flag: **0** – no additional output, **1** – also write Tessellation Objects for EGADS output (only for Analysis Objects)
- fName** the name of the file to write – typed by extension (case insensitive):
 - iges/igs – IGES File
 - step/stp – STEP File
 - brep – OpenCASCADE File
 - egads – EGADS file (which includes attribution)
- nErr** the returned number of errors generated – **0** means no errors
- errs** the returned CAPS error structure – **NULL** with no errors
- icode** integer return code

Note: The *EGADS Tessellation Objects* used by the Analysis Object are written in the EGADS output file along with the geometry of the Bodies.

Get History of an Object

```
icode = caps_getHistory(capsObj obj, int *nhist, capsOwn **hist)
```

obj the input CAPS Object

nhist the returned length of the history list

hist the returned pointer to the list of History entities (**nhist** in length)

icode integer return code

Set the Intent Phrase for History tracking

```
icode = caps_intentPhrase(capsObj problem, int nLines, char **lines)
```

problem the CAPS Problem Object to set the phrase

nLines the number of comment lines to describe the intent phrase
can be 0 to unset any phrase

lines a pointer to a list of character strings with the description
can be **NULL** if **nLines** is 0

icode integer return code

Get Owner Information

```
icode = caps_ownerInfo(const capsObj problem, const capsOwn owner,  
                       char **phase, char **pname, char **pID,  
                       char **userID, int *nLines, char ***lines,  
                       short *datetime, CAPSLONG *sNum)
```

problem the CAPS Problem Object

owner the input CAPS Owner structure

phase the returned Phase Name when this entry was generated (can be **NULL**)

pname the returned pointer to the process name

pID the returned pointer to the process ID

userID the returned pointer to the user ID

nLines the returned number of comment lines to describe the intent phrase

lines a returned pointer to a list of character strings with the description

datetime the filled date/time stamp info – 6 in length:
year, month, day, hour, minute, second

sNum the sequence number (always increasing)

icode integer return code

Create A Value Object

```
icode = caps_makeValue(capsObj problem, const char *vname,
                      enum capsType stype, enum capsVType vtype,
                      int nrow, int ncol, const void *data,
                      int *partial, const char *units, capsObj *val)
```

problem the input CAPS Problem Object where the Value to to reside

vname the Value Object name to be created

stype the Object subtype: Parameter or User

vtype the value data type:

0	Boolean	2	Double	4	String Tuple
1	Integer	3	String		

nrow number of rows

ncol number of columns – *Value length* = **nrow** * **ncol**

data pointer to the appropriate block of memory
 must be a pointer to a contiguous block of memory for strings (each zero terminated)
 must be a pointer to a *capsTuple* structure(s) when **vtype** is a Tuple

partial integer vector/array containing specific *ntype* indications

units string pointer declaring the units for **vtype 2** – **NULL** for unitless values
 if **vtype** is **3** and **units** is “PATH” – slashes are converted automatically

val the returned CAPS Value Object

icode integer return code

Retrieve Values

```
icode = caps_getValue(capsObj val, enum capsvType *vtype, int *nrow,
                     int *ncol, const void **data,
                     const int **partial, const char **units,
                     int *nErr, capsErrs **errs)
```

val the input Value Object

vtype the returned data type:

0	Boolean	2	Double	4	String Tuple	6	Double w/ <i>Deriv</i>
1	Integer	3	String	5	AIM pointer		

nrow returned number of rows

ncol returned number of columns – *Value length = nrow * ncol*

data a filled pointer to the appropriate block of memory (**NULL** – don't fill)
Can use `caps_childByIndex` (page 22) to get Value Objects

partial a returned integer vector/array containing specific `ntype` indications
NULL is returned except for `ntype` is 'partial' – filled with 'not NULL' or 'is NULL'

units the returned pointer to the string declaring the units
if **vtype** is 3 and **units** "PATH" – slashes are converted automatically

nErr the returned number of errors generated (Analysis Out) – 0 means no errors

errs the returned CAPS error structure (Analysis Out) – **NULL** with no errors

icode integer return code

Use the structure *capsTuple* when casting **data** if a Tuple (4)

Reset A Value Object

```
icode = caps_setValue(capsObj val, enum capsvType vtype, int nrow,
                     int ncol, const void *data, const int *partial,
                     const char *units, int *nErr, capsErrs **errs)
```

- val** the input CAPS Value Object (not for GeometryOut, AnalysisOut or **AnalysisDynO**)
- vtype** the data type:
- | | | | | | |
|---|---------|---|--------|---|--------------|
| 0 | Boolean | 2 | Double | 4 | String Tuple |
| 1 | Integer | 3 | String | 5 | AIM pointer |
- nrow** number of rows
- ncol** number of columns – *Value length* = **nrow** * **ncol**
- data** pointer to the appropriate block of memory used to reset the values; must point to a contiguous block of memory for *Value length* strings (each zero terminated)
- partial** an integer vector/array of *Value length* containing specific *ntype* indications
 ignored for length = 1 or *ntype* is 'NULL invalid' – may be NULL
 if non-NULL *ntype* is set to 'partial' – must be filled with 'not NULL' or 'is NULL'
 See caps_getValueProp
- units** the string declaring the units for **data**
- nErr** the returned number of errors generated (Geometry In) – 0 means no errors
- errs** the returned CAPS error structure (Geometry In) – **NULL** with no errors
- icode** integer return code

Get Valid Value Range

```
icode = caps_getLimits(capsObj val, capsvType *vtype,  
                      const void **limits, const char **units)
```

- val** the input Value Object
- vtype** the data type:
 - 1 Integer | 2 Double
- limits** an returned pointer to a block of memory containing the valid range
[2*sizeof(vtype) in length] – or – **NULL** if not yet filled
- units** a string units of the limits

Set Valid Value Range

```
icode = caps_setLimits(capsObj val, capsvType vtype, void *limits,  
                      const char *units, int *nErr, capsErrs **errs)
```

- val** the input Value Object (only for the User & Parameter subtypes)
- vtype** the data type of the limits pointer:
 - 1 Integer | 2 Double
- limits** a pointer to the appropriate block of memory which contains the minimum and maximum range allowed (2 in length)
- units** a string units of the limits
- nErr** the returned number of errors generated – 0 means no errors
- errs** the returned CAPS error structure – **NULL** with no errors

Get Value Properties

```
icode = caps_getValueProps(capsObj val, int *dim, int *gInType,  
                           enum capsFixed *lfix, enum capsFixed *sfix,  
                           enum capsNull *ntype)
```

val the input Value Object

dim the returned dimensionality:

0 scalar only

1 vector or scalar

2 scalar, vector or 2D array

gInType the returned type: **0** – GeometryIn type → OCSM_DESPMTR (or not GeomIn),

1 – GeometryIn type → OCSM_CFGPMTR,

2 – GeometryIn type → OCSM_CONPMTR

lfix **0** – the length(s) can change, **1** – the length is fixed

sfix **0** – the Shape can change, **1** – Shape is fixed

ntype **0** – NULL invalid, **1** – not NULL, **2** – is NULL, **3** – partial NULL

icode integer return code

Set Value Properties

```
icode = caps_setValueProps(capsObj val, int dim, enum capsFixed lfix,  
                           enum capsFixed sfix, enum capsNull ntype,  
                           int *nErr, capsErrs **errs)
```

val the input Value Object (only for the User & Parameter subtypes)

dim the dimensionality:

0 scalar only

1 vector or scalar

2 scalar, vector or 2D array

lfix **0** – the length(s) can change, **1** – the length is fixed

sfix **0** – the Shape can change, **1** – Shape is fixed

ntype **0** – NULL invalid, **1** – not NULL, **2** – is NULL

nErr the returned number of errors generated – **0** means no errors

errs the returned CAPS error structure – **NULL** with no errors

Units conversion

```
icode = caps_convertValue(capsObj val, double inVal,  
                          const char *inUnit, double *outVal)
```

val a Value Object

inVal the source value to be converted

inUnit the pointer to the string declaring the source units

outVal the returned converted value in the units of the **val** Value Object

Transfer Values

```
icode = caps_transferValues(capsObj src, enum capstMethod tmethod,  
                           capsObj dst, int *nErr, capsErrs **errs)
```

src the source input Value Object (not for Tuple vtypes) – or –
DataSet Object

tmethod 0 – copy, 1 – integrate, 2 – weighted average – (1 & 2 only for DataSet **src**)

dst the destination Value Object to receive the data
Notes:

- Must not be GeometryOut, AnalysisOut or **AnalysisDynO**
- Shapes must be compatible
- Overwrites any Linkage

nErr the returned number of errors generated – 0 means no errors

errs the returned CAPS error structure – **NULL** with no errors

icode integer return code

Free memory in Value Structure

```
caps_freeValue(capsValue *value)
```

value a pointer to the Value structure to be cleaned up

Establish Linkage between Value Objects

```
icode = caps_linkValue(capsObj link, enum capstMethod tmethod,  
                      capsObj trgt, int *nErr, capsErrs **errs)
```

link linking Value Object (not for **AnalysisDynO**, User subtype or Tuple vtype)
– or – DataSet Object

tmethod 0 – copy, 1 – integrate, 2 – weighted average – (1 & 2 only for DataSet **link**)

trgt the target Value Object which will get its data from **link**

Notes:

- Must not be GeometryOut, AnalysisOut or **AnalysisDynO**
- Shapes must be compatible
- **link** = **NULL** – removes any Linkage

nErr the returned number of errors generated – 0 means no errors

errs the returned CAPS error structure – **NULL** with no errors

icode integer return code

Note: circular linkages are not allowed!

Get a list of Derivatives available

```
icode = caps_hasDeriv(capsObj val, int *ndot, char ***names,  
                      int *nErr, capsErrs **errs)
```

- val** the input CAPS Value Object (*DoubleDeriv* type only)
- ndot** the returned length of the number of dots available
- names** the returned pointer to the list of derivative names (**ndot** in length – freeable)
- nErr** the returned number of errors generated – **0** means no errors
- errs** the returned CAPS error structure – **NULL** with no errors
- icode** integer return code

DoubleDeriv types only exist for GeometryOut and certain AnalysisOut as well as **AnalysisDynO** Value Objects

Get Derivative values

```
icode = caps_getDeriv(capsObj val, const char *name, int *len,  
                     int *len_wrt, double **deriv, int *nErr,  
                     capsErrs **errs)
```

- val** the input CAPS Value Object (*DoubleDeriv* type only)
- name** the input name of the derivative
- len** the returned rows of the deriv (the length of the Value Object)
- len_wrt** the returned columns of deriv (length of the w.r.t. Value Object)
- deriv** the returned pointer to the derivative information (**len** x **len_wrt** in length)
- nErr** the returned number of errors generated – **0** means no errors
- errs** the returned CAPS error structure – **NULL** with no errors
- icode** integer return code

DoubleDeriv types only exist for GeometryOut and certain AnalysisOut as well as **AnalysisDynO** Value Objects.

For 2D Value Object or w.r.t. Value Object the indexing is flattened where the column index has no stride (i.e. $irow \times ncol + icol$).

Convert value between units

```
icode = caps_convert(int count, const char *inUnit, double *inVal,  
                    const char *outUnit, double *outVal)
```

count length of **inVal** and **outUnit** arrays

inUnit a string representing the units of **inVal**

inVal the input values to be converted

outUnit a string representing the desired units of **outVal**

outVal the output values in units of **outUnit** (may be same pointer as **inVal**)

icode integer return code

Multiply units

```
icode = caps_unitMultiply(const char *unitL, const char *unitR,  
                        char **outUnit)
```

unitL a input string representing units

unitR a input string representing units

outUnit a string representing the resulting units from multiplying **unitL** and **unitR**

icode integer return code

Divide units

```
icode = caps_unitDivide(const char *unitL, const char *unitR,  
                        char **outUnit)
```

unitL a input string representing units

unitR a input string representing units

outUnit a string representing the resulting units from dividing **unitL** and **unitR**

icode integer return code

Raise units

```
icode = caps_unitRaise(const char *unit, int power, char **outUnit)
```

unit a input string representing units

power power to raise **unit**

outUnit a string representing the resulting units from raising **unit** to **power**

icode integer return code

Invert units

```
icode = caps_unitInvert(const char *unit, char **outUnit)
```

unit a input string representing units

outUnit a string representing the resulting units from inverting **unit**

icode integer return code

Offset units

```
icode = caps_unitOffset(const char *unit, double off, char **outUnit)
```

unit a input string representing units

off offset to apply to **unit**

outUnit a string representing the resulting units from offsetting **unit** by **off**

icode integer return code

Valid unit string

```
icode = caps_unitParse(const char *unit)
```

unit a input string representing units

icode integer return code (CAPS_SUCCESS if valid, CAPS_UNITERR otherwise)

Valid unit conversion

```
icode = caps_unitConvertible(const char *unitL, const char *unitR)
```

unitL a input string representing units
unitR a input string representing units
icode integer return code (CAPS_SUCCESS **unitL** is convertible to **unitR**, CAPS_UNITERR otherwise)

Unit comparison

```
icode = caps_unitCompare(const char *unitL, const char *unitR,  
                        int *compare)
```

unitL a input string representing units
unitR a input string representing units
compare signed difference between **unitL** and **unitR**
icode integer return code

Get Attribute by name

```
icode = caps_attrByName(capsObj object, char *name, capsObj *attr)
```

object any CAPS Object

name a string referring to the Attribute name

attr the returned User Value Object
will be deleted at the end of the *phase*

icode integer return code

Get Attribute by index

```
icode = caps_attrByIndex(capsObj object, int in, capsObj *attr)
```

object any CAPS Object

in the index (bias 1) to the list of Attributes

attr the returned User Value Object – Attribute name is the Value Object name
will be deleted at the end of the *phase*

icode integer return code

Set an Attribute

```
icode = caps_setAttr(capsObj object, const char *name, capsObj attr)
```

object any CAPS Object

name a string referring to the Attribute name – **NULL**: use name in **attr**
Note: an existing Attribute of this name is overwritten with the new value

attr the Value Object containing the attribute
2D arrays and Tuples are not supported; 1D arrays will have rows only

icode integer return code

Delete an Attribute

```
icode = caps_deleteAttr(capsObj object, char *name)
```

object any CAPS Object

name a string referring to the Attribute to delete
NULL deletes all attributes attached to the Object

icode integer return code

Query Analysis – Does not ‘load’ or create an object

```
icode = caps_queryAnalysis(capsObj problem, const char *aname,  
                           int *nIn, int *nOut, int *exec)
```

problem a CAPS Problem Object

aname the Analysis (and AIM plugin) name

nIn the returned number of Inputs

nOut the returned number of Outputs

exec returned execution flag: **0** – no execution, **1** – aimExecute exists (can auto-exec)

Note: this causes the the DLL/Shared-Object to be loaded (if not already resident)

Execute Geometry Build or Analysis

```
icode = caps_execute(capsObj object, int *status, int *nErr,  
                    capsErrs **errors)
```

object the Analysis or Problem Object

a *Geometry*-only regen is forced when this is a Problem Object

for an Analysis Object that has aimExecute this runs aimPreAnalysis,
aimExecute and aimPostAnalysis

status the returned status (**0** – done, **1** – running)
currently unused – always returns **0**

nErr the returned number of errors generated – **0** means no errors

errors the returned CAPS error structure – **NULL** with no errors

Get Bodies

```
icode = caps_getBodies(capsObj aobj, int *nBody, ego **bodies,  
                      int *nErr, capsErrs **errs)
```

- aobj** the Analysis Object
- nBody** the returned number of EGADS Body Objects that match the Analysis' intent
- bodies** the returned pointer to a list of EGADS Body/Node Objects (length – **nBody**)
- nErr** the returned number of errors generated – **0** means no errors
- errors** the returned CAPS error structure – **NULL** with no errors
- icode** integer return code

Get Tessellations

```
icode = caps_getTessels(capsObj aobj, int *nTessel, ego **tessels,  
                      int *nErr, capsErrs **errs)
```

- aobj** the Analysis Object
- nTessel** the returned number of EGADS Tessellation Objects
- tessels** the returned pointer to a list of EGADS Tessellations (length – **nTessel**)
- nErr** the returned number of errors generated – **0** means no errors
- errors** the returned CAPS error structure – **NULL** with no errors
- icode** integer return code

Query Analysis Input Information

```
icode = caps_getInput(capsObj problem, const char *aname, int index,  
                      char **ainame, capsValue *default)
```

problem a CAPS Problem Object

aname the Analysis (and AIM plugin) name

index the Input index [1-nIn]

ainame a pointer to the returned Analysis Input variable name (use EG_free to free memory)

default a pointer to the filled default value(s) and units – use caps_freeValue to cleanup

Query Analysis Output Information

```
icode = caps_getOutput(capsObj problem, const char *aname, int index,  
                      char **aoname, capsValue *form)
```

problem a CAPS Problem Object

aname the Analysis (and AIM plugin) name

index the Output index [1-nOut]

aoname a pointer to the returned Analysis Output variable name (use EG_free)

form a pointer to the Value Shape & Units information – returned
use caps_freeValue to cleanup

Create a new Analysis Object

```
icode = caps_makeAnalysis(capsObj problem, const char *aname,  
                           const char *name, const char *uSys,  
                           char *intent, int *exec, capsObj *analysis,  
                           int *nErr, capsErrs **errs)
```

problem a CAPS Problem Object

aname the Analysis (AIM plugin) name

name the unique supplied name for this instance (can be **NULL**)

uSys pointer to string describing the unit system to be used by the AIM (can be **NULL**)
see specific AIM documentation for a list of strings for which the AIM will respond

intent the *intent* character string used to pass Bodies to the AIM, **NULL** – no filtering

exec the execution flag: On input **0** – no auto-exec, **1** – allow for auto-exec
On output **0** – no AIM execution, **1** – aimExecute exists

analysis the resultant Analysis Object

nErr the returned number of errors generated – **0** means no errors

errors the returned CAPS error structure – **NULL** with no errors

icode integer return code

Note: If **exec** is returned as **1** then `aimPreAnalysis`, `aimExecute` and `aimPostAnalysis` automatically run when `caps_execute` (page 46) is called. When **exec** is input (and output) as **1** the analysis can run in a *lazy* manner when there is a request for an AIM output or data transfer.

Initialize Analysis from another Analysis Object

```
icode = caps_dupAnalysis(capsObj from, const char *name, capsObj *obj)
```

- from** an existing CAPS Analysis Object
- name** the name of the duplicate Analysis Object
- obj** the resultant Analysis Object
- icode** integer return code

Get Dirty Analysis Object(s)

```
icode = caps_dirtyAnalysis(capsObj obj int *nAobj, capsObj **aobjs)
```

- obj** a CAPS Problem, Bound or Analysis Object
- nAobjs** the returned number of *dirty* Analysis Objects
- aobjs** a returned pointer to the list of *dirty* Analysis Objects (*freeable*)
- icode** integer return code

Note: Listed from most *stale* to most recent – the order in which to execute.

Get Info about an Analysis Object

```
icode = caps_analysisInfo(capsObj aobj, char **dir, char **uSys,  
                           int *major, int *minor, char **intent,  
                           int *nfields, char ***fnames, int **frank,  
                           int **fInOut, int *exec, int *status)
```

- aobj** the input Analysis Object
- dir** a returned pointer to the string specifying the directory for file I/O
name (or **aname** augmented with the instance number) of caps_makeAnalysis
- uSys** returned pointer to string describing the unit system used by the AIM (can be **NULL**)
- major** the returned AIM major version number
- minor** the returned AIM minor version number
- intent** the returned pointer to the *intent* character string used to pass Bodies to the AIM
- nfields** the returned number of fields for DataSet filling
- fnames** a returned pointer to a list of character strings with the field/DataSet names
- frank** a returned pointer to a list of ranks associated with each field
- fInOut** a returned pointer to a list of field flags (FIELDIN - input, FIELDOUT - output)
- exec** returned execution flag: **0** – no AIM execution, **1** – aimExecute exists, **2** – auto-exec
- status** **0** – up to date, **1** – *dirty* Analysis inputs, **2** – *dirty* Geometry inputs
3 – both Geometry & Analysis inputs are *dirty*, **4** – new geometry,
5 – *post Analysis* required, **6** – Execution & *post Analysis* required
- icode** integer return code

Generate Analysis Inputs

```
icode = caps_preAnalysis(capsObj analysis, int *nErr, capsErrs **errs)
```

- analysis** the Analysis Object – use `caps_execute` (page 46) for *auto-exec* Objects
Also use `caps_execute` to perform a *Geometry-only* regen
- nErr** the returned number of errors generated – 0 means no errors
- errs** the returned CAPS error structure – **NULL** with no errors
- icode** integer return code

Execute the Command Line String

```
icode = caps_system(capsObj aobj, const char *rpath, const char *cmd)
```

- aobj** the Analysis Object
- rpath** the relative path from the Analysis' directory or **NULL** (in the Analysis path)
- cmd** the command line string to execute
- icode** integer return code

Notes:

- 1 only needed when explicitly executing the appropriate analysis solver (*i.e.*, not using the AIM)
- 2 should be invoked after `caps_preAnalysis` and before `caps_postAnalysis`
- 3 this must be used instead of the OS *system* call to ensure that journaling properly functions

Mark Analysis as Run

```
icode = caps_postAnalysis(capsObj analysis, int *nErr,  
                           capsErrs **errors)
```

analysis the Analysis Object – use `caps_execute` (page 46) for *auto-exec* Objects

nErr the returned number of errors generated – **0** means no errors

errors the returned CAPS error structure – **NULL** with no errors

icode integer return code

Note: this clears all Analysis Output Objects to force reloads/recomputes

Create a Bound

```
icode = caps_makeBound(capsObj problem, int dim, const char *bname  
                      capsObj *bound)
```

problem the CAPS Problem Object

dim the dimensionality of the Bound (1 – 3)

bname the character string associated with “capsBound” attribute on bodies

bound the returned new CAPS Bound Object

icode integer return code

Get Information about a Bound

```
icode = caps_boundInfo(capsObj bound, enum capsState *state, int *dim,  
                      double *plims)
```

bound the CAPS Bound Object

state the returned Bound state:

-1 Open

0 Empty & Closed

1 single BRep entity

2 multiple BRep entities

-2 multiple BRep entities – Error in reparameterization!

dim the returned dimensionality of the Bound (1 – 3)

plims the filled parameterization limits (2 values when **dim** is 1, 4 when **dim** is 2)

Make a VertexSet

```
icode = caps_makeVertexSet(capsObj bound, capsObj analysis,  
                           const char *vname, capsObj *vset,  
                           int *nErr, capsErrs **errs)
```

- bound** an input *open* CAPS Bound Object
- analysis** the Analysis Object (**NULL** – Unconnected)
- vname** a character string naming the VertexSet (can be **NULL** for a Connected VertexSet)
- vset** the returned VertexSet Object
- nErr** the returned number of errors generated – **0** means no errors
- errs** the returned CAPS error structure – **NULL** with no errors
- icode** integer return code

Get Info about a VertexSet

```
icode = caps_vertexSetInfo(capsObj vset, int *nGpts, int *nDpts,  
                           capsObj *bound, capsObj *analysis)
```

- vset** the VertexSet Object
- nGpts** the returned number of *Geometry* points in the VertexSet
- nDpts** the returned number of point *Data* positions in the VertexSet
- bound** the returned associated Bound Object
- analysis** the returned associated Analysis Object (**NULL** – Unconnected)
- icode** integer return code

Fill an Unconnected VertexSet

```
icode = caps_fillUnVertexSet(capsObj vset, int npts, double *xyzs)
```

vset the input Unconnected VertexSet Object

npts the number of points in the VertexSet

xyzs the point positions (3***npts** in length)

icode integer return code

Close a Bound

```
icode = caps_closeBound(capsObj bound)
```

bound an input *open* CAPS Bound Object to close

icode integer return code

Output a VertexSet for Plotting/Debugging

```
icode = caps_outputVertexSet(capsObj vset, const char *filename)
```

vset the VertexSet Object

filename the VertexSet filename (should have the extension “.vs”)

The CAPS application **vVS** can be used to interactively view the file generated by this function.

This is now deprecated because CAPS viewing has been integrated!

DataSet Naming Conventions

- Multiple DataSets in a Bound can have the same Name
- Allows for automatic data transfers
- One *source* (from either *FieldOut* or *User Methods*)
- Reserved Names:

DSet Name	rank	Meaning	Comments
xyz	3	<i>Geometry</i> Positions	
xyzd	3	<i>Data</i> Positions	Not for vertex-based discretizations
param*	1/2	t or [u,v] data for <i>Geometry</i> Positions	
paramd*	1/2	t or [u,v] for <i>Data</i> Positions	Not for vertex-based discretizations
<i>GeomIn</i> *	3	Sensitivity for the <i>Geometry</i> Input <i>GeomIn</i>	can have [<i>irow</i> , <i>icol</i>] in name

* Note: not valid for 3D Bounds

Create a DataSet

```
icode = caps_makeDataSet(capsObj vset, const char *dname,  
                        enum capsftype ftype, int rank,  
                        capsObj *dset, int *nErr, capsErrs **errs)
```

- vset** the VertexSet Object – associated Bound must be *open*
- dname** a pointer to a string containing the name of the DataSet (i.e., *pressure*)
- ftype** the type of data field: (FieldIn, FieldOut, GeomSens, TessSens, User)
- rank** the rank of the data for a User field (e.g., 1 – scalar, 3 – vector), ignored otherwise
- dset** the returned DataSet Object
- nErr** the returned number of errors generated – 0 means no errors
- errs** the returned CAPS error structure – **NULL** with no errors
- icode** integer return code

Get DataSet Information

```
icode = caps_dataSetInfo(capsObj dset, enum capsftype *ftype,  
                        capsObj *link, enum capsdMethod *dmethod)
```

- dset** the input DataSet Object
- ftype** the returned type of data field: (FieldIn, FieldOut, BuiltIn, GeomSens, TessSens, User)
- link** the returned linked DataSet Object (for **ftype** of FieldIn) – can be **NULL**
- dmethod** the returned linked DataSet Method (only valid for **ftype** of FieldIn)
- icode** integer return code

Get Data from a DataSet

```
icode = caps_getData(capsObj dset, int *npt, int *rank, double **data,  
                    char **units, int *nErr, capsErrs **errs)
```

dset the DataSet Object

npt the returned number of points in the DataSet

rank the returned rank of the data (e.g., 1 – scalar, 3 – vector)

data the returned pointer to the data (**rank*****npts** in length)

units the returned pointer to the string declaring the units

nErr the returned number of errors generated – 0 means no errors

errs the returned CAPS error structure – NULL with no errors

icode integer return code

Establish Linkage between DataSet Objects

```
icode = caps_linkDataSet(capsObj link, enum capsdMethod dmethod,  
                        capsObj trgt, int *nErr, capsErrs **errs)
```

link linking DataSet Object, must be FieldOut

dmethod 0 – Interpolate, 1 – Conserve

trgt the target DataSet Object which will get its data from **link**, must be FieldIn or User

nErr the returned number of errors generated – 0 means no errors

errs the returned CAPS error structure – **NULL** with no errors

Initialize DataSet for cyclic/incremental startup

```
icode = caps_initDataSet(capsObj dset, int rank, double *startup,  
                        int *nErr, capsErrs **errs)
```

dset the DataSet Object (Field type must be FieldIn)

rank the rank of the data (e.g., 1 – scalar, 3 – vector)

startup the pointer to the constant *startup* data (**rank** in length)

nErr the returned number of errors generated – 0 means no errors

errs the returned CAPS error structure – **NULL** with no errors

Note: invocations of `caps_getData` and `aim_getDataSet` will return this data (and a length of 1) until properly filled.

Get DataSet Objects by Name

```
icode = caps_getDataSets(capsObj bound, const char *dname, int *nobj,  
                        capsObj **dsets)
```

- bound** an input CAPS Bound Object
- dname** a pointer to a string containing the name of the DataSet
- nobj** the returned number of Objects with the name
- dsets** a returned pointer to the list of DataSet Objects (*freeable*)
- icode** integer return code

Put *User* Data into a DataSet

```
icode = caps_setData(capsObj dset, int nverts, int rank, double *data,  
                   const char *units, int *nErr, capsErrs **errs)
```

- dset** the DataSet Object
- nverts** the number of points in data – must match declared **npts**
- rank** the rank of the data – must match declared **rank** (e.g., 1 – scalar, 3 – vector)
- data** a pointer to the data (**rank*nverts** in length)
- units** the pointer to the string declaring the units
- nErr** the returned number of errors generated – **0** means no errors
- errs** the returned CAPS error structure – **NULL** with no errors
- icode** integer return code

Get Triangulations for a 2D VertexSet

```
icode = caps_getTriangles(capsObj vst, int *nGtris, int **Gtris,  
                          int *nGsegs, int **Gsegs, int *nDtris,  
                          int **Dtris, int *nDsegs, int **Dsegs)
```

vst the input CAPS Connected VertexSet Object

nGtris the returned number of *Geometry*-based Triangles

Gtris the returned pointer to a list of indices (bias 1) referencing *Geometry*-based points (3***nGtris** in length) – *freeable*

nGsegs the returned number of *Geometry*-based element mesh segments

Gsegs the returned pointer to a list of indices (bias 1) referencing *Geometry*-based points (2***nGsegs** in length) – *freeable*

nDtris the returned number of *Data*-based Triangles (0 if discretization is vertex based)

Dtris the returned pointer to a list of indices (bias 1) referencing *Data*-based points (3***nDtris** in length) – *freeable*

nDsegs the returned number of *data*-based element mesh segments

Dsegs the returned pointer to a list of indices (bias 1) referencing *data*-based points (2***nDsegs** in length) – *freeable*

icode integer return code

CAPS_SUCCESS	0	CAPS_SHAPEERR	-322
CAPS_BADRANK	-301	CAPS_LINKERR	-323
CAPS_BADDSETNAME	-302	CAPS_MISMATCH	-324
CAPS_NOTFOUND	-303	CAPS_NOTPROBLEM	-325
CAPS_BADINDEX	-304	CAPS_RANGEERR	-326
CAPS_NOTCHANGED	-305	CAPS_DIRTY	-327
CAPS_BADTYPE	-306	CAPS_HIERARCHERR	-328
CAPS_NULLVALUE	-307	CAPS_STATEERR	-329
CAPS_NULLNAME	-308	CAPS_SOURCEERR	-330
CAPS_NULLOBJ	-309	CAPS_EXISTS	-331
CAPS_BADOBJECT	-310	CAPS_IOERR	-332
CAPS_BADVALUE	-311	CAPS_DIRERR	-333
CAPS_PARAMBNDERR	-312	CAPS_NOTIMPLEMENT	-334
CAPS_NOTCONNECT	-313	CAPS_EXECERR	-335
CAPS_NOTPARMTRIC	-314	CAPS_CLEAN	-336
CAPS_READONLYERR	-315	CAPS_BADINTENT	-337
CAPS_FIXEDLEN	-316	CAPS_NOTNEEDED	-339
CAPS_BADNAME	-317	CAPS_NOSENSITVITY	-340
CAPS_BADMETHOD	-318	CAPS_NOBODIES	-341
CAPS_CIRCULARLINK	-319	CAPS_JOURNAL	-342
CAPS_UNITERR	-320	CAPS_JOURNALERR	-343
CAPS_NULLBLIND	-321	CAPS_FILELINKERR	-344

The Population of the VertexSets

Bounds needed to be fully populated (i.e., the VertexSets need to be filled for all analyses) before they can be used. This is due to the requirement to have all points available to ensure that there is a single UV space (either by construction or by re-parameterization). As a result, the meshing information for an AIM maybe required prior to calling the `aimPreAnalysis`.

The VertexSets are filled with calls the AIM to fill the `aimDiscr` structure (basically the VertexSet), which means the meshing information must be available via a link or generated in `aimDiscr`.

NOTE: An analysis AIM that supports `aimDiscr` and also generates meshes “on the fly” must be able to generate meshes and call `aim_newTess` from either `aimDiscr` or `aimPreAnalysis` (whenever and wherever the mesh gets generated).

Fluid/Structure Interaction Pseudocode

```
caps_makeAnalysis egadsTess aim -> msobj
caps_makeAnalysis TetGen aim -> mfobj
caps_makeAnalysis fluids aim -> fobj
caps_makeAnalysis structures -> sobj
caps_makeBound "srf" -> bobj
caps_makeVertexSet(bobj, fobj) -> vfobj
caps_makeVertexSet(bobj, sobj) -> vsobj
caps_makeDataSet(vfobj, "Pressure", FieldOut) -> dpfobj
caps_makeDataSet(vsobj, "Pressure", FieldIn ) -> dpsobj
caps_makeDataSet(vsobj, "Displace", FieldOut) -> ddsobj
caps_makeDataSet(vfobj, "Displace", FieldIn ) -> ddfobj
caps_linkDataSet(dpfobj, Conserve, dpsobj)
caps_linkDataSet(ddsobj, Conserve, ddfobj)
caps_initDataSet(ddfobj, 3, zeros)          /* Note #1 */
caps_closeBound(bobj)

caps_executue(msobj)                       /* generate structures mesh */
caps_execute(mfobj)                       /* generate fluids mesh */

for (iter = 0; iter < nIter; iter++) {
    caps_preAnalysis(fobj)
    /* execute fluids analysis */
    caps_postAnalysis(fobj)

    caps_preAnalysis(sobj)
    /* execute structures analysis */
    caps_postAnalysis(sobj)
}
```

Pseudocode Notes

The fluids AIM requires the “Displace” values during its “pre” phase, just as the structural analysis AIM requires “Pressure” (i.e., loads) during its “pre” phase to fill in all the inputs.

- 1 `caps_initDataSet` gets called to set the first displacement data to zeros, in that no structural analysis will have been run at start, but is needed by the fluids.
- 2 The lines in **red** and will mark Analysis *dirty* when the DataSet is filled.

caps_analysisInfo	51	caps_getHistory	28	caps_phaseState	16
caps_attrByIndex	44	caps_getInput	48	caps_postAnalysis	53
caps_attrByName	44	caps_getLimits	33	caps_preAnalysis	52
caps_bodyByIndex	24	caps_getOutput	48	caps_queryAnalysis	46
caps_boundInfo	54	caps_getRootPath	19	caps_readParameters	26
caps_brokenLink	18	caps_getTessels	47	caps_revision	16
caps_childByIndex	22	caps_getTriangles	62	caps_rmLock	19
caps_childByName	23	caps_getValueProps	34	caps_setAttr	45
caps_close	20	caps_getValue	31	caps_setData	61
caps_closeBound	56	caps_hasDeriv	38	caps_setLimits	33
caps_convertValue	35	caps_info	20	caps_setValueProps	35
caps_convert	40	caps_initDataSet	60	caps_setValue	32
caps_dataSetInfo	58	caps_intentPhrase	28	caps_size	21
caps_deleteAttr	45	caps_linkDataSet	60	caps_system	52
caps_dirtyAnalysis	50	caps_linkValue	37	caps_transferValues	36
caps_dupAnalysis	50	caps_makeAnalysis	49	caps_unitCompare	43
caps_errorInfo	25	caps_makeBound	54	caps_unitConvertible	43
caps_externSignal	19	caps_makeDataSet	58	caps_unitDivide	41
caps_execute	46	caps_makeValue	30	caps_unitMultiply	40
caps_fillUnVertexSet	56	caps_makeVertexSet	55	caps_unitInvert	41
caps_freeError	25	caps_markForDelete	21	caps_unitOffset	42
caps_freeValue	36	caps_open	17	caps_unitParse	42
caps_getBodies	47	caps_outLevel	24	caps_unitRaise	41
caps_getData	59	caps_outputVertexSet	56	caps_vertexSetInfo	55
caps_getDataSets	61	caps_ownerInfo	29	caps_writeGeometry	27
caps_getDeriv	39	caps_phaseNewCSM	16	caps_writeParameters	26