

# Rockchip RK3288 Linux SDK Release Note

---

ID: RK-FB-CS-006

Release Version: V2.2.0

Release Date: 2020-07-08

Security Level: ☐Top-Secret ☐Secret ☐Internal ☒Public

## DISCLAIMER

THIS DOCUMENT IS PROVIDED "AS IS". ROCKCHIP ELECTRONICS CO., LTD. ("ROCKCHIP") DOES NOT PROVIDE ANY WARRANTY OF ANY KIND, EXPRESSED, IMPLIED OR OTHERWISE, WITH RESPECT TO THE ACCURACY, RELIABILITY, COMPLETENESS, MERCHANTABILITY, FITNESS FOR ANY PARTICULAR PURPOSE OR NON-INFRINGEMENT OF ANY REPRESENTATION, INFORMATION AND CONTENT IN THIS DOCUMENT. THIS DOCUMENT IS FOR REFERENCE ONLY. THIS DOCUMENT MAY BE UPDATED OR CHANGED WITHOUT ANY NOTICE AT ANY TIME DUE TO THE UPGRADES OF THE PRODUCT OR ANY OTHER REASONS.

## Trademark Statement

"Rockchip", "瑞芯微", "瑞芯" shall be Rockchip's registered trademarks and owned by Rockchip. All the other trademarks or registered trademarks mentioned in this document shall be owned by their respective owners.

**All rights reserved. ©2020. Rockchip Electronics Co., Ltd.**

Beyond the scope of fair use, neither any entity nor individual shall extract, copy, or distribute this document in any form in whole or in part without the written approval of Rockchip.

Rockchip Electronics Co., Ltd.

No.18 Building, A District, No.89, software Boulevard Fuzhou, Fujian, PRC

Website: [www.rock-chips.com](http://www.rock-chips.com)

Customer service Tel: +86-4007-700-590

Customer service Fax: +86-591-83951833

Customer service e-Mail: [fae@rock-chips.com](mailto:fae@rock-chips.com)

## Preface

### Overview

The document presents Rockchip RK3288 Linux SDK release notes, aiming to help engineers get started with RK3288 Linux SDK development and debugging faster.

### Intended Audience

This document (this guide) is mainly intended for:

Technical support engineers

Software development engineers

### Chipset and System Support

Chipset	Buildroot	Debian 9	Debian 10	Yocto
RK3288	Y	Y	Y	N

### Revision History

Date	Version	Author	Revision History
2018-04-16	V1.0.0	Nickey Yang	Initial version.
2018-04-23	V1.1.0	Nickey Yang	Rename and update the document format
2018-04-26	V1.3.0	Nickey Yang	Add the Buildroot building introduction
2018-06-20	V2.0.0	Nickey Yang	Update SDK buildroot to 2018.02 version.
2019-09-16	V2.1.0	Nickey Yang	Update the SDK building and flashing method
2020-07-08	V2.2.0	Caesar Wang	Add Debian10 support; Rewrite the release document in Markdown format

## Contents

### Rockchip RK3288 Linux SDK Release Note

1. Overview
2. Main Functions
3. How to Get the SDK
4. Software Development Guide
  - 4.1 Development Guide
  - 4.2 Software Update History
5. Hardware Development Guide
6. SDK Project Directory Introduction
7. SDK Building Introduction
  - 7.1 U-Boot Building
  - 7.2 Kernel Building Steps
  - 7.3 Recovery Building Steps
  - 7.4 Buildroot Building
    - 7.4.1 Buildroot Rootfs Building
    - 7.4.2 Build Modules in Buildroot
  - 7.5 Debian 9 Building
  - 7.6 Debian 10 Building
  - 7.7 Full Automatic Building
  - 7.8 Firmware Package
8. Upgrade Introduction
  - 8.1 Windows Upgrade Introduction
  - 8.2 Linux Upgrade Introduction
  - 8.3 System Partition Introduction
9. RK3288 SDK Firmware
10. SSH Public Key Operation Introduction
  - 10.1 Multi-device Use the Same SSH Public Key
  - 10.2 Switch Different SSH Public Keys on the Same Device
  - 10.3 Key Authority Management
  - 10.4 Reference Documents

# 1. Overview

---

This SDK is based on Buildroot 2018.02-rc3, Yocto Thud 2.6, Debian 9 and Debian 10 with kernel 4.4 and U-boot v2017.09. It is suitable for RK3288 EVB development boards and all other Linux products developed based on it.

This SDK supports VPU hardware decoding, GPU 3D, Wayland/X11 display, Qt and other functions. For detailed functions debugging and interface introductions, please refer to the documents under the project's docs/ directory.

# 2. Main Functions

---

Functions	Module Name
Data Communication	Wi-Fi, Ethernet Card, USB, SD Card
Applications	Multimedia playback, settings, browser, file management

# 3. How to Get the SDK

---

SDK is released by Rockchip server or got from [Github](#) open source website. Please refer to Chapter 7 [SDK Building Introduction](#) to setup a development environment.

## The first way to get the SDK: get source code from Rockchip code server

To get RK3288 Linux software package, customers need an account to access the source code repository provided by Rockchip. In order to be able to obtain code synchronization, please provide SSH public key for server authentication and authorization when apply for SDK from Rockchip technical window. About Rockchip server SSH public key authorization, please refer to Chapter 10 [SSH Public Key Operation Introduction](#).

The command for downloading RK3288\_Linux\_SDK is as follows:

```
repo init --repo-url ssh://git@www.rockchip.com.cn/repo/rk/tools/repo -u
ssh://git@www.rockchip.com.cn/linux/rk/platform/manifests -b linux -m
rk3288_linux_release.xml
```

Repo, a tool built on Python script by Google to help manage git repositories, is mainly used to download and manage software repository of projects. The download address is as follows:

```
git clone ssh://git@www.rockchip.com.cn/repo/rk/tools/repo
```

For quick access to SDK source code, Rockchip Technical Window usually provides corresponding version of SDK initial compression package. In this way, developers can get SDK source code through decompressing the initial compression package, which is the same as the one downloaded by repo.

Take rk3288\_linux\_sdk\_release\_v2.2.0\_20200708.tgz as an example. After getting an initialization package, you can get the source code by the following command:

```
mkdir rk3288
tar xvf rk3288_linux_sdk_release_v2.2.0_20200708.tgz -C rk3288
cd rk3288
.repo/repo/repo sync -l
.repo/repo/repo sync
```

Developers can update via `.repo/repo/repo sync` command according to update instructions that are regularly released by FAE window.

**The second way to get the SDK: get source code from Github open source website:**

Download repo tools:

```
git clone https://github.com/rockchip-linux/repo.git
```

Make an rk3288 linux work directory:

```
mkdir rk3288_linux
```

Enter rk3288 linux work directory:

```
cd rk3288_linux/
```

Initialize the repo repository:

```
../repo/repo init --repo-url=https://github.com/rockchip-linux/repo -u
https://github.com/rockchip-linux/manifests -b master -m
rk3288_linux_release.xml
```

Synchronize the whole project:

```
../repo/repo sync
```

Note: If your project has already started, please choose the first way to get the code first. Unlike Github, it has passed by internal stress testing and version control. The second way is more suitable for enthusiasts and project evaluation.

## 4. Software Development Guide

---

### 4.1 Development Guide

The Kernel version of RK3288 Linux SDK Kernel is Kernel 4.4, Rootfs is Buildroot(2018.02-rc3) and Debian9/10 respectively. To help engineers quick start of SDK development and debugging, “RK3288\_Linux\_SDK\_Release\_xxx.pdf” is released with the SDK. It can be obtained in the docs/RK3288 directory and will be continuously updated.

## 4.2 Software Update History

Software release version upgrade can be checked through project xml file by the following command:

```
.repo/manifests$ ls -l -h rk3288_linux_release.xml
```

Software release version updated information can be found through the project text file by the following command:

```
.repo/manifests$ cat rk3288_linux_v2.0/RK3288_Linux_Release_Note.txt
```

Or refer to the project directory:

```
<SDK>/docs/Socs/RK3288/RK3288_Linux_SDK_Release_Note.txt
```

## 5. Hardware Development Guide

---

Please refer to user guides in the project directory for hardware development:

RK3288 EVB hardware development guide:

```
<SDK>/docs/RK3288/Rockchip_RK3288_User_Manual_EVB_V1.0_CN.pdf
```

## 6. SDK Project Directory Introduction

---

There are buildroot, debian, recovery, app, kernel, u-boot, device, docs, external and other directories in the project directory. Each directory or its sub-directories will correspond to a git project, and the commit should be done in the respective directory.

- app: store application APPs like qcamera/qfm/qplayer/qsetting and other applications.
- buildroot: root file system based on Buildroot (2018.02-rc3).
- debian: root file system based on Debian 9.
- device/rockchip: store board-level configuration for each chip and some scripts and prepared files for building and packaging firmware.
- docs: stores development guides, platform support lists, tool usage, Linux development guides, and so on.
- distro: a root file system based on Debian 10.
- IMAGE: stores building time, XML, patch and firmware directory for each building.
- external: stores some third-party libraries, including audio, video, network, recovery and so on.
- kernel: stores kernel4.4 development code.
- prebuilts: stores cross-building toolchain.

- rkbin: stores Rockchip Binary and tools.
- rockdev: stores building output firmware.
- tools: stores some commonly used tools under Linux and Windows system.
- u-boot: store U-Boot code developed based on v2017.09 version.

## 7. SDK Building Introduction

---

This SDK development environment is developed and tested on Ubuntu system. We recommend using Ubuntu 18.04 system to build. Other Linux versions may need to modify the software package accordingly. In addition to system requirements, there are other hardware and software requirements.

Hardware requirements: 64-bit system, hard drive space should be greater than 40G. If you do more builds, you will need more hard drive space.

Software requirements: Ubuntu 18.04 system:

Please install software packages with below commands to setup SDK building environment:

```
repo git ssh make gcc libssl-dev liblz4-tool expect g++ patchelf chrpath gawk
texinfo chrpath diffstat binfmt-support qemu-user-static live-build
```

It is recommended to use Ubuntu 18.04 system or higher version for development. If you encounter an error during building, you can install the corresponding software packages according to the error message.

### 7.1 U-Boot Building

Enter project u-boot directory and run `make.sh` to get rk3288\_loader\_v1.08.258.bin trust.img and uboot.img.

RK3288 EVB development boards:

```
./make.sh rk3288
```

RK3288 Firefly development boards:

```
./make.sh firefly-rk3288
```

The generated files after building are in u-boot directory:

```
u-boot/
├─ rk3288_loader_v1.08.258.bin
├─ trust.img
└─ uboot.img
```

### 7.2 Kernel Building Steps

Enter project root directory and run the following command to automatically build and package kernel:

RK3288 EVB RK808 development boards:

```
cd kernel
make ARCH=arm rockchip_linux_defconfig
make ARCH=arm rk3288-evb-rk808-linux.img -j12
```

RK3288 EVB ACT8846 development boards:

```
cd kernel
make ARCH=arm rockchip_linux_defconfig
make ARCH=arm rk3288-evb-act8846.img -j12
```

RK3288 Firefly development boards:

```
cd kernel
make ARCH=arm rockchip_linux_defconfig
make ARCH=arm rk3288-firefly.img -j12
```

The zboot.img including zimage and DTB of kernel will be generated in the kernel directory after building.

## 7.3 Recovery Building Steps

Enter project root directory and execute the following command to automatically complete building and packaging of recovery:

```
./build.sh recovery
```

The recovery.img will be generated in Buildroot directory “output/rockchip\_rk3288\_recovery/images” after building.

Please pay attention to that recovery.img including kernel.img, so every time the kernel changes, recovery needs to be repackaged and generated. For example:

```
SDK$source envsetup.sh rockchip_rk3288
SDK$make recovery-rebuild
SDK$./build.sh recovery
```

## 7.4 Buildroot Building

### 7.4.1 Buildroot Rootfs Building

Enter project root directory and execute the following commands to automatically complete building and packaging of Rootfs.

```
./build.sh rootfs
```

After building, rootfs.ext4 will be generated in the Buildroot directory output/rockchip\_rk3288/images.

Note:



If you need to build a single module or a third-party application, you need to configure the cross-building environment. Cross-building tool is located in “buildroot/output/rockchip\_rk3288/host/usr ” directory. You need to set the “bin/” directory of tools and “arm-buildroot-linux-gnu/bin/ ” directory to environment variables, and execute auto-configuration environment variable script in the top-level directory (only valid for current console):

Enter the command to view:

```
cd buildroot/output/rockchip_rk3288/host/usr
arm-linux-gcc --version
```

When the following log is printed, means configuration is successful:

```
gcc version 8.4.0 (Buildroot 2018.02-rc3-02301-ga3d3e23e2c)
```

## 7.4.2 Build Modules in Buildroot

For example, the qplayer module, the commonly used building commands are as follows:

- Build qplayer

```
SDK$make qplayer
```

- Rebuild qplayer

```
SDK$make qplayer-rebuild
```

- Delete qplayer

```
SDK$make qplayer-dirclean
or
SDK$rm -rf /buildroot/output/rockchip_rk3288/build/qplayer-1.0
```

## 7.5 Debian 9 Building

```
./build.sh debian
```

Or enter debian/ directory:

```
cd debian/
```

Please refer to the readme.md in the directory for further building and Debian firmware generation.

### (1) Building base Debian system

```
sudo apt-get install binfmt-support qemu-user-static live-build
sudo dpkg -i ubuntu-build-service/packages/*
sudo apt-get install -f
```

Build 32 bit Debian:

```
RELEASE=stretch TARGET=desktop ARCH=armhf ./mk-base-debian.sh
```

After building, linaro-stretch-alip-xxxxx-1.tar.gz (xxxxx is timestamp generated) will be generated in “debian”:

FAQ:

- If you encounter the following problem during above building:

```
noexec or nodev issue /usr/share/debootstrap/functions: line 1450:
.../rootfs/ubuntu-build-service/stretch-desktop-armhf/chroot/test-dev-null:
Permission denied E: Cannot install into target '/rootfs/ubuntu-build-
service/stretch-desktop-armhf/chroot' mounted with noexec or nodev
```

Solution:

```
mount -o remount,exec,dev xxx (xxx is the project directory), and then rebuild
```

In addition, if there are other building issues, please check firstly that the building system is not ext2/ext4.

- Because building Base Debian requires to access to foreign websites, and when domestic networks access foreign websites, download failures often occur:

Debian 9 使用 live build,镜像源改为国内可以这样配置:The live build is used in Debian9, you can configure like below to change the image source to domestic:

```
+++ b/ubuntu-build-service/stretch-desktop-armhf/configure
@@ -11,6 +11,11 @@ set -e
echo "I: create configuration"
export LB_BOOTSTRAP_INCLUDE="apt-transport-https gnupg"
lb config \
+ --mirror-bootstrap "http://mirrors.163.com/debian" \
+ --mirror-chroot "http://mirrors.163.com/debian" \
+ --mirror-chroot-security "http://mirrors.163.com/debian-security" \
+ --mirror-binary "http://mirrors.163.com/debian" \
+ --mirror-binary-security "http://mirrors.163.com/debian-security" \
--apt-indices false \
--apt-recommends false \
--apt-secure false \
```

If the package cannot be downloaded for other network reasons, there are pre-build packages shared on [Baidu Cloud Disk](#), put it in the current directory, and then do the next step directly.

## (2) Building rk-debian rootfs

Build 32 bit Debian:

```
VERSION=debug ARCH=armhf ./mk-rootfs-stretch.sh
```

## (3) Creating the ext4 image(linaro-rootfs.img)

```
./mk-image.sh
```

The linaro-rootfs.img will be generated.

## 7.6 Debian 10 Building

```
./build.sh distro
```

Or enter distro/directory:

```
cd distro/ && make ARCH=arm rk3288_defconfig && ./make.sh
```

After building, the rootfs.ext4 will be generated in the distro directory “distro/output/images/”.

**Note:** The current building of Debian10 Qt also depends on the building of Buildroot qmake, so please build Buildroot before building Debian10.

Please refer to the following document for more introductions about Debian10.

```
<SDK>/docs/Linux/ApplicationNote/Rockchip_Developer_Guide_Debian10_CN.pdf
```

## 7.7 Full Automatic Building

After building various parts of Kernel/U-Boot/Rootfs above, enter root directory of project directory and execute the following commands to automatically complete all building:

```
$. /build.sh all
```

It is buildroot by default, you can specify rootfs by setting the environment variable RK\_ROOTFS\_SYSTEM. For example, if you need buildroot which will be generated by the following commands:

```
$export RK_ROOTFS_SYSTEM=buildroot
$. /build.sh all
```

Detailed parameters usage, you can use help to search, for example:

```
rk3288$ ./build.sh --help
Usage: build.sh [OPTIONS]
Available options:
BoardConfig*.mk  -switch to specified board config
uboot            -build uboot
spl              -build spl
kernel           -build kernel
modules          -build kernel modules
toolchain        -build toolchain
rootfs           -build default rootfs, currently build buildroot as default
buildroot        -build buildroot rootfs
ramboot          -build ramboot image
multi-npu_boot   -build boot image for multi-npu board
yocto            -build yocto rootfs
debian           -build debian9 stretch rootfs
distro           -build debian10 buster rootfs
pcba             -build pcba
recovery         -build recovery
all              -build uboot, kernel, rootfs, recovery image
```

```
cleanall          -clean uboot, kernel, rootfs, recovery
firmware          -pack all the image we need to boot up system
updateimg        -pack update image
otapackage        -pack ab update otapackage image
save             -save images, patches, commands used to debug
allsave          -build all & firmware & updateimg & save
```

Default option is 'allsave'.

Board level configurations of each board should be configured in /device/rockchip/rk3288/Boardconfig.mk.

Main configurations of RK3288 EVB development board are as follows:

```
# Target arch
export RK_ARCH=arm
# Uboot defconfig
export RK_UBOOT_DEFCONFIG=rk3288
# Kernel defconfig
export RK_KERNEL_DEFCONFIG=rockchip_linux_defconfig
# Kernel dts
export RK_KERNEL_DTS=rk3288-evb-rk808-linux
# boot image type
export RK_BOOT_IMG=zboot.img
# kernel image path
export RK_KERNEL_IMG=kernel/arch/arm/boot/zImage
# parameter for GPT table
export RK_PARAMETER=parameter.txt
# Buildroot config
export RK_CFG_BUILDROOT=rockchip_rk3288
# Debian 10 config
export RK_DISTRO_DEFCONFIG=rk3288_defconfig
# Recovery config
export RK_CFG_RECOVERY=rockchip_rk3288_recovery
```

## 7.8 Firmware Package


After building various parts of Kernel/Uboot/Recovery/Rootfs above, enter root directory of project directory and execute the following command to automatically complete all firmware packaged into rockdev directory:

Firmware Generation:

```
./mkfirmware.sh
```

## 8. Upgrade Introduction


- Interfaces layout of RK3288 EVB PCB are showed as follows:

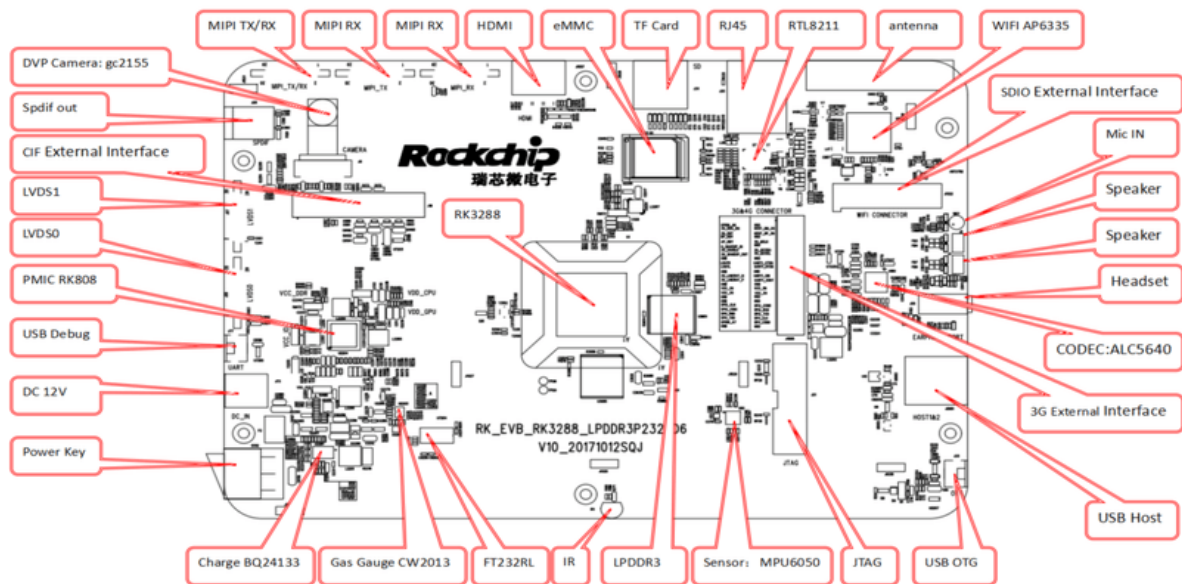

- Front view of RK3288 EVB :



- Bottom view of RK3288 EVB :

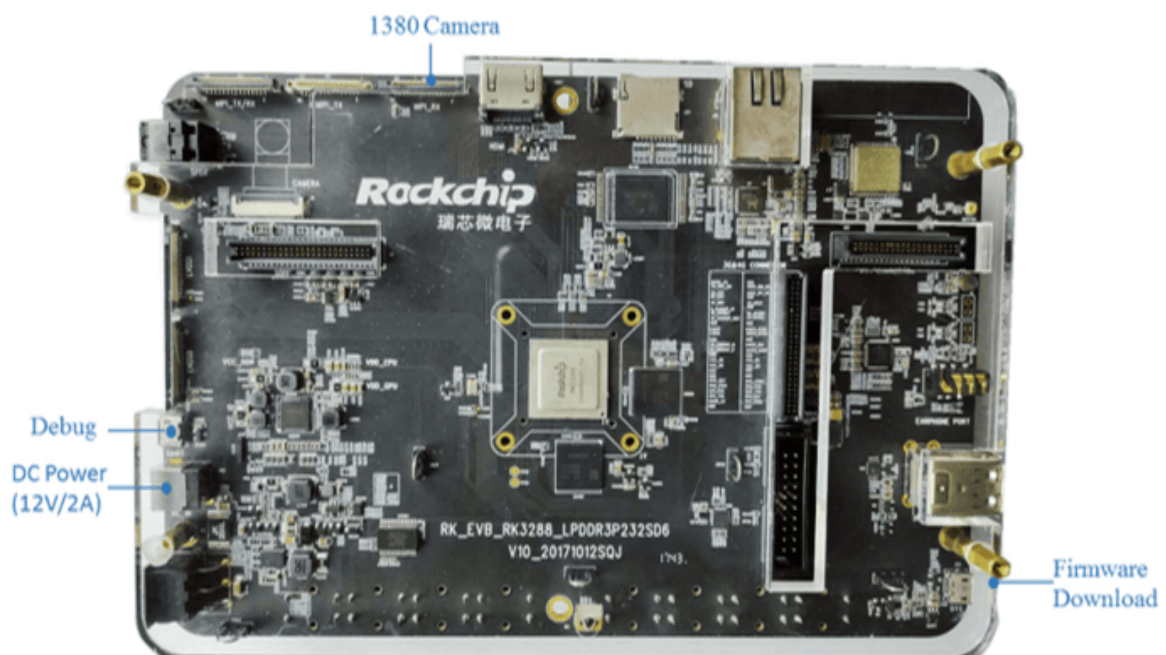


## 8.1 Windows Upgrade Introduction

SDK provides windows upgrade tool (this tool should be V2.55 or later version) which is located in project root directory:

```
tools/  
└─ windows/RKDevTool
```

As shown below, after building and generating the corresponding firmware, device needs to enter MASKROM or BootROM modes for upgrade. After connecting USB cable, long press the button “MASKROM” and press reset button “RST” at the same time and then release, device will enter MASKROM mode. Then you should load the paths of the corresponding images and click “Run” to start downloading. You can also press the “recovery” button and press reset button "RST" then release to enter loader mode to download. Partition offset and download files of MASKROM Mode are shown as follows (Note: you have to run the tool as an administrator in Windows PC):

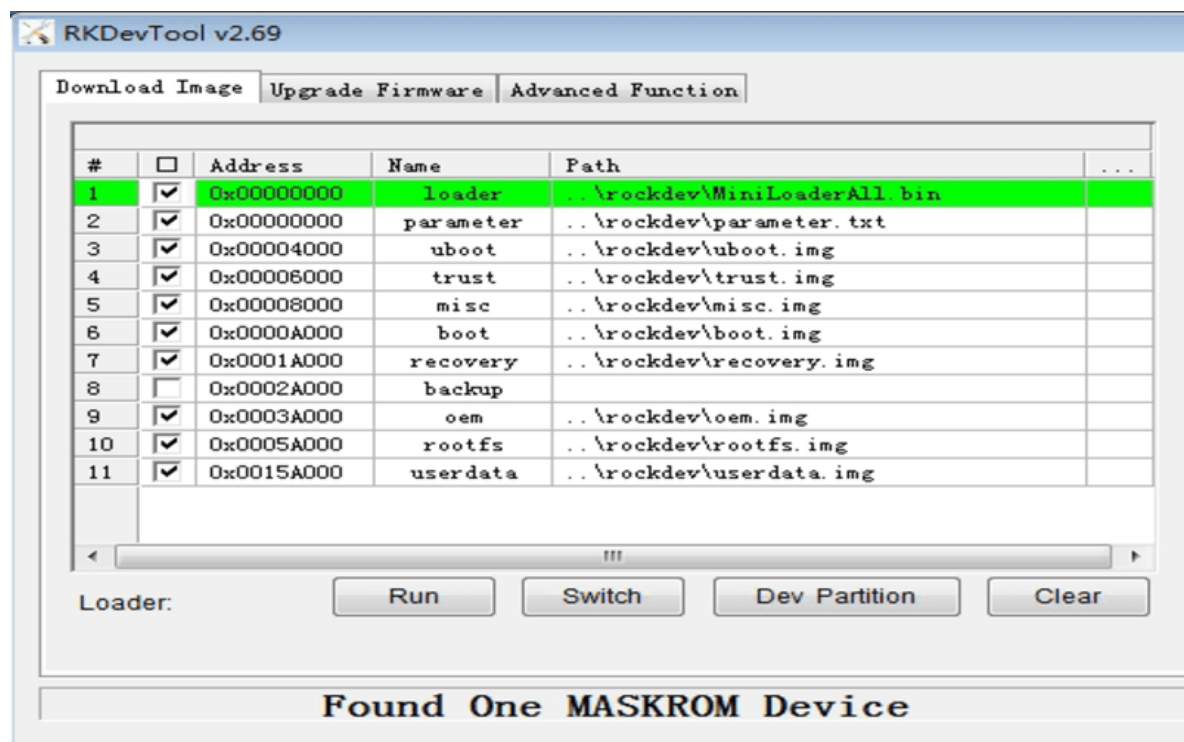

Note: before upgrade, please install the latest USB driver, which is in the below directory:

```
<SDK>/tools/windows/DriverAssitant_v4.8.zip
```

## 8.2 Linux Upgrade Introduction

The Linux upgrade tool (Linux\_Upgrade\_Tool should be v1.33 or later versions) is located in “tools/linux” directory. Please make sure your board is connected to MASKROM/loader rockusb, if the generated firmware is in rockdev directory, upgrade commands are as below:

```

sudo ./upgrade_tool ul rockdev/MiniLoaderAll.bin
sudo ./upgrade_tool di -p rockdev/parameter.txt
sudo ./upgrade_tool di -u rockdev/uboot.img
sudo ./upgrade_tool di -t rockdev/trust.img
sudo ./upgrade_tool di -misc rockdev/misc.img
sudo ./upgrade_tool di -b rockdev/boot.img
sudo ./upgrade_tool di -recovery rockdev/recovery.img
sudo ./upgrade_tool di -oem rockdev/oem.img
sudo ./upgrade_tool di -rootfs rockdev/rootfs.img
sudo ./upgrade_tool di -userdata rockdev/userdata.img
sudo ./upgrade_tool rd

```

Or upgrade the whole firmware after packaging:

```

sudo ./upgrade_tool uf rockdev/update.img

```

Or in root directory, run the following command on your device to upgrade in MASKROM state:

```

./rkflash.sh

```

## 8.3 System Partition Introduction

Default partition introduction (below is RK3288 EVB reference partition):

Number	Start (sector)	End (sector)	Size	Name
1	16384	24575	4096K	uboot
2	24576	32767	4096K	trust
3	32768	40959	4096K	misc
4	40960	106495	32M	boot
5	106496	303104	32M	recovery
6	172032	237567	32M	bakcup
7	237568	368639	64M	oem
8	368640	12951551	6G	rootfs
9	12951552	15269854	1.1G	userdata

- uboot partition: flashing uboot.img built from uboot.
- trust partition: flashing trust.img built from uboot.
- misc partition: flashing misc.img, for recovery.
- boot partition: flashing boot.img built from kernel.
- recovery partition: flashing recovery.img.
- backup partition: reserved, temporarily useless. Will be used for backup of recovery as in Android in future.
- oem partition: used by manufacturer to store their APP or data, mounted in /oem directory
- rootfs partition: store rootfs.img built from buildroot or debian.



- userdata partition: store files temporarily generated by APP or for users, mounted in /userdata directory

## 9. RK3288 SDK Firmware

---

RK3288\_Linux\_SDK\_V2.2.0\_20200708 firmware download address is as follows (including Buildroot/Debian 9/Debian 10/ firmwares):

- RK3288 EVB development boards:

[Buildroot](#)

[Debian9](#)

[Debian10](#)

## 10. SSH Public Key Operation Introduction

---

Please follow the introduction in the “Rockchip SDK Application and Synchronization Guide” to generate an SSH public key and send the email to [fae@rock-chips.com](mailto:fae@rock-chips.com), applying for permission to download SDK code. This document will be released to customers during the process of applying for permission.

### 10.1 Multi-device Use the Same SSH Public Key

If the same SSH public key should be used in different devices, you can copy the SSH private key file id\_rsa to “~/.ssh/id\_rsa” of the device you want to use.

If the following prompt appears when using a wrong private key, please be careful to replace it with the correct private key.

```
~/tmp$ git clone git@172.16.10.211:rk292x/mid/4.1.1_r1
Initialized empty Git repository in /home/cody/tmp/4.1.1_r1/.git/
The authenticity of host '172.16.10.211 (172.16.10.211)' can't be established.
RSA key fingerprint is fe:36:dd:30:bb:83:73:e1:0b:df:90:e2:73:e4:61:46.
Are you sure you want to continue connecting (yes/no)? yes
Warning: Permanently added '172.16.10.211' (RSA) to the list of known hosts.
git@172.16.10.211's password: █
```

After adding the correct private key, you can use git to clone code, as shown below.

```
~$ cd tmp/
~/tmp$ git clone git@172.16.10.211:rk292x/mid/4.1.1_r1
Initialized empty Git repository in /home/cody/tmp/4.1.1_r1/.git/
The authenticity of host '172.16.10.211 (172.16.10.211)' can't be established.
RSA key fingerprint is fe:36:dd:30:bb:83:73:e1:0b:df:90:e2:73:e4:61:46.
Are you sure you want to continue connecting (yes/no)? yes
Warning: Permanently added '172.16.10.211' (RSA) to the list of known hosts.
remote: Counting objects: 237923, done.
remote: Compressing objects: 100% (168382/168382), done.
Receiving objects: 9% (21570/237923), 61.52 MiB | 11.14 MiB/s
```

Adding SSH private key may result in the following error.

```
Agent admitted failure to sign using the key
```

Enter the following command in console to solve:




```
ssh-add ~/.ssh/id_rsa
```

## 10.2 Switch Different SSH Public Keys on the Same Device

You can configure SSH according to the `ssh_config` documentation.


```
~$ man ssh_config
```

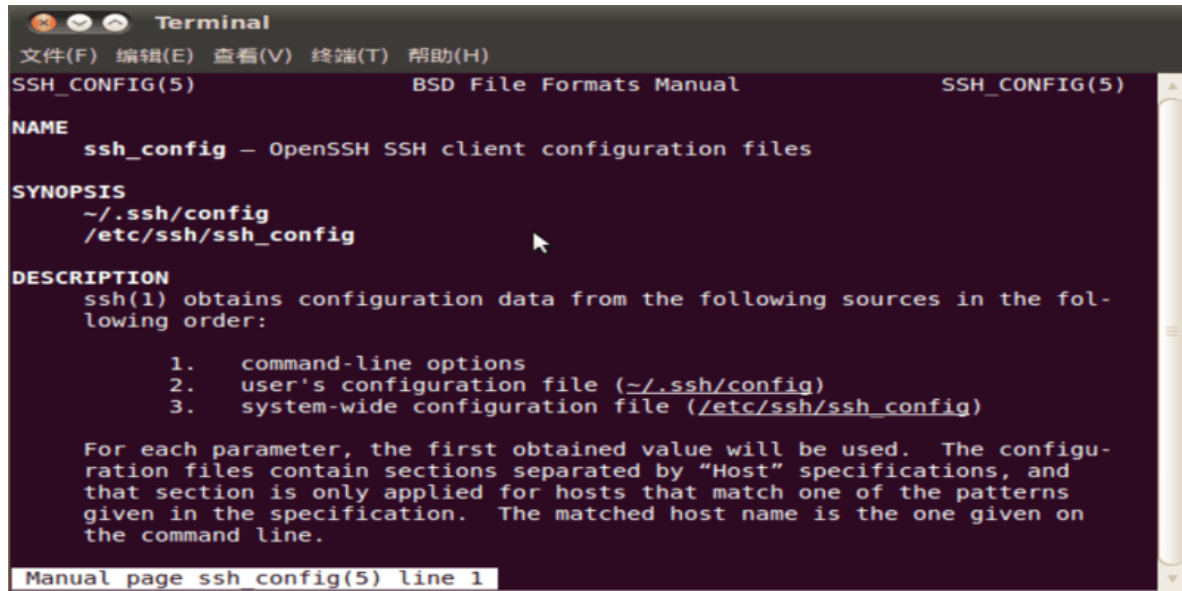

Run the following command to configure SSH configuration of current user.

```
~$ cp /etc/ssh/ssh_config ~/.ssh/config
~$ vi ~/.ssh/config
```

As shown in the figure, SSH uses the file “`~/.ssh1/id_rsa`” of another directory as an authentication private key. In this way, different keys can be switched.

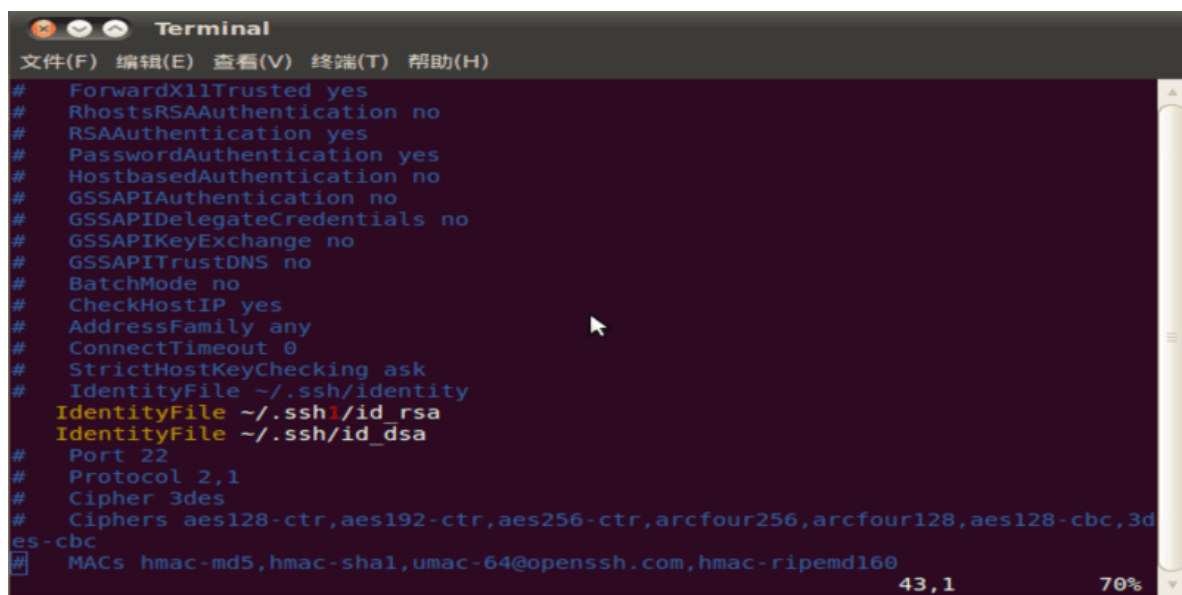

## 10.3 Key Authority Management

Server can monitor download times and IP information of a key in real time. If an abnormality is found, download permission of the corresponding key will be disabled.

Keep the private key file properly. Do not grant second authorization to third parties.

## **10.4 Reference Documents**

For more details, please refer to document

“/docs/Others/Rockchip\_User\_Guide\_SDK\_Application\_And\_Synchronization\_CN.pdf”.