


Tasks 1:

Power on devices and then configure the devices as follows:

- 1) Configure IP addresses as shown in the diagram
- 2) Ensure routers can ping each other
- 3) Configure an enable password of "cisco"
- 4) Encrypt the enable password
- 5) Configure a secret password of "cisco123"
- 6) Configure the first 5 telnet lines and use a line password of cisco on them
- 7) Make sure you can telnet from one device to the other
- 8) Configure a console password of "cisco" and test

Task 2:

Do the initial configuration of a Router

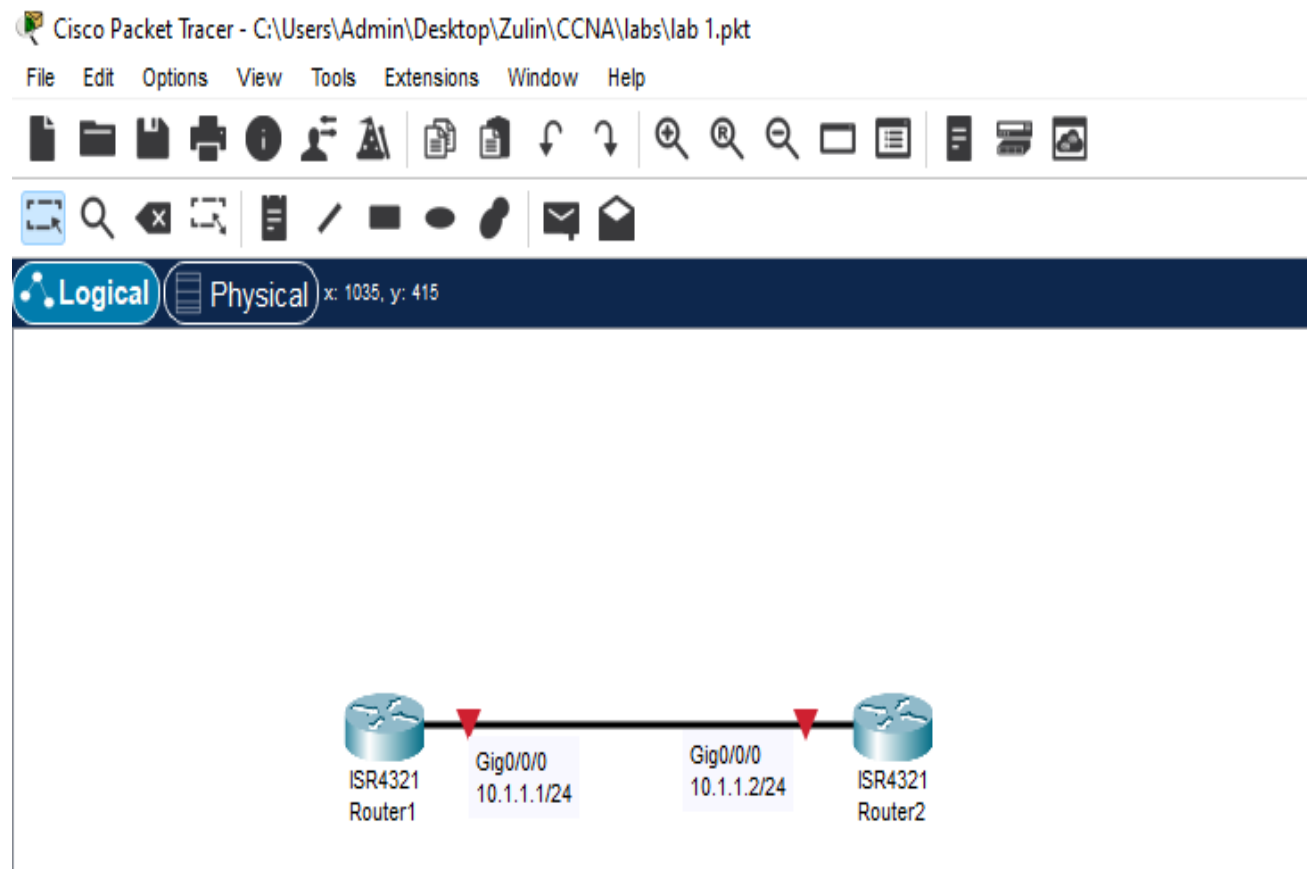

- 1) Configure IP addresses as shown in the diagram

Router 1

IOS Command Line Interface

```
Router>en
Router#config t
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)#int
Router(config)#interface gig
Router(config)#interface gigabitEthernet 0/0/0
Router(config-if)#ip add
Router(config-if)#ip address 10.1.1.1 255.255.255.0
Router(config-if)#no shut
Router(config-if)#no shutdown

Router(config-if)#
%LINK-5-CHANGED: Interface GigabitEthernet0/0/0, changed state to up

Router(config-if)#exit
Router(config)#exit
Router#
%SYS-5-CONFIG_I: Configured from console by console

Router#show ip inter
Router#show ip interface brief

```

Interface	IP-Address	OK?	Method	Status	Protocol
GigabitEthernet0/0/0	10.1.1.1	YES	manual	up	down
GigabitEthernet0/0/1	unassigned	YES	unset	administratively down	down
Vlan1	unassigned	YES	unset	administratively down	down

```
Router#show run
Building configuration...

Current configuration : 571 bytes
!
version 15.4
no service timestamps log datetime msec
no service timestamps debug datetime msec
no service password-encryption
!
hostname Router
!
```

Router 2

```
Physical  Config  CLI  Attributes
IOS Command Line Interface

Router>en
Router#config t
Router#config terminal
Enter configuration commands, one per line.  End with CNTL/Z.
Router(config)#int
Router(config)#interface giga
Router(config)#interface gigabitEthernet 0/0/0
Router(config-if)#ip add
Router(config-if)#ip address 10.1.1.2 255.255.255.0
Router(config-if)#no shu
Router(config-if)#no shutdown

Router(config-if)#
%LINK-5-CHANGED: Interface GigabitEthernet0/0/0, changed state to up

%LINEPROTO-5-UPDOWN: Line protocol on Interface GigabitEthernet0/0/0, changed state to up

Router(config-if)#exit
Router(config)#do show ip int
Router(config)#do show ip interface brief
Interface                IP-Address      OK? Method Status          Protocol
GigabitEthernet0/0/0     10.1.1.2        YES manual up              up
GigabitEthernet0/0/1     unassigned      YES unset  administratively down down
Vlan1                    unassigned      YES unset  administratively down down
Router(config)#do show run
Building configuration...

Current configuration : 571 bytes
!
version 15.4
no service timestamps log datetime msec
no service timestamps debug datetime msec
no service password-encryption
!
hostname Router
```

2) Ensure routers can ping each other

Router 1

```
Router#
%LINEPROTO-5-UPDOWN: Line protocol on Interface GigabitEthernet0/0/0, char

Router#ping 10.1.1.2

Type escape sequence to abort.
Sending 5, 100-byte ICMP Echos to 10.1.1.2, timeout is 2 seconds:
.!!!!
Success rate is 80 percent (4/5), round-trip min/avg/max = 0/0/0 ms
```

Router 2

```
Router(config)#exit
Router#
%SYS-5-CONFIG_I: Configured from console by console

Router#ping 10.1.1.1

Type escape sequence to abort.
Sending 5, 100-byte ICMP Echos to 10.1.1.1, timeout is 2 seconds:
!!!!
Success rate is 100 percent (5/5), round-trip min/avg/max = 0/0/0 ms

Router#
```

- 2) Configure an enable password of "cisco"

Router 1

Physical Config CLI Attributes

IOS Command Line Interface

```
type escape sequence to abort.
Sending 5, 100-byte ICMP Echos to 10.1.1.2, timeout is 2 seconds:
.!!!!
Success rate is 80 percent (4/5), round-trip min/avg/max = 0/0/0 ms

Router#config t
Enter configuration commands, one per line.  End with CNTL/Z.
Router(config)#hostname Router1
Router1(config)#enable p
Router1(config)#enable password cisco
Router1(config)#exit
Router1#
%SYS-5-CONFIG_I: Configured from console by console

Router1#show run
Building configuration...

Current configuration : 596 bytes
!
version 15.4
no service timestamps log datetime msec
no service timestamps debug datetime msec
no service password-encryption
!
hostname Router1
!
!
!
enable password cisco
!
!
!
```

Router1>en

Password:

Router1#

Router 2

```
Router>en
Router#config t
Enter configuration commands, one per line.  End with CNTL/Z.
Router(config)#hostname Router2
Router2(config)#enable pass
Router2(config)#enable password cisco
Router2(config)#do show run
Building configuration...

Current configuration : 596 bytes
!
version 15.4
no service timestamps log datetime msec
no service timestamps debug datetime msec
no service password-encryption
!
hostname Router2
!
!
!
enable password cisco
!
!
!
!
!
!
ip cef
no ipv6 cef
--More--
```

```
Router2>en
Password:
Router2#
```

4) Encrypt the enable password

Router 1

```
Router1>en
Password:
Router1#config t
Enter configuration commands, one per line.  End with CNTL/Z.
Router1(config)#service pass
Router1(config)#service password-encryption
Router1(config)#exit
Router1#
%SYS-5-CONFIG_I: Configured from console by console

Router1#show run
Building configuration...

Current configuration : 602 bytes
!
version 15.4
no service timestamps log datetime msec
no service timestamps debug datetime msec
service password-encryption
!
hostname Router1
!
!
!
enable password 7 0822455D0A16
!
!
```

Router 2

```
Router2>en
Password:
Router2#config t
Enter configuration commands, one per line.  End with CNTL/Z.
Router2(config)#ser
Router2(config)#service pass
Router2(config)#service password-encryption
Router2(config)#do show run
Building configuration...

Current configuration : 602 bytes
!
version 15.4
no service timestamps log datetime msec
no service timestamps debug datetime msec
service password-encryption
!
hostname Router2
!
!
!
enable password 7 0822455D0A16
!
!
!
!
!
!
ip cef
no ipv6 cef
--More--
```

5) Configure a secret password of "cisco123"

Router 1

```
Router1#config t
Router1#config terminal
Enter configuration commands, one per line.  End with CNTL/Z.
Router1(config)#enable se
Router1(config)#enable secret cisco123
Router1(config)#exit
Router1#
%SYS-5-CONFIG_I: Configured from console by console

Router1#show run
Building configuration...

Current configuration : 649 bytes
!
version 15.4
no service timestamps log datetime msec
no service timestamps debug datetime msec
service password-encryption
!
hostname Router1
!
!
!
enable secret 5 $1$mERr$5.a6P4JqbNiMX0lusIfka/
enable password 7 0822455D0A16
!
!
```

Router 2

```
Router2(config)#enable secre
Router2(config)#enable secret cisco123
Router2(config)#do show run
Building configuration...

Current configuration : 649 bytes
!
version 15.4
no service timestamps log datetime msec
no service timestamps debug datetime msec
service password-encryption
!
hostname Router2
!
!
!
enable secret 5 $1$mERr$5.a6P4JqbNiMX0lusIfka/
enable password 7 0822455D0A16
!
```

- 6) Configure the first 5 telnet lines and use a line password of cisco on them
- 7) Make sure you can telnet from one device to the other

Router 1

```
Router1#config t
Enter configuration commands, one per line. End with CNTL/Z.
Router1(config)#line vty 0 4
Router1(config-line)#login
% Login disabled on line 2, until 'password' is set
% Login disabled on line 3, until 'password' is set
% Login disabled on line 4, until 'password' is set
% Login disabled on line 5, until 'password' is set
% Login disabled on line 6, until 'password' is set
Router1(config-line)#pass
Router1(config-line)#password cisco
Router1(config-line)#exit
Router1(config)#telnet 10.1.1.2
^
% Invalid input detected at '^' marker.

Router1(config)#exit
Router1#
%SYS-5-CONFIG_I: Configured from console by console

Router1#telnet 10.1.1.2
Trying 10.1.1.2 ...Open

User Access Verification

Password:
Router2>
```

Router 2

```
Router2#config t
Enter configuration commands, one per line. End with CNTL/Z.
Router2(config)#line vty 0 4
Router2(config-line)#login
Router2(config-line)#password cisco
Router2(config-line)#exit
Router2(config)#exit
Router2#
%SYS-5-CONFIG_I: Configured from console by console

Router2#telnet 10.1.1.1
Trying 10.1.1.1 ...Open

User Access Verification

Password:
Router1>
```


8) Configure a console password of "cisco" and test

Router 1

```
Router1#config t
Enter configuration commands, one per line.  End with CNTL/Z.
Router1(config)#line con 0
Router1(config-line)#password cisco
Router1(config-line)#exit
Router1(config)#exit
Router1#
%SYS-5-CONFIG_I: Configured from console by console

Router1#exit
```

Router1 con0 is now available

Press RETURN to get started.

User Access Verification

Password:

Router1>en

Password:

Password:

Router1#

Router 2

```
Router2>
Router2>en
Password:
Password:
Router2#config t
Enter configuration commands, one per line.  End with CNTL/Z.
Router2(config)#line con 0
Router2(config-line)#login
Router2(config-line)#password cisco
Router2(config-line)#exit
Router2(config)#exit
Router2#
%SYS-5-CONFIG_I: Configured from console by console

Router2#exit

Router2 con0 is now available



Press RETURN to get started.
```

User Access Verification

Password:

```
Router2>en
Password:
Router2#
```

All configurations are done

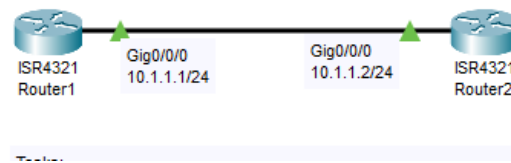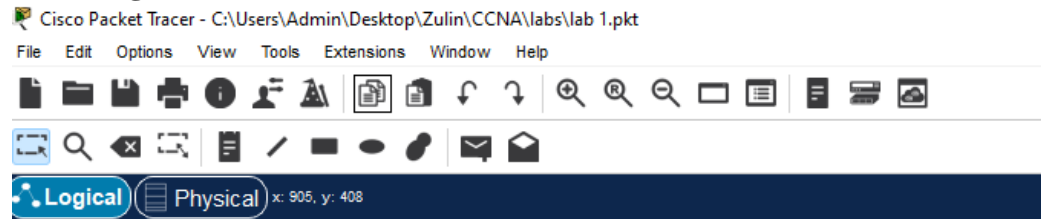

- Let's check the running config and start-up config:

As I didn't configure the router in the starting, startup-config is not present

```
Router1#show runn
Router1#show running-config
Building configuration...

Current configuration : 706 bytes
!
version 15.4
no service timestamps log datetime msec
no service timestamps debug datetime msec
service password-encryption
!
hostname Router1
!
!
!
enable secret 5 $1$mERr$5.a6P4JqbNiMX0lusIfka/
enable password 7 0822455D0A16
!
!
!
ip cef


Router1#show star
Router1#show startup-config
startup-config is not present
Router1#
Router1#
```

- Copy running config in start-up config

```
ip cef

Router1#show star
Router1#show startup-config
startup-config is not present
Router1#
Router1#copy ru
Router1#copy running-config st
Router1#copy running-config startup-config
Destination filename [startup-config]?
Building configuration...
[OK]
Router1#show startup
Router1#show startup-config
Using 706 bytes
!
version 15.4
no service timestamps log datetime msec
no service timestamps debug datetime msec
service password-encryption
!
hostname Router1
!
!
!
enable secret 5 $1$mERr$5.a6P4JqbNiMX0lusIfka/
enable password 7 0822455D0A16
!
!
!
!
!
!
ip cef
no ipv6 cef
!
--More--
```

Task 2: Do the initial configuration of a Router

 Router1

Physical Config **CLI** Attributes

IOS Command Line Interface

Would you like to enter basic management setup? [yes/no]: yes
Configuring global parameters:

Enter host name [Router]: Router1

The enable secret is a password used to protect access to privileged EXEC and configuration modes. This password, after entered, becomes encrypted in the configuration.

Enter enable secret: cisco123

The enable password is used when you do not specify an enable secret password, with some older software versions, and some boot images.

Enter enable password: cisco

The virtual terminal password is used to protect access to the router over a network interface.

Enter virtual terminal password: cisco

Configure SNMP Network Management? [no]:

Current interface summary

Interface	IP-Address	OK?	Method	Status	Protocol
GigabitEthernet0/0/0	unassigned	YES	manual	administratively down	down
GigabitEthernet0/0/1	unassigned	YES	manual	administratively down	down
Vlan1	unassigned	YES	manual	administratively down	down

Enter interface name used to connect to the management network from the above interface summary:

% No defaulting allowed

Enter interface name used to connect to the

management network from the above interface summary: GigabitEthernet0/0/0

Configuring interface GigabitEthernet0/0/0:

Configure IP on this interface? [yes]: yes

IP address for this interface: 10.1.1.1

Subnet mask for this interface [255.0.0.0] : 255.255.255.0

The following configuration command script was created:

```
!  
hostname Router1  
enable secret 5 $1$mERr$5.a6P4JqbNiMX0lusIfka/  
enable password cisco  
line vty 0 4  
password cisco  
!  
interface Vlan1  
shutdown  
no ip address  
!  
interface GigabitEthernet0/0/0  
no shutdown  
ip address 10.1.1.1 255.255.255.0  
!  
interface GigabitEthernet0/0/1  
shutdown  
no ip address  
!  
end
```

[0] Go to the IOS command prompt without saving this config.

[1] Return back to the setup without saving this config.

[2] Save this configuration to nvram and exit.

Enter your selection [2]: 2

```
Enter your selection [2]: 2
Building configuration...
[OK]
Use the enabled mode 'configure' command to modify this configuration.

Press RETURN to get started!

%LINK-5-CHANGED: Interface Vlan1, changed state to up
%LINK-5-CHANGED: Interface GigabitEthernet0/0/0, changed state to up
%LINK-5-CHANGED: Interface GigabitEthernet0/0/1, changed state to up
%LINK-5-CHANGED: Interface Vlan1, changed state to administratively down
%LINK-5-CHANGED: Interface GigabitEthernet0/0/1, changed state to administratively down
%SYS-5-CONFIG_I: Configured from console by console

Router1>en
Password:
Router1#show run
Building configuration...

Current configuration : 659 bytes
!
version 15.4
no service timestamps log datetime msec
no service timestamps debug datetime msec
no service password-encryption
!
```

Physical

Config

CLI

Attributes

IOS Command Line

```
Router1>en
Password:
Router1#show run
Building configuration...

Current configuration : 659 bytes
!
version 15.4
no service timestamps log datetime msec
no service timestamps debug datetime msec
no service password-encryption
!
hostname Router1
!
!
!
enable secret 5 $1$mERr$5.a6P4JqbNiMX0lusIfka/
enable password cisco
!
!
!
!
!
!
ip cef
no ipv6 cef
!
!
!
```



```
Router1#en
Router1#config t
Enter configuration commands, one per line.  End with CNTL/Z.
Router1(config)#hostname R1
R1(config)#service pass
R1(config)#service password-encryption
R1(config)#show runn
R1(config)#show run
      ^
% Invalid input detected at '^' marker.

R1(config)#do show run
Building configuration...

Current configuration : 669 bytes
!
version 15.4
no service timestamps log datetime msec
no service timestamps debug datetime msec
service password-encryption
!
hostname R1
!
!
!
enable secret 5 $1$mERr$5.a6P4JqbNiMX0lusIfka/
enable password 7 0822455D0A16
!
```

- **Compare running config and start-up config:**

When I change anything in configuration it will show in running configuration and nothing will change in startup configuration unless I copy running configuration into start-up configuration.

```
!  
!  
end  
  
R1(config)#exit  
R1#  
%SYS-5-CONFIG_I: Configured from console by console  
  
R1#show runn  
R1#show running-config  
Building configuration...  
  
Current configuration : 669 bytes  
!  
version 15.4  
no service timestamps log datetime msec  
no service timestamps debug datetime msec  
service password-encryption  
!  
hostname R1  
!  
!  
!  
enable secret 5 $1$mERr$5.a6P4JqbNiMX0lusIfka/  
enable password 7 0822455D0A16  
!  
!  
!  
!  
!  
ip cef  
  
R1#
```

Physical Config CLI Attributes

IOS Command Line Interface

```
R1#
R1#
R1#show start
R1#show startup-config
Using 659 bytes
!
version 15.4
no service timestamps log datetime msec
no service timestamps debug datetime msec
no service password-encryption
!
hostname Router1
!
!
!
enable secret 5 $1$mERr$5.a6P4JqbNiMX0lusIfka/
enable password cisco
!
!
!
!
!
```

```
R1#copy running-config start
R1#copy running-config startup-config
Destination filename [startup-config]?
Building configuration...
[OK]
```

```
R1#copy runn
R1#copy running-config start
R1#copy running-config startup-config
Destination filename [startup-config]?
Building configuration...
[OK]
R1#show start
R1#show startup-config
Using 669 bytes
!
version 15.4
no service timestamps log datetime msec
no service timestamps debug datetime msec
service password-encryption
!
hostname R1
!
!
!
enable secret 5 $1$mERr$5.a6P4JqbNiMX0lusIfka/
enable password 7 0822455D0A16
!
!
!
!
!
!
ip cef
no ipv6 cef
!
```