
- Tux-Lab.
- <u>Home Shared Projects Design Rules Pricing & Specs Support Projects Profile Log out</u>



OSH Park

PCB Order - Verify your design

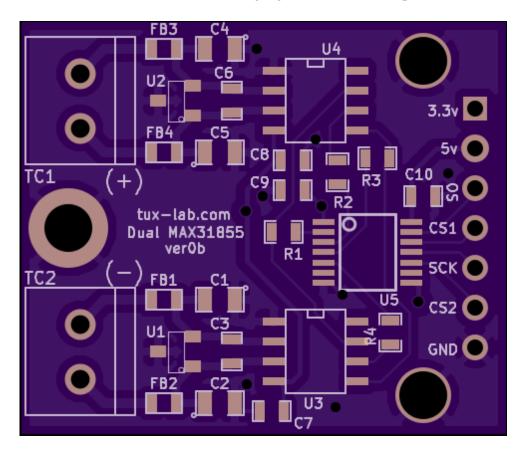


Board Top

This is a render of what we think your board will look like after fabrication as viewed from the top.



Board Bottom


This is a render of what we think your board will look like after fabrication as viewed from the bottom.

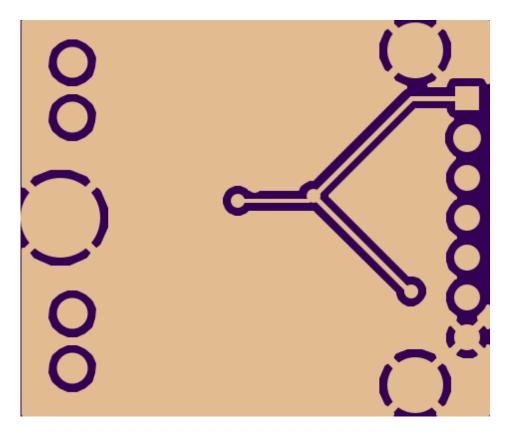

 $Rendered\ from\ "ReflowOvenControl_v0-B_Cu.gbl"$

Bottom Layer

• This is the bottom copper layer of your board.

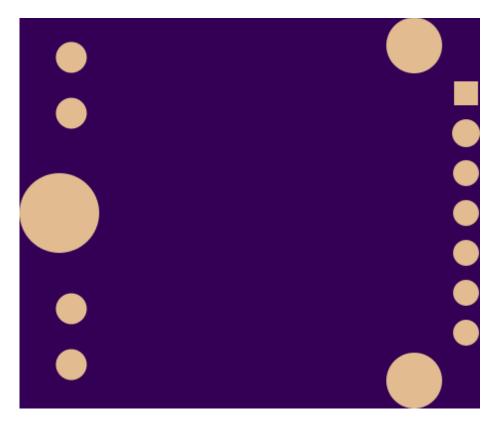

Rendered from "ReflowOvenControl_v0-B Mask.gbs"

Bottom Solder Mask


- Soldermask layers are "negative" layers. This layer really designates where there *shouldn't* be solder mask. If you draw on the soldermask layer ("tStop" and "bStop" in Eagle), those areas won't have soldermask.
- If you don't provide a soldermask layer here, this entire side of the board will be coated in soldermask. You probably don't want this.



Rendered from "ReflowOvenControl v0-B SilkS.gbo"

Bottom Silk Screen

- The silkscreen is put on with what is basically a 200 dpi printer. Lines thinner than 5 mils will be fattened to 5 mils before printing.
- Try to keep your silkscreen inside the board outline. It's okay if it goes out of the board outline, but it will be trimmed with sometimes unpredictable results.
- The fab will automatically remove any silkscreen that crosses drilled holes or exposed metal.

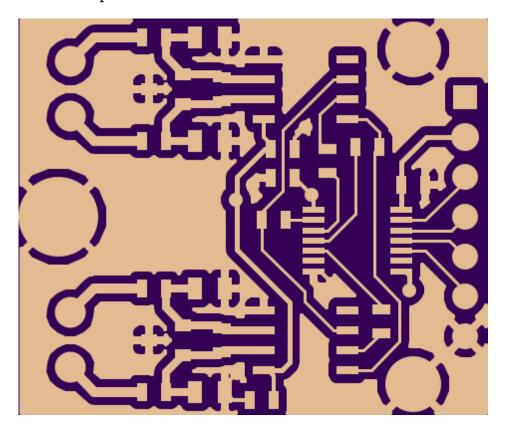

 $Rendered\ from\ "ReflowOvenControl_v0-F_Cu.gtl"$

Top Layer


• This is the top layer of copper on your PCB.



Rendered from "ReflowOvenControl_v0-Edge_Cuts.gko"

Board Outline


- The board outline needs to go all the way around the edge of the board such that it's "water tight" (no gaps).
- Non-rectangular board shapes are allowed, but you'll be billed for the smallest rectangle that would enclose your design. So a circle two inches in diameter would be billed at 4 square inches.
- Cutouts aren't officially supported, but the fab has been doing them pretty regularly as long as they're drawn on the board outline layer, and are at least 100 mils wide.
- To try making a cutout, draw the outline of the cutout on the board outline layer, or draw the path you'd like the milling tool to make using a 0.1" wide line. Cutouts won't be plated.

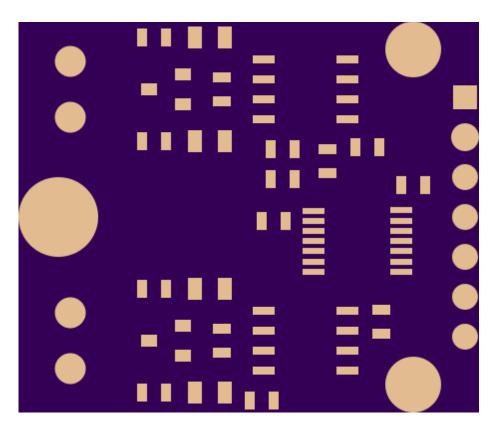

Rendered from "ReflowOvenControl v0-F Mask.gts"

Top Solder Mask


- Soldermask layers are "negative" layers. This layer really designates where there *shouldn't* be solder mask. If you draw on the soldermask layer ("tStop" and "bStop" in Eagle), those areas won't have soldermask.
- If you don't provide a soldermask layer here, this entire side of the board will be coated in soldermask. You probably don't want this.

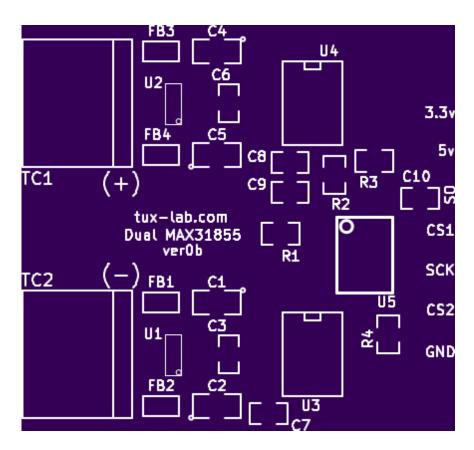

Rendered from "ReflowOvenControl v0-F SilkS.gto"

Top Silk Screen

- The silkscreen is put on with what is basically a 200 dpi printer. Lines thinner than 5 mils will be fattened to 5 mils before printing.
- Try to keep your silkscreen inside the board outline. It's okay if it goes out of the board outline, but it will be trimmed with sometimes unpredictable results.
- The fab will automatically remove any silkscreen that crosses drilled holes or exposed metal.

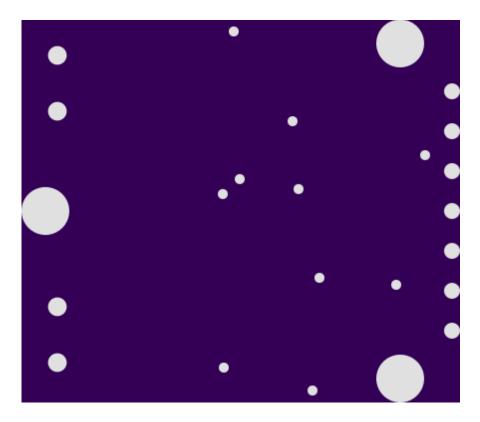

Rendered from "ReflowOvenControl v0.drl"

Drills

- Your drill file needs to be in text "NC Drills" or "Excellon" format, generated with "2:4" precision, and with "no zero suppression".
- Make sure the center of your drill hits are all inside the board outline. Anything outside of the board outline is automatically removed.
- Overlapping drill hits aren't allowed.
- Minimum drill size is 13 mils. Maximum is 360 mils.
- Plated slots aren't supported.



Designed and developed by Resistor.