# VISVESVARAYA TECHNOLOGICAL UNIVERSITY

"JnanaS angama", Belgaum -590014, Karnataka.



# LAB REPORT on

# INTERNET OF THINGS LAB

Submitted by

VAISHNAVI ACHARYA(1BM21CS234)

in partial fulfillment for the award of the degree of BACHELOR OF ENGINEERING
in
COMPUTER SCIENCE AND ENGINEERING



#### **B.M.S. COLLEGE OF ENGINEERING**

(Autonomous Institution under VTU)
BENGALURU-560019
JUN-2023 to SEP-2023

B. M. S. College of Engineering,
Bull Temple Road, Bangalore 560019

(Affiliated To Visvesvaraya Technological University, Belgaum)

Department of Computer Science and Engineering



#### **CERTIFICATE**

This is to certify that the Lab work entitled "Internet Of Things Lab" carried out by VAISHNAVI ACHARYA (1BM21CS234), who is bonafide student of B. M. S. College of Engineering. It is in partial fulfillment for the award of Bachelor of Engineering in Computer Science and Engineering of the Visvesvaraya Technological University, Belgaum during the year 2023. The Lab report has been approved as it satisfies the academic requirements in respect of a Internet of things lab - (22CS5PCIOT) work prescribed for the said degree.

Prameetha Pai

Dr. Jyothi S Nayak

Assistant professor Department of CSE BMSCE, Bengaluru Professor and Head Department of CSE BMSCE, Bengaluru

.

# **INDEX**

Sl. No.	Date	Program Title	Page No.
1.	15-11-23	LED Blinking	2
2.	15-11-23	LED ON/OFF Using Pushbutton	4
3.	15-11-23	LED Fading using Potentiometer	6
4.	22-11-23	Nightlight Simulation	9
5.	22-11-23	PIR with Arduino UNO	11
6.	22-11-23	Ultrasound with Arduino UNO	14
7.	29-11-23	Fire Alert System	18
8.	29-11-23	Automatic irrigation controller simulation	21
9.	06-12-23	Reading the code present on RFID tag	23
10.	06-12-23	Access control through RFID	27
11.	27-12-23	HC-05 Bluetooth at Command prompt	28
12.	10-01-24	HC-05 Bluetooth Controlled by mobile	30
13.	10-01-24	Bluetooth-Master Slave	35
14.	17-01-24	GSM Module	45

	1

# 1. LED Blinking

# Aim:

Turns on an LED on for one second, then off for one second, repeatedly.

# Hardware Required:

- Arduino Board
- LED

# Circuit diagram:


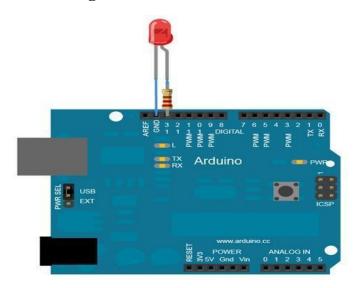


Fig.1.LED blinking

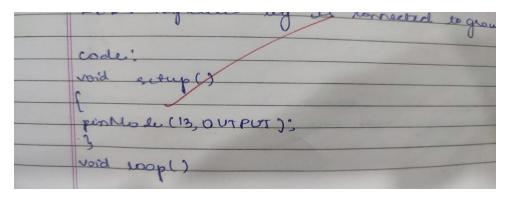

```
digital bluite (13, HIGH);

digital bluite (13, LOW);

Digital output visualization using

Auduino Uno.
```

```
int led = 13;
void setup()
{
pinMode(led, OUTPUT);
}
void loop() {
digitalWrite(led, HIGH);
delay(1000);
digitalWrite(led, LOW);
delay(1000);
}
```

#### **Observation:**

The code establishes a basic program to toggle an LED on and off in one-second intervals. Pin 13 is configured as the output for the LED, and the main loop continuously switches the LED on for one second, then off for another second.

# 2. LED ON/OFF Using Pushbutton

#### Aim:

Turn an LED ON /OFF using a Pushbutton.

# Hardware Required:

- Arduino Board
- LED
- Push button

## Circuit diagram:


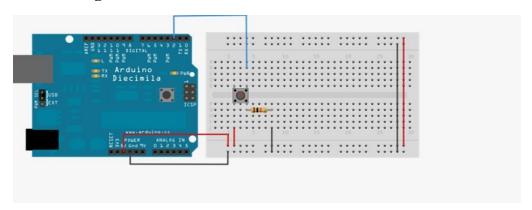


Fig.2.LED on/off using pushbutton

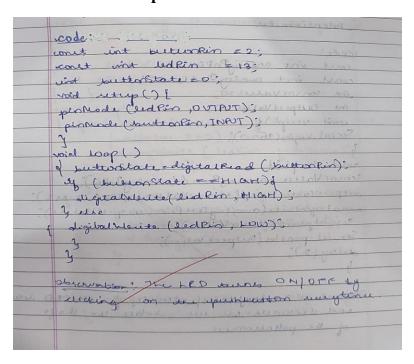

```
const int buttonPin = 2;
const int ledPin = 13;
int buttonState = 0;
void setup() {
  pinMode(ledPin, OUTPUT);
  pinMode(buttonPin, INPUT);
  }
void loop() {
  buttonState = digitalRead(buttonPin);
  if (buttonState == HIGH) {
    digitalWrite(ledPin, HIGH);
  } else {
    digitalWrite(ledPin, LOW);
  }
}
```

#### **Observation:**

The code achieves desired functionality of turning the LED on and off based on the state of the push button. When the button is pressed, the LED lights up. This interactive behavior enhances the user experience, where the LED state is directly controlled by the push button's input.

#### 3. LED Fading using Potentiometer

#### Aim:

To control the brightness of an LED using a Potentiometer.

## Hardware Required:

- · Arduino Board
- LED
- Potentiometer

#### Circuit diagram:

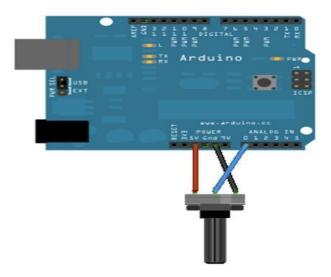


Fig.3-LED fading using potentiometer

```
code:

court int analogentin EAD;

court int analogentin EAD;

court int analogentines?

int sensor Value 20;

word stuple!

Serval begin (4600);

Just shoop (4600);

sensor Value zanalogen ad (analogentin);

output Value zmap (remorrable of 1023,025);

output Value zmap (remorrable of 2023,025);

output Value zmap (attern);

serval print (anologenties);

serval print in (output Value);

serval print in (output Value);

otherwation: The buightness prelimites of the 100 kmm

and decrease or use solute the shaft

of the potention tee.
```

## Code:

const int potPin = A0;

const int ledPin = 9;

```
void setup() {
  pinMode(ledPin, OUTPUT);
}

void loop() {
  int potValue = analogRead(potPin);
  int brightness = map(potValue, 0, 1023, 0, 255);
  analogWrite(ledPin, brightness);
}
```

The code effectively achieves the desired outcome, enabling the dynamic control of the LED's brightness through the potentiometer. As the potentiometer is adjusted, the analogRead function captures its varying values (ranging from 0 to 1023). The mapping of these values to a brightness scale (0 to 255) results in adjustment of the LED's intensity.

#### 4. Nightlight Simulation

#### Aim:

Simulating a night light using LDR and PIR

#### Hardware Required:

- 1 LED
- 1 LDR
- 110K resistor

#### **Connection:**

- 1. Attach one leg of LDR to 5V and another leg to Arduino Analog pin A0
- 2. Attach one leg of 110K resistor with that leg of LDR connected to A0
- 3. Attach another leg of resistor to the ground
- 4. Connect the positive leg of LED to pin 11 and negative to GND

#### Circuit diagram:

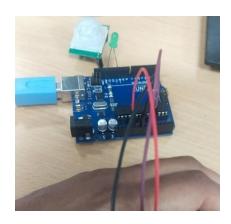


Fig 4.1- when it is bright, the LED is off.


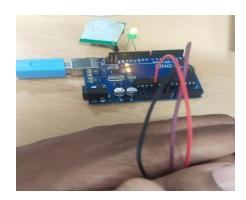


Fig 4.2- when dark, the LED turns on.

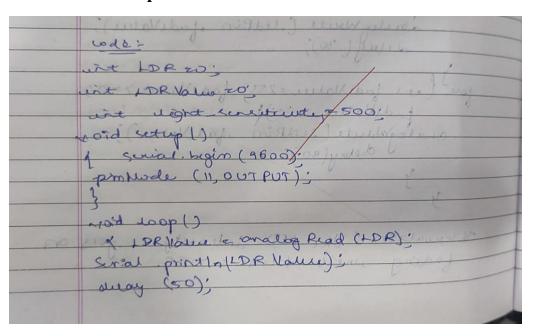

```
digetal White (11, HICEH);

during (1000);

during (1000);
```

```
int LDR = 0;
int LDRValue = 0;
int light_sensitivity = 500;
void setup()
{
    Serial.begin(9600);
pinMode(11, OUTPUT);
}
void loop()
{
    LDRValue = analogRead(LDR);
    Serial.println(LDRValue);
    delay(50);
if (LDRValue < light_sensitivity)
{
    digitalWrite(11, HIGH);</pre>
```

```
}
else
{
digitalWrite(11, LOW);
}
delay(1000);
}
```

The code successfully achieves the goal of simulating a night light based on the ambient light levels detected by the LDR. The analogRead function captures the LDR values, which are printed to the serial monitor for monitoring. The conditional statement compares these values to a light sensitivity threshold, and if the ambient light falls below this threshold, the LED is turned on, simulating a night light.

#### 5. PIR with Arduino UNO

Aim: To detect the presence of human.

# Hardware Required:

- 1 LED
- 1 PIR
- Arduino UNO

#### Circuit diagram:


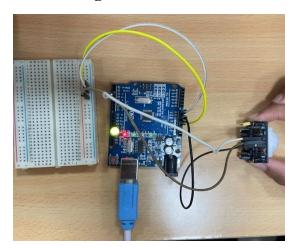


Fig 5- When motion is detected LED is high

Lode:
int senso State = 0'
void extept)
pinhale (2 TNPUT):
più Mode (13, DUT PUT)
Serial begin (9600)
5
() pal bian
sensorstate - digital Read (2)
if (consortate ZZHIGH)
rigitaluite (13, HIard)

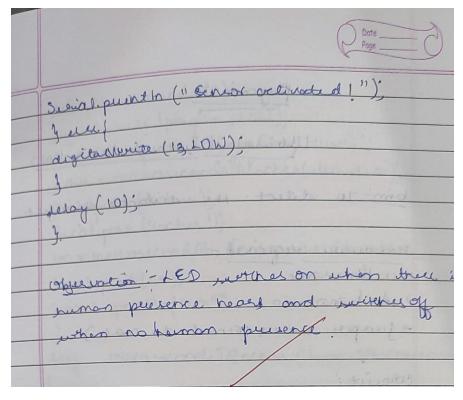

# Code:

int sensorState = 0;

```
void setup()
{
pinMode(2, INPUT);
pinMode(13, OUTPUT);
Serial.begin(9600); }
void loop()
{
sensorState = digitalRead(2);
if (sensorState == HIGH) {
digitalWrite(13, HIGH);
Serial.println("Sensor activated!");
} else {
digitalWrite(13, LOW);
}
delay(10); }
```

The code effectively utilizes the PIR sensor to detect motion and responds by controlling the state of the LED. When motion is detected, the LED is illuminated, and a message is printed to the serial monitor.

#### 6. Ultrasound with Arduino UNO

Aim: To detect the distance of an object.

#### Hardware Required:

- Ultrasonic sensor
- jumper wires(female to male)
- Arduino UNO

#### Circuit diagram:

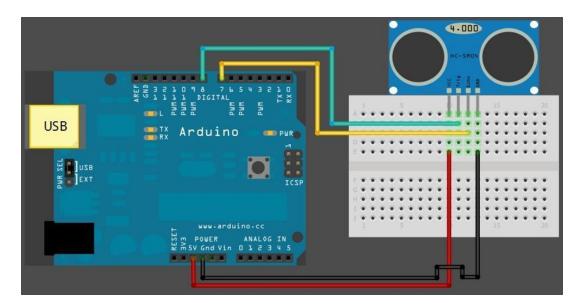




Fig 6-measures the distance of nearest object.

```
code:

const int pinglin = 7;

const int echoPin=6;

word cotup()

franche (epinglin, DUTPUT);

pinhode (echoPin, INPUT);

long duration simples, and;

desirable it (pinglin, LOW);

chaphicronacorde (2);

degitable ite (pinglin, HISH);
```

```
To Centimotus (duration)
```

```
const int pingPin = 7;
const int echoPin=6;
void setup()
{
   Serial.begin(9600);
   pinMode(pingPin, OUTPUT);
   pinMode(echoPin, INPUT);
}
void loop()
{
```

```
long duration, inches, cm;
digitalWrite(pingPin, LOW);
delayMicroseconds(2);
digitalWrite(pingPin, HIGH);
delayMicroseconds(10);
digitalWrite(pingPin, LOW);
duration = pulseIn(echoPin, HIGH);
inches = microsecondsToInches(duration);
Serial.print(inches);
Serial.print("inches");
cm = microsecondsToCentimeters(duration);
Serial.print(cm);
Serial.println("cm");
}
long microsecondsToInches(long microseconds)
return microseconds / 74 / 2; }
long microsecondsToCentimeters(long microseconds)
{ return microseconds / 29 / 2;
}
```

The code effectively utilizes the ultrasonic sensor to measure distance and provides readings in both inches and centimeters. In the loop, a pulse is generated by triggering the ultrasonic sensor, and the duration of the pulse is measured using the pulseIn() function.

#### 7. Fire Alert

#### Aim:

Fire alarm simulation.

# Hardware Required:

- Flame sensor (Analogue Output)
- Arduino
- Bread board
- LED
- Buzzer
- Connecting wires

#### **Connections:**

## Flame sensor interfacing to Arduino

Flame sensor to Arduino

vcc to vcc

gnd to gnd

A0 to A0

## Led interfacing to Arduino

LED +ve is connected to 9th pin of Arduino


LED -ve is connected to gnd pin of arduino

# Buzzer interfacing to Arduino

Buzzer +ve is connected to 12th pin of Arduino

Buzzer -ve is connected to GND pin of Arduino

## Circuit diagram:

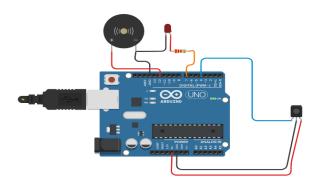


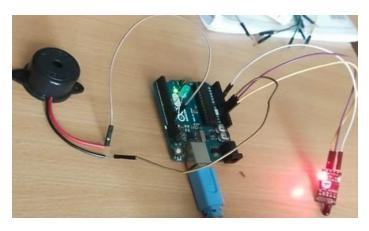


Fig 7- When the fire is detected LED turns on.

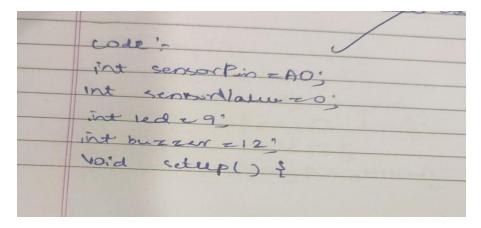

piolode (led, OUTPUT) pinhode (LUTTER, OUTPUT) Serial begin (9500); 3 sensor Value = analog Road (consorpin); Senial print In (sensortales); if (consorvature (100) Serial println ("For Deteroted"); Serial printin["LED on"); digital Werite (Led, HICOTT); digital Werita (buzzer, MICELTI); delay (1000); 4 by icallette (led, LOW); digitalvenier (burgour Low): dury Ceencor Value) Observation , when the flame is brought dose to the sensor It LED switcher on Buzzer beinger

```
int sensorPin = A0; // select the input pin for the LDR
int sensorValue = 0; // variable to store the value coming from the sensor
int led = 9; // Output pin for LED
int buzzer = 12; // Output pin for Buzzer
void setup() {
pinMode(led, OUTPUT);
pinMode(buzzer,OUTPUT);
Serial.begin(9600);
}
void loop()
{
sensorValue = analogRead(sensorPin);
Serial.println(sensorValue);
if (sensorValue < 100)
Serial.println("Fire Detected");
Serial.println("LED on");
digitalWrite(led,HIGH);
digitalWrite(buzzer,HIGH);
delay(1000);
}
digitalWrite(led,LOW);
digitalWrite(buzzer,LOW);
delay(sensorValue);
}
```

The code effectively simulates a fire alarm by monitoring the analog output of the flame sensor. When the sensor value falls below a predefined threshold (100 in this case), indicating the detection of a flame, the LED and buzzer are activated, and the

corresponding messages are printed to the serial monitor.

# 8. Automatic irrigation controller simulation

#### Aim:

Sensing the soil moisture and sprinkling the Water simulation.

# Hardware Required:

- Arduino
- Moisture Sensor
- Breadboard
- Min servo motor

#### **Connections:**

Moisture sensor VCC to Arduino 5V

Moisture sensor GND to Arduino GND

Moisture sensor A0 to Arduino A0

Servo motor VCC to Arduino 5V

Servo motor GND to Arduino GND

Servo Motor Signal to Arduino digital pin 9

## Circuit diagram:

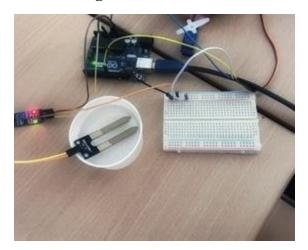


Fig 8- When moisture detected LED High, else Servo motor is on.

trinclude Gervons

Servo myrores

Int posto:

Int scorpin No:

Int scorpin

Lord loop!

Servardalue anady read (servar Rin)

(serial printin (servar Values)

if (sensor Value 2500)

I tor (paso; pos 20; pos 4 2)

tor (paso write (pas);

delay (15);

delay (15);

delay (1000);

delay (1000);

oncervation; when the mater words it retains

Totate when they is no words it retains

#### Code:

#include <Servo.h>;

Servo myservo;

int pos = 0;

```
int sensorPin = A0;
int sensorValue = 0;
void setup() {
myservo.attach(9);
Serial.begin(9600);
void loop()
{
sensorValue = analogRead(sensorPin);
Serial.println (sensorValue);
if(sensorValue<500)
{
for (pos = 0; pos < 180; pos += 1)
{ // goes from 0 degrees to 180 degrees
myservo.write(pos);
delay(15); // waits 15ms for the servo to reach the position
for (pos = 180; pos < 0; pos -= 1)
{ // goes from 180 degrees to 0 degrees
myservo.write(pos);
delay(15); // waits 15ms for the servo to reach the position
}
}
delay (1000);
}
```

The code simulates an automatic irrigation controller by utilizing a moisture sensor to monitor soil moisture levels. When the moisture level drops below the defined threshold, the servo motor moves to simulate the activation of a sprinkler system.

# 9. Reading the code present on RFID tag

#### Aim:

The following code will read the code present on RFID tag and print it in serial monitor.

#### **Connection:**

5V-Arduino 5V

GND-Arduino GND

Tx-pin 9

# Circuit diagram:



```
{ count = 0;
 while(mySerial.available() && count < 12)
 {
   input[count] = mySerial.read();
   count++;
   delay(5);  }
   Serial.print(input);
}}</pre>
```

The output in the serial monitor is the RFID tag number, and it allows for real-time monitoring and verification of the data read from the RFID tag.

## 10. Access control through RFID

#### Aim:

The following code will read the code present on RFID tag tapped. If the code matches with the previously known tag (configured in the code), it will grant access (here LED will glow), otherwise access will be denied.

#### **Connection:**

5V-Arduino 5V

GND-Arduino GND

Tx-pin 9

Led-pin 12

## Circuit diagram:


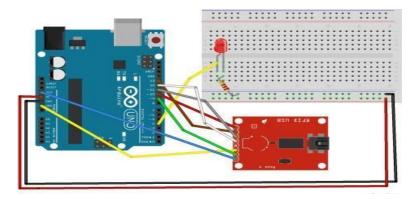


Fig.10.Access control through RFID

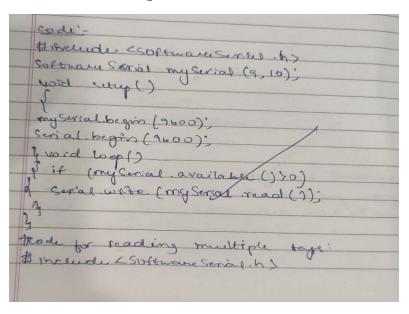

```
Software Sencel my Sonal (9,10);
  genial stegen (9600)!
 Print Data ():
usid Receive Datos ()
 if (my Serial available (270)
data demp -my Serval read ();
read count tt', y 3
if (read Gunt == 12)
 for (j=0;) d2; j++)
 mead went = 0;
 Wid Brist Data ()
     if (disp control = = true)
```

```
#include<SoftwareSerial.h>;
SoftwareSerial mySerial(9, 10);
#define LEDPIN 12
char tag[] ="5300292DD087;" // Replace with your own Tag ID
char input[12]; // A variable to store the Tag ID being presented
int count = 0; // A counter variable to navigate through the input[] character array
boolean flag = 0; // A variable to store the Tag match status
void setup()
```

```
{
Serial.begin(9600);
mySerial.begin(9600);
pinMode(LEDPIN,OUTPUT); }
void loop()
{
if(mySerial.available())
    count = 0;
while(mySerial.available() && count < 12)
{
input[count] = mySerial.read();
count++; // increment counter
delay(5);
  }
if(count == 12)
count =0; // reset counter varibale to 0
flag = 1;
while(count<12 && flag !=0)
{
if(input[count]==tag[count])
flag = 1;
else
flag=0;
count++; // increment i }}
if(flag == 1) // If flag variable is 1, then it means the tags match
Serial.println("Access Allowed!");
```

```
digitalWrite(LEDPIN,HIGH);
delay (2000);
digitalWrite (LEDPIN,LOW); }
else
{
    Serial.println("Access Denied"); // Incorrect Tag Message
    digitalWrite(LEDPIN,LOW);
    delay(2000); }
    for(count=0; count<12; count++)
    {
        input[count]= 'F';
    }
    count = 0; // Reset counter variable
}
</pre>
```

Upon tapping an RFID tag, the code reads the tag's code and compares it with the predefined tag (tag[]). If the codes match, access is granted, and the LED indicator lights up for a brief period. If there is no match, access is denied, and the LED remains off.

#### **HC-05 Bluetooth Module**

```
HC-05 PinOut (Right):
```

• KEY: If brought HIGH before power is applied, forces AT Command Setup Mode.

LED blinks slowly (2 seconds)

- VCC: +5 Power
- GND: System / Arduino Ground
- TXD: Transmit Serial Data from HC-05 to Arduino Serial Receive. NOTE: 3.3V

HIGH level: OK for Arduino

• RXD: Receive Serial Data from Arduino Serial Transmit

• STATE: Tells if connected or not

# 11. HC-05 at Command prompt

#### Aim:


The following code will help establish communication between arduino board and HC-05 Bluetooth module

# Hardware Required:

- HC-05 Bluetooth module
- Arduino uno
- Jumper wires

#### **Connections:**

- 1.Vcc of Bluetooth to 5v of arduino
- 2.GND of Bluetooth to Ground of arduino
- 3. TXD of Bluetooth to Rx of arduino
- 4. RXD of Bluetooth to Tx of arduino

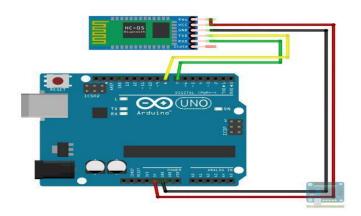

```
riscuit diagram
VCC of succession module to
GND (Buchoth) to GND (Anduno)
RXD (Bluestooth) to 11 (Arduno)
TXD ( Phusoots) do 10 (Addina)
HC-05 at command prompt:
Findude (Software Serraloh)
Software Serial Bisonal (10,1);
void cetup ()
 { Senal begin (9600):
   Sonal prince ("Entre pt commands");
  BT Serial . begin (28 400): 3
 void loop ()
   if BIserial available ()
   Senal write (BTSenal road ());
   if (Senal available ())
```

```
BTSUNAL. Write (Gertal, read());

Physic commonds, and

Dutput.

AT

Out Ok

ATHVERSIONS?

HTHUART=9600,0,0

OK.

ATHRESET

OK.
```

```
(For this program to work, HC-05 must be in command mode)
#include <SoftwareSerial.h>;
SoftwareSerial BTSerial(10, 11); // RX | TX
void setup()
{
Serial.begin(9600);
```

```
Serial.println("Enter AT commands:");

BTSerial.begin(38400); // HC-05 default speed in AT command more
}

void loop()
{

if (BTSerial.available())

Serial.write(BTSerial.read());

if (Serial.available())

BTSerial.write(Serial.read()); }
```

#### 12.HC-05 Controlled by mobile

#### Aim:

To control an LED using a Bluetooth module (such as HC-05) in data mode, with commands sent from an Arduino Bluetooth app

#### Hardware Required:

- HC-05 Bluetooth module
- Led
- Arduino uno
- Jumper wires

#### **Connection:**


#### 1.Bluetooth Module (HC-05) to Arduino:

- Connect the TX pin of the HC-05 module to a digital pin on the Arduino (e.g., pin 2).
- Connect the RX pin of the HC-05 module to a digital pin on the Arduino (e.g., pin 3).
- Connect the VCC pin of the HC-05 module to the 5V pin on the Arduino.
- Connect the GND pin of the HC-05 module to the GND pin on the Arduino.

#### 2.LED to Arduino:


- Connect the anode (longer lead) of the LED to the digital pin 13
- Connect the cathode (shorter lead) of the LED to a current-limiting resistor

• Connect the other end of the resistor to the GND pin on the Arduino.

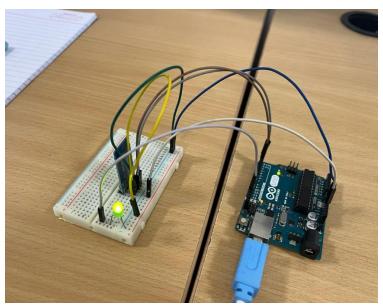

Handwritten code pic:

4c-05 controlled by mobile:
Halfine lead Pin 13
int state =0;
void setup () of
pinmode (led Rin, OUTPUT);
obgitablite (ledlin, LOW);
Serval begin (38400);
ily many harmon to the it
) () god bios
* (Senal available () 70)
State z Senal read (); y
of ( cote = so') 1
digitalization 11. 1P: 1500
digitableite (led Pin stow);
Senal print In ("LED. OFF");
() and the
they (Atolo, = 21)
digitalibrite (led Pin, MICH);
serial printly 111 80:
serial printh ("LED: DN');

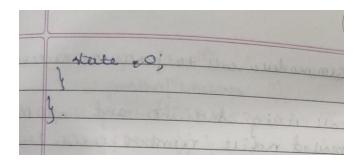

```
(For this code to work, HC-05 must be in DATA mode and Arduino Bluetooth App)
#define ledPin 13
int state = 0;
void setup() {
 pinMode(ledPin, OUTPUT);
 digitalWrite(ledPin, LOW);
 Serial.begin(38400);
void loop() {
 if(Serial.available() < 0)
  state = Serial.read(); // Reads the data from the serial port
if (state == "0") {
 digitalWrite(ledPin, LOW); // Turn LED OFF
 Serial.println("LED: OFF");
 state = 0;
else if (state == "1") {
 digitalWrite(ledPin, HIGH);
 Serial.println("LED: ON");;
 state = 0; \}
```

#### 13. BT-Master Slave

#### Aim:

To establish communication between a Bluetooth master device (likely a smartphone or another microcontroller acting as a master) and a Bluetooth slave device (Arduino with HC-05 module) to control an LED wirelessly.

# Hardware Required:

#### For Bluetooth Slave (BT-Slave):

- Arduino Uno
- HC-05 Bluetooth Module
- Jumper Wires

#### For Bluetooth Master (BT-Master):

- Arduino Uno
- HC-05 Bluetooth Module
- LED
- Resistor
- Jumper Wires

#### **Connections:**

# 1.Bluetooth Slave (BT-Slave) Connections: HC-05 Bluetooth Module:

- Connect the TX pin to Arduino digital pin 10.
- Connect the RX pin to Arduino digital pin 11.
- Connect the VCC pin to Arduino 5V.
- Connect the GND pin to Arduino GND.


# 2.Bluetooth Master (BT-Master) Connections: HC-05 Bluetooth Module:

- Connect the TX pin to Arduino digital pin 10.
- Connect the RX pin to Arduino digital pin 11.
- Connect the VCC pin to Arduino 5V.
- Connect the GND pin to Arduino GND.

#### 3.LED and Resistor:

• Connect the anode (longer lead) of the LED to Arduino digital pin 9.

- Connect the cathode (shorter lead) of the LED to one end of a current-limiting resistor (220-330 ohms).
- Connect the other end of the resistor to Arduino GND.

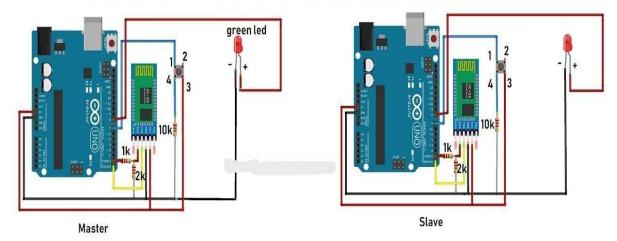

commands to setup martie made; AT + RMAAD AT + APCN AT TROLECT AT + CMODE TO. AT + PSWD 212 By set PIN should be some DT+BIND . caddeers BIALINERS addless > DT + INT -By your program? \$ wire lude of Software conal. by Sthroughseard or siral (10,11) void sumpl) of Smal begin (9600): BT & rial . Legin ( 382,00) , p() good bion if (Senal anibable ()) of sming manage - Senon read sleing () serval printly (navage); Por serial wide (mercoge a stal): 37 Bt moster programi I include & Softwale Canal , h) Software Served By serval (10,11); todefine balking thing murage; int potralue 20; soid setupit) [ pinmode ( red Pin , con OVI PUT); agitalunite (led Rin + on); Serial begin (9000) BI seral begin (38400):3 icagod bion (BTGenal available ()20)1 if I mayage thater of ( "switch ON) > 20) ( digital blite (led Fin, 8/104)) also if (murage index of ("SWITEH OFE") 200) of digital verite (dealin , LOW); ) also of serial pointly ("Noting eta do ")" 3 delay (100); delay (10);

```
BT-Slave Program:
#include <SoftwareSerial.h>;
SoftwareSerial BTSerial(10, 11); // RX | TX
void setup() {
 Serial.begin(9600);
 BTSerial.begin(38400); // HC-05 default speed in AT command more
}
void loop() {
if(Serial.available())
 {
 String message = Serial.readString();
 Serial.println (message);
  BTSerial.write(message.c_str());
   } }
BT-Master Program:
#include <SoftwareSerial.h>;
SoftwareSerial BTSerial(10, 11); // RX | TX
#define ledPin 9
String message;
int potValue = 0;
void setup() {
pinMode(ledPin, OUTPUT);
 digitalWrite(ledPin, LOW);
 Serial.begin(9600);
 BTSerial.begin(38400); // HC-05 default speed in AT command more
}
void loop() {
if(BTSerial.available() < 0){
```

```
message = BTSerial.readString();
if(message.indexOf("SWITCH ON")<=0)
{
    digitalWrite(ledPin, HIGH); // LED ON
}
else if(message.indexOf("SWITCH OFF")<=0)
{
    digitalWrite(ledPin, LOW); // LED OFF
}
delay(100); }
delay(100);
}</pre>
```

#### 14.GSM Module

# 1. GSM Module: Call to a particular number

#### Aim:


Call using Arduino and GSM Module - to a specified mobile number inside the program.

### Hardware Required:

- Arduino Uno
- GSM Module
- SIM Card
- Power Supply
- Jumper wires

#### **Connection:**

- 1. Connect the RX pin of the GSM module to pin 2 (TX) on the Arduino.
- 2. Connect the TX pin of the GSM module to pin 3 (RX) on the Arduino.
- 3.Connect the  $\overline{VCC}$  pin of the GSM module to a 5V output on the Arduino (check the module's voltage requirements).
- 4. Connect the GND pin of the GSM module to a GND pin on the Arduino.

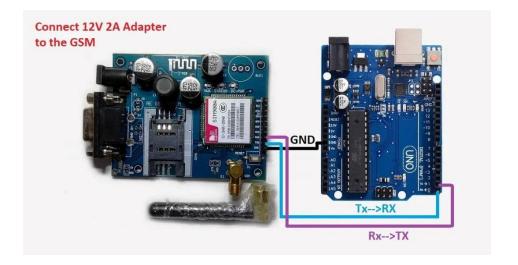

# Handwritten code pic:

```
steps for booting com module:

Servert sim in allocated relat

parcel on arm modern with 124 parcel supply

sheet stocked LED it should believe tonce in a

scorde.

The number of the sim inverted, you shall

get callbort tone.

program:

1. Color module: call a poetrulae number

Through (500 burges serial h?

Coloral script call (2, 2);

void shap();

all regin (2000);

delay(500);
```

Snal begin (9600) Serial printho ["CALLING. "); each but ("DID +22 9843361,"); delay [2000 0); 4 Void wop() ( } ) sending and prining manage: # metucle C Software Serval by Software Serial my Serial (2,3); wood setup () (mySerial begin (2600); Serial begin (9600); delgigay (100); } of it (seral avaidable () to) switch (Gral read ()) I care 's' Send Menagel); break. cau'r' Recyneminagel) beeak', 3 (f(myserálavoitable ()>0) Senal write (my Senal read (1); aid surpherenge () of my Servial pronths ("AT+ LMER &"); delay (1000); myserial printhofunt temas = (" +91924286606 MDb) diday (1900) myserial printh ("Pam sim wom ssm"!) delay (100);

```
my Senal prothy (Chae) 26);

ablay (1000);

word Peccine Neurose ()

my Senal protet hy "AT+ (NMC = 2,20,0,0");

delay (1000);

3
```

#### code:

```
#include <SoftwareSerial.h>;
SoftwareSerial cell(2,3); // (Rx, Tx)

void setup() {
  cell.begin(9600);
  delay(500);
  Serial.begin(9600);
  Serial.println("CALLING......");
  cell.println("ATD+9538433364;"); // ATD - Attention Dial delay(20000);
}

void loop() {
}
```

# **Observation:**

The code successfully initiates a call to the specified mobile number using the GSM module. The "CALLING.." message is printed to the Serial Monitor, indicating the initiation of the call. The AT command "ATD+9538433364;" is sent to the GSM module, instructing it to dial the specified number.

# 2. Call to a particular number on an alert

#### Aim:

Call a specified mobile number mentioned in the program using Arduino and GSM Module when a flame sensor detects "fire".

### Hardware Required:

- Arduino Uno
- GSM Module
- SIM Card
- Flame Sensor
- Jumper Wires


### **Connections:**

### 1.GSM Module to Arduino:

- Connect the RX pin of the GSM module to a digital pin 2 on the Arduino.
- Connect the TX pin of the GSM module to another digital pin 3 on the Arduino.
- Connect the VCC pin of the GSM module to a 5V output on the Arduino
- Connect the GND pin of the GSM module to a GND pin on the Arduino.

### 2.Flame Sensor to Arduino:

- Connect the signal pin of the flame sensor to a digital pin 4 on the Arduino
- Connect the VCC pin of the flame sensor to a 5V output on the Arduino.
- Connect the GND pin of the flame sensor to a GND pin on the Arduino

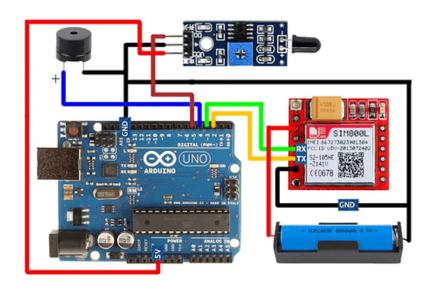

# **Connections for flame sensor:**

Arduino Flame Sensor

5V VCC

**GND GND** 

# **Program:**

```
#include <SoftwareSerial.h>
SoftwareSerialcell(2,3);
void setup() {
cell.begin(9600);
delay(500);
Serial.begin(9600);
}
void loop() {
intval=analogRead(A0);
Serial.println(val);
delay(1000);
if (val<50)
Serial.println("CALLING.....");
cell.println("ATD+919742980606;");
delay(10000);
cell.println("ATH"); // Attention Hook Control
}
}
```

# 3. Sending and Receiving Message

#### Aim:

1) Send SMS using Arduino and GSM Module - to a specified mobile number inside the

program

2) Receive SMS using Arduino and GSM Module – to the SIM card loaded in the GSM Module.


# Hardware Required:

- Arduino Uno
- GSM Module
- SIM Card
- Jumper Wires

#### **Connections:**

### 1.GSM Module to Arduino:

- Connect the RX pin of the GSM module to a digital pin 2 on the Arduino.
- Connect the TX pin of the GSM module to another digital pin 3 on the Arduino.
- Connect the VCC pin of the GSM module to a 5V output on the Arduino
- Connect the GND pin of the GSM module to a GND pin on the Arduino

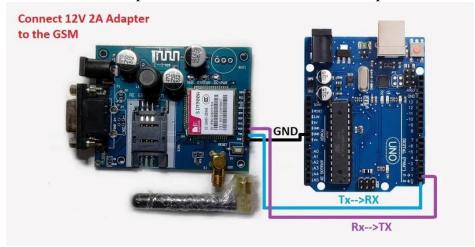

### **Program:**

Note: According to the code, message will be sent and received when 's' and 'r' are pressed

```
through serial monitor respectively.
```

```
#include <SoftwareSerial.h>
SoftwareSerial mySerial(2, 3);
void setup()
{
   mySerial.begin(9600); // Setting the baud rate of GSM Module
   Serial.begin(9600); // Setting the baud rate of Serial Monitor (Arduino)
   delay(100);
```

```
}
void loop()
if (Serial.available()<0)
switch(Serial.read())
Case "s":
SendMessage();
break;
case "r":
RecieveMessage();
break;
}
if (mySerial.available()<0)</pre>
Serial.write(mySerial.read());
voidSendMessage()
mySerial.println("AT+CMGF=1"); //Sets the GSM Module in Text Mode
//AT+CMGF,
SMS Format
delay(1000); // Delay of 1000 milli seconds or 1 second
mySerial.println("AT+CMGS=\"+919742980606\"\r"); // AT+CMGS, Send Message
delay(1000);
mySerial.println("I am SMS from GSM Module");
delay(100);
mySerial.println((char)26);
delay(1000);
}
```

```
voidRecieveMessage()
{
mySerial.println("AT+CNMI=2,2,0,0,0");
delay(1000);
4. Controlling LED through received messages:
Aim:
Use received message through Arduino and GSM Module to control Switching ON /
OFF the
LED.
Connection: Attach LED to pin 13 and GND.
Program:
#include <SoftwareSerial.h>
SoftwareSerial cell(2,3);
Void readfn()
{
if (cell.available()) {
while (cell.available()) {
Serial.write(cell.read());
} } }
void setup() {
pinMode(13,OUTPUT);
Serial.begin(9600);
cell.begin(9600);
cell.println("AT");
delay(1000);
readfn();
//New SMS alert
cell.println("AT+CNMI=1,2,0,0,0");
```

```
}
void loop() {
if(cell.available())
String message =cell.readString();
Serial.println(message);
if(message.indexOf("SWITCH ON")=0)
{
digitalWrite(13,HIGH);
}
else if(message.indexOf("SWITCH OFF")=0)
{
digitalWrite(13,LOW);
}
else
Serial.println ("Nothing to do...");
}
```